

ARMYTEK WIZARD C2 PRO Nichia Multi Flashlight User Manual

Home » ARMYTEK » ARMYTEK WIZARD C2 PRO Nichia Multi Flashlight User Manual



Contents

- 1 ARMYTEK WIZARD C2 PRO Nichia Multi Flashlight
- 2 Specifications
- 3 Set description
- **4 Initial Service**
- **5 HOW TO CONNECT THE MAGNETIC CHARGER**
- **6 CHARGER COLOR INDICATION**
- 7 Operation
- 8 Warnings
- 9 The producer will not be liable for any harm done to the user if it was caused by improper use of the product.Care and Storage
- 10 Warranty and Service
- 11 Documents / Resources
 - 11.1 References
- **12 Related Posts**



ARMYTEK WIZARD C2 PRO Nichia Multi Flashlight



Thank you for choosing the products of Armytek. Please read this manual carefully before using the flashlight.

Specifications

- **Headlamp:** simple one-hand operation, reliable headcount. Solid-body without long wires, weak rubber connectors, and unnecessary boxes. The flashlight is easily installed, removed and 180° rotatable in the mount. Quick-release rubber ring provides additional fixation
- Every Day Carry light: compact design, convenient side button, special matt anti-abrasive finish without rough knurling, strong built-in tail magnet, and robust removable steel clip
- **Bicycle light:** body made from durable and lightweight aircraft-grade aluminum, improved shock resistance, new springs for better battery and driver protection. Constant light without a flickering, quick-release mount in the set
- 1. Close to sunlight LED lighting with high CRI >90 and color temperature of 4500K for near to perfect natural color reproduction
- 2. Incredibly powerful for the given color tint light output
- 3. Powerful electronics provide an impressive light output of 1600 lumens and record 6.5 months in Firefly mode. Constant brightness even at low ambient temperatures and not fully charged battery
- 4. Multicolor temperature, battery level, and state indication with the ability to turn it off
- 5. The convenient wide beam of the fully upgraded optical system, TIR-lense is protected from scratches by tempered glass with anti-reflective coating

- 6. Innovative technology allows using any 18650 Li-Ion batteries with 10A discharge current and provides full protection against short circuits even in case of contact between the magnetic connector and metal objects
- 7. Active real-time temperature control to prevent overheating above + 58 °C
- 8. Total protection from water, dirt, and dust in accordance with IP68 standard flashlight continues to work even at 10 meters depth. Withstands fallings from up to 10 meters
- 9. Robust and water-resistant magnetic connector

Model		Wizard C2 Pro Nichia (Warm)
LED/Optics		Nichia 144AR/TIR
Brightness stabilization type		FULL (constant light)
Light output		1600 lm
Peak beam intensity		3200 cd
Hotspot: Spill		70°:120°
Beam distance		113 m
Modes, light output, and runtimes (measured wit h 18650 Li-lon 3500 mAh battery until the light out put drops to 10% of the i nitial value)	Turbo2	1600 lm/2 h 55 min (440 lm after 1 min)
	Turbo1	750 lm/3 h (440 lm after 5 min)
	Main3	250 lm/6 h 40 min
	Main2	90 lm/16 h
	Main1	34 lm/43 h
	Firefly3	4.6 lm/12 days
	Firefly2	1 lm/40 days
	Firefly1	0.1 lm/200 days
	Strobe3	1600 lm/10 Hz/6 h 20 min (440 lm after 2 min)
	Strobe2	1600 lm/1 Hz/13 h (440 lm after 8 min)
	Strobe1	90 lm/1 Hz/71 h
Power source		1×18650 Li-lon
Length/Body diameter/Head diameter		112 mm/20.4 mm/33 mm
Weight without/with battery		65 g/115 g
Submersion and Impact resistance		IP68, 10 m for 2 h. Height up to 10 m


X All the above specifications are test results based on ANSI/NEMA FL1-2009 Standard. The tests are perform ed using the battery included in the set.

The data may vary due to environment, heat dissipation and other factors.

Flashlight, 18650 Li-Ion 3500 mAh battery, magnetic USB charger, clip, headcount, bicycle mount ABM-01, 2 spare O-rings, user manual. The producer reserves the right to change the package at his own discretion without modifying this manual. Specifications are subject to change without notice.

Initial Service


TO SET/REPLACE BATTERY

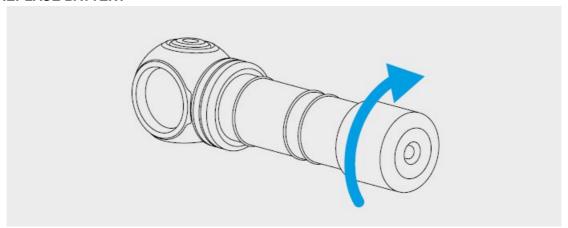

- 1. Unscrew the tail cap.
- 2. Place the battery with the positive contact (+) facing the head of the flashlight.
- 3. Adjust the tail cap and tighten it as far as it can go.

The flashlight is ready for operation.

HOW TO CONNECT THE MAGNETIC CHARGER

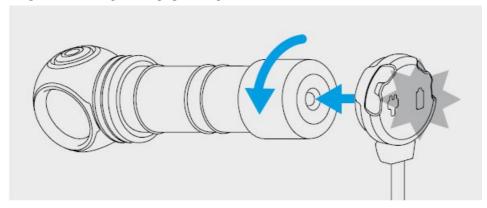

Unscrew the tailcap for 1/4 of a circle and adjust the magnetic charger to the tail cap.

CHARGER COLOR INDICATION

Charger not plugged in:

• Green — device is in waiting mode.

Charger plugged in:

- Green blinking evaluation of battery voltage.
- Red blinking unscrew the tail cap for 1/4 for charging.


- Orange blinking USB power source voltage is too low for the correct continuation of charging or bad contact between charger and battery. Clean the tail cap and the threads of the flashlight parts, and use a different power source.
- Red charging with rated charging current is going on.
- Orange USB power source voltage is too low, charging current may be reduced.
- Green charging is finished.

Operation

B Tighten the tail cap as far as it can go.

GENERAL TYPE

Modes: Firefly1, Firefly2, Main modes, Turbo mode (last used in Advanced, Turbo2 by default).

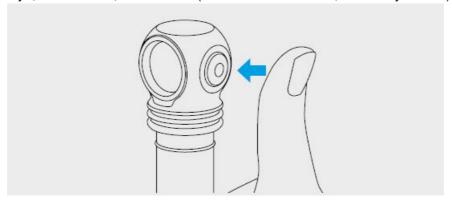

In OFF state

- 1 click: To turn on the last used mode.
- **Press and hold:** To start cycling through Firefly modes. Release to select. Keeping the button pressed will start cycling through the Main modes.
- In ON state
 - 1 click: To turn off the flashlight.
 - Press and hold: To start cycling through Main modes from any mode. In Firefly1 cycling through Main modes starts after cycling through Firefly modes. Release to select.
 - 2 clicks: To turn on Turbo mode from any mode. The second double click brings back the last used mode.

ADVANCED TYPE

To switch between types of operation unscrew the tail cap to 1/4 while the flashlight is off, press the button and tighten the tail cap while keeping the button pressed.

Sections of modes:

- 1. Firefly modes
- 2. Main modes
- 3. Turbo modes,

4. Strobe modes

In OFF state

- 1 click: To turn on the last used mode.
- Press and hold: To turn on Firefly1 mode [Section 1]. Keeping the button pressed will start cycling through modes: Firefly1 - Firefly2 - Firefly3 - Main1 - Main2 - Main3 - Turbo1.

In ON state

- 1 click: To turn off the flashlight.
- Press and hold: To start cycling through the modes of relevant Section.

The same in OFF & ON states:

- 2 clicks: To turn on Main mode [Section 2]. Another double click will switch between chosen modes in [Section 1] and [Section 2].
- 3 clicks: To turn on Turbo mode [Section 3].
- 4 clicks: To turn on Strobe mode [Section 4].
- Auto memorizing After switching off the last used mode is memorized for quick access at next switching on.
 Safe high brightness modes. Turbo modes give maximum brightness until the temperature of the flashlight and discharge current of the battery don't exceed critical values.
- Digital Light Stabilization & Safe Soft-Start System allows to increase runtime, get longer lifetime of rechargeable battery and protect it from over-discharge or overheating.
- Active temperature control. When the temperature of the flashlight becomes close to +58 °C, brightness decreases to safe value, allowing the flashlight to avoid overheating for a long period of time. In conditions of good air-cooling, the flashlight delivers light without stepping down.
- Warning indication shows the battery level and the temperature inside the flashlight.
- Low battery level. When battery level is approximately <25%, the color LED will show the warning level by flashing orange once in 2 seconds. With further voltage reduction brightness will start to decrease in steps for safety of the battery and user. If the brightness of the mode (except Firefly modes and Main1) is approximately <25% from nominal value, the main LED will flash 2 times. Critical battery level approximately <10% is indicated by flashing red once a second.
- **High temperature.** When the temperature increases to the warning level, the color LED flashes orange 3 times once in 2 seconds. At a critical level it flashes red 3 times once in 1 second. Brightness starts to reduce to a safe level.
- Lock-out function. Unscrew the tail cap to 1/4 for protection from accidental switching on. State Indication will be turned off.
- **Multicolor State Indication.** Short flashes every 4 seconds show the battery level even in OFF state (untill the battery level becomes lower than the critical one). The indication also helps to find the flashlight in the dark.
- Switching Multicolor State Indication ON/OFF. Multicolor State Indication has 3 operating modes:
 - 1. The indication is switched off in Firefly modes and in OFF state (by default).
 - 2. The indication is switched on in any state.
 - 3. The indication is switched off in any state.

To change the operating mode, unscrew the tail cap to 1/4 while the flashlight is off, press the button and keeping


the button pressed tighten and unscrew the tailcap again. Indication operating modes will switch cyclically. The settings will be memorized even when battery is changed. Ultra-low current consumption allows color indication to work for maximum period of time.

Warnings

For stable operation of the flashlight, we recommend branded 18650 Li-Ion batteries no more than 70 mm long with at least 10A discharge current. The flashlight can get hot in Turbo modes, Strobe2 and Strobe3 quickly and discharge the battery with high current. Don't leave it without your attention as very bright light might heat objects and cause fire. It is forbidden to charge the battery inside the flashlight when the ambient temperature is below 0 °C.

- 1. Always follow the instructions from this manual and recommendations on battery usage.
- 2. Apply only the recommended power sources.
- 3. Do not reverse battery polarity.
- 4. Do not modify or recast the flashlight and its components as it will deprive you of the warranty.
- 5. Do not allow water or any other liquid to leak into the flashlight.
- 6. Do not aim a switched-on flashlight at people's or animals' eyes it can cause temporary blindness.
- 7. Do not allow children to use the flashlight without your assistance.

The producer will not be liable for any harm done to the user if it was caused by improper use of the product.

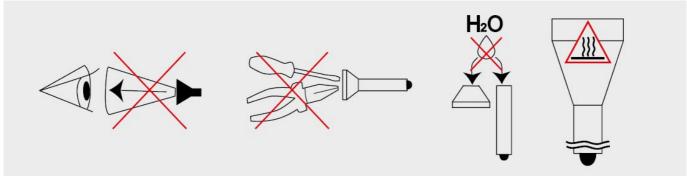

Care and Storage

It is recommended to clean the threads and O-rings off dirt and old grease once or twice per year. Remember that reliable protection from water and dust cannot be provided by worn-out sealing. The fouling as well as lack of lubricant cause fast wear-out of threads and sealing rings. **To clean the threads do the following:**

- 1. Unscrew the tail cap and remove the sealing ring carefully with a toothpick (do not use sharp metal things as they can damage the ring).
- 2. Wipe the sealing ring thoroughly with a soft cloth (or tissue). Do not use solvents. If the sealing ring is worn out or damaged replace it by a new one.
- 3. Clean the metal threads with a brush using ethanol. Be careful not to allow the applied liquid to get inside the flashlight or tail cap as it can cause fails in the functionality of the flashlight.

After cleaning lubricate the thread and the sealing ring with polyol-phaolefin-based silica grease, e.g. Nyogel 760G. The application of other types of grease is unacceptable. In case of active operation and exploitation in dusty environments, it is recommended to perform cleaning and lubricating of the parts as often as required.

WE DO NOT RECOMMEND leaving power sources inside the flashlight for a long storage period, as batteries (especially non-rechargeable) can leak for various reasons and damage the inner parts of the flashlight. If you

want to keep your flashlight in a stand-by state with batteries in, previously install new and high-quality batteries, store the flashlight in acceptable for batteries operational temperature, and revise the batteries' state at least once a month. If you have noticed any signs of defects, withdraw the batteries from the flashlight and dispose of them.

Warranty and Service

Armytek provides free warranty repairs for 10 years (excluding batteries, chargers, switches, and connectors, which have a 2-year warranty) from the date of purchase if there is a document confirming the purchase. The warranty does not extend to damage during:

- 1. Improper usage.
- 2. Attempts to modify or repair the flashlight by nonqualified specialists.
- 3. Application in chlorinated, contaminated liquids or sea water.
- 4. Immersion into liquids in case of broken leakproofness.
- 5. Exposure to high temperatures and chemicals, including the liquids from defected batteries.
- 6. Usage of low-quality batteries.

Armytek Germany, 10551 Berlin, Jonasstraße 6+1 (206) 785-9574, service@armytek.com www.armytek.com

Documents / Resources



ARMYTEK WIZARD C2 PRO Nichia Multi Flashlight [pdf] User Manual WIZARD C2 PRO, Nichia Multi Flashlight, WIZARD C2 PRO Nichia Multi Flashlight

References

- Armytek Flashlights and Headlamps 10 Years Warranty | Armytek.com
- O Armytek Official Website in Finland Headlamps & EDC & Tactical flashlights | Armytek.fi
- O Latarki LED Armytek Oficjalny przedstawiciel Armytek na Polsce | Armytek.pl
- O Armytek Flashlights and Headlamps Official Website in Germany | ArmytekStore.de

Manuals+,