

Casio G-5600UE-1

Casio G-Shock G-5600UE-1 Digital Watch User Manual

Model: G-5600UE-1

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio G-Shock G-5600UE-1 digital watch. Designed for durability and functionality, this timepiece features shock resistance, 200-meter water resistance, and Tough Solar power. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.

2. PRODUCT OVERVIEW

2.1 Key Features

- Shock Resistant (G-SHOCK construction)
- 200-Meter Water Resistance
- Tough Solar Power (solar charging system)
- LED Backlight with Afterglow
- World Time (supports multiple time zones)
- 1/100-Second Stopwatch
- Countdown Timer
- Multi-function Alarms and Hourly Time Signal
- Full Auto Calendar (pre-programmed until 2099)
- 12/24-Hour Format
- Flash Alert (flashes with buzzer for alarms, hourly time signal, countdown timer time-up alarm)

2.2 Watch Components

The Casio G-Shock G-5600UE-1 features a standard four-button configuration for navigation and function control.



Figure 1: Front view of the Casio G-Shock G-5600UE-1 digital watch. The display shows time, date, and day. Buttons are located on the left (MODE, ADJUST) and right (START/STOP, LIGHT) sides of the case.

- **ADJUST Button (Top Left):** Used to enter and exit setting modes, and to confirm settings.
- **MODE Button (Bottom Left):** Used to cycle through the watch's various modes (Timekeeping, World Time, Alarm, Stopwatch, Countdown Timer).
- **LIGHT Button (Top Right):** Activates the LED backlight. Also used to increase values during setting.
- **START/STOP Button (Bottom Right):** Used to start/stop stopwatch and countdown timer operations. Also used to decrease values during setting.

3. SETUP

3.1 Initial Charging (Tough Solar)

Your watch is equipped with Tough Solar technology, which converts light into power. Before initial use, or if the watch display is blank, expose the watch face to bright light (e.g., sunlight or a bright window) for several hours to ensure it is sufficiently charged. Avoid prolonged exposure to extreme heat.

3.2 Setting the Home City and Time

1. In the Timekeeping Mode, hold down the **ADJUST** button until the city code starts to flash. This indicates the setting mode.
2. Use the **LIGHT** and **START/STOP** buttons to select your desired Home City code.

3. Press the **MODE** button to cycle through other settings: DST (Daylight Saving Time), 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day.
4. For each setting, use the **LIGHT** and **START/STOP** buttons to adjust the value.
5. Once all settings are configured, press the **ADJUST** button to exit the setting mode.

4. OPERATING INSTRUCTIONS

4.1 Mode Navigation

Press the **MODE** button to cycle through the watch's modes in the following order: Timekeeping Mode → World Time Mode → Alarm Mode → Stopwatch Mode → Countdown Timer Mode → Timekeeping Mode.

4.2 World Time Mode

In World Time Mode, you can view the current time in 48 cities (29 time zones) around the world.

- Press the **START/STOP** button to scroll through city codes.
- To toggle Daylight Saving Time (DST) for the currently displayed city, hold down the **ADJUST** button for approximately two seconds.

4.3 Alarm Mode

The watch has multiple alarms and an hourly time signal.

1. In Alarm Mode, use the **START/STOP** button to select the desired alarm (AL1, AL2, AL3, AL4, AL5, SNZ for Snooze Alarm, or SIG for Hourly Time Signal).
2. Hold down the **ADJUST** button until the alarm time starts to flash.
3. Use the **LIGHT** and **START/STOP** buttons to set the hour and minute.
4. Press the **ADJUST** button to exit the setting mode.
5. Press the **START/STOP** button to toggle the alarm or hourly time signal ON/OFF.

4.4 Stopwatch Mode

The stopwatch measures elapsed time, split times, and two finishes.

- In Stopwatch Mode, press the **START/STOP** button to start and stop the measurement.
- Press the **ADJUST** button to reset the stopwatch to zero.

4.5 Countdown Timer Mode

The countdown timer can be set for a period of 1 minute to 24 hours.

1. In Countdown Timer Mode, hold down the **ADJUST** button until the current countdown start time flashes.
2. Use the **LIGHT** and **START/STOP** buttons to set the desired countdown start time.
3. Press the **ADJUST** button to exit the setting mode.
4. Press the **START/STOP** button to start and stop the countdown.
5. When the countdown reaches zero, an alarm will sound. Press any button to stop the alarm.

4.6 LED Backlight

Press the **LIGHT** button to illuminate the display for easy viewing in low-light conditions. The backlight duration can typically be adjusted in the Timekeeping Mode settings.

5. MAINTENANCE

5.1 Power Management (Tough Solar)

To ensure stable operation, expose the watch to light regularly. The watch has a power saving function that turns off the display when left in the dark for a certain period. The power indicator on the display shows the current charge level.

- **Exposure to Light:** Place the watch where it can receive direct sunlight or strong artificial light.
- **Avoid Obstruction:** Ensure the watch face is not covered by clothing or other objects.
- **Charge Level:** Monitor the charge indicator. If it drops to a low level, expose the watch to light immediately.

5.2 Water Resistance

Your G-Shock G-5600UE-1 is water resistant to 200 meters (20 BAR). This means it is suitable for showering, swimming, and diving (excluding saturation diving).

- Do not operate buttons while the watch is submerged in water or wet.
- After exposure to saltwater, rinse the watch with fresh water and wipe it dry with a soft cloth.
- Avoid exposing the watch to hot water or steam, as this can damage the seals.

5.3 Cleaning

Wipe the watch and band with a soft, dry cloth to remove dirt and moisture. For stubborn dirt, use a soft brush with mild soap and water, then rinse thoroughly and dry. Avoid using chemical cleaners or solvents.

6. TROUBLESHOOTING

- **Display is blank or dim:** The watch may be low on charge. Expose it to bright light for several hours. Ensure the power saving function is not active (if in a dark environment).
- **Time is incorrect:** Re-check your Home City setting and DST setting. Perform a manual time adjustment as described in Section 3.2.
- **Buttons are unresponsive:** Ensure the watch is not in a mode that locks button operations. If submerged or wet, dry the watch thoroughly before attempting to operate buttons.
- **Water inside the watch:** If you notice condensation or water droplets inside the watch, stop using it immediately and contact Casio service for inspection.

7. SPECIFICATIONS

Model Number	G-5600UE-1
Case Dimensions (L×W×H)	48.9 × 42.8 × 13.4 mm
Weight	52g
Case and Band Material	Resin
Crystal	Mineral Glass
Water Resistance	200 Meters (20 BAR)

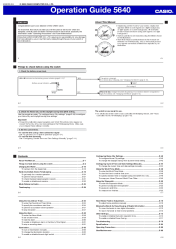


Power Source	Tough Solar (Solar Powered)
Battery Type	1 Lithium Metal battery (included)
Approx. Battery Life (without solar charge)	2 years on CR2016 (Note: Tough Solar power system significantly extends operational life with regular light exposure.)
Accuracy	±15 seconds per month
Backlight	Electro-luminescent backlight with Afterglow
Special Features	Shock Resistant, World Time, 1/100-second Stopwatch, Countdown Timer, Multi-function Alarms, Hourly Time Signal, Full Auto Calendar, 12/24-hour format, Flash Alert


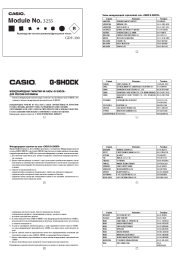
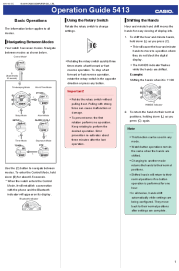
8. WARRANTY AND SUPPORT

Your Casio G-Shock G-5600UE-1 watch is covered by a manufacturer's warranty. For specific warranty terms, service, or technical support, please refer to the warranty card included with your purchase or visit the official Casio website.

Official Casio Support: <https://www.casio.com/us/support/>

Related Documents - G-5600UE-1

	<p>Casio 5640 Watch Operation Guide</p> <p>Comprehensive operation guide for the Casio 5640 watch, covering charging, timekeeping, world time, stopwatch, countdown timer, alarms, illumination, and maintenance.</p>
	<p>CASIO Watch Operation Guide 3569</p> <p>Comprehensive operation guide for the CASIO Watch Model 3569, detailing its features, functions, precautions, maintenance, and troubleshooting. Covers alarm, stopwatch, timer, world time, and more.</p>
	<p>Casio Watch Operation Guide 3495</p> <p>Comprehensive operation guide for the Casio Watch Model 3495, covering precautions, time adjustment, world time, alarms, stopwatch, timer, and other settings. Includes detailed instructions on charging, power saving, and troubleshooting.</p>

	<p>Casio Operation Guide 3482: Comprehensive User Manual</p> <p>This operation guide provides detailed instructions for the Casio Operation Guide 3482 watch, covering setup, features, functions, and troubleshooting. Learn how to navigate modes, adjust time, use training functions, manage notifications, and more.</p>
	<p>Casio G-SHOCK GDF-100 Watch User Manual</p> <p>Comprehensive user manual for the Casio G-SHOCK GDF-100 watch, covering features, operation, maintenance, and international warranty information.</p>
	<p>CASIO G-SHOCK Operation Guide 5413: Features and Usage</p> <p>This comprehensive operation guide for the CASIO G-SHOCK Operation Guide 5413 details basic operations, mobile link connectivity with G-SHOCK+ and G'MIX App, time and date settings, alarms, stopwatch, timer functions, and troubleshooting tips.</p>