

## TOPUTURE TP4

# TOPUTURE 4-in-1 Foldable Walking Pad Treadmill

Model: TP4

## 1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the treadmill. Retain this manual for future reference.

- Ensure the treadmill is placed on a flat, stable surface with adequate clear space around it (at least 20 inches on sides and rear).
- Keep children and pets away from the treadmill during operation.
- Always use the safety key/clip during operation. The treadmill will stop immediately if the safety key is detached.
- Do not exceed the maximum weight recommendation of 300 lbs (130 kg).
- Wear appropriate athletic footwear.
- If you experience dizziness, nausea, chest pain, or any other abnormal symptoms, stop your workout immediately and consult a physician.
- Do not operate the treadmill if it is damaged or malfunctioning.

## 2. PRODUCT OVERVIEW

The TOPUTURE TP4 is a versatile 4-in-1 foldable walking pad treadmill designed for home and office use. It features a powerful yet quiet 2.5 HP motor, a 9% manual incline, and dual LED displays for real-time workout data.

### Key Features:

- **4-in-1 Design:** Easily switch between walking, running, climbing, and working modes.
- **Adjustable Incline:** Features a 9% manual incline to simulate uphill walking and enhance calorie burn.
- **Powerful & Quiet Motor:** Equipped with a 2.5 HP motor for smooth operation with low noise (below 45dB).
- **Dual LED Display:** Two integrated LED screens provide clear, real-time data including time, speed, distance, and calories burned.
- **Mute Control:** Remote control includes a mute button to silence beeps for a quieter workout

environment.

- **App Connectivity:** Connects via Bluetooth to sports apps like Fitshow for tracking and sharing workout data.
- **Double Shock Absorption:** Features a 5-layer anti-slip belt, 6 silicone shock absorbers, and 2 soft rubber pads to reduce joint impact.
- **Compact & Foldable:** Designed for easy folding and storage, with transport wheels for convenient movement.



Image: The TOPUTURE TP4 treadmill shown in its upright position with the handlebar raised, and also in a flat, under-desk configuration. The image highlights the 9% incline feature and the dual display.

## Dual LED Screen Display

Clear display of data



Image: A detailed view of the treadmill's dual LED display screens, showing various workout metrics such as speed, distance, time, and calories. A hand is shown interacting with the control panel.

### 3. SETUP INSTRUCTIONS

The TOPUTURE TP4 treadmill comes largely pre-assembled for your convenience.

#### Initial Setup:

1. **Unpacking:** Carefully remove the treadmill from its packaging. Retain all packing materials for potential future transport or returns.
2. **Attaching Feet (Optional for Incline):** Locate the two small feet/screws provided. These are used to

adjust the incline. Lift the treadmill slightly and screw these into the designated holes on the underside.

3. **Raising the Handlebar (Optional):** If you intend to use the treadmill with the handlebar, locate the folding knobs on the sides of the main frame. Unscrew them, raise the handlebar to the upright position, and then screw the knobs back in securely to lock the handlebar in place.
4. **Attaching Device Holder:** Slide the device holder onto the top of the handlebar frame. This provides a stable place for your phone or tablet.
5. **Safety Key:** Attach the red safety key/clip to the designated slot on the handlebar or the main unit. The treadmill will not operate without the safety key in place.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## Adjusting Incline:

The treadmill features a 9% manual incline. To activate the incline:

1. Unfold the footpad at the rear of the treadmill.
2. Insert the provided pin into the hole on the footpad, aligning it with the corresponding hole on the main frame.
3. Adjust the middle footpad to ensure the treadmill is stable and level on the ground with the incline engaged.



Image: A visual guide demonstrating the three steps to manually adjust the treadmill's incline: unfolding the footpad, inserting the pin, and adjusting the middle footpad for stability.

## Folding for Storage:

To fold the treadmill for compact storage:

1. Ensure the treadmill is powered off and unplugged.
2. If the handlebar is raised, unscrew the folding knobs and gently lower the handlebar until it rests flat against the main unit. Secure the knobs.
3. If the incline feet are extended, remove the pins and fold them back into the unit.
4. The treadmill can then be stored flat under a bed or sofa, or upright against a wall using its transport wheels.



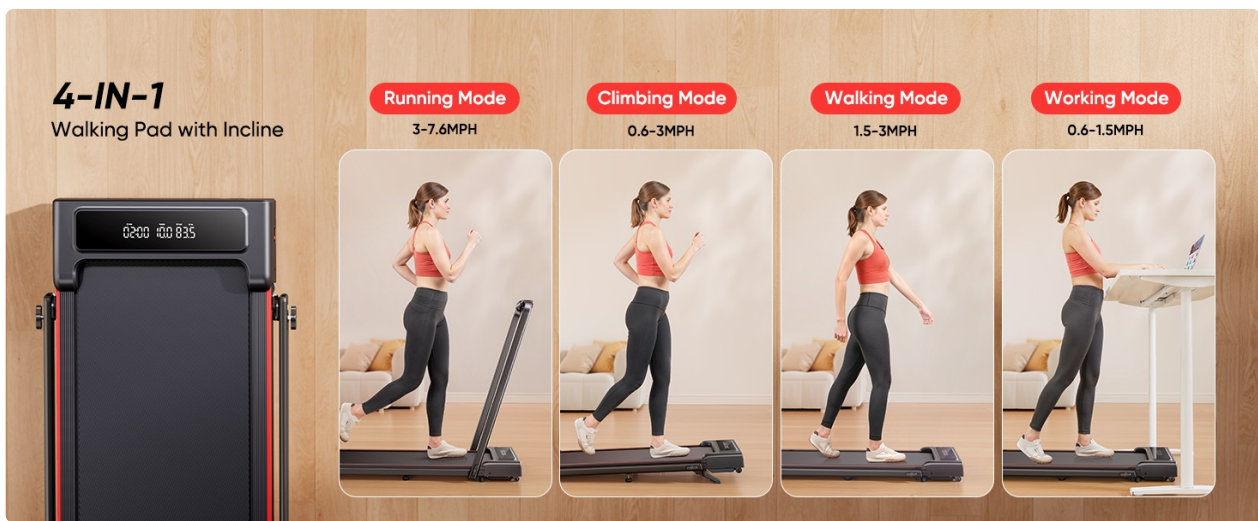


Image: A sequence of illustrations depicting the treadmill transitioning from an upright position to a folded, flat state, emphasizing its compact dimensions (50x23x4.5 inches) and transport wheels for easy storage.

## 4. OPERATING INSTRUCTIONS

The TOPUTURE TP4 treadmill offers multiple modes and easy controls for a customized workout.

### Power On/Off:

- Ensure the treadmill is plugged in and the safety key is attached.
- Press the power button on the main unit or the remote control to turn the treadmill on.
- To turn off, press the power button again or detach the safety key for an immediate stop.

### Control Options:

- **Remote Control:** The magnetic remote control allows for easy adjustment of speed and activation of the mute function. It can be magnetically attached to the handlebar for convenience.
- **Handlebar Controls:** When the handlebar is raised, additional controls for speed and mode selection are available on the top panel.

### Workout Modes & Speed:

- **Walking Mode:** Speed range from 0.6 to 5 MPH. Ideal for light exercise or use under a standing desk.
- **Running Mode:** Speed range from 5 to 7.6 MPH. Suitable for more intense cardio workouts.
- The maximum speed is 7.6 MPH (12 km/h).

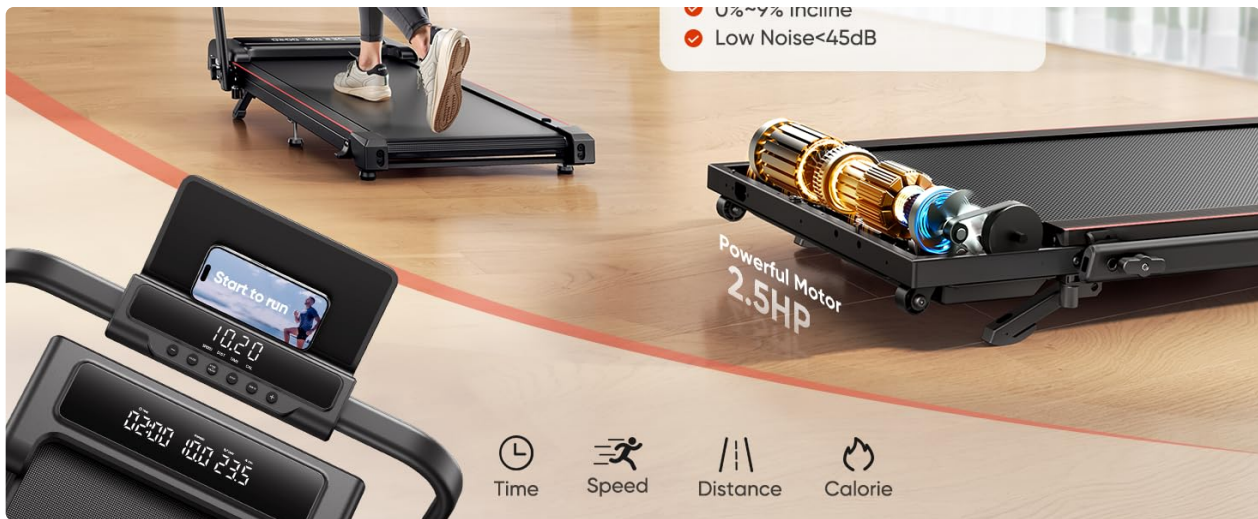


Image: Four illustrations depicting the different usage modes of the treadmill: Running Mode (3-7.6 MPH), Climbing Mode (0.6-3 MPH), Walking Mode (1.5-3 MPH), and Working Mode (0.6-1.5 MPH).

### Display Metrics:

The dual LED displays provide real-time feedback on your workout progress:

- **Time:** Duration of your workout.
- **Speed:** Current speed in miles per hour (MPH).
- **Distance:** Total distance covered.
- **Calories:** Estimated calories burned.

## 5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

### Lubrication:

To keep the running belt smooth and prevent wear, apply lubricating oil regularly:

- After 1 to 2 months of use, add approximately 5 to 10 ml of lubricating oil to the running belt.
- Locate the lubrication port (often a small hole or cap on the side of the deck).
- Apply the oil directly onto the running deck beneath the belt.
- Run the treadmill at a low speed for a few minutes to distribute the oil evenly.

### Belt Adjustment:

If the running belt feels loose or is slipping, it may need adjustment:

- Use the provided tool (often an Allen wrench) to adjust the tension screws at the rear of the treadmill.
- Turn the screws in small increments (e.g., quarter turns) to tighten or center the belt.
- Test the belt after each adjustment to ensure proper tension and alignment.



Image: Visual instructions for performing routine maintenance, including where to add lubricating oil and how to adjust the running belt for optimal performance.

Cleaning:

- Wipe down the treadmill's surfaces with a damp cloth after each use.
- Avoid using abrasive cleaners or solvents that could damage the finish.

6. TROUBLESHOOTING

If you encounter issues with your TOPUTURE TP4 treadmill, refer to the following common solutions:

Problem	Possible Cause	Solution
Treadmill does not power on.	Not plugged in; power switch off; safety key not attached.	Check power cord connection; ensure power switch is ON; attach safety key securely.
Running belt slips or hesitates.	Belt too loose; insufficient lubrication.	Adjust belt tension (see Maintenance section); apply lubricating oil (see Maintenance section).
Unusual noise during operation.	Loose components; lack of lubrication; foreign object.	Check for and tighten any loose screws; lubricate the belt; inspect for any obstructions.
Display not showing correct data.	Sensor issue; app connectivity problem.	Ensure Bluetooth is enabled and app is correctly paired; restart treadmill and app.

If problems persist after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Specification	Detail
Brand	TOPUTURE
Model Name	TP4
Product Dimensions	50"D x 23"W x 4.5"H (Folded)



Specification	Detail
Item Weight	21.6 Kilograms (approx. 47 lbs)
Material	Alloy Steel
Maximum Speed	7.6 Miles per Hour
Minimum Speed	0.6 Miles per Hour
Maximum Horsepower	2.5 Horsepower
Maximum Incline Percentage	9% (Manual)
Maximum Weight Recommendation	130 Kilograms (approx. 300 lbs)
Display Type	LED (Dual Display)
Connectivity Technology	Bluetooth
Included Components	Power Cord, Remote Control, Safety Key, Tool Kit, User Manual

## 8. WARRANTY AND SUPPORT





The TOPUTURE TP4 Treadmill comes with a **1-Year Manufacturer Warranty**. Please refer to the warranty card included in your package for detailed terms and conditions.

For customer support, troubleshooting assistance, or warranty claims, please contact TOPUTURE customer service through the contact information provided in your user manual or on the official TOPUTURE website.

### Related Documents - TP4

	<p><a href="#">Toputure TP3 Incline Walking Pad User Manual</a></p> <p>Comprehensive user manual for the Toputure TP3 Incline Walking Pad, covering installation, safety precautions, features, operation, maintenance, and troubleshooting. Includes technical specifications, error codes, and FCC compliance information.</p>
	<p><a href="#">Toputure TP3 Incline Walking Pad User Manual</a></p> <p>User manual for the Toputure TP3 Incline Walking Pad, covering installation, usage, maintenance, and troubleshooting.</p>



 The image shows the cover of the Toputure TP1 Folding Treadmill User Manual. It features a line drawing of the treadmill in its folded position. The Toputure logo is at the top left. Below the drawing, it says 'USER MANUAL Model TP1' and 'FOLDING TREADMILL'.	<p><a href="#">Toputure TP1 Folding Treadmill User Manual</a></p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, safety, maintenance, and troubleshooting.</p>
 The image shows the cover of the Toputure TP1 Folding Treadmill User Manual. It features a line drawing of the treadmill in its folded position. The Toputure logo is at the top left. Below the drawing, it says 'USER MANUAL Model TP1' and 'FOLDING TREADMILL'.	<p><a href="#">Toputure TP1 Folding Treadmill User Manual</a></p> <p>Comprehensive user manual for the Toputure TP1 Folding Treadmill, covering installation, operation, maintenance, and troubleshooting.</p>
 The image shows the cover of the Toputure TP2 Home Treadmill User Manual. It features a line drawing of the treadmill. The Toputure logo is at the top left. Below the drawing, it says 'USER MANUAL Model TP2' and 'HOME TREADMILL'.	<p><a href="#">Toputure TP2 Home Treadmill User Manual</a></p> <p>Comprehensive user manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, safety, and troubleshooting. Includes detailed instructions, parameters, and fault diagnostics.</p>
 The image shows the cover of the Toputure TP2 Home Treadmill User Manual. It features a line drawing of the treadmill. The Toputure logo is at the top left. Below the drawing, it says 'USER MANUAL Model TP2' and 'HOME TREADMILL'.	<p><a href="#">Toputure TP2 Home Treadmill User Manual</a></p> <p>User manual for the Toputure TP2 Home Treadmill, covering installation, operation, maintenance, and safety guidelines.</p>