

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZUMIMALL](#) /

› [ZUMIMALL P8 2K Wireless Video Doorbell Camera with Chime User Manual](#)

ZUMIMALL P8

ZUMIMALL P8 2K Wireless Video Doorbell Camera with Chime User Manual

Model: P8

1. PRODUCT OVERVIEW

The ZUMIMALL P8 is a 2K wireless video doorbell camera designed for home security. It features a rechargeable battery for flexible placement, 2.4 GHz Wi-Fi connectivity, and comes with a chime. Key features include 2K 3MP high-resolution monitoring with superior night vision, AI human detection, two-way audio with optional voice changers, anti-theft alarm, and IP66 weatherproof rating. It supports both local storage (up to 128GB via SD card, sold separately) and cloud storage options.



Figure 1: ZUMIMALL P8 2K Wireless Video Doorbell Camera and Chime.

2. WHAT'S IN THE BOX

Upon opening your ZUMIMALL P8 package, you should find the following items:

- Doorbell Camera
- Chime
- Charging Cable
- Instruction Manual
- Mounting Screws

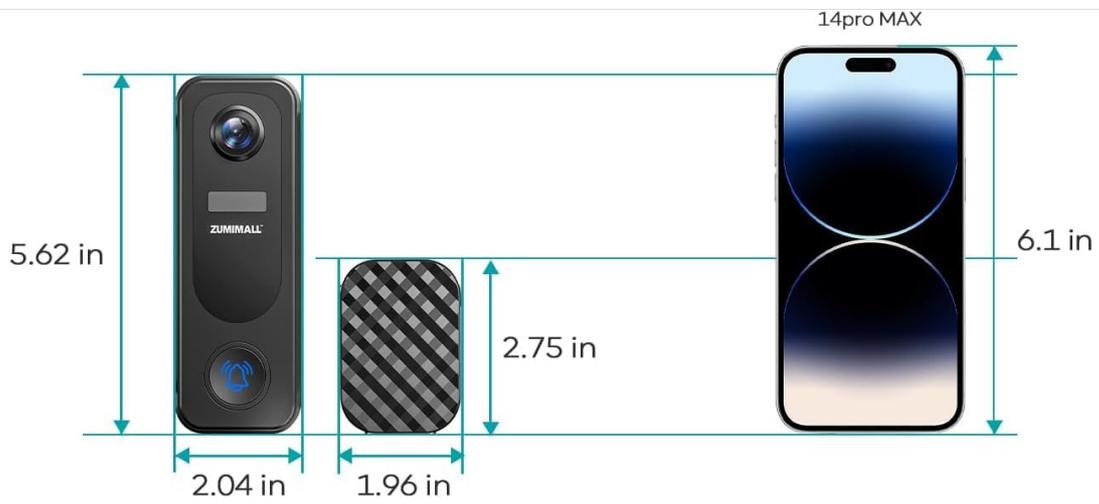


Figure 2: Package Contents.

Unboxing Video

Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing process of the ZUMIMALL P8 Doorbell Camera, showing all included components.

3. SETUP

3.1 Component Identification



Figure 3: ZUMIMALL P8 Doorbell Camera Components.

3.2 Installation

The ZUMIMALL P8 doorbell camera offers two installation methods: screw-in or adhesive tape. Choose the method best suited for your mounting surface.

1. **Choose a Location:** Select a suitable location, ideally around 1.4 meters (4.6 feet) from the ground for optimal viewing.
2. **Mounting the Back Plate:**
 - **Screw-in Installation:** Use the provided screws to fix the camera back plate to the wall.
 - **Adhesive Tape Installation:** Use the provided tape to attach the camera back plate to the mounting location.
3. **Attach the Camera:** Mount the doorbell camera onto the secured back plate.
4. **Secure the Camera:** Tighten the fixing screws on the back plate to secure the camera.

2-way Audio & Optional Sounds

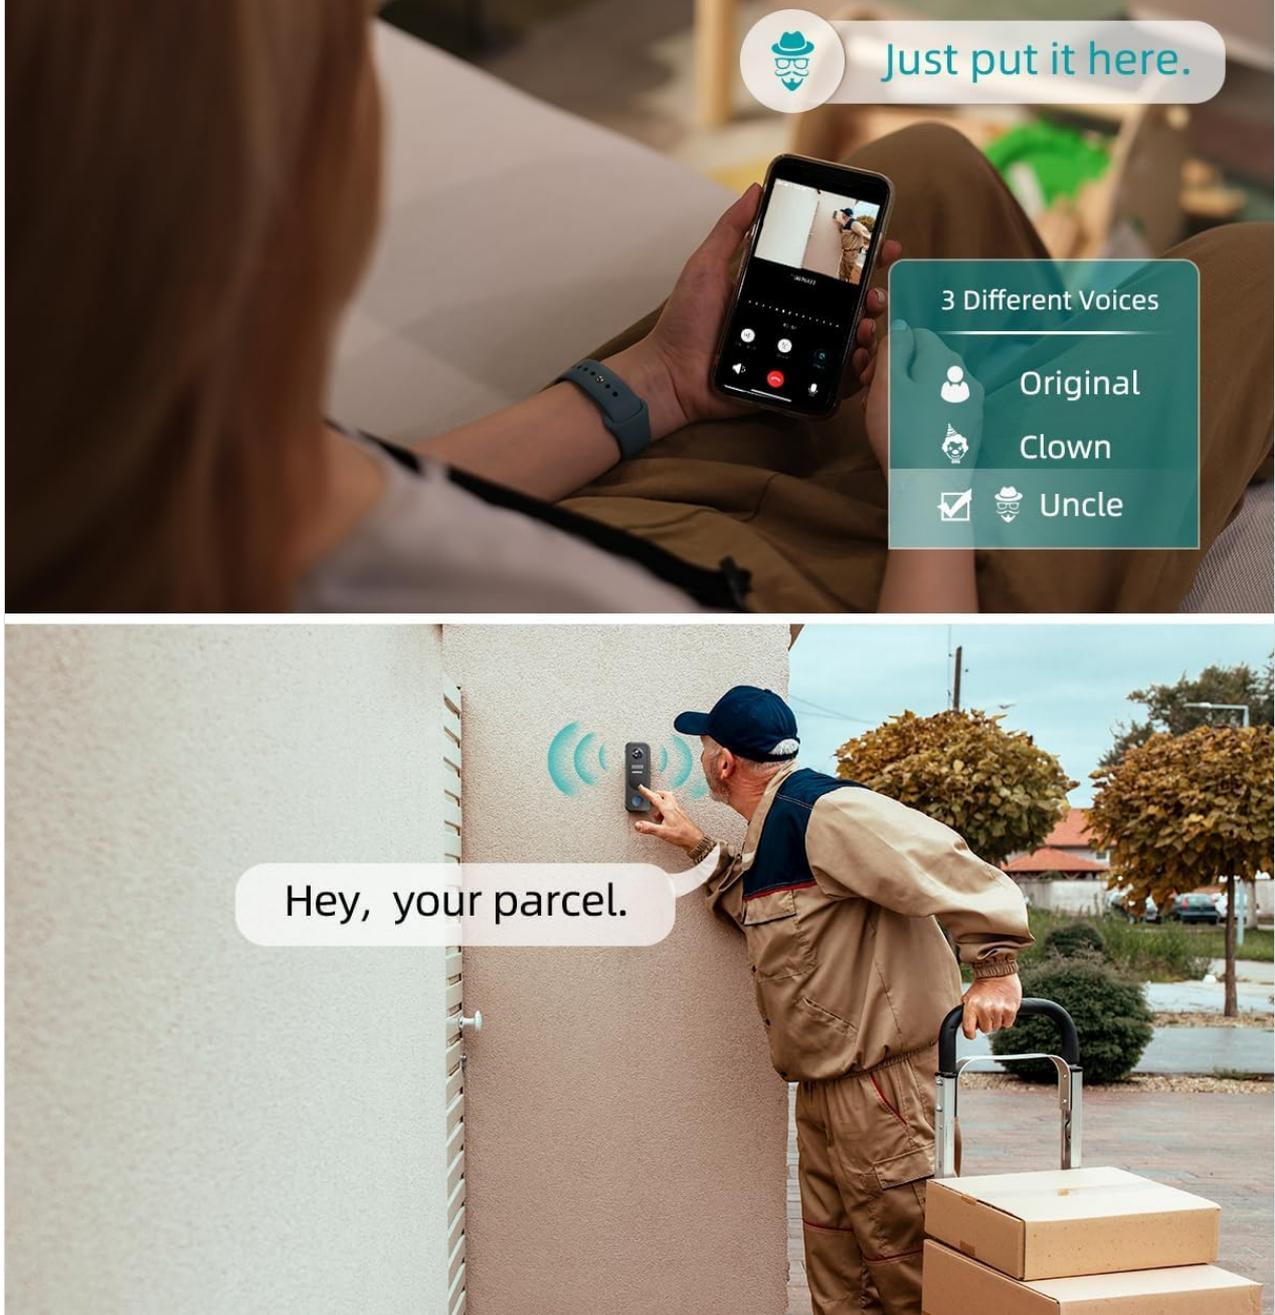


Figure 4: Easy Installation Options.

Installation and Removal Video

Your browser does not support the video tag.

Video 2: This video provides a step-by-step guide on how to install and remove the ZUMIMALL P8 doorbell camera.

3.3 App Connection

To connect your ZUMIMALL P8 doorbell camera to the ZUMIMALL App, follow these steps:

1. **Power On:** Press and hold the doorbell button for 5 seconds until you hear a ringtone, indicating the doorbell is on.

2. **Reset (if needed):** If this is the first time or you are having issues, reset the camera. Wait for the indicator light to turn red and flash slowly.
3. **Open App:** Open the ZUMIMALL App on your smartphone.
4. **Add Device:** Tap 'Add Device' and follow the on-screen network setting tips.
5. **Connect to Wi-Fi:** Select your 2.4 GHz Wi-Fi network and enter the correct password.
6. **Scan QR Code:** Scan the QR code displayed in the App with your doorbell camera. You will hear a 'beep' sound upon successful scan.
7. **Connection Confirmation:** Wait for the doorbell to connect. The doorbell light will turn blue, indicating successful addition.
8. **Complete Setup:** Tap 'Next' to continue with installation suggestions and start using your doorbell.



Figure 5: App Connection Steps.

App Connection Video

Your browser does not support the video tag.

Video 3: This video demonstrates how to connect the ZUMIMALL P8 doorbell camera with the ZUMIMALL App.

3.4 Chime Connection

To connect the wireless chime to your doorbell camera:

1. **Insert Batteries:** Load the batteries into the chime until you hear a 'ding dong' sound.
2. **Enable Chime Reminder:** Open the ZUMIMALL App, go to the 'Chime Setting' and ensure the 'Chime Reminder' is turned on.
3. **Connect Chime:** Hold the connect button on the chime until you hear a 'tick'.
4. **Test Connection:** Press the doorbell button. If both the doorbell and chime ring simultaneously, the connection is successful.

Chime Connection Video

Your browser does not support the video tag.

Video 4: This video guides you through the process of connecting the doorbell chime to your ZUMIMALL P8 camera.

4. OPERATING INSTRUCTIONS

4.1 Video Monitoring

The ZUMIMALL P8 provides clear 2K 3MP high-resolution video monitoring, day and night. Its superior night vision ensures sharp images even in low-light conditions.

Smart AI Analysis & Instant Notification

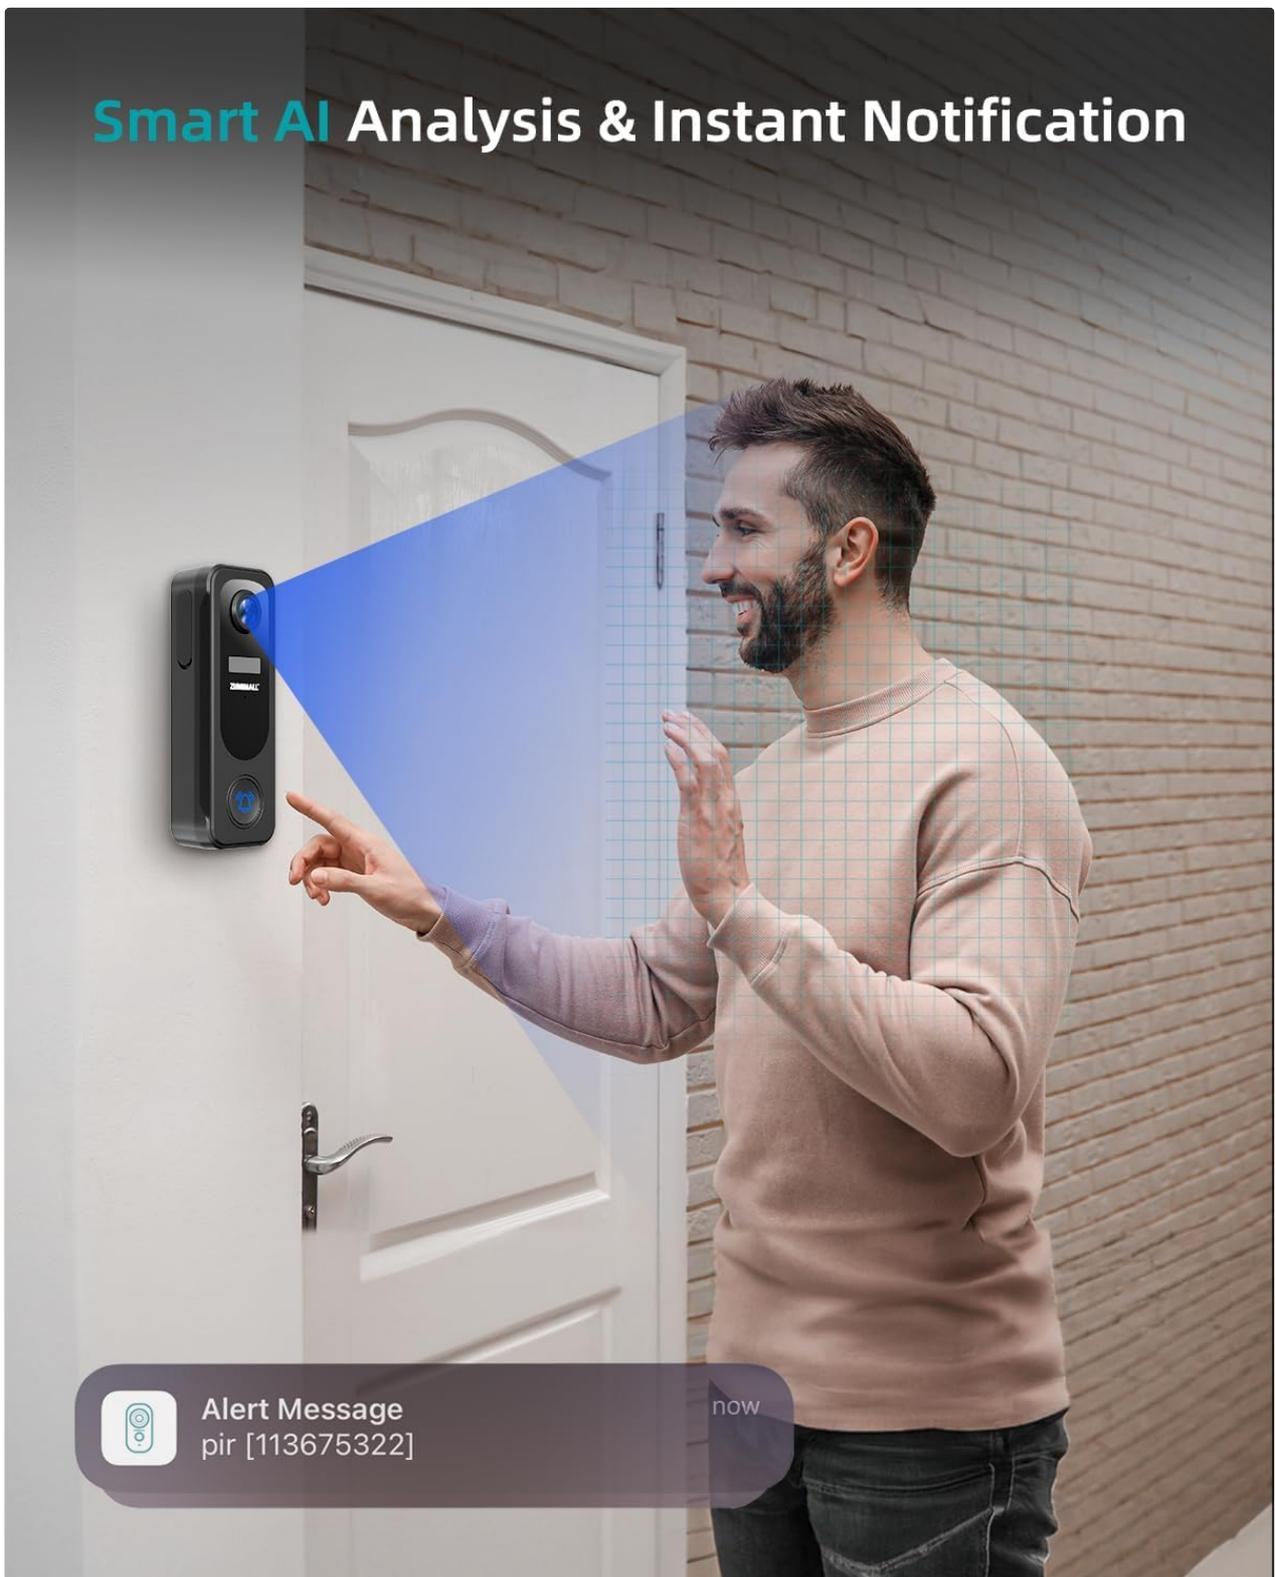


Figure 6: Day and Night Vision.

4.2 Motion Detection and Alerts

The doorbell camera features PIR human/AI detection, sending instant alerts to your smartphone when movement is identified. You can customize detection zones to reduce false alarms.

Easy Installation



Screw In



Adhesive Tape

100% Wire-Free



2 Installation Ways



Figure 7: Smart AI Analysis & Instant Notification.

Multi-people Sharing

Support unlimited sharing and 4 users watching live videos.



Figure 8: Customize Detection Zone.

Easy to Connect and Install

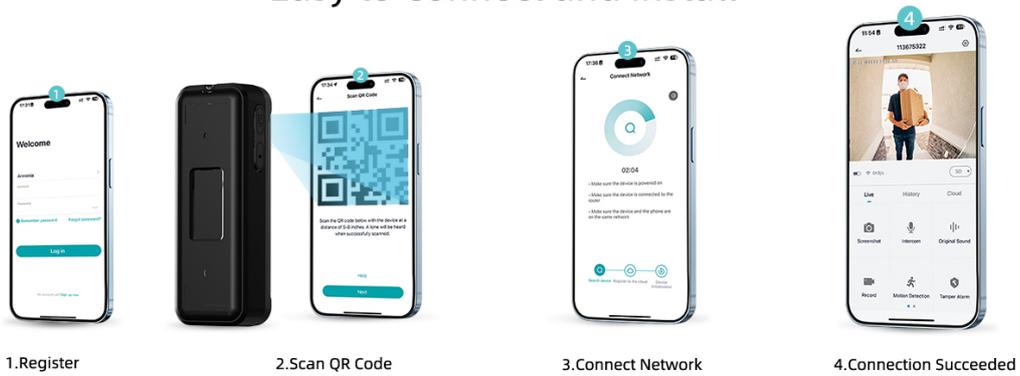


Figure 9: PIR Motion Detection & Instant Notification.

4.3 Two-Way Audio

Communicate in real-time with visitors using the two-way talk feature. The ZUMIMALL App also allows you to leave voice messages up to 30 seconds long (up to 3 messages).

No Subscription Fees

Choose local or cloud



Max 128G Memory Card
(Not Included)



Video Encryption



7-Day Loop Recording
(Non Subscription)



Figure 10: Two-Way Audio & Optional Sounds.

4.4 Storage Options

Choose between local storage (up to 128GB via a memory card, sold separately) or 6-second cloud storage options. The device supports 7-day loop recording without a subscription when using local storage.

IP66 Weatherproof



Figure 11: No Subscription Fees - Local or Cloud Storage.

4.5 Anti-Theft Feature

The doorbell camera is equipped with advanced anti-theft measures to deter tampering or theft. If the doorbell is forcibly removed, an alarm will be triggered.



Figure 12: Anti-theft Alert.

4.6 Weatherproof Design

With an IP66 rating, the ZUMIMALL P8 is designed to withstand various weather conditions, ensuring durability

and reliable operation year-round.



Figure 13: IP66 Weatherproof.

4.7 Multi-User Sharing

The ZUMIMALL P8 supports unlimited sharing and allows up to 4 users to watch live videos simultaneously, enabling multiple family members to monitor the entrance.

2-Way Audio Optional Sounds

Protect your privacy and security.

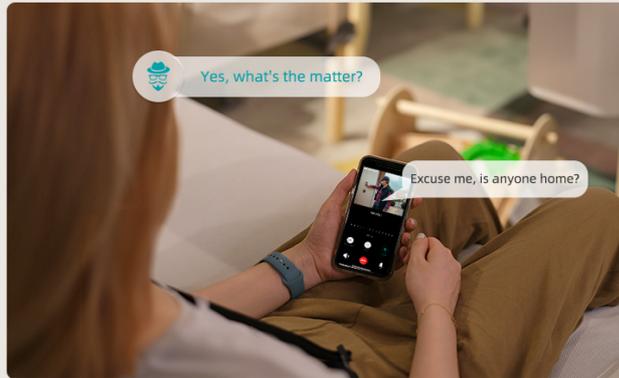


Figure 14: Multi-people Sharing.

5. MAINTENANCE

The ZUMIMALL P8 is battery-powered. Ensure the battery is regularly charged to maintain continuous operation. The battery life will vary based on usage and environmental conditions.

- **Charging:** Connect the doorbell camera to a power source using the provided charging cable when the battery level is low.
- **Cleaning:** Periodically clean the camera lens and the doorbell surface with a soft, dry cloth to ensure clear video quality and proper functionality.
- **Firmware Updates:** Check the ZUMIMALL App regularly for any available firmware updates to ensure optimal performance and access to new features.

6. TROUBLESHOOTING

If you encounter issues with your ZUMIMALL P8 doorbell camera, refer to the following common troubleshooting steps:

- **Connectivity Issues:** Ensure your Wi-Fi network is 2.4 GHz and the signal strength is adequate at the doorbell's location. Try resetting your router and the doorbell camera.
- **Doorbell Not Responding:** Check the battery level. If the battery is low, recharge the device. If the device is powered on but unresponsive, try resetting it.
- **Video Playback Problems:** Ensure a compatible SD card (up to 128GB) is inserted correctly for local storage, or verify your cloud storage subscription is active.
- **False Alarms:** Adjust the motion detection sensitivity settings in the ZUMIMALL App. Utilize the customizable detection zones to focus on specific areas and reduce unwanted alerts.
- **Chime Not Ringing:** Ensure the chime has fresh batteries and is successfully paired with the doorbell camera (refer to Section 3.4). Check the 'Chime Reminder' setting in the app.

Resetting the Doorbell Camera Video

Your browser does not support the video tag.

Video 5: This video demonstrates how to reset your ZUMIMALL P8 doorbell camera.

7. SPECIFICATIONS

Feature	Specification
Brand	ZUMIMALL
Model Name	P8
Connectivity Technology	Wireless (2.4GHz Wi-Fi, Bluetooth)
Video Capture Resolution	2K
Effective Still Resolution	3 MP
Special Features	2-Way Audio, HD Resolution, Local Recording, Night Vision, Weather Proof
Indoor/Outdoor Usage	Indoor, Outdoor
Compatible Devices	Smartphone (ZUMIMALL APP, Amazon Alexa, Google Assistant)
Power Source	Battery Powered
Max Flash Memory Supported Size	128 GB
Water Resistance Level	Waterproof (IP66)
Item Dimensions	2.04 x 1.18 x 4.62 inches
Item Weight	0.48 Kilograms

8. WARRANTY AND SUPPORT

ZUMIMALL is committed to providing high-quality products and customer satisfaction. For any issues or inquiries, please refer to the following:

- **Warranty Information:** Specific warranty details are typically provided with your product packaging or can be found on the official ZUMIMALL website.
- **Customer Support:** ZUMIMALL offers one-on-one online support to assist with setup, troubleshooting, and any other product-related questions. You can usually find contact information (email, phone, or live chat) on the ZUMIMALL website or within the ZUMIMALL App.
- **Online Resources:** Visit the official ZUMIMALL website for FAQs, updated manuals, and additional support resources.

