

AUTEL

**AUTEL BLE-A001
2.4 GHz Metal
Valve
Programmable
BLE TPMS Sensor**



AUTEL BLE-A001 2.4 GHz Metal Valve Programmable BLE TPMS Sensor Instruction Manual

[Home](#) » [AUTEL](#) » AUTEL BLE-A001 2.4 GHz Metal Valve Programmable BLE TPMS Sensor Instruction Manual 

Contents

- [1 AUTEL BLE-A001 2.4 GHz Metal Valve Programmable BLE TPMS Sensor](#)
- [2 Installation Guide](#)
- [3 SAFETY INSTRUCTIONS](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

AUTEL

AUTEL BLE-A001 2.4 GHz Metal Valve Programmable BLE TPMS Sensor



Specifications

- Product: Programmable BLE TPMS Sensor MX-SENSOR
- Version: 2.4 GHz Metal Valve (Screw-in)
- Weight: 24.3 g (approx.)
- Dimensions: 63.6 x 33.6 x 22.6 mm
- Max. Pressure Range: 800 kPa

Product Usage Instructions

CAUTION: Do not race with the vehicle on which the Clamp-in MX-Sensor is mounted, and always keep the drive speed under 300 km/h (186 mph).

Installation Guide

1. **Loosening the tire:** Remove the valve cap and core, deflate the tire, and use the bead loosener to unseat the tire bead.
2. **Dismounting the tire:** Clamp the tire onto the tire changer, adjust the valve at 1 o'clock relative to the tire separation head, and use a tire tool to lift the tire bead onto the mounting head for dismounting.
3. **Dismounting the sensor:** Remove the fastening screw and sensor from the valve stem with a screwdriver, then loosen the nut to remove the valve.
4. **Mounting sensor and valve:** Adjust the installation angle so that the sensor fits the rim tightly, tighten the screw, and the sensor and valve are now installed.
5. **Mounting the tire:** Mount the tire to the wheel following the tire changer manufacturer's instructions.

Warranty

AUTEL guarantees that the sensor is free from material and manufacturing defects for a period of twenty-four (24) months or for 25,000 miles, whichever comes first. AUTEL will replace any defective merchandise during the warranty period. The warranty shall be void if any unauthorized modifications occur.

CAUTION


Do Not race with the vehicle on which the Clamp-in MX-Sensor is mounted, and always keep the drive speed under 300 km/h (186 mph).

SAFETY INSTRUCTIONS

Before installing the sensor, read the installation and safety instructions carefully. For reasons of safety and for optimal operation, we recommend that any maintenance and repair work be carried out by trained experts only, in accordance with the guidelines of the vehicle manufacturer. The valves are safety-relevant parts which are intended for professional installation only. Failure to do so may result in the failure of the TPMS sensor. AUTEL does not assume any liability in case of faulty or incorrect installation of the product.

CAUTION

- The TPMS sensor assemblies are replacement or maintenance parts for vehicles with factory installed TPMS.
- Make sure to program the sensors by AUTEL sensor programming tools by the specific vehicle make, model and year before installation.
- Do not install programmed TPMS sensors in damaged wheels.
- In order To guarantee optimal function, the sensors may only be installed with original valves and accessories provided by AUTEL.
- Upon completing the installation, test the vehicle's TPMS following the procedures described in the original manufacturer's user guide to confirm proper installation.

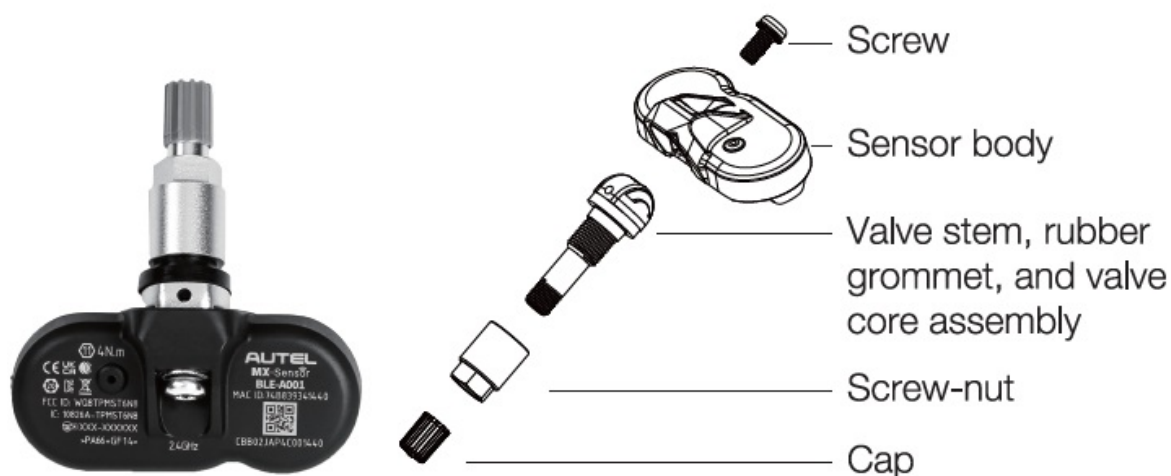

Technical data of the sensor

- Weight of sensor without valve 24.3 g
- Dimensions approx. 63.6 x 33.6 x 22.6 mm
- Max. pressure range 800 kp

CAUTION: Each time a tire is serviced or dismounted, or if the sensor is removed or replaced, it is mandatory to replace the rubber grommet, nut and valve core with our parts to ensure proper sealing. It is mandatory to replace the sensor if it is externally damaged. Correct sensor nut torque: 4 Newton-meters.

INSTALLATION GUIDE


IMPORTANT: Before operating or maintaining this unit, please read these instructions carefully and pay extra attention to the safety warnings and precautions. Use this unit correctly and with care. Failure to do so may cause

damage and/or personal injury and will void the warranty.

Loosening the tire

- Remove the valve cap and core and deflate the tire.
- Use the bead loosener to unseat the tire bead.


CAUTION: The bead loosener must be facing the valve.

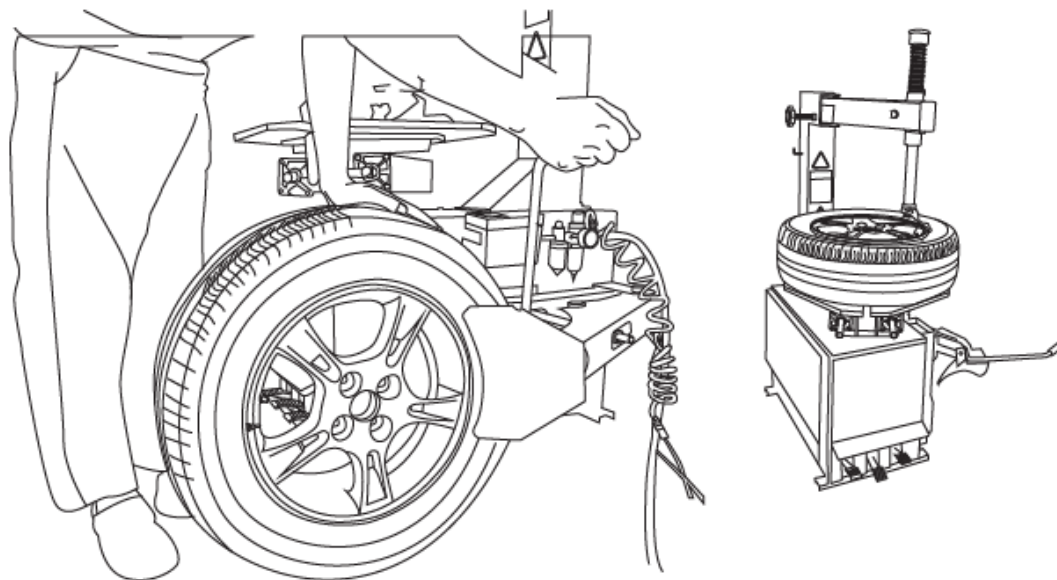

Dismounting the tire


Clamp the tire onto the tire changer, and adjust the valve at 1 o'clock relative to the tire separation head. Insert the tire tool and lift the tire bead onto the mounting head to dismount the bead.

CAUTION: This starting position must be observed during the whole dismounting process.

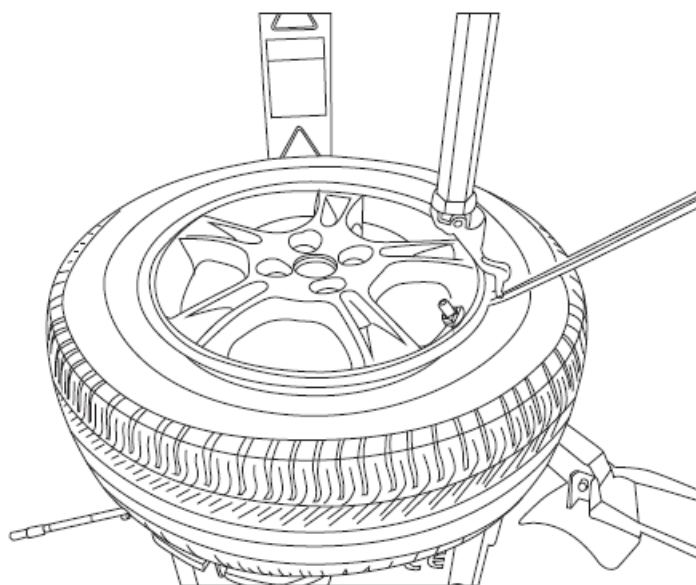

Dismounting the sensor


Remove the fastening screw and the sensor from the valve stem with a screwdriver, and then loosen the nut to remove the valve.

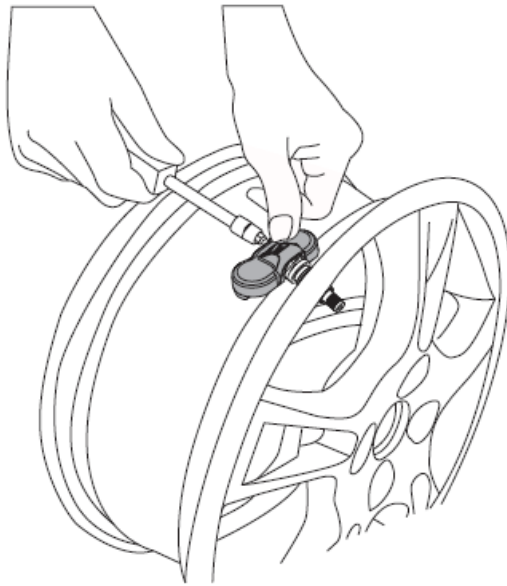


Mounting sensor and valve

- Step 1 Slide the valve stem through the valve hole of the rim.
- Step 2 Tighten the screw-nut with 4.0 N-m with the help of the fixed rod.
- Step 3 Adjust the installation angle so that the sensor fits the rim tightly, and then tighten the screw.
- Step 4 The sensor and valve are now installed.


Step 1

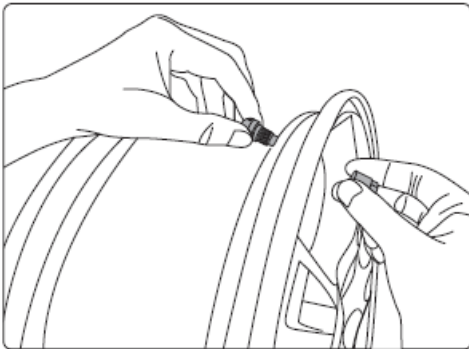


Step 2

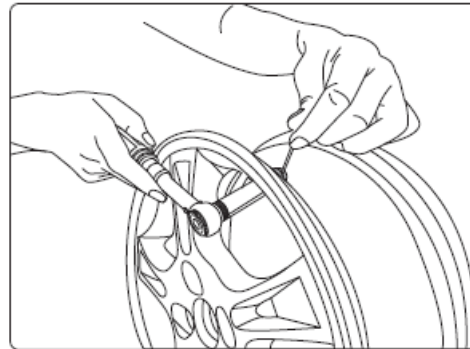

Step 3

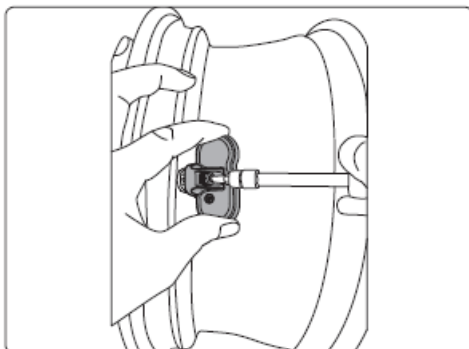


Step 4

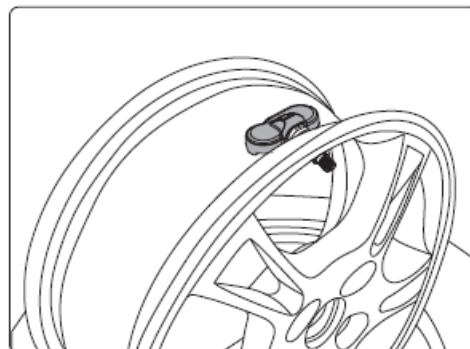

Mounting the tire Place the tire on the rim, make sure that the valve faces the separation head at an angle of 180°. Mount the tire over the rim.

CAUTION: The tire should be mounted to the wheel using tire changer manufacturer's instructions.

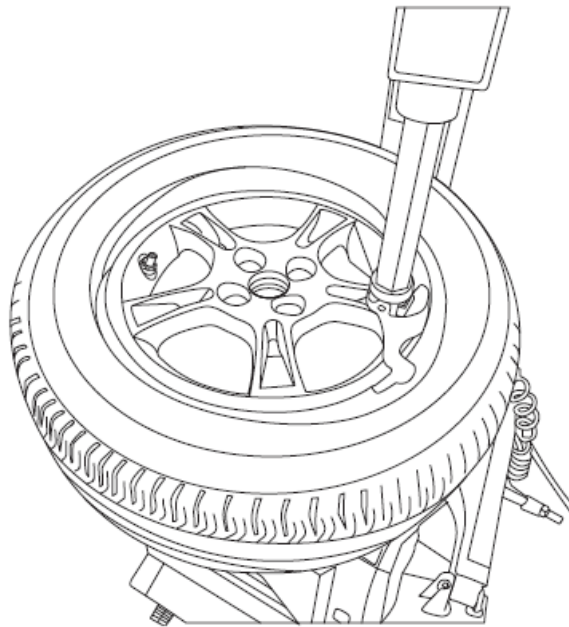

WARRANTY

AUTEL guarantees that the sensor is free from material and manufacturing defects for a period of twenty-four (24) months or for 25,000 miles, whichever comes first. AUTEL will at its discretion to replace any merchandise during the warranty period. The warranty shall be void if any of the following occurs:

1. Improper installation of products
2. Improper usage
3. Induction of detection by other products
4. Mishandling of products
5. Incorrect application
6. Damage due to collision or tire failure
7. Damage due to racing or competition
8. Exceeding specific limits of the product

BATTERY WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
 - **DEATH** or serious injury can occur if ingested.
 - A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
 - **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
 - Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. **NOT** dispose of batteries in household trash or incinerate.
 2. Even used batteries may cause severe injury or death.
 3. Call a local poison control center for treatment information.
 4. The compatible battery type (CR2450).
 5. The nominal battery voltage: 3V.
 6. Non-rechargeable batteries are not to be recharged.

7. Do not force discharge, recharge, disassemble, heat above 100°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

FAQs


Q: What should I do if a tire is serviced or dismantled?

A: Each time a tire is serviced or dismantled, or if the sensor is removed or replaced, it is mandatory to replace the rubber grommet, washer, nut, and valve core with parts provided to ensure proper sealing.

Q: How should I dispose of used batteries in the product?

A: Remove and recycle or dispose of used batteries according to local regulations. Keep them away from children and do not dispose of them in household trash or incinerate them.

Documents / Resources

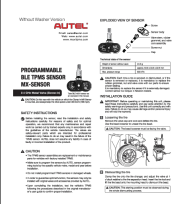	<p>AUTEL BLE-A001 2.4 GHz Metal Valve Programmable BLE TPMS Sensor [pdf] Instruction Manual</p> <p>BLE-A001 2.4 GHz Metal Valve Programmable BLE TPMS Sensor, BLE-A001, 2.4 GHz Metal Valve Programmable BLE TPMS Sensor, Valve Programmable BLE TPMS Sensor, Programmable BLE TPMS Sensor, TPMS Sensor</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.