



Autonics MT4Y Series Digital Panel Meter Instruction Manual

[Home](#) » [Autonics](#) » Autonics MT4Y Series Digital Panel Meter Instruction Manual 

Autonics

MT4Y Series Digital Panel Meter Instruction Manual

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.

The specifications, dimensions, etc. are subject to change without notice for product improvement. Some models may be discontinued without notice.

Follow Autonics website for the latest information.

Contents

- [1 Safety Considerations](#)
- [2 Ordering Information](#)
- [3 Connections](#)
- [4 Specifications](#)
- [5 Parameter Setting](#)
- [6 Input Range and Display Range](#)
- [7 Output Operation Mode](#)
- [8 Reset](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Safety Considerations

- Observe all 'Safety Considerations' for safe and proper operation to avoid hazards.
-  symbol indicates caution due to special circumstances in which hazards may occur.

 **Warning** Failure to follow instructions may result in serious injury or death.

1. Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss. (e.g. nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime / disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
2. Do not use the unit in the place where flammable / explosive / corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.
Failure to follow this instruction may result in explosion or fire.
3. Install on a device panel to use. Failure to follow this instruction may result in fire or electric shock.
4. Do not connect, repair, or inspect the unit while connected to a power source. Failure to follow this instruction may result in fire or electric shock.
5. Check 'Connections' before wiring. Failure to follow this instruction may result in fire.
6. Do not disassemble or modify the unit. Failure to follow this instruction may result in fire or electric shock.

 **Caution** Failure to follow instructions may result in injury or product damage.



1. When connecting the power / measurement input and relay output, use AWG 24 (0.20 mm²) to AWG 15 (1.65 mm²) cable or over and tighten the terminal screw with a tightening torque of 0.98 to 1.18 N m. Use the wiring suitable for the load current capacity. Failure to follow this instruction may result in fire or malfunction due to contact failure.
2. Use the unit within the rated specifications. Failure to follow this instruction may result in fire or product damage.
3. Use a dry cloth to clean the unit, and do not use water or organic solvent. Failure to follow this instruction may result in fire or electric shock.
4. Keep the product away from metal chip, dust, and wire residue which flow into the unit. Failure to follow this instruction may result in fire or product damage.

Cautions during Use

- Follow instructions in 'Cautions during Use'. Otherwise, It may cause unexpected accidents.
- Power supply should be insulated and limited voltage / current or Class 2, SELV power supply device.
- Install a power switch or circuit breaker in the easily accessible place for supplying or disconnecting the power.
- Use twisted pair wire for communication line.
- Keep away from high voltage lines or power lines to prevent inductive noise.

In case installing power line and input signal line closely, use line filter or varactor at power line and shielded wire at input signal line.

Do not use near the equipment which generates strong magnetic force or high frequency noise.

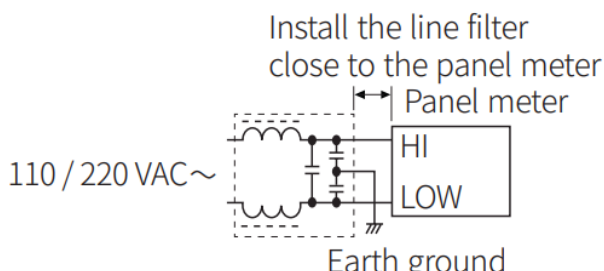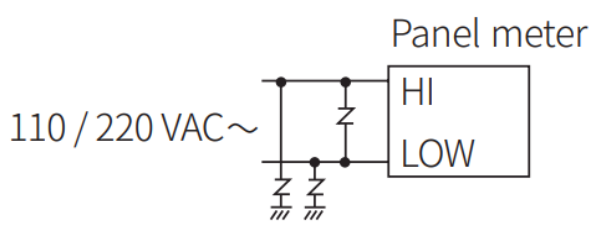Connection with the line filter	Connection with the varactor
Install the line filter close to the panel meter 	

- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in ‘Specifications’)
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category II

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

MT 4 Y - ① - 4 ②

Input type

DV: DC voltage 01)

DA: DC current

AV: AC voltage 02)

AA: AC current 02)

Preset output + Sub output

	Preset output	Sub output
N	None (indicator)	
0	Relay	–
1	NPN open collector	–
2	PNP open collector	–
3	Relay (Low out)	Transmission (DC 4 – 20 mA)
4	Relay (Low out)	RS485 Communication
5	–	BCD Dynamic
6	–	Low speed serial

1. To measure the current over DC 5 A, please select DV type because the shunt should be used.
2. In case of selecting frequency display, no output will be provided even if it is output support model

Product Components

- Product
- Bracket × 2
- Instruction manual
- Unit sticker × 1

Manual

For proper use of the product, refer to the manuals and be sure to follow the safety considerations in the manuals. Download the manuals from the Autonics website.

Software


Download the installation file and the manuals from the Autonics website.

Demister


It is the comprehensive device management program for Autonics' products, providing parameter setting, monitoring and data management.

Dimensions


- Unit: mm, For the detailed drawings, follow the Autonics website.

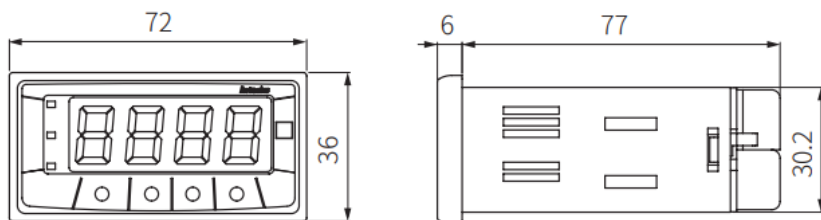


- Except) BCD Dynamic sub output model

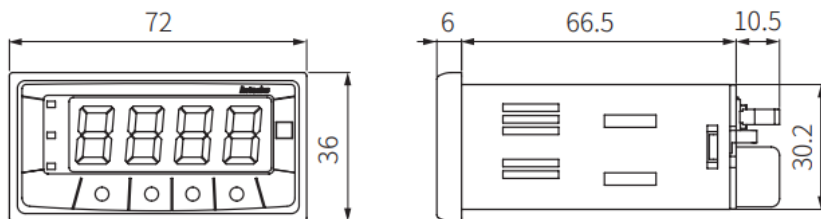

■ Bracket

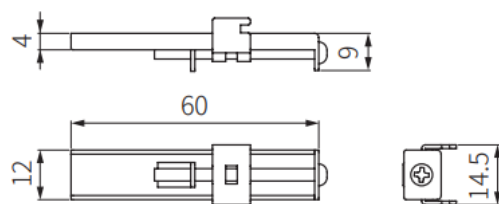


■ Panel cut-out

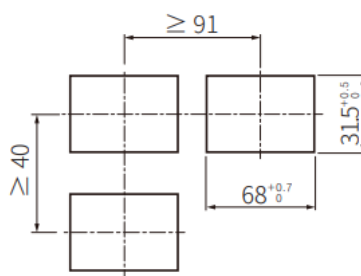


Cautions during Wiring

Use the Copper-conductor wire with the temperature class 60 °C.

- Unit: mm, Use terminals of size specified below.
- Contact the manufacture for the socket and cable.

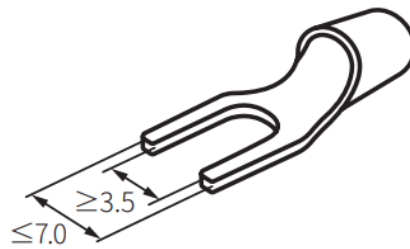


Hirose connector	HIF3BA-14D-2.54R
Hirose connector socket	HIF3BA-14PA-2.54DS
2	14

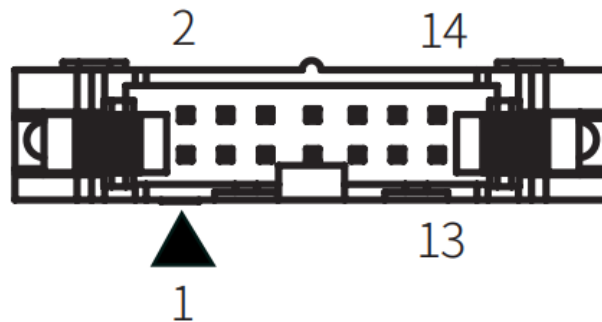


Connections

Input


• DC voltage

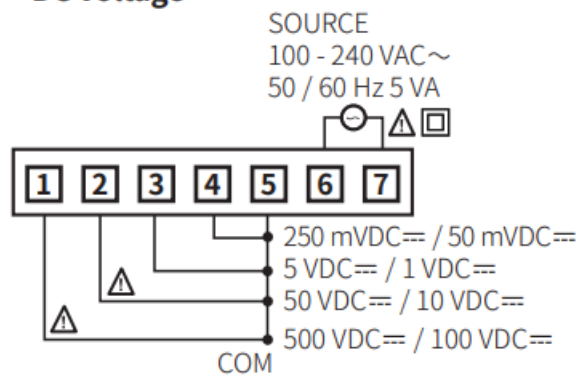


• DC current

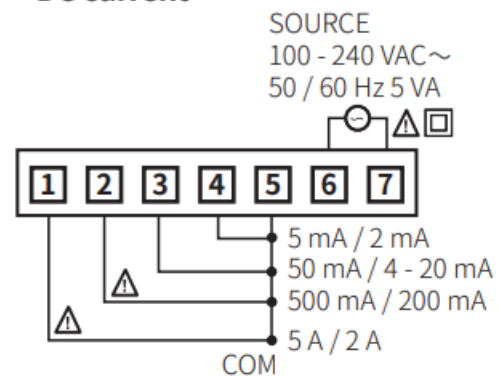

• AC voltage

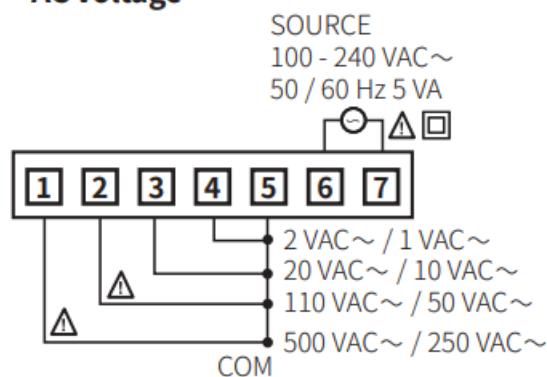


• AC current

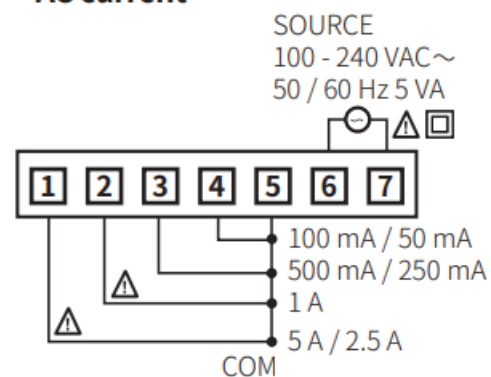


Output


• 0: Relay

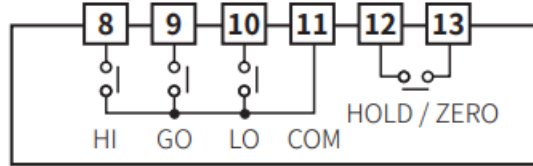


• 1: NPN open collector

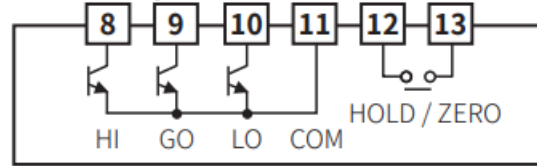


• 2: PNP open collector

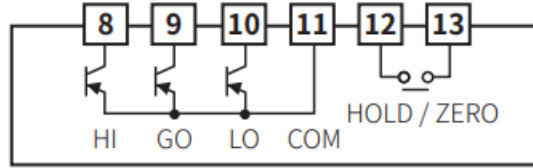


• 3: Relay + Transmission (DC 4 - 20 mA)

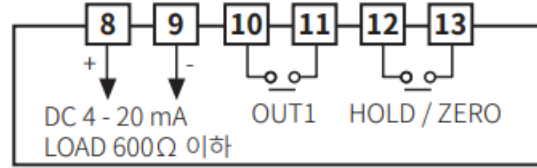

• 4: Relay + RS485 comm.

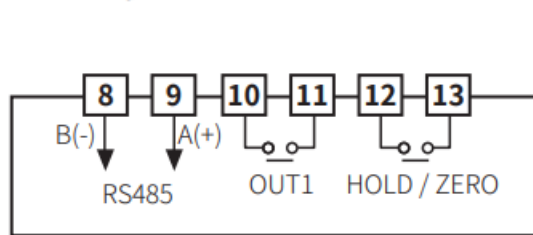


• 5: BCD Dynamic

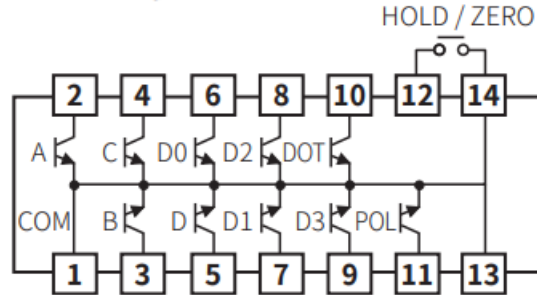

6: Low speed serial

POL: When a display value is (-) the signal of (-) will be outputted.

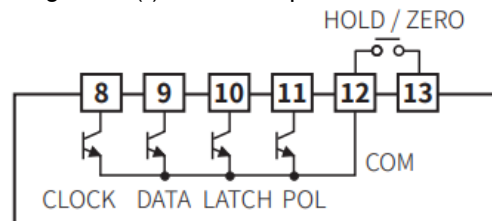

Specifications

Model	MT4Y-DV-4□	MT4Y-DA-4□	MT4Y-AV-4□	MT4Y-AA-4□
Input type	DC voltage	DC current	AC voltage ⁰¹⁾	AC current ⁰¹⁾
Max. allowable input	110 % F.S. for each measured input range			
Display method	7-segment (red) LED (character height: 14.2 mm)			
Display accuracy	Dependent on the ambient temperature			
23 ± 5 °C	± 0.1 % F.S. rdg ± 2 digit	± 0.1 % F.S. rdg ± 2 digit ⁰²⁾	± 0.3 % F.S. rdg ± 3 digit	± 0.3 % F.S. rdg ± 3 digit
-10 to 50 °C	± 0.5 % F.S. rdg ± 3 digit			
Max. display range	-1999 to 9999 (4 digit)			
A / D conversion method	ΣΔ (Sigma Delta) ADC			
Sampling cycle	50 ms		16.6 ms	
Unit weight (packaged)	≈ 134 g (≈ 213.5 g)			
Approval				

1. Available frequency display, Display accuracy ($23 \pm 5 \text{ }^{\circ}\text{C}$): $\pm 0.1 \text{ \% F.S. rdg} \pm 2 \text{ digit}$
2. 5 A terminal: $\pm 0.3 \text{ \% F.S. rdg} \pm 3 \text{ digit}$


Preset output	None (indicator) / Relay / NPN open collector / PNP open collector output model
Relay	Contact capacity: 250 VAC --- 3 A, 30 VDC --- 3 A Contact composition: N.O (1a)
NPN / PNP open collector	Output capacity: $\leq 12 - 24 \text{ VDC } \text{---} \pm 2 \text{ VDC } \text{---}$, 50 mA resistive load
Sub output	None (indicator) / BCD Dynamic / Transmission (DC 4 – 20 mA) / Low speed serial I / RS485 Communication output model
BCD Dynamic / Low speed serial	NPN open collector output Output capacity: $\leq 12 - 24 \text{ VDC}$, 50 mA resistive load
Transmission (DC 4 – 20 mA)	Resolution: 1/12,000 (load resistance: $\leq 600 \text{ }\Omega$) Response time: $\leq 450 \text{ ms}$
RS485 communication	Protocol: Modbus RTU

Power supply	100 – 240 VAC --- $\pm 10 \text{ \%}$ 50 / 60 Hz
Power consumption	5 VA
Insulation resistance	Between external terminal and case: $\geq 100 \text{ M}\Omega$ (500 VDC --- megger)
Dielectric strength	Between external terminal and case: 2,000 VAC --- 50 / 60 Hz for 1 min
Noise immunity	$\pm 2 \text{ kV}$ square wave noise (pulse width: 1) by the noise simulator
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 2 hours
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz (for 1 min) in each X, Y, Z direction for 10 min
Shock	300 m/s^2 ($\approx 30 \text{ G}$) in each X, Y, Z direction for 3 times
Shock (malfunction)	100 m/s^2 ($\approx 10 \text{ G}$) in each X, Y, Z direction for 3 times
Relay life cycle	Mechanical: $\geq 20,000,000$ operations Electrical: $\geq 100,000$ operations (250 VAC --- 3A resistive load)
Ambient temp.	-10 to 50 $^{\circ}\text{C}$, storage: -20 to 60 $^{\circ}\text{C}$ (no freezing or condensation)
Ambient humi.	35 to 85 %RH, storage: 35 to 85 %RH (no freezing or condensation)
Insulation type	Symbol: , double or reinforced insulation (dielectric strength between the measurement input part and the power part: 1 kV)

Communication Interface RS485

Comm. protocol	Modbus RTU
Application standard	Compliance with EIA RS485
Max. connection	31 units (address: 01 to 99)
Comm. synchronous method	Asynchronous
Comm. method	2-wire half duplex
Comm. distance	≤ 800 m
Comm. speed	1,200 / 1,400 / 4,800 / 9,600 / 19,200 / 38,400 bps
Start bit	1-bit (fixed)
Data bit	8-bit (fixed)
Parity bit	None, Even, Odd
Stop bit	1-bit, 2-bit
EEPROM life cycle	≈ 1,000,000 operations (Erase / Write)

Mode Setting

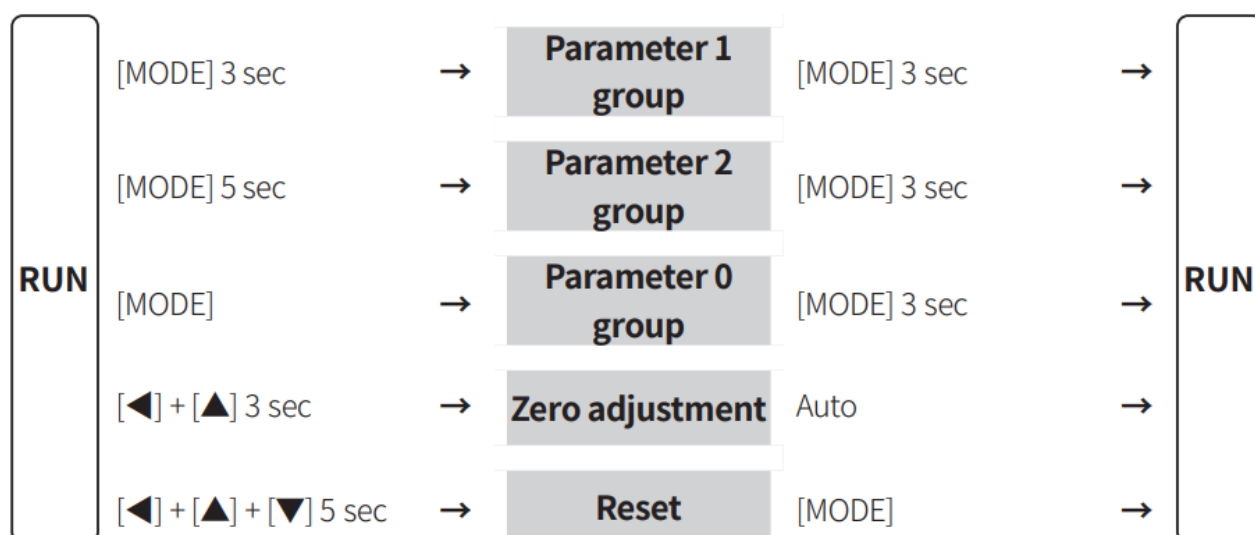

Parameter Setting

- Some parameters are activated / deactivated depending on the model or setting of other parameters. Refer to the description of each parameter.
- If any key is not entered for 60 sec in each parameter, it returns to RUN mode.
- After returning to RUN mode, press the [MODE] key within 2 sec, it returns to previous parameter.
- [MODE] key: Saves current setting value and moves to the next parameter. [◀] key: Checks fixed value / Changes setting digits. [▲], [▼] key: Changes setting values.

Parameter 1 group

Parameter	Mark	Defaults	Setting range	Display condition
1-1 Input range	I n - r	500u	[DC voltage model], [AC voltage model] • Refer to Input Range and Display Range	—
		5A	[DC current model], [AC current model] • Refer to Input Range and Display Range	—
1-2 Display method	diSP	Stnd	STND: standard, SCAL: scale, FREQ: frequency ⁰¹⁾	—
1-3 Measurement method	I n - t	t.rms	[AC voltage model], [AC current model] T.RMS: True RMS, A.RMS: Average RMS, AVG $\bullet \text{ True RMS} = \sqrt{\frac{A_1^2 + A_2^2 + \dots + A_n^2}{n}}$ $\bullet \text{ Average RMS} = \frac{A_1 + A_2 + \dots + A_n}{n}$ (n = number of display values per cycle, A = display value)	1-2 Display method: STND, SCAL
Max. display 1-4 value (fixed)	Stnd	500.0	[DC voltage model], [AC voltage model] Max. value of display range	1-2 Display method: STND
		5.000	[DC current model], [AC current model] Max. value of display range	
High-limit 1-5 display value gradient correction	I n b.H	1.000	0.100 to 5.000 %	
Low-limit 1-6 display value deviation correction	I n b.L	00	-99 to 99	
Decimal 1-7 point position	dot	0.0	[DC voltage model], [AC voltage model] 0, 0.0, 0.00, 0.000	1-2 Display method: SCAL & * 1-7 Decimal point position: 0.0, 0.00, 0.000
		0.000	[DC current model], [AC current model] 0, 0.0, 0.00, 0.000	
1-8 High-limit scale	H - SC	—	Display value against max. measurement input *	
1-9 Low-limit scale	L - SC	—	Display value against min. measurement input *	
High-limit 1-10 display value gradient correction	I n b.H	1.000	0.100 to 5.000 %	
Low-limit 1-11 display value deviation correction ⁰²⁾	I n b.L	00	-99 to 99	

Decimal 1-12 point position ⁰³⁾	dot	0.0	[AC voltage model] 0, 0.0, 0.00, 0.000	1-2 Display method: FR EQ
		0.000	[AC current model] 0, 0.0, 0.00, 0.000	
High-limit 1-13 display value gradient correction	l n b.H	1.000	0.100 to 9.999	
1-14 Exponent of INB	l n b.E	10-0	10-0: 10 ⁰ , 10-1: 10 ⁻¹ , 10-2: 10 ⁻² , 10 1: 10 ¹	

1. Displays at AC voltage or AC current model only.
2. Low-limit display value deviation correction range is within -99 to 99 for D0, D-1
3. Display range is variable according to decimal point position.

Dot	Display range	Frequency measurement range
0	-1999 to 9999	1 to 9999 Hz
0.0	-199.9 to 999.9	0.1 to 999.9 Hz
0.00	-19.99 to 99.99	0.10 to 99.99 Hz
0.000	-1.999 to 9.999	0.100 to 9.999 Hz

Parameter 2 group

Parameter		Mark	Defaults	Setting range	Display condition
2-1	Output operation mode	out.t	OFF	[Except indicator model] OFF, L.ST, H.ST, LH.ST, HH.ST, LL.ST, LD.ST - Refer to Output Operation Mode - Relay (Low out) output model is available only OFF or L.ST.	–
2-2	Hysteresis	HYS	001	[Except indicator model] Within 10 % of max. display range, digit	2-1 Output operation mode: except OFF
2-3	Startup compensation time	St A.t	00.0	[Except indicator model] 0.0 to 99.9 sec	–

2-4	Peak monitoring delay time	PELT	00 5	00 to 30 sec	—
2-5	Display cycle	dlst	0.2 5	0.1 to 5.0 sec	—
2-6	Keys for zero adjustment	Zero	no	NO, YES • YES: Press the [◀] + [▲] keys for 3 sec to adjust zero.	—
2-7	External input terminal	EULn	Hold	[Except indicator model] HOLD, ZERO • If the external input terminal is short-circuited for 50 ms or more, it operates with the set function.	—
2-8	High-limit value of transmission output	FS-H	500.0	[DC voltage & Transmission (DC 4 – 20 mA) output model], [AC voltage & Transmission (DC 4 – 20 mA) output model] Max. value of display range	—
			5.000	[DC current & Transmission (DC 4 – 20 mA) output model], [AC current & Transmission (DC 4 – 20 mA) output model] Max. value of display range	
2-9	Low-limit value of transmission output	FS-L	000.0	[DC voltage & Transmission (DC 4 – 20 mA) output model], [AC voltage & Transmission (DC 4 – 20 mA) output model] Min. value of display range	—
			0.00	[DC current & Transmission (DC 4 – 20 mA) output model], [AC current & Transmission (DC 4 – 20 mA) output model] Min. value of display range	
2-10	Comm. Address	Addr	0 1	[RS485 Comm. output model] 01 to 99	—
2-11	Comm. speed	bPS	9600	[RS485 Comm. output model] 38.4k, 19.2k, 9600, 4800, 2400, 1200 bps	—
2-12	Parity bit	Prty	none	[RS485 Comm. output model] NONE, EVEN, ODD	—
2-13	Stop bit	stp	2	[RS485 Comm. output model] 2, 1 bit	—
2-14	Response waiting time	rsdt	5	[RS485 Comm. output model] 5 to 99 sec	—

2-15	Lock	<i>LoC oFF</i>	OFF: unlock, LOC1: lock parameter 1, LOC2: lock parameter 1, 2, LOC3: lock parameter 0, 1 and 2	–
------	------	----------------	---	---

Parameter 0 group

Parameter	Mark	Defaults	Setting range	Display condition
Output high- 0-1 limit output setting value	<i>H.SET</i>	<i>500.0</i>	[DC voltage & Preset setting model] -5 to 110 % of display range [AC voltage & Preset setting model] 0 to 110 % of display range	2-1 Output operation mode: except OFF
		<i>5.000</i>	[DC current & Preset setting model] -5 to 110 % of display range [AC current & Preset setting model] 0 to 110 % of display range	
Output low- 0-2 limit output setting value	<i>L.SET</i>	<i>000.0</i>	[DC voltage & Preset setting model] -5 to 110 % of display range [AC voltage & Preset setting model] 0 to 110 % of display range	2-1 Output operation mode: except OFF
		<i>000.0</i>	[DC current & Preset setting model] -5 to 110 % of display range [AC current & Preset setting model] 0 to 110 % of display range	
0-3 Display max. peak value ⁰¹⁾	<i>H.PEH</i>	<i>0.0</i>	[DC voltage], [AC voltage] Max. peak value in run mode	2-1 Output operation mode: except
		<i>000.0</i>	[DC current], [AC current] Max. peak value in run mode	
0-4 Display min. peak value ⁰¹⁾	<i>L.PEH</i>	<i>0.0</i>	[DC voltage], [AC voltage] Min. peak value in run mode	OFF & 2-4 Peak monitoring delay time: except 00
		<i>000.0</i>	[DC current], [AC current] Min. peak value in run mode	

Input Range and Display Range

When the max. input value is over the 100 %, it may result in input terminal damage.

DC voltage model

Input range	Display range		Input impedance
	Diaplay method: STND (fixed)	Diaplay method: SCAL “)	
0 – 500 VDC=	0.0 to 500.0	500 _u	Decimals Display range 0 -1999 to 9999 0.0 -199.9 to 999.9 0.00 -19.99 to 99.99 0.000 -1.999 to 9.999
0- 100 VDC=	0.0 to 100.0	100 _u	
0 – 50 VDC—	0.00 to 50.00	50 _u	
0 -10 VDC—	0.00 to 10.00	10 _u	
0 – 5 VDC—	0.000 to 5.000	5 _u	
0 -1 VDC—	0.000 to 1.000	1 _u	
0 – 250 mVDC=	0.0 to 250.0	0.25 _u	
0 – 50 mVDC=	0.00 to 50.00	50 _m _u	2.28 kC)

01) Connect to the input terminals whose 30 % to 100 % of the input range includes the max. value of the input range to measure.

When the max. input value is under the 30 % of the input terminal range, display accuracy is degraded.

DC current model

Input range	Display range		Input impedance
	Diaplay method: STND (fixed)	Diaplay method: SCAL (11)	
0 – 5 A	0.000 to 5.000	5A	Decimals Display range 0 -1999 to 9999 0.0 -199.9 to 999.9 0.00 -19.99 to 99.99 0.000 -1.999 to 9.999
0 – 2 A	0.000 to 2.000	2A	
0 – 500 mA	0.0 to 500.0	0.5A	
0 – 200 mA	0.0 to 200.0	0.2A	
0 – 50 mA	0.00 to 50.00	50 _m A	
4 – 20 mA	4.00 to 20.00	4-20	
0 – 5 mA	0.000 to 5.000	5 _m A	
0 – 2 mA	0.000 to 2.000	2 _m A	22.220

01) Connect to the input terminals whose 30 % to 100 % of the input range includes the max. value of the input range to measure.

When the max. input value is under the 30 % of the input terminal range, display accuracy is degraded.

AC voltage model

Input range	Display range			Input impedance	
	Diaplay method: STND (fixed)		Diaplay method: SCAL 01)		
0 – 5 A	0.000 to 5.000	500 μ	Decimals	Display range	0.020
0 – 2 A	0.000 to 2.000	250 μ	0	-1999 to 9999	0.020
0 – 500 mA	0.0 to 500.0	110P	0.0	-199.9 to 999.9	0.220
0 – 200 mA	0.0 to 200.0	50 μ	0.00	-19.99 to 99.99	0.220
0 – 50 mA	0.00 to 50.00	20 μ	0.000	-1.999 to 9.999	2.220
4 – 20 mA	4.00 to 20.00	10 μ			2.220
0 – 5 mA	0.000 to 5.000	2 μ			22.220
0 – 2 mA	0.000 to 2.000	1 μ			22.220

1. Connect to the input terminals whose 30 % to 100 % of the input range includes the max. value of the input range to measure.

When the max. input value is under the 30 % of the input terminal range, display accuracy is degraded.

2. In case of 0 to 110 VAC of AC voltage range and using P.T (potential transformer) for 440 VAC/ 110 VAC, if 110 VAC is input, and the unit displays 440 VAC automatically by preset scale value for P.T user's convenient.

AC current model




Input range	Display range			Input impedanc e										
	Diaplay method: STND (fixed)		Diaplay method: SCAL °I)											
0- 5 A	0.000 to 5.000	5A	<table><tr><th>Decimals</th><th>Display range</th></tr><tr><td>0</td><td>-1999 to 9999</td></tr><tr><td>0.0</td><td>-199.9 to 999.9</td></tr><tr><td>0.00</td><td>-19.99 to 99.99</td></tr><tr><td>0.000</td><td>-1.999 to 9.999</td></tr></table>	Decimals	Display range	0	-1999 to 9999	0.0	-199.9 to 999.9	0.00	-19.99 to 99.99	0.000	-1.999 to 9.999	0.020
Decimals	Display range													
0	-1999 to 9999													
0.0	-199.9 to 999.9													
0.00	-19.99 to 99.99													
0.000	-1.999 to 9.999													
0 – 2.5 A	0.000 to 2.500	2.5A		0.020										
0 – 1 A	0.000 to 1.000	1A		0.100										
0 – 500 mA	0.0 to 500.0	0.5A	0.200											
0 – 250 mA	0.0 to 250.0	0.25A	0.200											
0 -100 mA	0.0 to 100.0	0.1A	1.020											
0 – 50 mA	0.00 to 50.00	50mA	1.020											

Connect to the input terminals whose 30 % to 100 % of the input range includes the max. value of the input range to measure.

When the max. input value is under the 30 % of the input terminal range, display accuracy is degraded.

Output Operation Mode

- H.SET or L.SET is displayed according to the output operation mode setting. In case of output operation mode as OFF, H.SET and L.SET are not displayed.
- When changing output operation mode, high-limit / low-limit output setting value, hysteresis are reset.

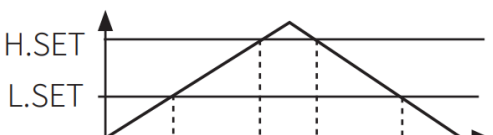MODE	Output operation	Preset output		
		LO ON	HI ON	GO ON
				
OFF		No output		
L.SEt		L.SET Display value	—	L.SET < Display value
H.SEt		—	H.SET Display value	H.SET > Display value
LH.SEt		L.SET - Display value	H.SET Display value	L.SET < Display value < H.SET
HH.SEt		L.SET :5_ Display value	H.SET -. Display value	L.SET > Display value
LL.SEt		L.SET -. Display value	H.SET Display value	H.SET < Display value
Ld.SEt		Second L.SET Display value	—	L.SET < Display value

Reset

1. Press the [◀] + [▲] + [▼] keys for over 5 sec. in run mode, INIT flashes for 0.5 sec.
2. Press the direction keys to flash NO for 0.5 sec in turn.
3. Change the setting value as YES by pressing the direction keys.
4. Press the [MODE] key to reset all parameter values as default and to return to run mode.

Error

Error display is released automatically when it is in the measured and display range.

Display	Description	Troubleshooting
HHHH	Flashes when measurement input is exceeded the max. allowable input (110 %)	Disconnect power supply and check the cables.
LLLL ⁰¹⁾	Flashes when measurement input is exceeded the min. allowable input (-10 %)	
d-HH	Turns ON when display input is exceeded high-limit scale setting value or max. display range (9999)	Reset within the display range.
d-LL	Turns ON when display input is exceeded low-limit scale setting value or min. display range (-1999)	
F-HH	Turns ON when input frequency is exceeded the max. display value of measured range	—
ouEr	Flashes twice when it exceeds zero range (+99) and returns to run mode	Reset within the zero range.

18, Bansong-ro 513Beon-gil, Haeundae-gu,
Busan, Republic of Korea, 48002

www.autonics.com

+82-2-2048-1577

sales@autonics.com

Documents / Resources

	Autonics MT4Y Series Digital Panel Meter [pdf] Instruction Manual MT4Y-AV-42, MT4Y Series Digital Panel Meter, Digital Panel Meter, Panel Meter, Meter
---	---

References

-  autonics.com