

AVIGILON AINVR-STD-PRK AI NVR Standard Performance Kit



AVIGILON AINVR-STD-PRK AI NVR Standard Performance Kit Installation Guide

[Home](#) » [aVIGILON](#) » AVIGILON AINVR-STD-PRK AI NVR Standard Performance Kit Installation Guide 

Contents

- [1 AVIGILON AINVR-STD-PRK AI NVR Standard Performance Kit](#)
- [2 Introduction](#)
- [3 Confirm Package Contents](#)
- [4 Installing the AI NVR Standard Performance Kit](#)
- [5 Opening the AI NVR](#)
- [6 Installing the CPU](#)
- [7 Installing Additional RAM](#)
- [8 Removing the Pre-installed Graphics Card](#)
- [9 Installing the New Graphics card](#)
- [10 Reattaching the Cover](#)
- [11 Confirming the Installation](#)
- [12 More Information & Support](#)
- [13 Limited Warranty](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



AVIGILON AINVR-STD-PRK AI NVR Standard Performance Kit



Specifications

- Part Number: AINVR-STD-PRK
- Description: AI NVR Standard Performance Upgrade Kit
- Compatibility: AI NVR Standard
- Required Software Version: ACC 7.12.4 or later for Performance Upgrade Kit, ACC 7.14.2 or later for Performance Upgrade Kit and 10GbE Kit
- Compatibility Note: Not compatible with AI NVR Standard shipped after January 1, 2024 if no vacant PCIe slots are available

Product Usage Instructions

Confirm Package Contents

Before starting the installation, ensure all components of the AI NVR Standard Performance Upgrade Kit are present.

Required Tools

The following tools are required for installation:

- Phillips #2 screwdriver
- Antistatic mat and antistatic strap

**AI NVR Standard Performance Kit
Installation Guide
AINVR-STD-PRK For AINVR-STD**

© 2024, Avigilon Corporation. All rights reserved. MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. Unless stated explicitly and in writing, no license is granted with respect to any copyright, industrial design, trademark, patent or other intellectual property rights of Avigilon Corporation or its licensors.

This document has been compiled and published using product descriptions and specifications available at the time of publication. The contents of this document and the specifications of the products discussed herein are subject to change without notice. Avigilon Corporation reserves the right to make any such changes without notice. Neither Avigilon Corporation nor any of its affiliated companies: (1) guarantees the completeness or accuracy of the information contained in this document; or (2) is responsible for your use of, or reliance on, the information. Avigilon Corporation shall not be responsible for any losses or damages (including consequential damages) caused by reliance on the information presented herein.

Avigilon Corporation [avigilon.com](https://www.avigilon.com)

PDF-AINVR-PERFKIT

Revision: 3 – EN 20240112

Introduction

Avigilon provides an optional AI NVR Performance Upgrade Kit for the AI NVR Standard. This kit increases the analytic capacity of the AI NVR allowing it to run more concurrent analytics. See the Analytics Sizing Guide for more details.

Part Number Description

AINVR-STD-PRK AI NVR Standard Performance Upgrade Kit

NOTE

If the AI NVR is an operating part of your security system, be aware that it must be shut down to complete this procedure.

IMPORTANT

An AI NVR Standard shipped after January 1, 2024 will not be compatible with the Performance Upgrade Kit because there are no vacant PCIe slots available for this configuration.

Graphics card configuration of your AI NVR can be verified under the Accelerators section on the Server Management landing page. For more information, see Using Server Management in the Avigilon AI Network Video Recorder User Guide.

IMPORTANT

- An AI NVR Standard with the:
 - Performance Upgrade Kit installed is supported on Release ACC 7.12.4 or later.
 - Performance Upgrade Kit and the 10GbE Kit installed is supported on Release ACC 7.14.2 or later.
- Your organization must upgrade to a release of the ACC software that supports the upgraded
- AI NVR Standard if it is using an earlier release of the software.

IMPORTANT

If you are installing both the AI NVR Standard 10GbE Kit (AINVR-STD-10GBE) and the AI NVR Performance Upgrade Kit (AINVR-STD-PRK), instructions differ depending on when your AI NVR Standard was shipped.

Refer to the following table for the correct procedure

AI NVR Standard shipped before January 1, 2024

Follow these steps from the AI NVR Standard Performance Kit Installation Guide:

- Opening the AI NVR
- Installing the CPU
- Installing Additional RAM
- Removing the Original Graphics Card

AI NVR Standard shipped after January 1, 2024

These AI NVR Standard units are only compatible with the 10GbE Kit, but not the Performance Kit. For these units, one of the graphics cards will have to be removed to add a 10GbE card, which will reduce analytic performance.

Follow the installation steps from the AI NVR Standard 10GbE Kit Installation Guide to install this kit.

Next, follow these steps from the AI NVR Standard 10GbE Kit Installation Guide, which includes instructions to install the graphics card provided in AI NVR Performance Upgrade Kit:

- Installing the 10GbE Card in Slot 3 of Expansion Riser 1

Confirm Package Contents

Confirm that the kit you are installing contains the following components:

- 1 × Intel Xeon CPU
- 1 × processor bracket
- 1 × heat sink
- 2 × 8GB RDIMM
- 1 × P2200 graphics card

Required Tools

The following tools are not included in the kit package, but are needed to complete the installation:



- Phillips #2 screwdriver

IMPORTANT

It is recommended that you always use an antistatic mat and antistatic strap while working on components inside the system.

Installing the AI NVR Standard Performance Kit

Before starting to install the kit

1. Log in to the ACC Client on a workstation on the same network as the AI NVR you are going to upgrade.
 - In the System Explorer, select the AI NVR you are going to upgrade.
 - In the New Task  menu, click Server Analytics . Note down the number of cameras analytics enabled connected to the AI NVR and the current resource loads. For more information, see the Enabling

Analytics topic in the ACC Client Help.

2. Turn off the AI NVR, including all attached peripherals.

WARNING

Opening or removing the system cover while the system is powered on may expose you to a risk of electric shock.

3. Disconnect the AI NVR from the electrical outlet and disconnect the peripherals.

IMPORTANT

It is recommended that you always use an antistatic mat and antistatic strap while working on components inside the system.

4. If applicable, remove the system from the rack.

IMPORTANT

Whenever you need to lift the system, get others to assist you. To avoid injury, do not attempt to lift the system by yourself.

Opening the AI NVR

1. At the top of the AI NVR, unlock the latch release then lift and rotate the latch towards the back of the unit. The cover slides back and is released from the body.

TIP

Use a Phillips #2 screwdriver to remove the shipping screws before unlatching the cover if you are removing the cover of an AI NVR for the first time.

- 2.



Remove the black plastic protective cover over the socket. Press the 2 blue clips and lift off the cover. The protective cover is no longer needed and can be recycled.


3. View the interior of the AI NVR and identify the locations where the components of the kit will be installed. The view below shows the details of an AI NVR with all of the covers and cards removed, and important components labeled with numbers.

IMPORTANT

The view below does not show the graphics card that is pre-installed in slot 1 of Expansion Card Riser 1 Slot 1 (labeled 10 in the diagram). Do not remove this card as part of this upgrade.

The components affected by the AI NVR Standard Performance Upgrade Kit are:

- 4— Memory module
The 2 DIMMs in the upgrade kit are installed here.
- 5—CPU2 processor and heat sink module socket (with dust cover) The second CPU in the performance kit is installed here.
- 10—Expansion Card Riser 1
The second P2200 graphics card is installed on the middle slot (Slot 2) of this riser, below the original graphics card in the top slot (slot 1).

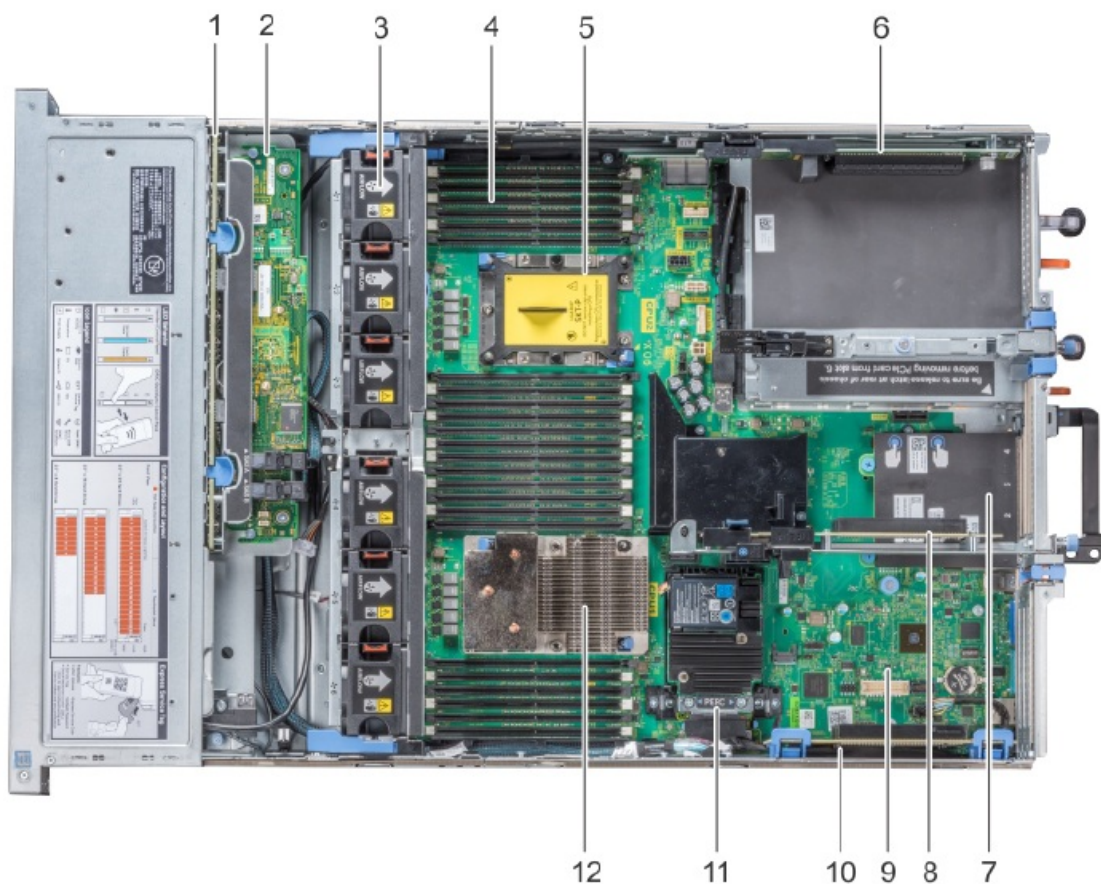

NOTE

The other components pointed out in the diagram are not affected by installing the AI NVR Standard Performance Kit.

Installing the CPU

You need the processor bracket, processor (CPU), and heatsink provided in the kit to complete this procedure. With the AI NVR open and the protective cover removed:

1. Locate the 2nd processor socket and pull off the CPU dust cover with the yellow label over the socket.
2. Unpack the CPU.
3. Place the processor in the processor tray.

NOTE

Ensure that the pin 1 indicator on the processor tray is aligned with the pin 1 indicator on the processor.

- Flex the outer edges of the processor bracket and ensure that the processor is locked into the clips on the bracket.

NOTE

Ensure that the pin 1 indicator on the bracket is aligned with the pin 1 indicator on the processor before placing the bracket.




- Unpack the heatsink. Be careful not to touch the thermal paste that is pre-applied to the bottom of the heatsink.
- Place the heat sink on the processor and push down on the base of the heat sink until the bracket locks onto the heat sink.

IMPORTANT

To avoid damaging the fins on the heat sink, do not press down on the heat sink fins.

- Ensure that the 2 guide pin holes on the bracket match the guide holes on the heat sink.
- Ensure that the pin 1 indicator on the heat sink (circled red in the image below) is aligned with the pin 1 indicator on the bracket before placing the heat sink onto the processor and bracket.

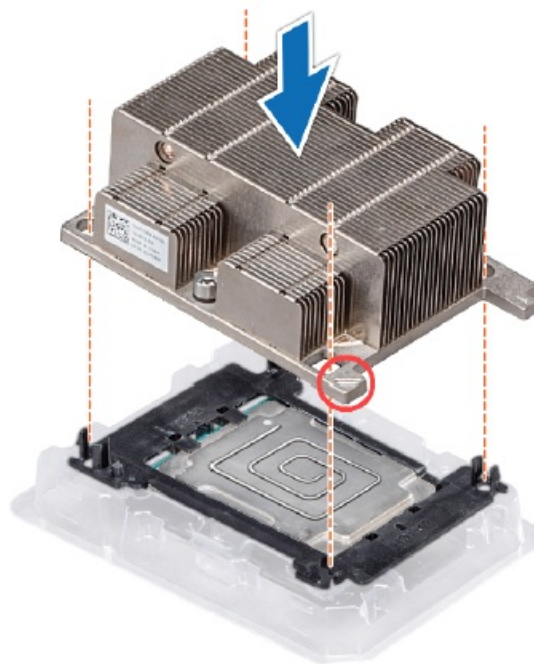


- Align the pin 1 indicator on the heat sink to the system board and then place the processor and heat sink module on the processor socket.

IMPORTANT

Ensure that the processor and heat sink module is held parallel to the system board to prevent damaging the components.

8. Push the blue retention clips inward to allow the heat sink to drop into place.

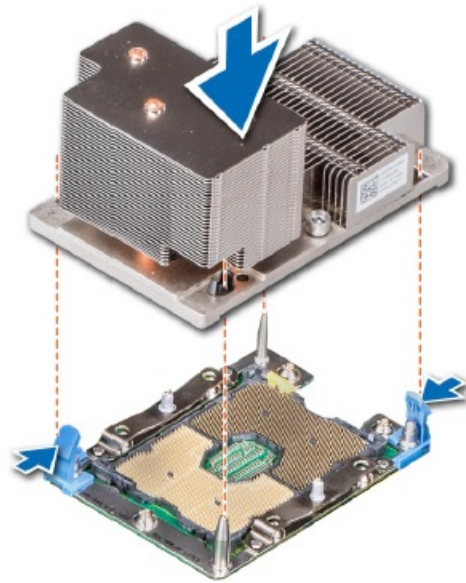

IMPORTANT

Do not force the processor into the socket. The processor should slide easily into the socket when aligned correctly.

9. Use the star-shaped screwdriver #T30 to tighten the screws on the heat sink in the following order:

- Partially tighten the first screw (approximately 3 turns).
- Tighten the second screw completely.
- Return to the first screw and tighten it completely.

IMPORTANT

Do not over-tighten or strip the screws.

If the processor and heat sink module slips off the blue retention clips when the screws are partially tightened, follow these steps to secure the module:



- Completely loosen both of the heat sink screws.
- Lower the processor and heat sink module on to the blue retention clips, following the procedure as described in step 8 above.
- Secure the processor and heat sink module to the system board, following the instructions as described in step 9 above.

Installing Additional RAM

After the CPU has been installed, insert the RAM included in the kit into memory sockets B1 and B2.

IMPORTANT

Handle each memory module only by the edges to ensure that you don't touch the middle of the memory module or the metallic contacts.

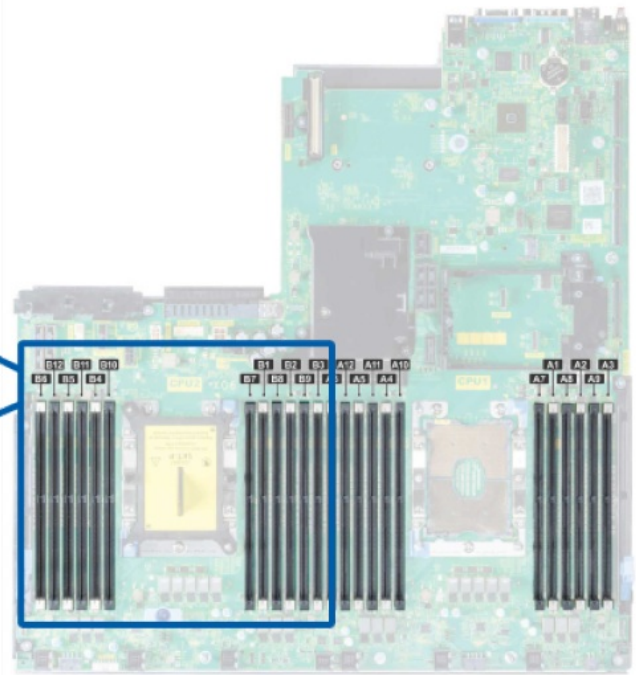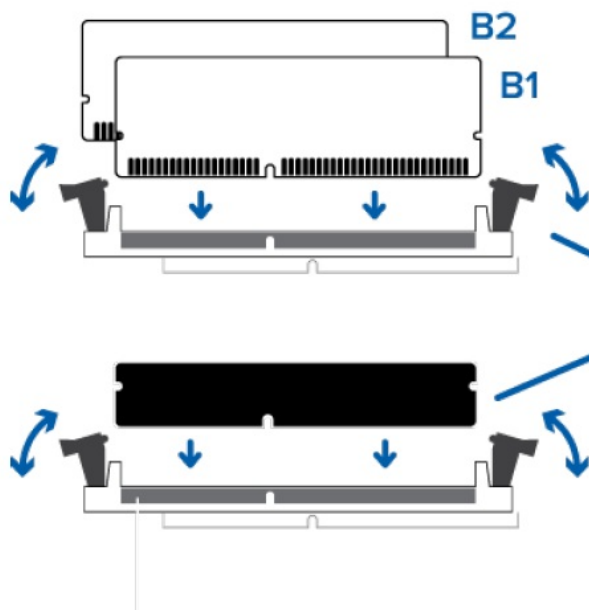

IMPORTANT

To prevent damage to the memory module or memory module socket during installation, do not bend or flex the memory module. You must insert both ends of the memory module simultaneously.

1. In the row of empty memory sockets near to the newly installed CPU, locate sockets B1 and B2.
2. Open the white ejector clips (shown as black in the diagram) on each side of the empty memory module sockets outward to allow the memory modules to be inserted into the sockets.
3. Align the edge connector of the memory modules with the alignment key of the sockets and press the memory modules into sockets until the socket levers click into place.

IMPORTANT


Do not apply pressure at the center of the memory module. Apply pressure to both ends of the memory module evenly.

NOTE

If you are installing both the AI NVR Performance Upgrade Kit and the AI NVR Standard 10GbE Kit (AINVR-STD-10GBE) in the AI NVR, use the using the instructions in the "Installing the 10GbECard in Slot 3 of Expansion Riser 1" section of the AI NVR Standard 10GbE Kit Installation Guide, which includes instructions to install the graphics card provided in this kit, to complete the installation of both kits.

Removing the Pre-installed Graphics Card


1. From the back of the AI NVR, locate where the original graphics card is installed.

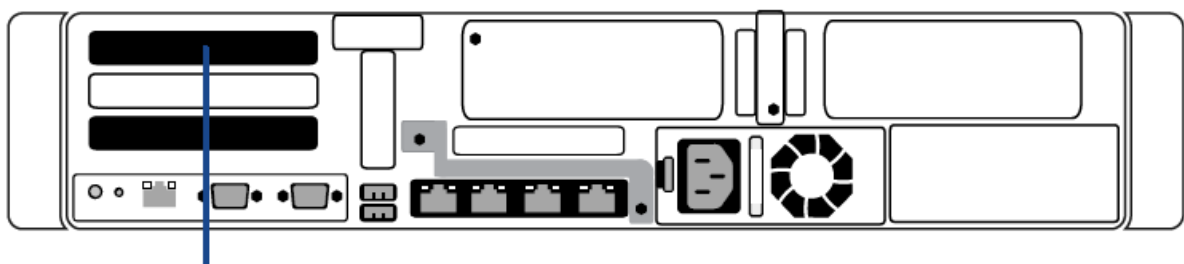

GPU 1: PCIe Slot 1 Riser 1

2. Lift the expansion card latch to release the slots in expansion riser 1.
3. Disengage the PCIe card holder latch on the graphics card.

4. Hold the graphics by its edges and slide out the graphics at an angle to release it from the connector on the riser.

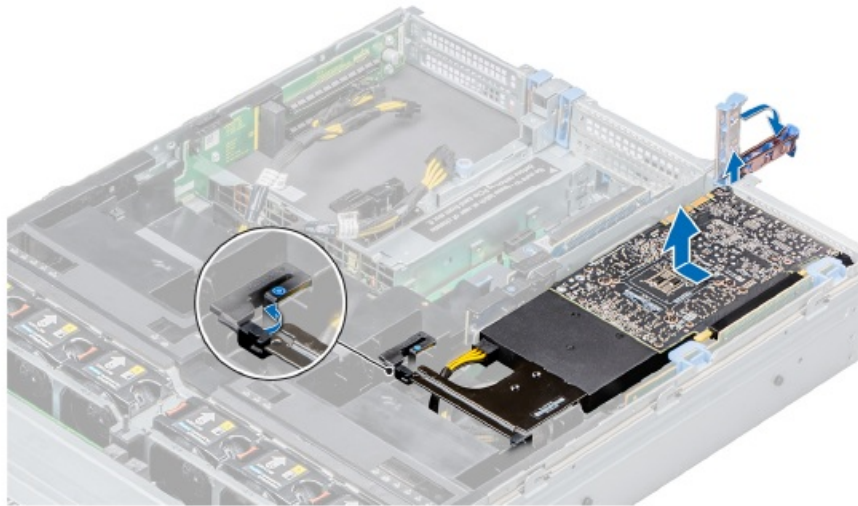

5. Disconnect the graphics power cable from the graphics and system board.

NOTE

The card in this illustration does not match the appearance of the actual card installed in slot 1.


Installing the New Graphics card

1. Unpack the graphics card and prepare it for installation.

NOTE

For instructions, see the documentation accompanying the card.

2. At the back of the AI NVR, locate where the graphics card needs to be installed.

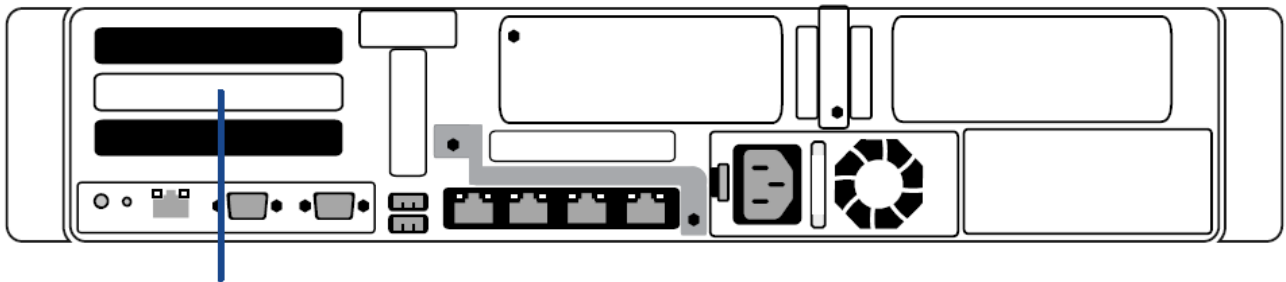

GPU 2: PCIe Slot 2 Riser 1


3. Pull the expansion card latch.
4. Remove the filler bracket

TIP

Store the filler bracket for future use. Filler brackets must be installed in empty expansion card slots to maintain Federal Communications Commission (FCC) certification of the system. The brackets also keep dust and dirt out of the system and aid in proper cooling and airflow inside the system.

5. Install the new graphics card in slot 2 and reinstall the original graphics card in slot 1. For each card:

- Slide the card into the slot guide opposite the connector to align the connector on the card with the connector on the riser.
- Insert the card edge connector firmly into the expansion card connector until the card is fully seated.

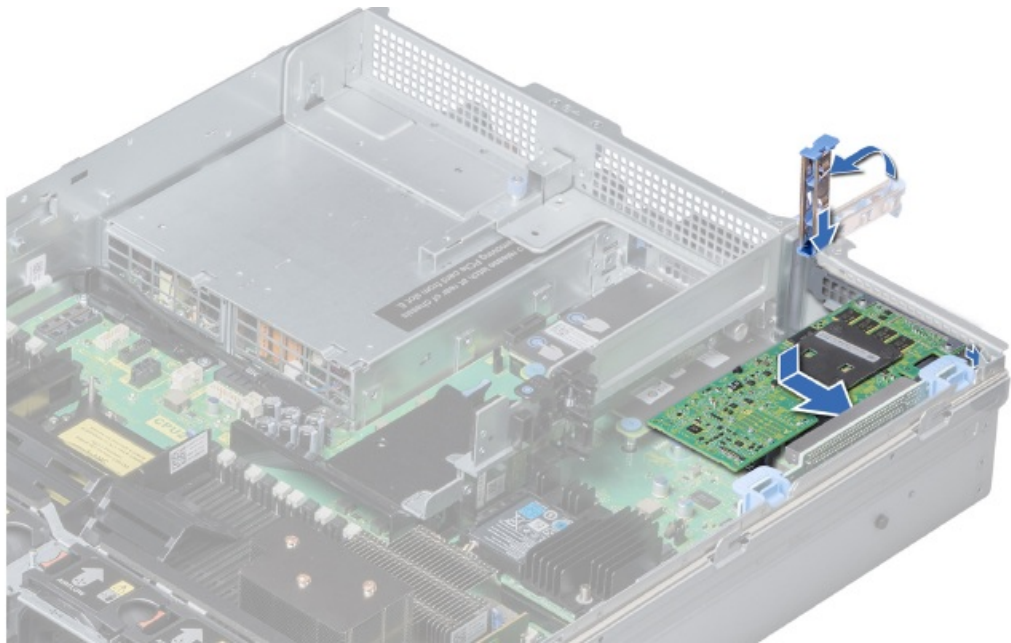

NOTE

This illustration shows how a card is installed in slot 1 and then how the expansion card latch is closed. The technique to install the card in slot 2 is the same, except it is beneath the card in slot 1 and has to be installed first. The card in this illustration does not match the appearance of the actual card installed in slot 1.

- Push the expansion card latch closed and re-engage the PCIe Lock .



Reattaching the Cover




When all the components of the kit have been installed:

1. Ensure all expansion card latches are closed and there are filler covers for all empty slots.
2. Close and lock the AI NVR cover.
3. If the AI NVR was rack mounted and removed to install the kit, remount it into the rack.
4. Reconnect all the peripherals and cables.
5. Power on the AI NVR.

Confirming the Installation

Verify the upgrade is successful:

1. Log in to the ACC Client on a workstation on the same network as the AI NVR.
2. In the System Explorer, click  Site Setup, and click Site to expand the site containing the upgraded AI NVR.
3. Click  to select the upgraded AI NVR.
4. Verify the status of the upgraded AI NVR and the presence of the two advanced processing cards:
 - Click Server Management to open the Server Management panel.
 - Enter the administrator credentials for the AI NVR.
 - On the Server Management Dashboard, check that:
 - The status indicators on the ACC Server and System cards are green.
 - Two Quadro P2200 cards appear on the Accelerators card and their status is green
 - Log out of the Server Management and close the panel.

5. Verify that the AI NVR has 2 CPUs and 32GB of memory installed.
 - In the System Explorer, select the upgraded AI NVR server.
 - In the New Task menu , click Site Health.
 - Under the General Information heading, the sum of Memory usage and System Available Memory should be approximately 32 GB (~32,000 MB).
 - Under the Temperature Probes heading, you should see readings for CPU1 and CPU2.
6. Verify that the analytics load capacity has increased:
 - In the System Explorer, select the upgraded AI NVR.
 - In the New Task menu , click Server Analytics . For more information, see the Enabling Analytics topic in the ACC Client Help.
 - The number of connected cameras should be the same as before the AI NVR was upgraded, and the analytics load should be about half of what it was prior to the upgrade.

More Information & Support

For additional product documentation and software and firmware upgrades, visit support.avigilon.com. For product user guides, visit the Downloads page: help.avigilon.com
 Avigilon Workstations: [avigilon.com/products/video-infrastructure/remote-monitoring](https://www.avigilon.com/products/video-infrastructure/remote-monitoring)
 AI NVR: <https://www.avigilon.com/products/video-infrastructure/ai-nvr#downloads>


Technical Support

Contact Avigilon Technical Support at support.avigilon.com/s/contactsupport.

Limited Warranty

Avigilon warranty terms for this product are provided at [avigilon.com/warranty](https://www.avigilon.com/warranty).

Documents / Resources

	<p>AVIGILON AINVR-STD-PRK AI NVR Standard Performance Kit [pdf] Installation Guide AINVR-STD-PRK AI NVR Standard Performance Kit, AINVR-STD-PRK, AI NVR Standard Performance Kit, NVR Standard Performance Kit, Standard Performance Kit, Performance Kit, Kit</p>
---	--

References

- [▲ Avigilon Workstations](#)
- [▲ Avigilon Help Center](#)
- [▲ Avigilon Support Community](#)
- [▲ Avigilon Support Community](#)

- [!\[\]\(83eb2aa26b610eb6a9dca7cf4702d681_img.jpg\) Avigilon Help Center](#)
- [!\[\]\(94dfacbf937cdd7da4837a6fcd8fc785_img.jpg\) Avigilon Support Community](#)
- [!\[\]\(dae8c3c5fa7c80febd6526a5e8a853bf_img.jpg\) Avigilon Support Community](#)
- [!\[\]\(8f38ab9775d1331a4e1fd6648d0a83f1_img.jpg\) Avigilon Unity On-Premise Managed Video Security System](#)
- [!\[\]\(5e48b3241d711ef916255d822ab3415f_img.jpg\) Avigilon Workstations](#)
- [!\[\]\(c4c3604751fde0df44855086d7798e30_img.jpg\) Solving for safer - Motorola Solutions](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.