

BANNER R95C 8 Port 2 Channel Discrete IO Link Hub Instruction Manual

Home » BANNER » BANNER R95C 8 Port 2 Channel Discrete IO Link Hub Instruction Manual




R95C 8-Port 2-Channel Discrete IO-Link Hub Instruction Manual BANNER ENGINEERING CORP.

Contents

- 1 Features
- 2 Models
- **3 Overview**
- **4 Configuration**
- 5 IO-Link®
- **6 Mechanical Installation**
- 7 Wiring
- **8 Status Indicators**
- 9 Specifications
- 10 FCC Part 15 Class B
- 11 Industry Canada
- 12 Dimensions
- **13 Accessories**
- 14 Banner Engineering Corp. Limited Warranty
- 15 Documents / Resources
 - 15.1 References


Features

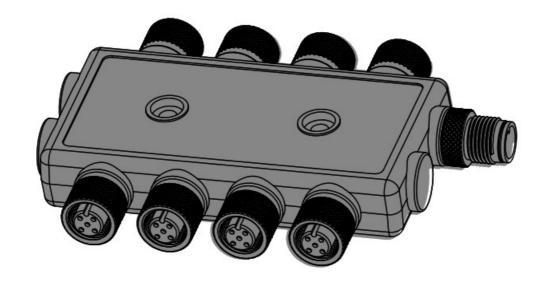

- Compact bimodal to IO-Link device converter that connects discrete inputs and sends the value to the IO-Link Master
- Outputs a discrete value as received from IO-Link Master Process Data Out
- Enabled Delay Modes: ON/OFF Delay, ON/OFF One-shot, ON/OFF/Retriggerable One-shot, ON/OFF Pulse-stretcher and Totalizer
- Measurement Metrics: Count, Events Per Minute (EPM), and Duration
- Discrete Mirroring: Discrete signals (In/Out) from all eight ports can be mirrored to any of the eight ports, Discrete Out, or the host white wire output
- Discrete input/output can be independently configured as NPN or PNP
- Rugged overmolded design meets IP65, IP67, and IP68
- · Connects directly to a sensor or anywhere in-line for ease of use
- R95C IO-Link hubs are a quick, easy, and economical way to integrate non-IO-Link devices into an IO-Link system



Models

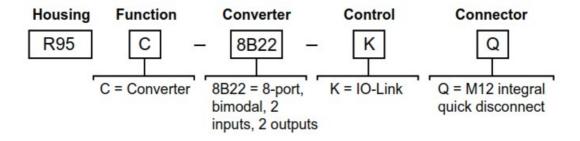

Overview

The R95C-8B22-KQ hub connects two discrete Input/Output channels to each of the eight unique ports, providing access to monitoring and configuring those ports with an IO-Link master. Host mirroring is available where a selected port input/output discrete signal can be routed to Pin 2 (male) on the PLC/Host connection.

Configuration

Figure 1 details the logic flow for each of the eight ports, while the tables define the configuration for each pin. For more information, see P/N 233583 R95C-8B22-KQ IO-Link Data Reference Guide and P/N 233584 R95C-8B22-KQ IODD Files.

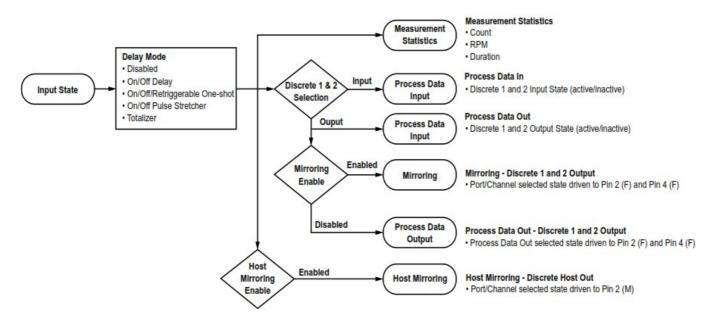


Figure 1: Logic Flow

Table 1: Measurements - Female Pins

Port 1-Port 8 Pin Number: Description	IO Metric	Description	
Pin 4 – Discrete 1 Pin 2 – Discrete 2	Count Value	Running count of the received input pulses	
	Duration Value	Duration of the last input pulse in μs with 500 μs granularity	
	Events per Minute Valu e	Running count of the number of pulses receive d averaged over one minute Range: 1 to 37,500	
	Reset Metrics	Do Not Reset Reset	

Table 2: Pin Configuration - Female Input

Port 1-Port 8 Pin Number: Description	Name	Values
Pin 4 – Discrete 1	Discrete I/O Selection	NPN Input PNP Input NPN Output with Pull Up PNP Output with Pull Down NPN Output with Push/Pull PNP Output with Push/Pull
	Discrete Delay Mode	 Disabled On/Off Delay On One-shot Off One-shot On Pulse-stretcher Off Pulse-stretcher Totalizer Retriggerable On One-shot Retriggerable Off One-shot
	Discrete Delay Timer 1	Discrete On Delay, One-shot, Pulse-Stretcher Time, or Totalizer Count
Pin 2 – Discrete 2	Discrete Delay Timer 2	Discrete Off Delay or Totalizer Time
	Mirroring Enable	Disabled Enabled
	Mirroring Port Selection	 Port 1 Port 2 Port 3 Port 4 Port 5 Port 6 Port 7 Port 8
	Mirroring Channel Sele ction	Pin 4 – Discrete 1 Pin 2 – Discrete 2
	Mirroring Inversion	Not Inverted Inverted

Table 3: Pin Configuration – Male Output

Pin Number: Description	Name	Values
Pin 2 – Discrete Host Out	Host Mirroring Enable	Disabled Enabled
	Host Mirroring Port Selection	 Port 1 Port 2 Port 3 Port 4 Port 5 Port 6 Port 7 Port 8
	Host Mirroring Channel Select ion	• Pin 4 – Discrete 1 • Pin 2 – Discrete 2
	Host Mirroring Inversion	Not Inverted Inverted
	Host Mirroring Polarity	• PNP • NPN
	Host Mirroring Output Type	Open Collector Push/Pull

IO-Link®


IO-Link® is a point-to-point communication link between a master device and a sensor and/or light. It can be used to automatically parameterize sensors or lights and to transmit process data. For the latest IO-Link protocol and specifications, please visit www.io-link.com.

For the latest IODD files, please refer to the Banner Engineering Corp website at: www.bannerengineering.com.

Mechanical Installation

Install the R95C to allow access for functional checks, maintenance, and service or replacement. Do not install the R95C in such a way to allow for intentional defeat.

Fasteners must be of sufficient strength to guard against breakage. The use of permanent fasteners or locking hardware is recommended to prevent the loosening or displacement of the device. The mounting hole (4.5 mm) in the R95C accepts M4 (#8) hardware. See the figure below to help in determining the minimum screw length.

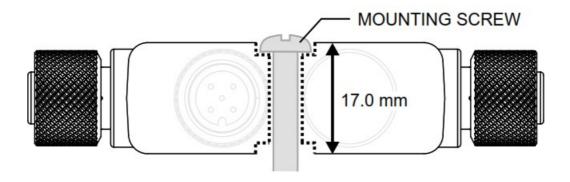

CAUTION: Do not overtighten the R95C's mounting screw during installation. Overtightening can affect the performance of the R95C.


Wiring

Port 1-Port 8 — Female	Pin	Signal Description
2	1	18 V DC to 30 V DC
1- 50-	2	Discrete 2 (IN/OUT)
4	3	Ground
	4	Discrete 1 (IN/OUT)

Male	Pin	Signal Description
\sim 1	1	18 V DC to 30 V DC
	2	Banner-specific
	3	Ground
3	4	IO-Link

Status Indicators

The R95C 8-Port 2-Channel Discrete Bimodal IO-Link Hub has two matching amber LED indicators, one for each channel, on both sides for each discrete device port to allow for installation needs and still provide adequate indication visibility. There is also an additional amber LED indicator on both sides of the converter, which is specific to the IO-Link communication.

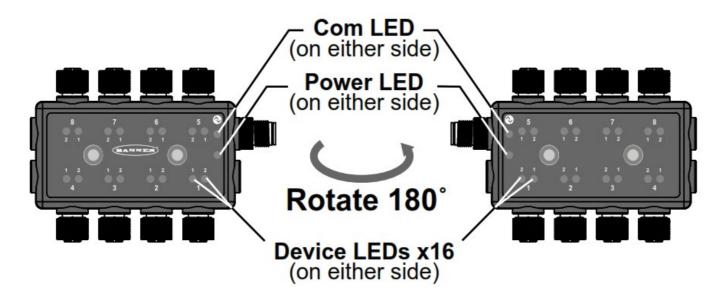

LED 1 = Discrete 1 In/Out LED 2 = Discrete 2 In/Out

LED	Indication	Status	
Discrete Device Amber LEDs	Off	Discrete In and Out are inactive	
Discrete Device Amber LLDs	Solid Amber	Discrete In or Out is active	
IO-Link Communication Amb er LED	Off	IO-Link communications are not present	
	Flashing Amber (900 ms On, 100 ms Off)	IO-Link communications are active	
Power Indicator Green LED	Off	Power off	
Tower indicator Green LLD	Solid Green	Power on	

Specifications

Supply Voltage	18 V DC to 30 V DC at 400 mA maximum (exclusive of load)
Power Pass-Through Curren t	500 mA per port maximum
Discrete Output Load Rating	200 mA
Supply Protection Circuitry	Protected against reverse polarity and transient voltages
Leakage Current Immunity	400 μΑ
Indicators	Green: Power Amber: IO-Link communications Amber: 2x Discrete IN/OUT status
Connections	(8) Integral 4-pin M12 female quick disconnect (1) Integral 4-pin M12 male quick-disconnect connector
Construction	Coupling Material: Nickel-plated brass Connector Body: PVC translucent black
Vibration and Mechanical Shock	Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 0.5 mm amplitud e, 5 minutes sweep, 30 minutes dwell) Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wav e)
Environmental Rating	IP65, IP67, IP68 NEMA/UL Type 1
Operating Conditions	Temperature: -40 °C to +70 °C (-40 °F to +158 °F) 90% at +70 °C maximum rel ative humidity (non-condensing) Storage Temperature: -40 °C to +80 °C (-40 °F to +176 °F)

Required Overcurrent Protection

WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table. Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply. Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (A WG)	Required Overcurrent Protecti on (A)	Supply Wiring (AW G)	Required Overcurrent Protecti on (A)
20	5	26	1
22	3	28	0.8
24	1	30	0.5

Certifications



Banner Engineering BV

Park Lane, Culliganlaan 2F bus 3, 1831 Diegem, BELGIUM



Turck Banner LTD Blenheim House, Blenheim Court, Wickford, Essex SS11 8YT, Great Britain





FCC Part 15 Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.

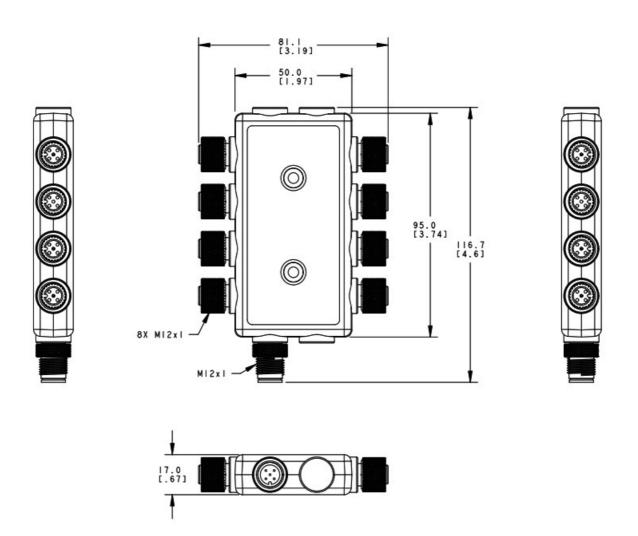

Accessories

Cordsets

4-Pin Threaded M12 Cordsets—Double Ended

Model	Length	Style	Dimensions	Pinout	
MQDEC-40 1SS	0.31 m (1 ft)			1 2	
MQDEC-40 3SS	0.91 m (2.99 ft)		40 Typ. [1.58"] M12 x 1 Ø 14.5 [0.57"] 44 Typ.	[1.58"] M12 x 1 — Ø 14.5 [0.57"] 44 Typ. 2	3
MQDEC-40 6SS	1.83 m (6 ft)				4 Male
MQDEC-41 2SS	3.66 m (12 ft				2
MQDEC-42 0SS	6.10 m (20 ft)		[1.73"]	4	
MQDEC-43 0SS	9.14 m (30.2 ft)		M12 x 1 — ø 14.5 [0.57"] —		
MQDEC-45 0SS	15.2 m (49.9 ft)				3 = Blue

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

Document title: R95C 8-Port 2-Channel Discrete Bimodal IO-Link Hub Instruction Manual

Part number: 233582
Revision: B
Original Instructions
© Banner Engineering Corp. All rights reserved.

233582

© Banner Engineering Corp. www.bannerengineering.com

Documents / Resources



BANNER R95C 8 Port 2 Channel Discrete IO Link Hub [pdf] Instruction Manual R95C-8B22-KQ, R95C 8 Port 2 Channel Discrete IO Link Hub, R95C, 8 Port 2 Channel Discrete IO Link Hub, Discrete IO Link Hub, IO Link Hub, Hub



BANNER R95C 8-Port 2-Channel Discrete IO-Link Hub [pdf] User Guide

R95C, R95C 8-Port 2-Channel Discrete IO-Link Hub, 8-Port 2-Channel Discrete IO-Link Hub, 2-Channel Discrete IO-Link Hub, Discrete IO-Link Hub, IO-Link Hub, Hub

References

- Banner Engineering
- **Olo-Link**
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.