



BAPI BA-WT-BLE Wireless Remote Probe Temperature Sensor Instruction Manual

[Home](#) » [BAPI](#) » BAPI BA-WT-BLE Wireless Remote Probe Temperature Sensor Instruction Manual 

Contents

- [1 BAPI BA-WT-BLE Wireless Remote Probe Temperature Sensor](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Overview and Identification](#)
- [5 Adjustable Settings](#)
- [6 Associated Receiver or Gateway](#)
- [7 Initial Activation](#)
- [8 Mounting](#)
- [9 Operation](#)
- [10 Battery Replacement](#)
- [11 Onboard Memory](#)
- [12 Diagnostics](#)
- [13 DIMENSION](#)
- [14 Specifications](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)



BAPI BA-WT-BLE Wireless Remote Probe Temperature Sensor



Product Information

- The BAPI Wireless Remote Probe Temperature Sensor is a wireless device that measures temperature and transmits the data via Bluetooth Low Energy (BLE) to a receiver or gateway. It features a 1.75" (44mm) long stainless steel probe with either Plenum-Rated or FEPJacketed Cable and an IP66-rated BAPI-Box enclosure. The sensor comes with onboard memory to store readings when communication is interrupted.
- The wireless device can be field adjusted using BAPI's cloud-based Wireless Asset Monitoring (WAM) or the receiver. It has adjustable settings that can be configured to suit the needs of the installation.
- The sensor can transmit data to a digital gateway or a wireless-to-analog receiver. The receiver supports up to 32 sensors and up to 127 different analog output modules. The gateway receives data from one or more wireless sensors and provides the data to the cloud via MQTT. It also sends a confirmation signal to each sensor upon successful reception of data. The gateway supports up to 32 sensors.

Product Usage Instructions

1. Initial Activation:

- The unit comes with two pre-installed batteries.
- To activate the unit, open the cover and remove the battery tab insulators.
- Press the Service button, and the Service LED should flash once to confirm power.

2. Mounting:

- Mount the enclosure to the surface using BAPI-recommended #8 screws.
- Use the enclosure tabs to mark the pilot hole locations.

3. Operation:

- Power the unit as described in the Initial Activation section.
 - Follow the gateway or receiver instructions for pairing the unit and changing the adjustable settings.
- Instructions are available on the BAPI website.

Please note that for detailed instructions on adjusting the settings, pairing the unit, and other specific operations, refer to the corresponding instructions available on the BAPI website.

Overview and Identification



- User adjustable settings via receiver or WAM
- Onboard memory to store readings when communication is interrupted
- Transmits to a digital Gateway or a wireless-to-analog Receiver

BAPI's Remote Probe Wireless Sensor measures the temperature and transmits the data via Bluetooth Low Energy to a receiver or gateway. It features a 1.75" (44mm) long SS probe with either Plenum-Rated or FEPJacketed Cable and an IP66-rated BAPI-Box enclosure. Five lead lengths from 5 to 25 feet (1.5 to 7.6 meters).

Adjustable Settings

BAPI's wireless devices have several settings that can be field adjusted to suit the needs of the installation. All settings are configured by either BAPI's cloud based Wireless Asset Monitoring (WAM) or the receiver. (See the WAM or receiver instructions available on the BAPI website for more information on adjusting the settings.)

- Sample Rate/Interval – The time between when the sensor wakes up and takes a reading. The available values are 10 sec, 30 sec, 1 min, 3 min or 5 min with the gateway, or 30 sec, 1 min, 3 min or 5 min with the

receiver.

- **Transmit Rate/Interval** – The time between when the sensor transmits the readings to the gateway or receiver. The available values are 30 sec, 1, 2, 3, 4, 5, 10, 15, 20 or 30 minutes, or 1, 6 or 12 hours with the gateway, or 1, 5, 10 or 30 minutes with the receiver.
- **Delta Temperature** – The change in temperature between sample intervals that will cause the sensor to override the transmit interval and immediately transmit the changed temperature. The available values are 0.1, 0.2, 0.3, 0.4, 0.5, 1, 2, 3, 4, 5 °F or °C with the gateway, and 1 or 3 °F or °C with the receiver.
- **Temperature Min/Max** – The maximum or minimum temperature that will cause the sensor to override the transmit interval and immediately transmit a reading to the gateway. (Only available when using a gateway.)
- **Temperature Offset** – Adjusts the temperature value being transmitted to match that of a calibrated reference device. The available values are ± 0.1 , 0.2, 0.5, 1, 2, 3, 4 or 5 °F or °C. (Only available when using a gateway.)

Associated Receiver or Gateway

RECEIVER (Wireless-to-Analog)

The wireless receiver from BAPI receives the data from one or more wireless sensors. The data is then transferred to the analog output modules and converted to an analog voltage or resistance. The receiver supports up to 32 sensors and up to 127 different analog output modules.



GATEWAY

The wireless gateway receives the data from one or more wireless sensors. The gateway then provides the data to the cloud via MQTT. The gateway also sends a confirmation signal to each sensor upon a successful reception of data. The gateway supports up to 32 sensors.



Please see BAPI's Wireless Quick Start Guide, or the gateway or receiver instructions available on the BAPI website (www.bapihvac.com/gateway-quick-start) to establish communication between the sensors and the gateway or receiver.

Initial Activation

Battery Power Units

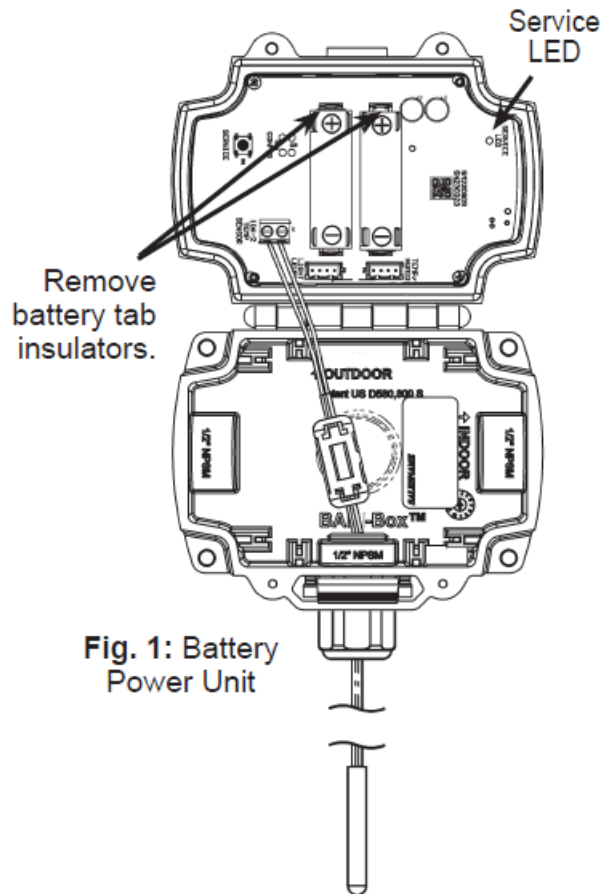


Fig. 1: Battery Power Unit

The unit comes with two pre-installed batteries. To activate the unit, open the cover to access the batteries. Find the battery tab insulators and pull them out. Press the Service button and the Service LED should flash once to confirm power.

Wire Power Units


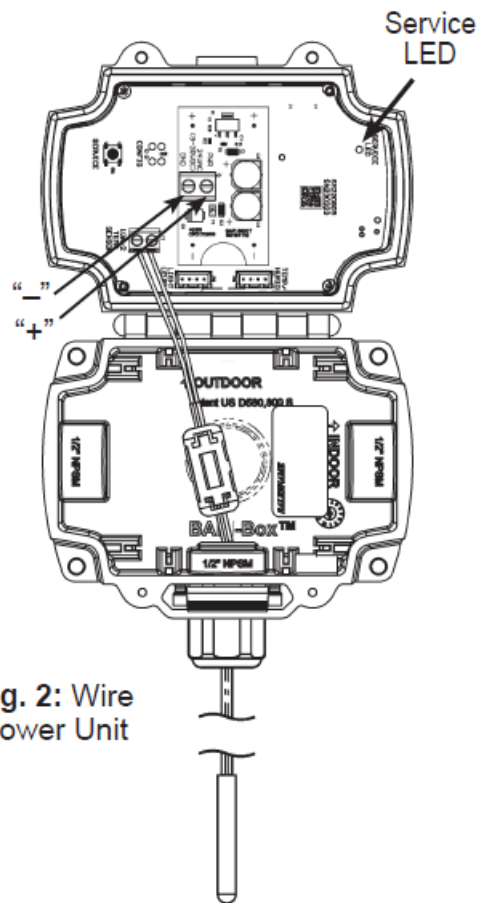


Fig. 2: Wire Power Unit


To activate the unit, open the cover to access the circuit board and apply the 9 to 30 VDC or 24 VAC to the power terminals as shown. Press the Service button and the Service LED should flash once to confirm power.

Mounting

Mount the enclosure to the surface using BAPI recommended #8 screws as shown in Fig 4. A 1/8" inch pilot screw hole makes mounting easier through the tabs. Use the enclosure tabs to mark the pilot hole locations.

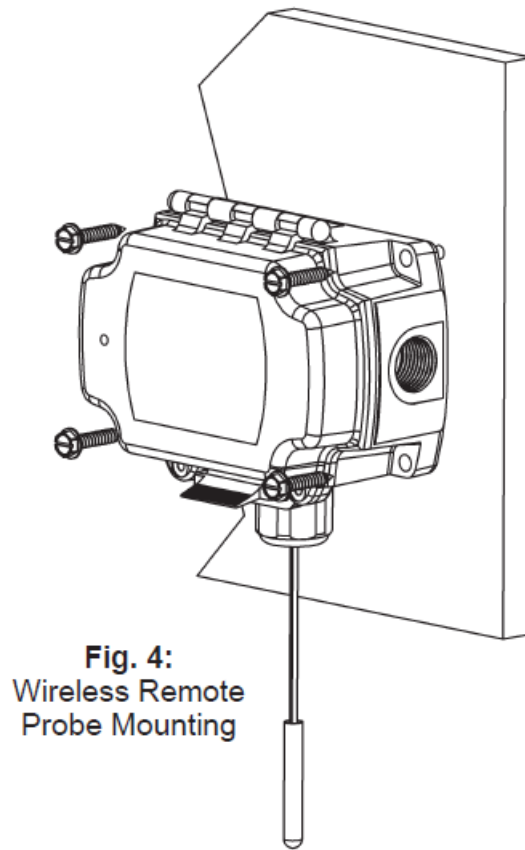

MOUNTING THE PROBE TO A PIPE

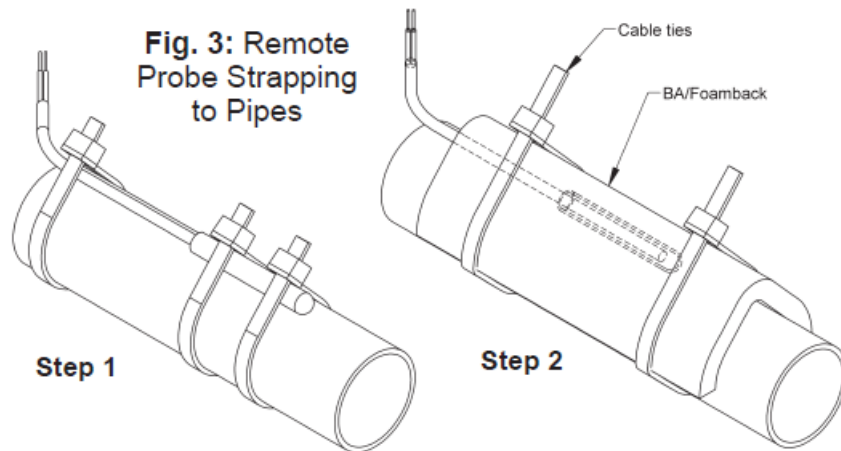


- Step 1: Secure sensor to have good contact with bare pipe
- Step 2: Insulate Over The Sensor. Insulation should be installed a minimum of 4 pipe diameters on each side of the strap-on sensor.
- Example: $\frac{1}{2}$ " pipe $\times 4 = 2$ ". Insulation should be 2" on each side of the sensor wrapped all the way around the pipe.

Operation


Pressing the
“Service”
button on the
circuit board
will force a
transmission.

Fig. 5:
Battery
Power Unit

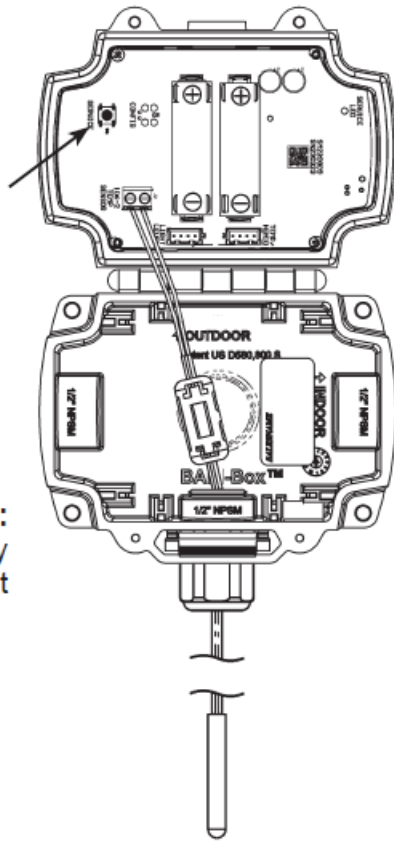

Pressing the
“Service”
button on the
circuit board
will force a
transmission.

Fig. 6:
Wire Power
Unit

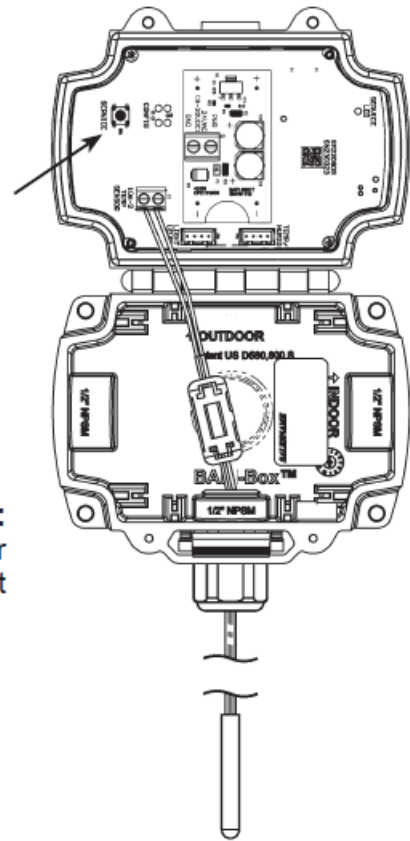

Power the unit as described in “Initial Activation” section.

Follow the gateway or receiver instructions for pairing the unit and changing the adjustable settings.

(The instructions are available on the BAPI website.)

Wireless Sensor Reset

Sensors remain paired to the gateway or receiver and output modules when power is interrupted or the batteries are removed. To break the bonds between them, the sensors need to be reset. To do this, press and hold the “Service Button” on the sensor for about 30 seconds. During those 30 seconds, the green LED will be off for about 5 seconds, then flash slowly, then begin flashing rapidly. When the rapid flashing stops, the reset is complete. The sensor can now be paired to a new receiver or gateway. To re-pair to the same receiver or gateway, you must reset the receiver or gateway. Output modules that were previously paired to the sensor do not need to be re-paired.

Battery Replacement

Remove and replace batteries in the correct orientation as shown.

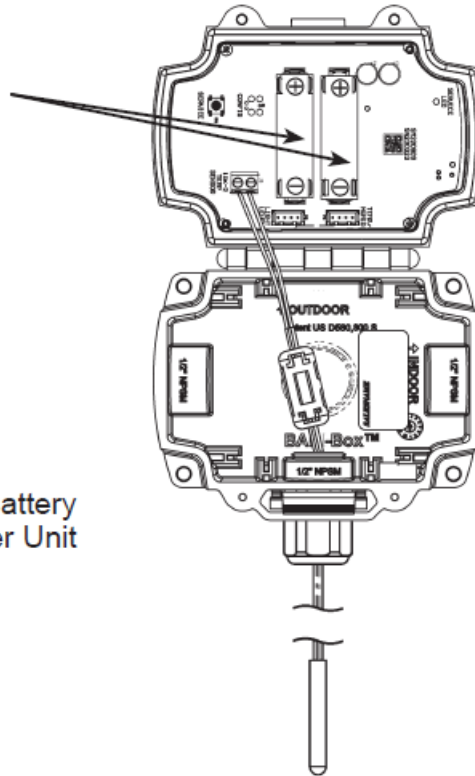


Fig. 7: Battery Power Unit

Open the cover to access the batteries (Fig 7). Remove the batteries from their holders and discard in an environmentally safe manner. Replace with new batteries in the correct orientation.

Battery Specifications:

Two 3.6V Lithium batteries: (#14505, 14500 or equivalent)

Onboard Memory

Sensor retains up to 16,000 readings should the communication become interrupted. The sensor only stores readings from missed transmissions and only when the sensor is paired to a gateway. Once communication is re-established with the gateway, the stored readings are transmitted and then erased from the sensor. The current reading and nine previous readings are sent at each transmit interval until the sensor is caught up. Temporarily shortening the transmit interval will allow the sensor to more quickly clear any stored readings.

Diagnostics


Possible Problems:

Sensor is not communicating with the gateway or receiver, or the transmitted values are incorrect

Possible Solutions:

- Make sure the sensor is within range of the gateway or receiver.
- Verify that the green LED on the sensor circuit board flashes when the “Service” button is pressed, indicating a transmission. If it does not flash, replace the batteries.
- Verify that the sensor is properly paired to the gateway or receiver and analog output modules as described in the gateway or receiver instructions available on the BAPI website. Re-pair them if needed. If necessary, perform the “Wireless Sensor Reset” procedure as described on the pg 3

DIMENSION

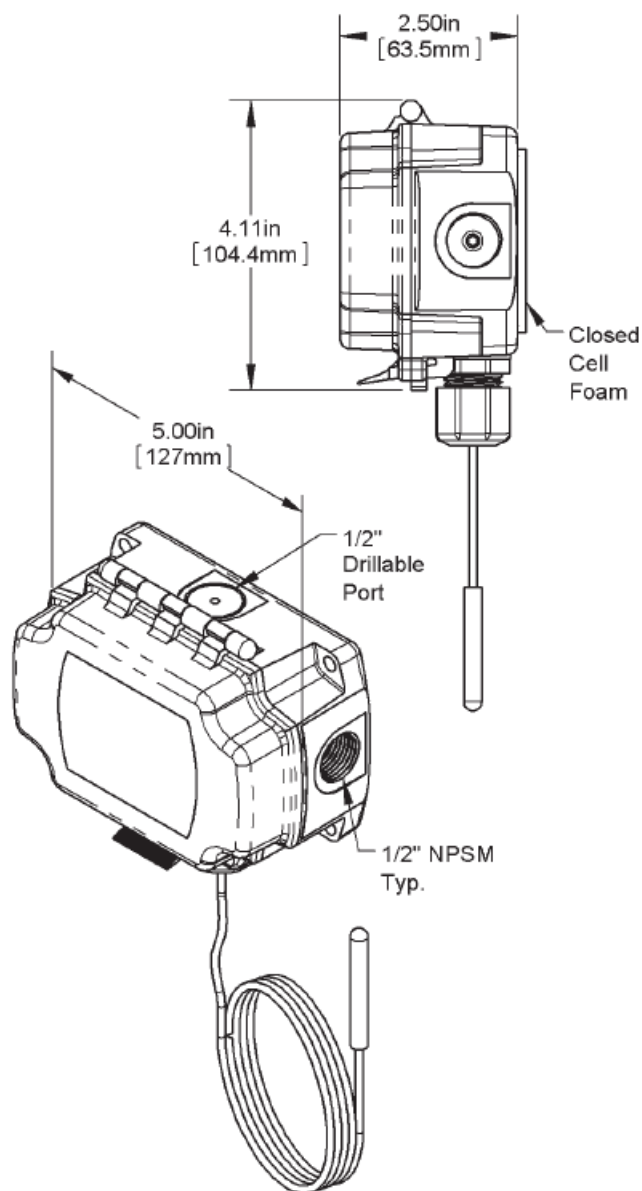

BAPI-Box Units Calculated Battery Life**		
Transmit Interval	Sample Rate	Estimated Life (years)
30 sec	30 sec	1.04
1 min	1 min	1.95
3 min	1 min	3.46
5 min	5 min	4.63
10 min	5 min	7.02

Specifications

- Battery Power: Two included 3.6V 14505, 14500 or equivalent lithium batteries (Note: Standard AA batteries are not compatible)
 - Wire Power: 9 to 30 VDC or 24 VAC, halfwave rectified
- Temperature Sensor Accuracy: $\pm 1.0^{\circ}\text{F}$ (0.55°C) from 32 to 158°F (0 to 70°C)

- Temperature Range: -4 to 221°F (-20 to 105°C)
- Transmission Distance: Varies by application*
- Environmental Operation Range:
 - Temp: -4 to 149°F (-20 to 65°C)
 - Humidity: 10 to 90%RH, non-condensing
- Enclosure Rating, Material & Material Rating: IP66, UV-Resistant Polycarbonate, UL94 V-0
- Frequency: 2.4 GHz (Bluetooth Low Energy)
- Receiver Sensitivity: -97 dBm
- User Adjustable Settings: Delta T (Temp): 0.1°F/C to 5.0°F/C
- Transmit Interval: 30 sec to 12 hour
- Sample Interval: 10 sec to 5 min
- Temp Offset: ±0.1°F/C to ±5.0°F/C
- Onboard Memory:
 - Sensor retains up to 16,000 readings should the communication become interrupted. If using a Gateway, the data is re-transmitted once communication is re-established.
- Agency: RoHS


In-building range is dependent on obstructions such as furniture and walls and the density of those materials. In wide open spaces, the distance may be greater; in dense spaces, the distance may be less. Actual battery life is dependent on the sensor's adjustable settings and environmental conditions.

Specifications subject to change without notice.

Building Automation Products, Inc., 750 North Royal Avenue, Gays Mills, WI 54631 USA

Tel: +1-608-735-4800 Fax: +1-608-735-4804 E-mail: sales@bapihvac.com Web: www.bapihvac.com

Documents / Resources

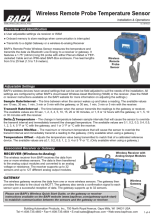	<p>BAPI BA-WT-BLE Wireless Remote Probe Temperature Sensor [pdf] Instruction Manual BA-WT-BLE Wireless Remote Probe Temperature Sensor, BA-WT-BLE, Wireless Remote Probe Temperature Sensor, Probe Temperature Sensor, Temperature Sensor, Sensor</p>
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  [BAPI - Sensor Products for HVAC/R Duct and Room](#)