



## beamz MULTIACE2 2 In 1 LED Effect User Manual

[Home](#) » [beamZ](#) » beamz MULTIACE2 2 In 1 LED Effect User Manual 



**BEAMZ  
MADE EAZY**

## Contents

|     |                          |
|-----|--------------------------|
| 1   | SAFETY INSTRUCTIONS      |
| 2   | UNPACKING<br>INSTRUCTION |
| 3   | POWERSUPPLY              |
| 4   | DMX512 CONTROL           |
| 5   | REMOTE CONTROLLER        |
| 6   | CLEANING                 |
| 7   | REPLACING THE USE        |
| 8   | TROUBLE SHOOTING         |
| 9   | Documents / Resources    |
| 9.1 | References               |

## SAFETY INSTRUCTIONS



**WARNING!** Before carrying out any operations with the unit, carefully read this instruction manual and keep it with care for Future reference. It contains important information about the installation, usage and maintenance of the unit.

- Unpack and check carefully that there is no transportation damage before using the unit
- Please read these instructions carefully and follow the instructions.
- Observe all safety warnings. Never remove safety warnings or other information from the equipment.
- Besure that no ventilation slots are blocked; otherwise the unit will overheated.



**WARNING!** Before connecting the equipment to the power outlet, first verify that the mains voltage and frequency match the values specified on the equipment. If the equipment has a voltage selection switch, connect the equipment to the power outlet only if the equipment values and the mains power values match. IF the included power cord or power adapter does not fit in your wall outlet, contact your electrician.

- After connecting the unit, check all cables in order to prevent damage or accidents, e.g., due to tripping hazards.
- Make sure that the power cord is never crimped or damaged. Check the unit and the power cord from time to time.
- Always disconnect power from the mains, when unit is not used or before cleaning! Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.
- Unplug the power cord and power adapter from the power outlet if there is a risk of a lightning strike or before extended periods of disuse.
- Do not switch the unit on and off in short intervals.
- Donot connect the unit to a dimmerpack.
- Install the unit in a well ventilated place.
- Never place any material over the lens.
- Never let the sunlight lights directly to the Front lens , even when the unit is not working.
- Always allow free air space of at least 50 cm around the unit for ventilation.
- Make sure that the area below the installation place is blocked when rigging, derigging or servicing the unit.
- For mounting height >100 cm, always fix the unit with an appropriate safety-rope. Fix the safety-rope at the correct fixation points only. The safety-rope must never be fixed at the transport handles!

- Never look directly at the light beam. Please note that fast changes in lighting, e. g. flashing light, may trigger epileptic seizures in photosensitive persons or persons with epilepsy.
- This unit is not designed for permanent operation. Consistent operation breaks will ensure that the unit will serve you for a long time without defects.



**WARNING!** If the power cord of the unit is equipped with an earthing contact, then it must be connected to an outlet with a protective ground.

Never deactivate the protective ground of a power cord.

- Make sure that the unit is not exposed to extreme heat, moisture or dust.
- Clean the unit using a dry cloth.
- Do not touch the unit bare-handed during its operation (housing becomes very hot). Allow the unit to cool for at least 5 minutes before handling.
- This unit is designed exclusively for indoor use, do not use this equipment in the immediate vicinity of fluid (does not apply to special outdoor equipment – in this case, observe the special instructions noted below). Do not expose this unit to flammable materials, fluids or gases.
- If the unit has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your unit. Leave the unit switched off until it has reached room temperature.
- Never attempt to bypass the thermostatic switch or Fuses.
- Do not dismantle or modify the unit.
- For replacement use fuses/bulb of same type and rating only.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- The ambient temperature must always be between -5° C and +45° C.
- If this unit is operated in any other way, than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Plastic bags must be kept out of reach of children.
- Unit must be installed out of the reach of children. Never leave the unit running unattended.



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed “over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

## UNPACKING INSTRUCTION



**CAUTION!** Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. In the event that the product must be returned to the factory, it is important that the product be returned in the original Factory box and packing.

If the unit has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your unit. Leave the unit switched off until it has reached room temperature.

## POWERSUPPLY


On the label on the backside of the unit is indicated on this type of power supply must be connected. Check that the mains voltage corresponds to this, all other voltages than specified, the light effect can be irreparably damaged. The product must also be directly connected to the mains and may be used. No dimmer or adjustable power supply.



**WARNING!** Always connect the unit to a protected circuit (circuit breaker or Fuse). Make sure the unit has an appropriate electrical ground to avoid the risk of electrocution or fire.

The unit may be set up on a stable and even surface. By means of the fixing facilities of the baseplate, the unit can also be mounted upside down to a truss, see below picture. For fixing, certified clamps with correct safe working load are required. According to the Figure, the quick lock bolts of the omega brackets are placed into the openings provided in the base plate and turned clockwise until they lock (to the stop). The mounting place must be of sufficient stability and be able to support a weight of 10 times of the unit's weight. Secure the unit with a safety cable so that it cannot fall down.


When carrying out any installation, always comply European and national guidelines concerning rigging, truss and all other safety issues. Always let the installation checked out by an authorized dealer !

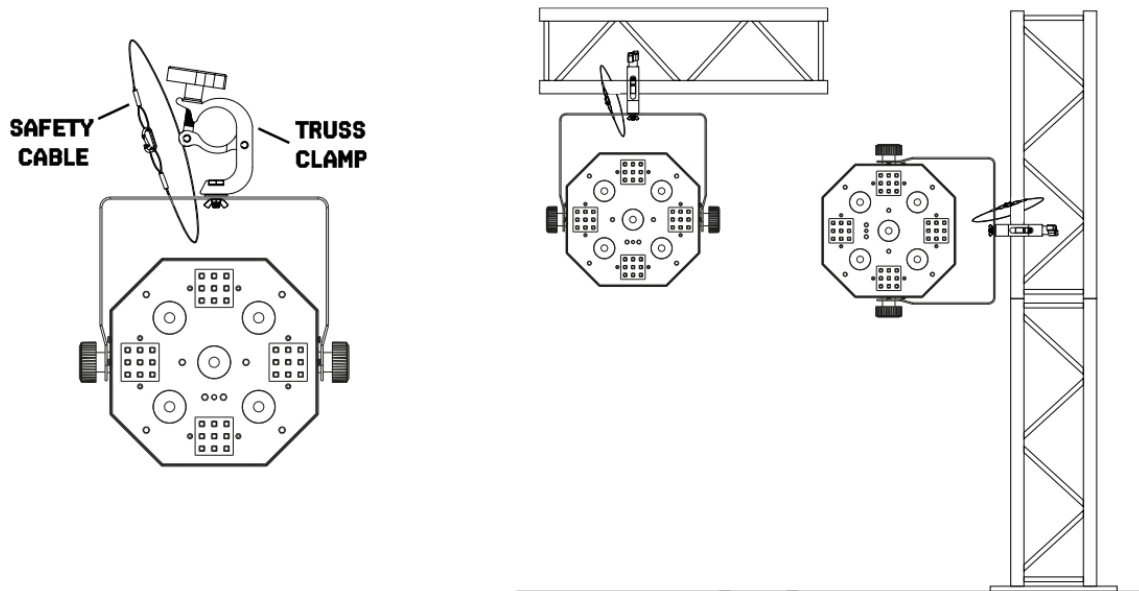

## DMX512 CONTROL


If you are using a standard DMX controller, you can connect the DMX output of the controller directly to the DMX input of the first unit in a DMX chain.

Always connect the output of one unit with the input of the next unit until all units are connected.

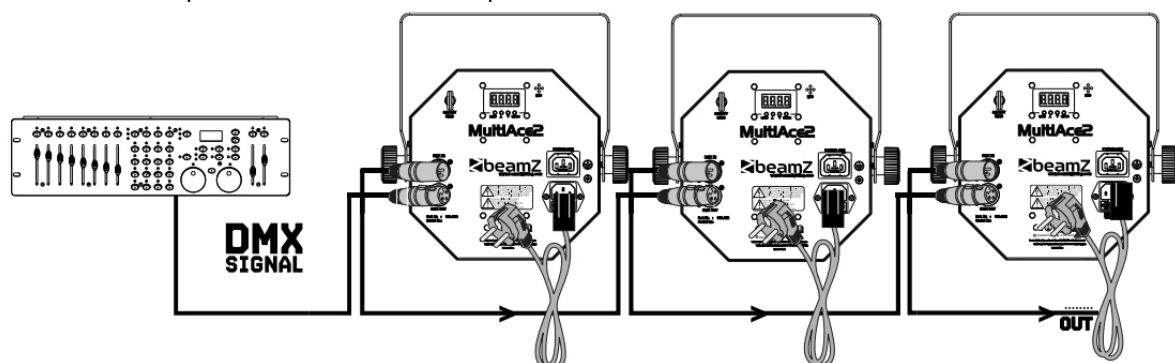

**CAUTION!** At the last unit, you must close the DMX line with a terminating resistor. Take an XLR connector and solder a 120 Ohm resistor between signal (-) and signal (+) and connect it to the DMX output of the last unit in

the line.

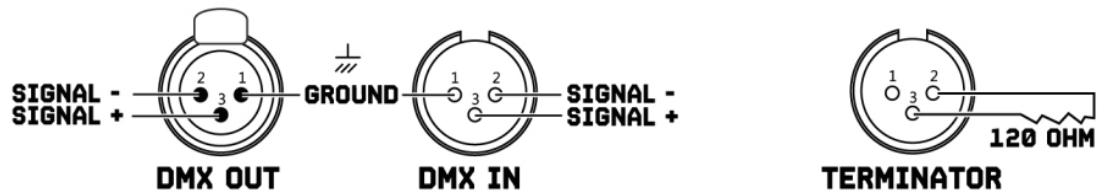

## REMOTE CONTROLLER

### BLACK OUT MODE

Press <BLACK OUT> off existing modes. Press <BLACK QUT> return the last modes.  
AUTO MODE

Automatic mode will enable you to run the automatic programs on the product.  
To turn on Automatic mode:

1. Press <AUTO> on the remote controller.
2. Press <+> or <-> to choose between the different auto programs.

### SOUND MODE

Sound-Active mode will enable the product to respond to the music.  
To turn on Sound-Active mode:

1. Press <SQUND> on the remote controller.
2. Press <+> or <-> to choose between the different sound programs.

### STROBE MODE

To adjust the strobe speed of the automatic program and the sound active program.

1. Press <STROBE> on the remote controller.
2. Press <+> or <-> to either increase or decrease the speed of the program.
3. Press <STROBE> again to turn off the strobe.

### SPEED MODE

To adjust the speed of the automatic program and the sound active program.

1. Press <SPEED> on the remote controller.
2. Press <+> or <-> to either increase or decrease the speed of the program.

### SENSITIVITY MODE

To adjust sound sensitivity for in Sound-Active mode

1. Press <SENSITIVITY> on the remote controller.
2. Press <+> or <-> to either increase or decrease sound sensitivity.



#### **DMX / % MODE**

To enable DMX or disallow DMX on the product.

Press <DMX> on the remote controller, the product work on the DMX controlling modes.

#### **MANUAL MODE**

1. Press MANUAL) on the remote controller.
2. Press <R>, <G>, <B>, <W> (red, green, blue or white) to choose your colour.
3. Press again <R>, <G>, <B>, <W> (red, green, blue or white) to close your colour.
4. Press <+> or <-> to either increase or decrease the percentage of each colour.

#### **FADE/UNIT MODE**

To adjust the FADE speed of the automatic program, the sound active program and the manual mode.

1. Press <FADE> on the remote controller.
2. Press <FADE> again to turn off the Fade mode.


#### **NUMBER 1~9**

To adjust the brightness value of the automatic program, the Sound active program and Manual Mode.

Press digit <1> to <9> to change different brightness on the device.



**CAUTION!** The remote control is supplied with a battery inserted. An insulating foil between the battery and the battery contacts prevents the battery from being discharged during storage. Prior to the first operation remove the foil from the battery support on the rear side of the remote control. Otherwise operation of the remote control is not possible.

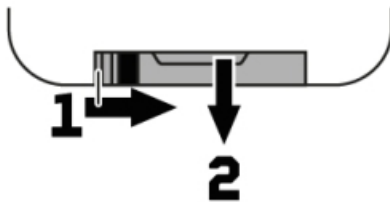

## CLEANING

The buildup of dust, dirt and other airborne particles will reduce the unit's light output. It will also prevent the unit from cooling correctly, and this will reduce the unit's lifetime. The rate of dirt buildup will vary depending on environmental factors such as airborne dust, use of smoke machines, airflow from ventilation systems, etc. The unit's cooling Fans will accelerate buildup, and any smoke particles that are present in the atmosphere will increase the tendency For dirt to clog.

To get the best performance and lifetime From the unit, inspect it regularly and clean it as soon as you see signs of dirt buildup.

Assess the operating environment each time you begin to use the unit. In dusty or smoky conditions, inspect the unit after a few hours and check it frequently the unit may attract dirt faster than you expect. Draw up a cleaning schedule that will make sure that dirt is removed before it can build up.


Use the following guidelines:

- Disconnect the unit from power and allow it to cool completely before cleaning.
- Do not use solvents, abrasives or any other aggressive product to clean the unit.
- Vacuum or use low-pressure compressed air to remove dust and loose particles from surfaces and air vents. Prevent the blades of cooling fans from turning before you aim a vacuum or air jet at the Fan, or you may spin the Fan too fast and damage it.
- Clean glass components by wiping gently with a soft, clean, lint-free cloth moistened with a weak detergent solution. Put the solution on the cloth and not on the surface to be cleaned. Avoid rubbing glass surfaces.
- Dry the unit with a soft, clean, lint-free cloth or low-pressure compressed air before reapplying power.

## REPLACING THE USE

If the Fuse is defective, replace the fuse with a fuse of the same type and value. Before replacing the fuse, unplug mains lead.

**Procedure:**

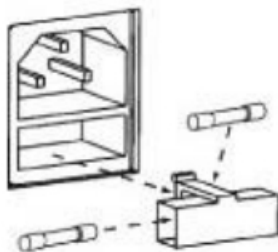

Step 1: Open the fuse holder on the rear panel with a fitting screwdriver.

Step 2: Remove the old fuse from the fuse holder.

Step 3: Install the new fuse in the Fuse holder.

Step 4: Replace the fuse holder in the housing.

## TROUBLE SHOOTING

The checklist below may help you troubleshoot in the unlikely event that a problem occurs while using the product:

| SYMPTOM   | POSSIBLE CAUSE   | SUGGESTED ACTION  |
|---|--|---|
| No response from unit.  | No power to unit.<br>Fuse blown or internal fault.   | Check that power is turned on.<br>Check cables and connections.<br>Replace main fuse or contact Beamz support or Beamz authorized service partner. Do not remove base or yoke covers. Do not attempt to replace a fuse or carry out any repairs or service that are not described in this User Manual unless you have both authorization from Beamz support or Beamz authorized service partner.  |
| Unit resets correctly but does not respond (or does not respond correctly) to the controller. | The controller is not connected. Bad DMX-line.<br>DMX-line has no end resistance.<br>Incorrect unit addressing.<br>A unit is defective and is disturbing data transmission on the DMX-line.<br>Pin 2 and 3 are reversed in XLR connection. | Connect controller.<br>Inspect connections and cables.<br>Correct poor connections. Repair or replace damaged cables. Insert DMX terminator plug in DMX output socket of last unit on DMX-line.<br>Check unit address and DMX mode settings.<br>Unplug DMX IN and OUT connectors and connect them directly together to bypass one unit at a time until normal operation is regained.<br>Have defective unit serviced by an authorized technician.<br>Inspect connections and cables. Install a phase-reversing cable between the units or swap pin 2 and 3 in the unit, that behaves erratically. |
| Error after unit reset.   | Effect requires mechanical adjustment.   | Check unit's software version and error messages for more information. Contact Beamz support or Beamz authorized service partner.   |
| Light output cuts out intermittently.   | Unit too hot.<br>LEDs damaged.<br>The power supply settings do not match local AC voltage and frequency.   | Allow unit to cool. Reduce ambient temperature. Ensure free airflow around unit. Clean unit if necessary.<br>Disconnect unit and contact Beamz support or Beamz authorized service partner.<br>Disconnect unit. Check settings and correct if necessary.  |

## CONTROL MENU



| MENU |            | DESCRIPTION                        |
|------|------------|------------------------------------|
| ADDR | 13CH       | Select DMX start address d001-d512 |
|      | 6CH        |                                    |
|      | 4CH        |                                    |
|      | 2CH        |                                    |
| STAT | S01-18     | Static colours                     |
| AUTO | Au 1-3     | Auto program                       |
| SOUN | So 1-3     | Sound Program                      |
| SPEE | SP 1-9     | Speed Program                      |
| SENS | SE 1-9     | MIC sensitivity                    |
| COLO | r000-255   | Red (0-100%)                       |
|      | g000-255   | Green (0-100%)                     |
|      | b000-255   | Blue (0-100%)                      |
|      | U000-255   | UV (0-100%)                        |
| SMD  | smd        | Edit intensity SMD(0-100%)         |
| DIMM | dl 1- dl 9 | Master dimming                     |
| SILE | on/oFF     | Silent scene by Sound program      |
| SLAV | Slave      | Slave                              |
| INFR | on/oFF     | Enable or Disenable IR remote      |

## DMX CHANNELS

### 2 CHANNELS

| CHANNEL | FUNCTION | VALUE   | DESCRIPTION             |
|---------|----------|---------|-------------------------|
| 1       | Dimmer   | 000-255 | Master dimming (0-100%) |
| 2       | Colours  | 000-009 | No function             |
|         |          | 010-019 | Red                     |
|         |          | 020-029 | Green                   |
|         |          | 030-039 | Blue                    |
|         |          | 040-049 | UV                      |
|         |          | 050-059 | Yellow                  |
|         |          | 060-069 | Magenta                 |
|         |          | 070-079 | Cyan                    |
|         |          | 080-089 | Dark orange             |
|         |          | 090-099 | Green yellow            |
|         |          | 100-109 | Salmon                  |
|         |          | 110-119 | Turquoise               |
|         |          | 120-129 | Light Green             |
|         |          | 130-139 | Orange                  |
|         |          | 140-149 | Straw                   |
|         |          | 150-159 | Lavender                |
|         |          | 160-169 | Light blue              |
|         |          | 170-179 | Dark blue               |
|         |          | 180-255 | Pink                    |

#### 4 CHANNELS

| CHANNEL | FUNCTION | VALUE   | DESCRIPTION    |
|---------|----------|---------|----------------|
| 1       | Dimmer   | 000-255 | Red (0-100%)   |
| 2       | Dimmer   | 000-255 | Green (0-100%) |
| 3       | Dimmer   | 000-255 | Blue (0-100%)  |
| 4       | Dimmer   | 000-255 | UV (0-100%)    |

#### 6 CHANNELS

| CHANNEL | FUNCTION    | VALUE   | DESCRIPTION               |
|---------|-------------|---------|---------------------------|
| 1       | Dimmer      | 0-255   | Master dimming (0-100%)   |
| 2       | Strobe Leds | 0-255   | Stroboscope (Rate 0-100%) |
| 3       | Color       | 0-9     | No Function               |
|         |             | 10-19   | Red                       |
|         |             | 20-29   | Green                     |
|         |             | 30-39   | Blue                      |
|         |             | 40-49   | UV                        |
|         |             | 50-59   | Yellow                    |
|         |             | 60-69   | Magenta                   |
|         |             | 70-79   | Cyan                      |
|         |             | 80-89   | Dark orange               |
|         |             | 90-99   | Green yellow              |
|         |             | 100-109 | Salmon                    |
|         |             | 110-119 | Turquoise                 |
|         |             | 120-129 | Light Green               |
|         |             | 130-139 | Orange                    |
|         |             | 140-149 | Straw                     |
|         |             | 150-159 | Lavender                  |

|   |                 |         |                               |
|---|-----------------|---------|-------------------------------|
|   |                 | 160-169 | Light blue                    |
|   |                 | 170-179 | Dark blue                     |
|   |                 | 180-255 | Pink                          |
| 4 | Strobe SMD Leds | 0-255   | Stroboscope SMD (Rate 0-100%) |
| 5 | Dimmer          | 0-255   | SMD (0-100%)                  |
| 6 | Auto programs   | 0-9     | No function                   |
|   |                 | 0-9     | Auto program1                 |
|   |                 | 50-89   | Auto program2                 |
|   |                 | 90-129  | Auto program3                 |
|   |                 | 130-169 | Sound program1                |
|   |                 | 170-209 | Sound program2                |
|   |                 | 210-255 | Sound program3                |

**13 CHANNELS**

| CHANNEL | FUNCTION            | VALUE   | DESCRIPTION                   |
|---------|---------------------|---------|-------------------------------|
| 1       | Dimmer              | 0-255   | Master dimming (0-100%)       |
| 2       | Strobe function     | 0-255   | Stroboscope (Rate 0-100%)     |
| 3       | Dimmer              | 0-255   | Red (0-100%)                  |
| 4       | Dimmer              | 0-255   | Green (0-100%)                |
| 5       | Dimmer              | 0-255   | Blue (0-100%)                 |
| 6       | Dimmer              | 0-255   | UV (0-100%)                   |
| 7       | Color picker        | 0-9     | No function                   |
|         |                     | 10-19   | Red                           |
|         |                     | 20-29   | Green                         |
|         |                     | 30-39   | Blue                          |
|         |                     | 40-49   | UV                            |
|         |                     | 50-59   | Yellow                        |
|         |                     | 60-69   | Magenta                       |
|         |                     | 70-79   | Cyan                          |
|         |                     | 80-89   | Dark orange                   |
|         |                     | 90-99   | Green yellow                  |
|         |                     | 100-109 | Salmon                        |
|         |                     | 110-119 | Turquoise                     |
|         |                     | 120-129 | Light Green                   |
|         |                     | 130-139 | Orange                        |
|         |                     | 140-149 | Straw                         |
|         |                     | 150-159 | Lavender                      |
|         |                     | 160-169 | Light blue                    |
|         |                     | 170-179 | Dark blue                     |
|         |                     | 180-255 | Pink                          |
| 8       | Strobe function SMD | 0-255   | Stroboscope SMD (Rate 0-100%) |
| 9       | Dimmer              | 0-255   | SMD1                          |
| 10      | Dimmer              | 0-255   | SMD2                          |
| 11      | Dimmer              | 0-255   | SMD3                          |
| 12      | Dimmer              | 0-255   | SMD4                          |
|         |                     | 0-9     | No function                   |
|         |                     | 10-49   | Auto programl                 |

|    |               |         |                |
|----|---------------|---------|----------------|
| 13 | Auto programs | 50-89   | Auto program2  |
|    |               | 90-129  | Auto program3  |
|    |               | 130-169 | Sound program1 |
|    |               | 170-209 | Sound program2 |
|    |               | 210-255 | Sound program3 |

## TECNICAL SPECIFICATIONS

|                         |   |
|-------------------------|---|
| LED colours             | Red, Green, Blue, White, Ultra Violet         |
| LED power               | 4W  |
| Quantity of LEDs        | 5   |
| LED power: Strobe       | 0.2W  |
| Quantity of strobe LEDs | 36  |
| Beam angle              | 25°   |
| DMX channels            | 2, 4, 6, 13                                   |
| DMX connector           | 3-pin XLR                                     |
| Flash rate per second   | 0 – 20Hz                                      |
| Modes                   | Automatic programs, DMX, Master/Slave         |
| Power consumption       | 0.372 – 0.207A                                |
| Power supply            | 100-240VAC 50/60Hz                            |
| Accessories             | Mounting bracket, Power cable, Remote control |
| Dimensions (L x W x H)  | 200 x 200 x 115 mm                            |
| Weight                  | 2,10kg  |

is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags. Design and product specifications are subject to change without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject:

European Union  
Tronios B.V.,  
Bedrijvenpark Twente Noord 18,  
7602KR Almelo, The Netherlands  
2014/35/EU  
2014/30/EU 2011/65/EC



United Kingdom  
Tronios Ltd.,  
130 Harley Street,  
London W1G 7JU, United Kingdom

S.I. 2016:1101

S.I. 2016:1091

S.I. 2012:3032



---

## Documents / Resources



[beamz MULTIACE2 2 In 1 LED Effect](#) [pdf] User Manual

MULTIACE2, MULTIACE2 2 In 1 LED Effect, 2 In 1 LED Effect, LED Effect, Effect

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.