




BEGA 85167 RGBW Performance Floodlight Instruction Manual

[Home](#) » [BEGA](#) » BEGA 85167 RGBW Performance Floodlight Instruction Manual 

BEGA

Technical amendments reserved
Performance floodlight
85 167

UK
CA  IP 65

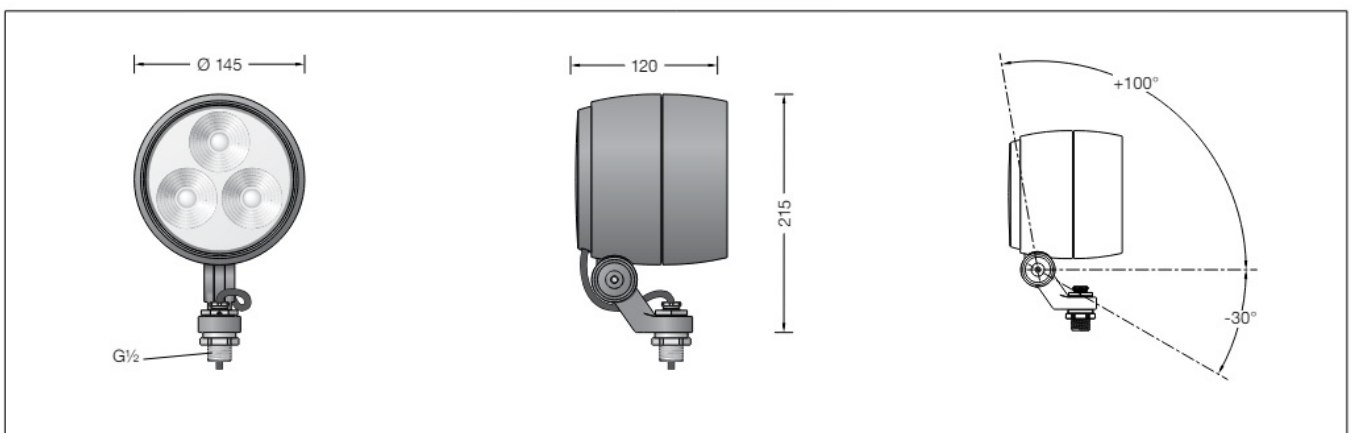

Instructions for use

Contents

- [1 Application](#)
- [2 Product description](#)
- [3 Safety](#)
- [4 Installation](#)
- [5 Cleaning · Maintenance](#)
- [6 Accessories](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Application

Performance floodlight with G $\frac{1}{2}$ mounting bush.

The floodlight can be bolted together with any female thread G $\frac{1}{2}$ according to ISO 228 supplied by others or to BEGA accessories.

For a variety of interior and exterior lighting applications.

The floodlight can be controlled by DALI colour light control (DT8, RGBWAF, xy, TC).

Product description

Luminaire made of aluminium alloy, aluminium and stainless steel BEGA Unidure® coating technology Colour

graphite or silver Safety glass with optical structure Silicone gasket

Reflector surface made of pure aluminium BEGA Constant Optics®

Rotation range of floodlight 350°

Swivel range -30°/+100°

Mounting bracket with G $\frac{1}{2}$ threaded connection

Thread length: 14 mm

Connecting cable X05BQ-F 5 G 1 mm²

Cable length 1 m

BEGA Ultimate Driver®

Complies with flicker requirements in accordance with IEEE 1789,

DIN IEC/TR 63158, DIN IEC/TR 61547-1

LED power supply unit

220-240 V  0/50-60 Hz

DC 176-264 V

DALI-controllable(DT8, RGBWAF, xy, TC)

Number of DALI addresses: 1

Basic insulation is provided between the mains and control cables

Safety class I

Protection class IP 65

Dust-tight and protection against water jets

Impact strength IK06

Protection against mechanical impacts < 1 joule



– Conformity mark

Wind catching area: 0.021 m²

This product contains light sources of energy efficiency class(es) F

Safety

The installation and operation of this luminaire are subject to national safety regulations.

Installation and commissioning may only be carried out by a qualified electrician.

The manufacturer accepts no liability for damage caused by improper use or installation.

If subsequent modifications are made to the luminaire, the person responsible for these modifications shall be considered the manufacturer.

Overvoltage protection

The electronic components installed in the luminaire are protected against overvoltage in accordance with DIN EN 61547.

To achieve an additional protection against e. g. transients, etc. we recommend separate overvoltage protection components.

You can find them on our website at www.bega.com.

Installation

Screw the floodlight G $\frac{1}{2}$ threaded connection firmly into the on-site G $\frac{1}{2}$ female thread or BEGA accessory.

G $\frac{1}{2}$ threaded connection torque = 40 Nm.

Secure the screw connection from loosening on site (if provided with locking screw S, see fig. A).

Check the earth conductor connection between the G $\frac{1}{2}$ threaded connection and the on-site G $\frac{1}{2}$ female thread.

Adjust floodlight:


Undo hexagon socket screw (wrench size 5 mm) and hexagon nut (wrench size 27 mm) and set the desired beam direction (see sketch B, C).

Torque:

Hexagon socket screw = 7 Nm

Hexagon nut = 35 Nm

Secure bolted connection G $\frac{1}{2}$ against loosening by tightening the hexagon socket screws (wrench size 2 mm).

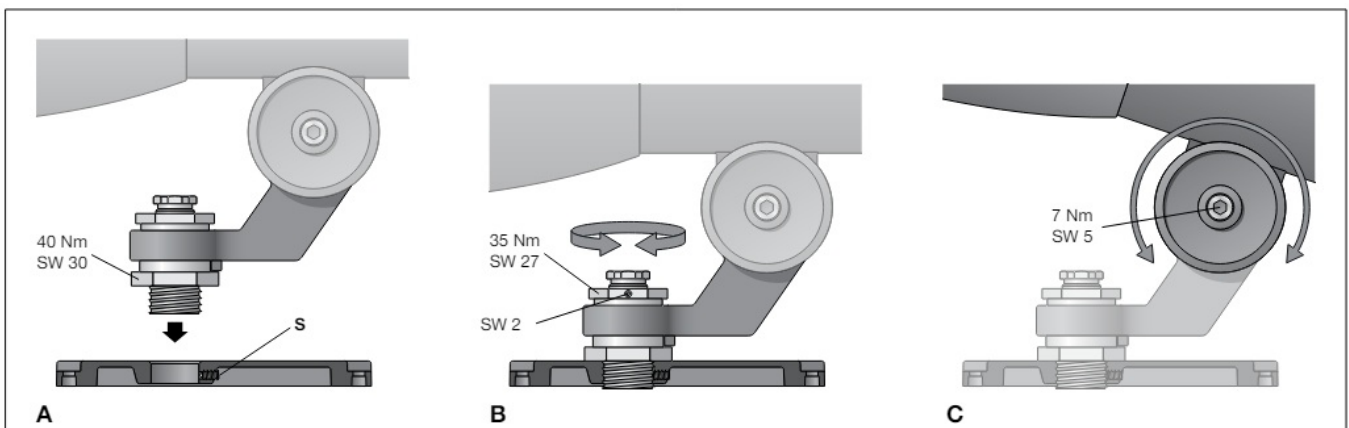

The electrical connection must be carried out with matching protection class and safety class, strain-relieved, with suitable connection terminals (not included in the scope of delivery) at the luminaire power supply cable.

Note correct configuration of the mains supply cable. The earth conductor is connected at the green-yellow (1), the phase to the brown (L), and the neutral conductor to the blue (N) marked wire.

The connection of the control cables is achieved by means of the both leads marked with DALI. In case these leads are not used the luminaire will be operated at full light output.

Lamp	
Module connected wattage	20.8 W
Luminaire connected wattage	24 W
Rated temperature	ta = 25 °C
Service life criteria	50 000 h / L70
Module designation	LED-1161/RGBW
Colour temperature of the white LED	4000 K
Luminaire luminous flux	1288 lm
Luminaire luminous efficiency	53,7 lm / W

Light technique

Symmetrical wide beam light distribution Half beam angle 24°

For special lighting applications, an optical filter can be used to change the symmetrical light cone into a flat beam light distribution.

Cleaning · Maintenance

Clean luminaire regularly with solvent-free cleansers from dirt and deposits.

Do not use high pressure cleaners.

Maintenance

The connecting cable must be checked for external damage and may only be replaced by a qualified electrician.

Please note:

Do not remove the desiccant bag from the luminaire housing.

It is needed to remove residual moisture.

Replacing the LED module

The designation of the LED module is noted on a separate label in the luminaire or on the underside of the specific LED module.

The light colour and light output of BEGA eplacement modules correspond to those of the modules originally fitted. The module can be replaced by qualified persons using standard tools.

Disconnect the system.

Open the floodlight:

Undo locking pin (hexagon socket head wrench size 2.5 mm) on the back side of the floodlight housing.

Remove the trim ring along with the safety glass and reflector by twisting it counterclockwise.

Replace LED module.

Please follow the installation instructions for the LED module. Inspect and, if necessary, replace the luminaire gaskets.

Defective glass must be replaced.

Place trim ring with glass and reflector on the floodlight housing in such a way that the notches in the trim ring and floodlight housing align on top to each other.

Twist on the trim ring clockwise as far as the stop.

Tighten locking pin.

Accessories

71 290	Optical filter flat beam
71 332	Shield
71 337	Cylindrical shield
70 214	Pole cap for pole ø 48 mm
70 248	Pole cap for pole ø 60 mm
70 245	Mounting box
70 252	General fastener
70 280	Tube clamp G½
70 283	Screw clamp
70 379	Cross beam G½
70 889	Tension belt


For the accessories a separate instructions for use can be provided upon request.

Spares

Trim ring graphite	25 000 279
Trim ring silver	25 000 280
LED power supply unit	DEV-0418/200i
LED module	LED-1161/RGBW
Reflector	76 002 013
Gasket housing	83 000 521
Gasket trim ring	83 001 952

BEGA Gantenbrink-Leuchten KG · Postfach 31 60 · 58689 Menden · info@bega.com · www.bega.com

Documents / Resources

	<p>BEGA 85167 RGBW Performance Floodlight [pdf] Instruction Manual 85167, 85167 RGBW Performance Floodlight, RGBW Performance Floodlight, Performance Floodlight, Floodlight</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- BEGA [BEGA · Das gute Licht.](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.