

BEEK
BEEK CONTROLS
TR9B Capacitive
Touch LCD Smart
Thermostat



BEEK CONTROLS TR9B Capacitive Touch LCD Smart Thermostat Owner’s Manual

[Home](#) » [BEEK CONTROLS](#) » BEEK CONTROLS TR9B Capacitive Touch LCD Smart Thermostat Owner’s Manual



Contents

- 1 [BEEK CONTROLS TR9B Capacitive Touch LCD Smart Thermostat](#)
- 2 [Ultra-large colorful screen capacitive touch LCD smart thermostat](#)
- 3 [Product Overview](#)
- 4 [Connecting Diagram](#)
- 5 [Documents / Resources](#)
 - 5.1 [References](#)
- 6 [Related Posts](#)

BEEK

BEOK CONTROLS TR9B Capacitive Touch LCD Smart Thermostat



Specifications

- Supply voltage: Standard voltage
- Power consumption: Variable based on usage
- Temperature setting range: Customizable
- Floor limited range: Adjustable
- Temp. Dif.: Programmable
- Ambient temperature: Suitable for indoor use
- Protection level: High level of protection
- Shell material: Anti-Flammable PC

Temperature Control Modes

- **Manual Mode:** The thermostat operates based on manually set temperature.
- **Auto Mode:** Allows for weekly-circled programming with up to 6 heating events per day. Customizable for workdays and temperatures.
- **Temporary Mode:** Works temporarily based on manual settings and then shifts back to auto mode till the next event.

User Operation

- **Power on/off:** Press the power button shortly to turn on/off the thermostat.
- **Auto-mode:** Press and hold the auto-mode button for 3 seconds to edit auto-mode settings (Floor Heating/Integrated).
- **Timer task:** Press and hold the timer task button for 3 seconds to edit timer task settings (Fan Coil/Integrated).

- **Time setting:** Press and hold the time setting button for 3 seconds to set the time (Floor Heating).
- **Child-lock:** Press and hold both child-lock buttons for 3 seconds to activate the child-lock.

FAQ

Q: Can the thermostat be connected to Wi-Fi for remote control?

A: Yes, Wi-Fi connectivity is optional and can be enabled for remote control functionality.

Ultra-large colorful screen capacitive touch LCD smart thermostat

- The device can obtain local weather conditions and outdoor temperature (optional)
- Customized exclusive temperature plan – up to 6 events allowed to set per day
- Sail-shape curved design -fashion, elegant and enduring
- Ultra-large screen -better user interaction experience
- 485 Modbus and room card linkage – customized equipment (optional)

Parameter




Supply voltage	AC100~240V; 50/60Hz
Power consumption	1W Max (Wi-Fi 3W Max)
Temp. setting range	5~95℃ (41~99℉)
Floor limited range	20~90℃ (68~99℉)
Temp. Dif.	0.5~10℃ (1~10℉) , Factory setting ±1℃
Ambient temperature	-5~50℃ (23~99℉)
Protection level	IP20
Shell material	Anti-Flammable PC

Product Overview

This series of thermostat has Floor Heating, a Fan Coil, and an Integrated version, meeting the requirements under different scenarios.

Display Symbols

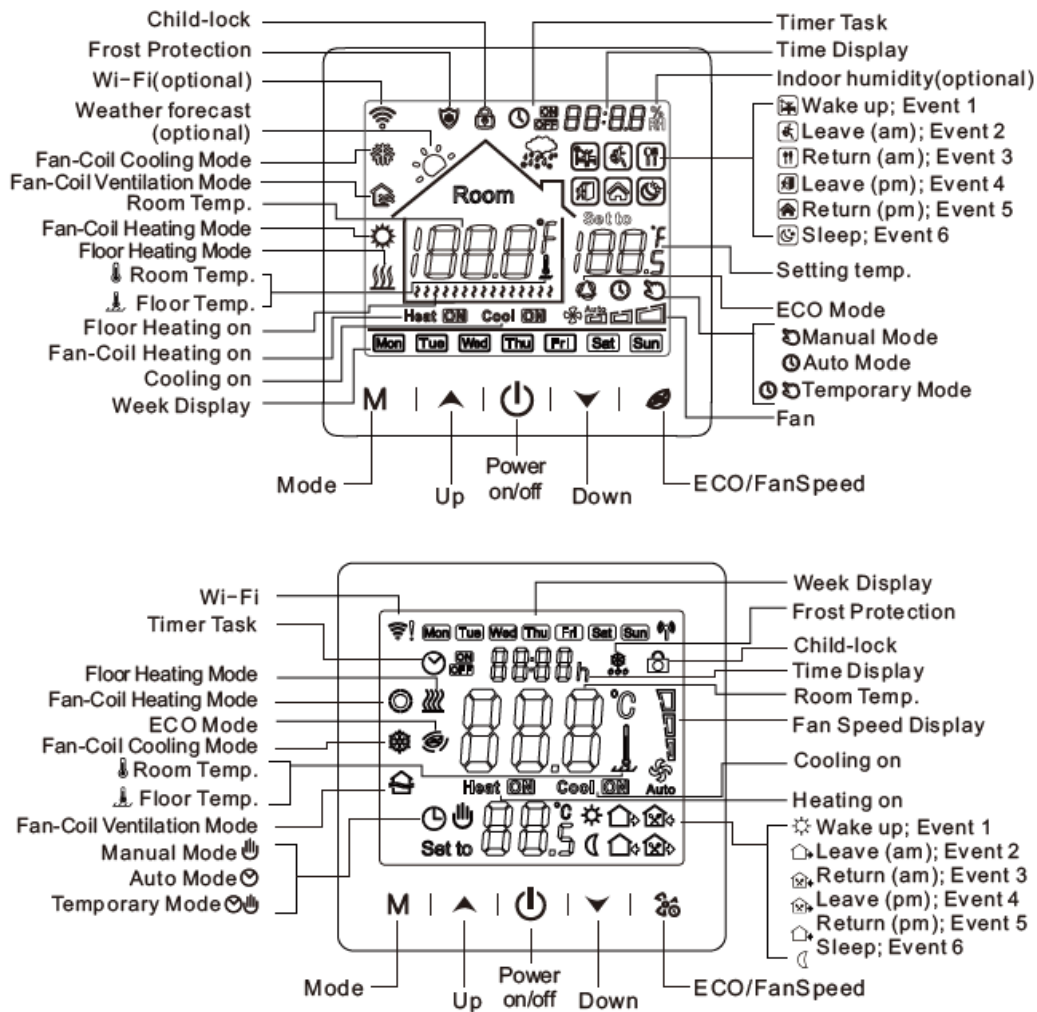

Temperature Control Mode(Floor Heating/Integrated)



Manual Mode

Thermostat works based on manually-set temperature, disconnecting from auto mode.



Auto Mode

Weekly-circled program, up to 6 heating events can be set per day. Heating events, workdays, and temperature can be separately customized based on personal routines.



Temporary Mode


Thermostat works based on manually-set temperature temporarily and then shifts back to auto mode till the next event.

User Operation



Power on/off : Press “” shortly to turn on/off the thermostat.

Auto-mode : Press “M” for 3 seconds to edit auto-mode settings. (Floor Heating/Integrated)

Timer task: Press “” for 3 seconds to edit timer task. (Fan Coil/Integrated)

Time setting: Press “” for 3 seconds to set time. (Floor Heating)

Press “” twice for 3 seconds to set time. (Automatic time synch for Wi-Fi version)

Temp setting: Press “” or “” shortly to change setting temperature by 0.5°C.

Child-lock: Press “” + “” for 3 seconds to activate child-lock.

System mode: Press “M” shortly to switch cooling/heating/ventilation. (Fan Coil)

Press “M” shortly to switch cooling/heating/ventilation/floor heating/floor heating + heating. (Integrated)


Temp control mode: Press “M” shortly to switch manual/auto mode. (Floor heating)




Press “” shortly to switch manual/auto mode. (Integrated, floor heating)

Fan speed setting: Press “” shortly to adjust fan speed.(Fan Coil/Integrated)

ECO mode: Press “” shortly to set to ECO mode 18°C(64°F). (Floor heating)





















Advanced Setting (Usually for Professional Technicians)

Under power-off, press “M” for 3 seconds to enter advanced setting mode, then re-press “” to switch to next mode. Press “ ” to save and exit advanced setting mode.

Code	Meaning	“  ” or “  ”	Default Value	Integrated	Fan Coil				Floor Heating		
				AWY	AC2-485	AC4	AC2	EP	WP	WPB	
00	Postal address (optional)	Adjustment range 0x00~0xFA	00	✓	✓	✓	✓	✓	✓	✓	✓
01	Temp. calibration	-9.9~9.9°C (-9~9°F)	-3°C	✓	✓	✓	✓	✓	✓	✓	✓
02	Temp. Dif.	0.5~10°C (1~10°F)	±1°C	✓	✓	✓	✓	✓	✓	✓	✓
03	Temp. upper limit	5~95°C (41~99°F)	50°C	✓	✓	✓	✓	✓	✓	✓	✓
04	Temp. lower limit	5~47°C (41~99°F)	5°C	✓	✓	✓	✓	✓	✓	✓	✓
05	Frost protection	ON: frost protection on OFF: frost protection off	OFF	✓	✓	✓	✓	✓	✓	✓	✓
06	Temperature unit	°C/°F	°C	✓	✓	✓	✓	✓	✓	✓	✓
07	Sensor selection	IN: Controlled by built-in sensor OUT: Limited by floor sensor ALL: Controlled by built-in sensor and limited by floor sensor	IN	✓	×	×	×	✓	✓	✓	✓
08	Floor limited Value	20~90°C (68~99°F)	35°C	✓	×	×	×	✓	✓	✓	✓
09	Weekly programming setting	12345: 5/2 week mode 123456: 6/1 week mode 1234567: 7/0 week mode	12345	✓	×	×	×	✓	✓	✓	✓
10	Fan control settings	00: Fan speed controllable 01: Fan speed uncontrollable	00	✓	✓	✓	✓	×	×	×	×
11	Delay time of outputs	0~5min	0	✓	×	×	×	✓	✓	✓	✓
12	Child-lock	00: Child-lock inactivate when screen off; lock all when child-lock activate 01: Child-lock activate when screen off; lock all when child-lock activate 02: Child-lock activate when screen off; lock all except Fan Speed, Up and Down when child-lock activate 03: Child-lock activate when screen off; lock all except Power on/off when child-lock activate	00	✓	✓	✓	✓	✓	✓	✓	✓
13	Boot Status	00: Power OFF 01: Power ON 02: The last status before power loss	02	✓	✓	✓	✓	✓	✓	✓	✓
14	Room card status	00: turn off room card function 01: set to ECO temp. after pulling room card out 02: stay power-off after pulling room card out	00	✓	✓	×	×	×	×	×	×
15	Room card heating ECO temp.	10~21°C (50~69°F)	18°C	✓	✓	×	×	×	×	×	×
16	Room card cooling ECO temp.	22~32°C (72~89°F)	26°C	✓	✓	×	×	×	×	×	×
17	Fan coil mode setting	00: Cooling and heating 01: Cooling only	00	✓	✓	✓	✓	×	×	×	×
18	Weekly programming for Integrated	00: turn on 01: turn off	01	✓	×	×	×	×	×	×	×
19	Reset	Press “  ” for 3 seconds to reset	/	✓	✓	✓	✓	✓	✓	✓	✓




Auto-mode Setting (Floor Heating / Integrated)


Press “M” for 3 seconds to edit auto-mode setting.

Events		Symbols	Time		Temperature	
			Default value	Modify	Default value	Modify
Workdays	1	 / 	06:00	Press “  ” or “  ”	20°C (68°F)	Press “  ” or “  ”
	2	 / 	08:00		15°C (59°F)	
	3	 / 	11:30		15°C (59°F)	
	4	 / 	12:30		15°C (59°F)	
	5	 / 	17:00		22°C (72°F)	
	6	 / 	22:00		15°C (59°F)	
Weekends	1	 / 	06:00		20°C (68°F)	
	2	 / 	20:00		20°C (68°F)	


Timer Task Setting (Fan Coil / Integrated)

Press “” for 3 seconds to enter the timer task setting; press “” to change settings;

press “” or “” to adjust parameters; press “” to save and exit.

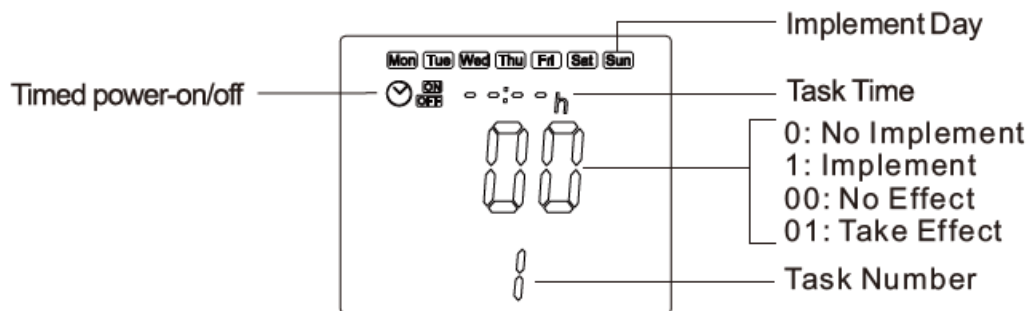


Dimensions (Unit: mm)

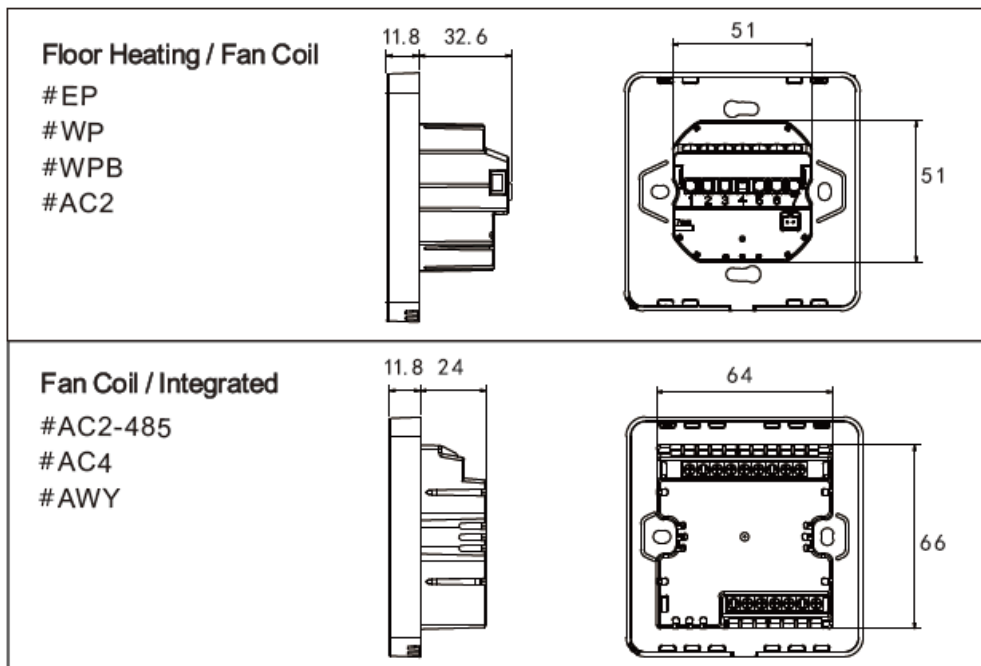


Mounting Steps

The thermostat adopts a pre-guide and limited snap-fit design. It is easy to mount.


1. Release the front cover by inserting a head screwdriver into the bottom crack.

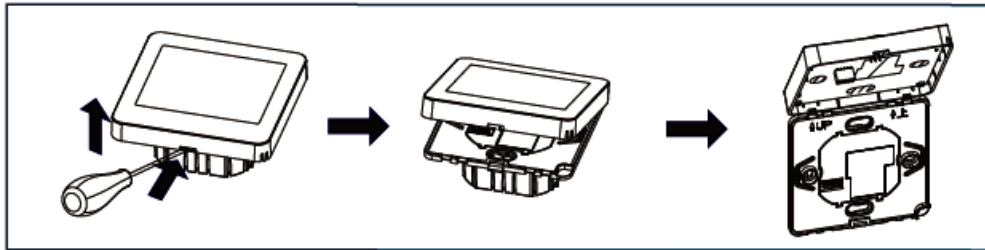

2. Insert the wires and then fix these wires with screws. Suggested wire-stripping length is 7-9mm.
3. Mount backing plate into wall cassette, put screws and then fix thermostat. Make sure that the thermostat is fixed without deformation. Suggested torque is 0.2~0.4N.m (2.0~4. 1kgf.cm).

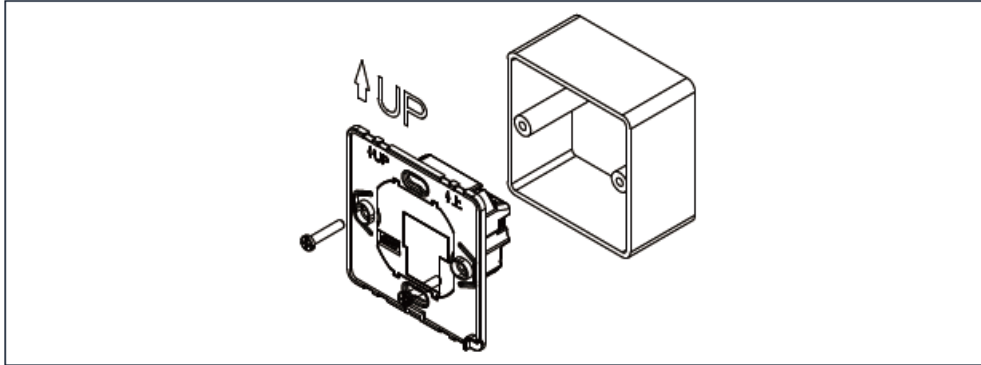

4. Re-mount the front cover via snap-fit connection.

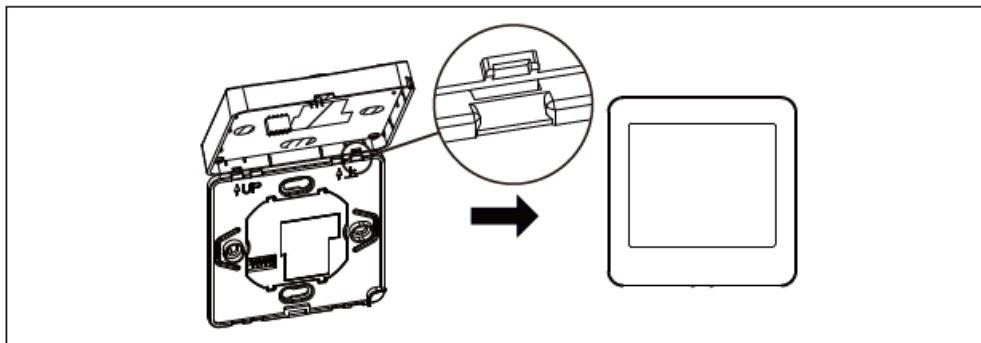

Sensor failure

Sensor failure Please select work mode of sensors correctly. When it shows EO/1 error, the thermostat will stay power-off till the error is eliminated. E0: built-in sensor is short-circuited or disconnected. E1: floor sensor is short-circuited or disconnected.


Connecting Diagram

The thermostat operates in full capacity in areas with the altitude of less than 2500 above sea level. Power rating of external load should be less than or equal to 80% rated power of the thermostat in areas with altitude of 2500m to 4200m.

Floor Heating

#TR9B-WIF-EP

#TR9B-EP



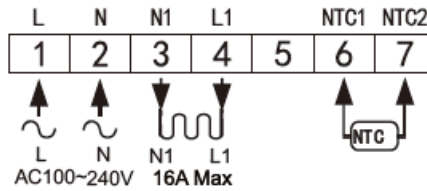


#TR9B-WIFI-WP ①

#TR9B-WP

#TR9B-WIFI-WPB


#TR9B-WPB

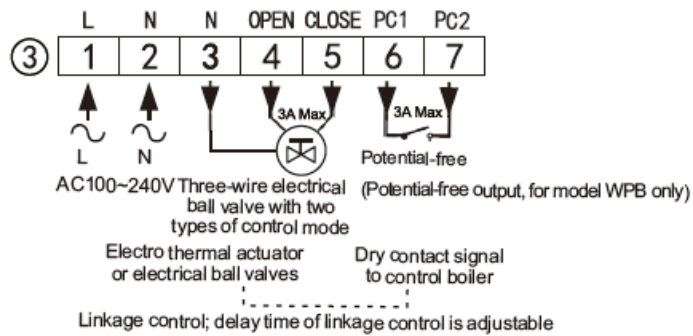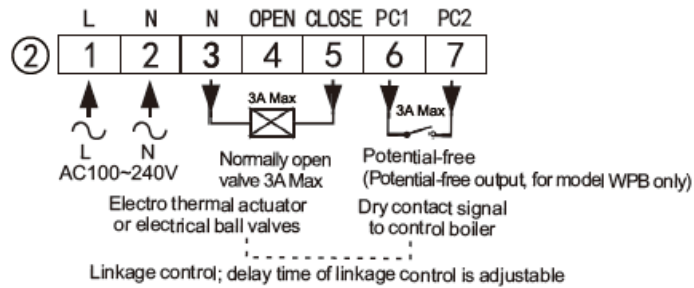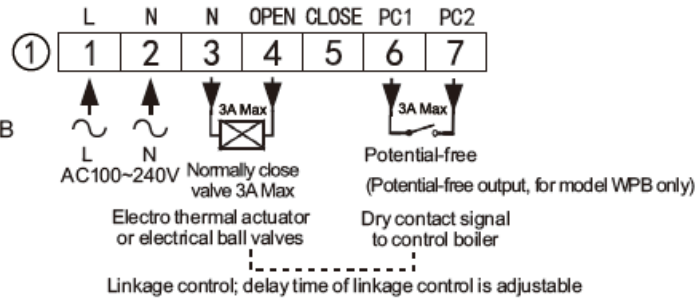

Fan Coil


#TR9B-WIFI-AC2

#TR9B-AC2

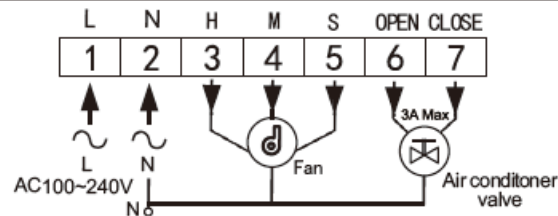


#TR9B-WIFI-AC2-485

#TR9B-AC2-485

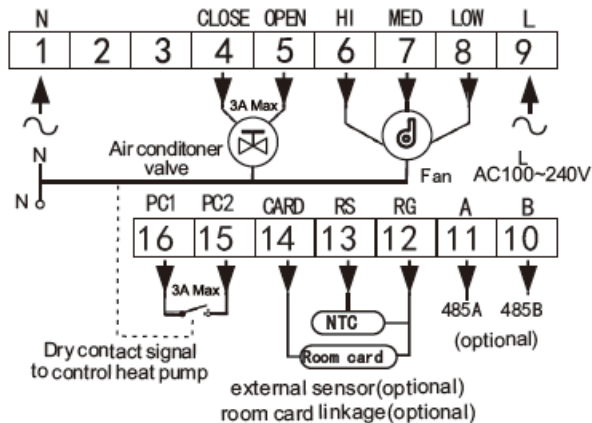

#TR9B-WIFI-AC4


#TR9B-AC4

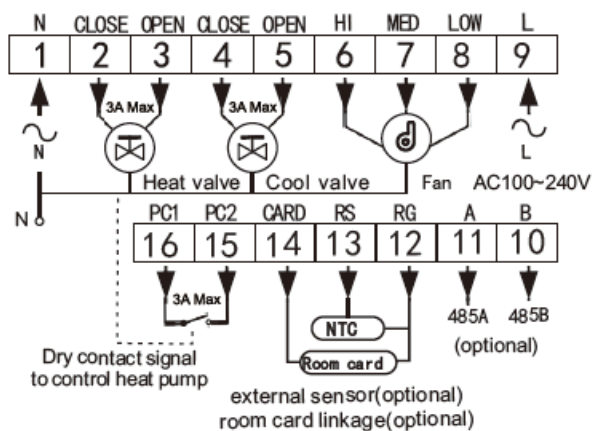


Integrated

#TR9B-WIFI-AWY

#TR9B-AWY

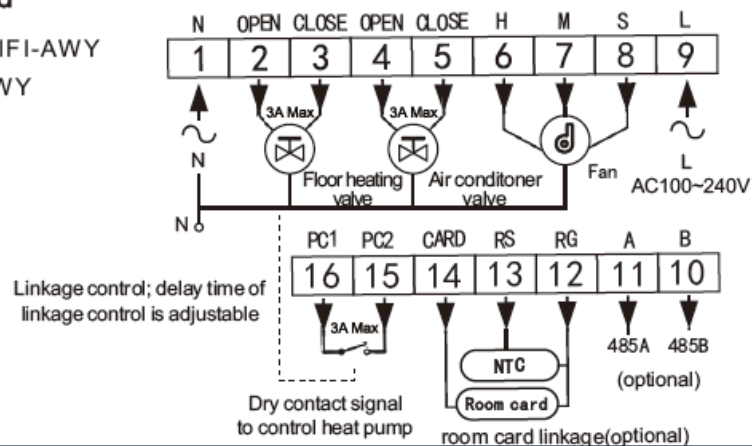

Documents / Resources

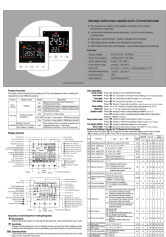

[BEOK CONTROLS TR9B Capacitive Touch LCD Smart Thermostat](#) [pdf] Owner's Manual TR9B, TR9B Capacitive Touch LCD Smart Thermostat, Capacitive Touch LCD Smart Thermostat, Touch LCD Smart Thermostat, LCD Smart Thermostat, Smart Thermostat, Thermo stat

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.