




BEOK  
BOT306RF-  
WIFI  
Thermostat



# BEOK BOT306RF-WIFI Thermostat Owner's Manual

[Home](#) » [BEOK](#) » BEOK BOT306RF-WIFI Thermostat Owner's Manual 

## Contents

- 1 BEOK BOT306RF-WIFI Thermostat
- 2 Product Information
- 3 Product Usage Instructions
- 4 Technical Parameter
- 5 Main Button Instruction
- 6 User Interface Explanation
- 7 Operation Instruction
- 8 Wiring Diagram
- 9 Installation Instruction
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts



## BEOK BOT306RF-WIFI Thermostat



## Product Specifications

- **Model:** BOT306RF-WIFI
- **Wireless Function:** Terminal Receiver
- **Wi-Fi Function:** Available

## Product Information

### Product Summary:

BOT series boiler thermostats feature an LCD digital display big screen, developed to meet market requirements. These thermostats can be wall-mounted or placed on a table. They are user-friendly, offering complete functions to control boilers, motorized ball valves, motorized valves, electric valves, solenoid valves, and more.

### Technical Parameters

- **Working Voltage:** USB type C (5V)
- **Current Load:** 3A
- **Setting Temperature Range:** 5-35°C
- **Limiting Temperature Range:** Consumption Temperature Sensor

## Product Usage Instructions

### Installation

1. Choose a suitable location for the thermostat, ensuring it is within range of the boiler and Wi-Fi signal.
2. Mount the thermostat securely on the wall or place it on a stable surface.
3. Connect the terminal receiver to the boiler system following the provided instructions.

### Operation

1. Power on the thermostat by connecting it to a USB Type C power source.
2. Set the desired temperature within the range of 5-35°C using the thermostat controls.
3. The thermostat will regulate the heating system based on the set temperature.

### Frequently Asked Questions (FAQ)

- **Q: Can the BOT306RF-WIFI thermostat be controlled remotely via a mobile app?**

A: Yes, the thermostat can be connected to a Wi-Fi network and controlled remotely using a dedicated mobile app.

- **Q: What types of valves can the BOT series thermostats control?**

A: The BOT series thermostats can control various valves including motorized ball valves, motorized valves, electric valves, and solenoid valves.

## BOT306RF-WIFI BOILER THERMOSTAT

### Product Summary:














BOT series boiler thermostats are with LCD digital display big screen, and it is developed according to market's requirements. Thermostats can be installed on the wall, or directly put on the table. This series thermostats are

easy to operate, and with complete functions. It can be used to control boilers, motorized ball valves, motorized valves, electric valves, solenoid valves, etc.


## Technical Parameter

Working Voltage	USB type C (5V)
Current Load	3A
Temperature Control Accuracy	$\pm 1^{\circ}\text{C}$ (0.5-4.5 $^{\circ}\text{C}$ adjustable)
Setting Temperature Range	5-35 $^{\circ}\text{C}$
Limiting Temperature Range	5-35 $^{\circ}\text{C}$
Consumption	<0.3W
Temperature Sensor	NTC


## Main Button Instruction

-  : ON/OFF Switch;
-  : Mode Button. Switch between  Manual Mode, Auto Period Control Mode,  Temporary Manual Mode  . Long press to enter period setting.
-  : Time Set. Hour, minute and week setting;
-  : Up Button. To increase temperature. When press it  with and  it can set programmable function;
-  : Down Button. To reduce temperature. When press it with and it  can  set programmable function;
-  : Key Lock. Long press 5 seconds to lock or unlock

## User Interface Explanation

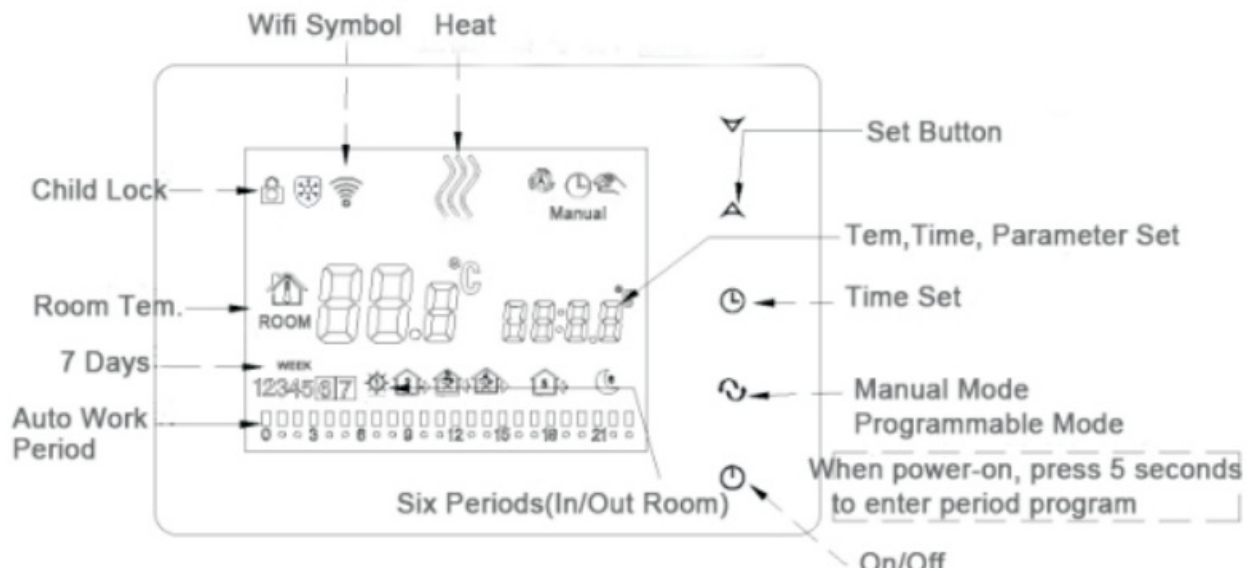

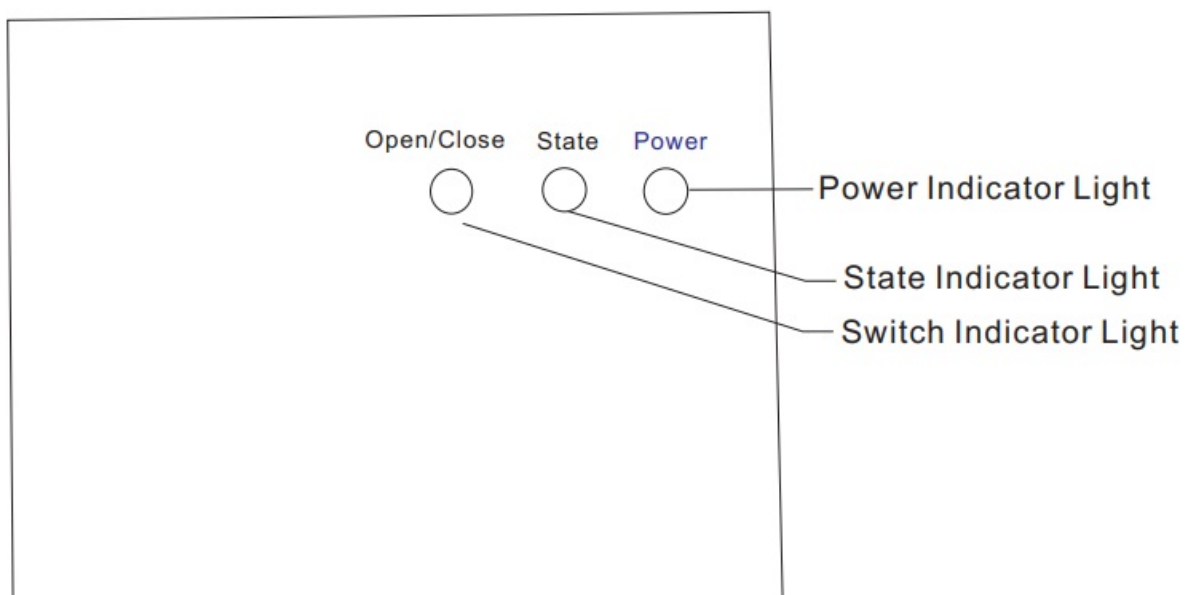


- :Manual Control :Temporary Manual Control :Auto Control.
- :Heating.
- :First Period. Wake up in the morning.
- :Second Period. Out of home in the morning.
- :Third Period. Go home in the afternoon.
- :Forth Period. Out of home in the afternoon.
- :Fifth Period. Go home in the evening
- :Sixth Period. Sleep in the evening.
- Anti-frozed function open.














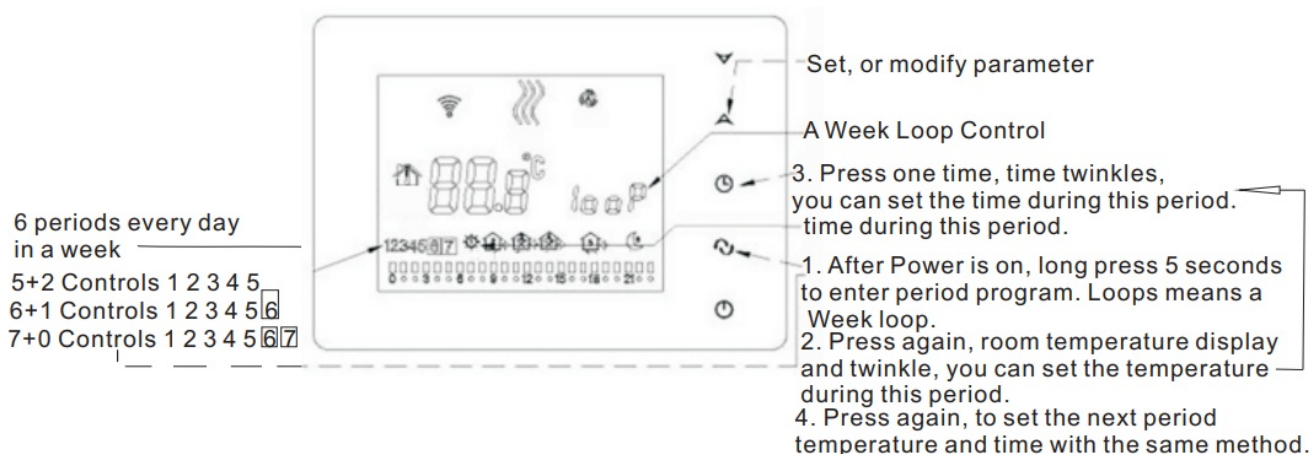

Model	Wireless Function	Terminal Receiver	Wi-Fi Function
BOT-W306			
BOT-X306	✓	✓	
BOT306RF-WIFI	✓	✓	✓









## Operation Instruction

### Time Setting

- Press , the time area will display Minute, Hour and Week, then press  or  to modify time.
- Programmable Period Temperature Setting



- First step, long press , screen display LooP(Cycling Control), screen displays 12345 (From Monday to Friday); Press  one time, it displays 123456(From Monday to Saturday); Press  two times, it displays 1234567(From Monday to Sunday);
- Second step, time and temperature setting in every period. When screen display 12345 or 123456 or 1234567, press  to enter temperature setting. Press  to enter time setting. To modify and save through  or .
- Att: When auto-control , if user needs to reset the temperature, it can be changed to temporary manual control. Temporary manual control means when thermostat is in auto-control mode(program mode), user press  or  to modify temperature setting, thermostat now is in temporary manual control state. When next periods comes, thermostat will automatically return to acquiescent period program control mode.
- Programmable Period Time Setting**
  - First press , then press  to change to time options, user can modify time in the period.
  - Default Program Data

Period		Icon	Default Time	Default Temperature
Workday	1		06:00	20℃
	2		08:00	15℃
	3		11:30	15℃
	4		12:30	15℃
Weekends	5		17:30	22℃
	6		22:00	15℃
	1		08:00	22℃
	2		23:00	15℃

• **Att:**


1. The default temperature values of 3 and 4 period in workday is same with 2 period. If user need, please change this default temperature.
2. Setting temperature is 00, it means this period is power off.


**Advanced Setting**



Firstly, press time button

Then, press power button

After entering advanced setting, press  to choose next parameter changing.

In the state of power-off, long press and hold the  press into advanced setting mode.




setting mode. Then press




to

Display Code	Function	Setting And Options	Factory Default
dIF	Limit temp. return difference	0.5-4.5℃	1℃
SVH	Set temp. upper Limit	5-35℃	35℃
SVL	Set temp. low limit	5-35℃	5℃
AdJ	Measure temp.	-5-5℃(0.5℃accuracy correction)	0.0℃
FrE	Anti-frozen	00 : Close anti-frozen 01 : Open anti-frozen	00
LOC	Button lock function	00: Unlock 01: except power switch, all buttons are locked 02: All buttons are locked	00
SNP	Set Sequence Number	00 : Close this function 01 : Open this function	0
FAC	Factory setting	08 : Just display 00 : Return to factory setting	08

## Wiring Diagram

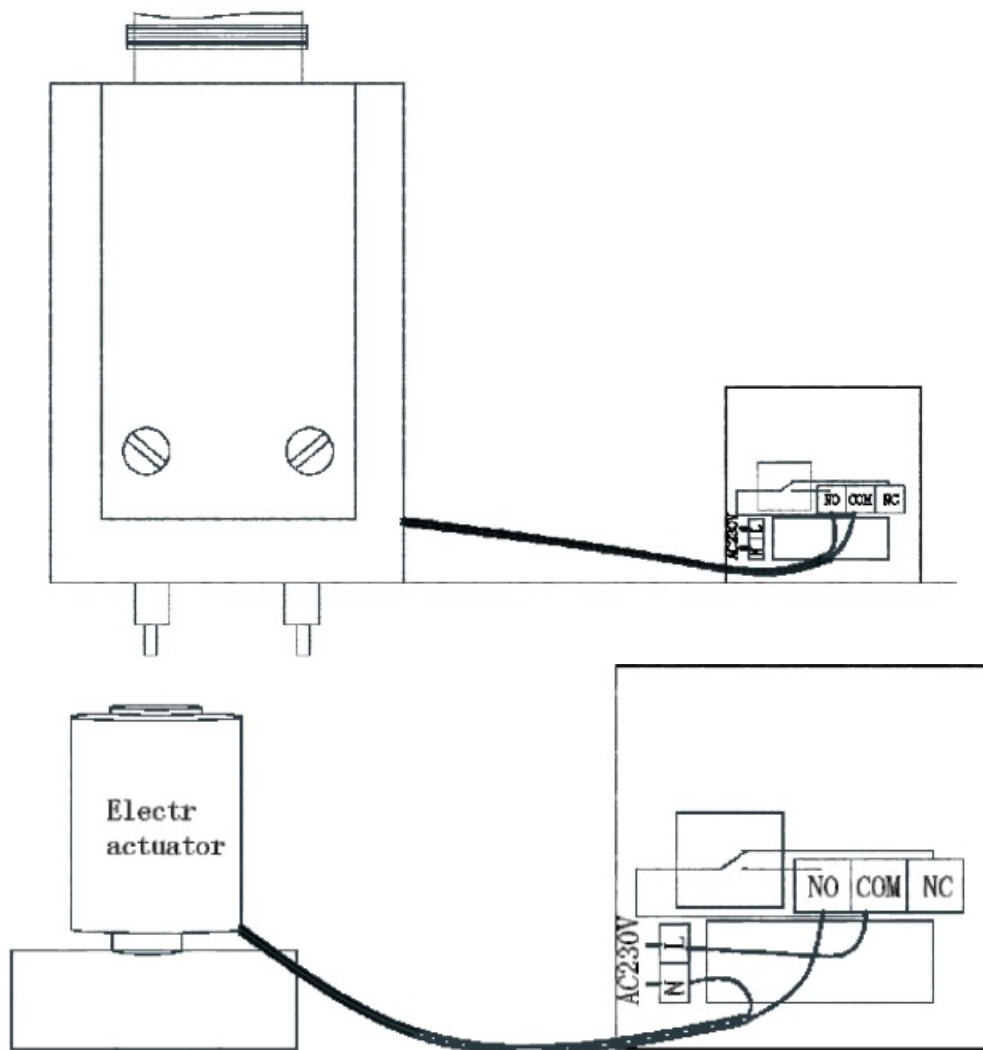

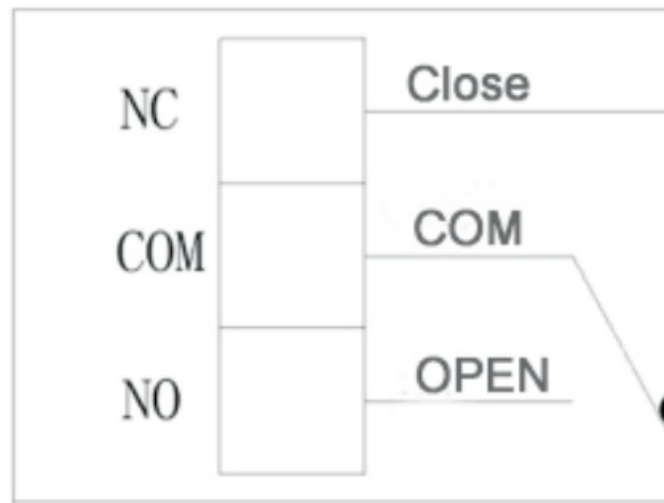

- **NC**: Normally Closed Interface (Boiler or Loading);
- **COM**: Common Interface (Boiler or external power input);
- **NO**: Normally Open Interface (Boiler or Loading);
- The button inside receiver is Reset button. When status indicator light stay on or not on, user can press reset button to resume normal work.
- **Att:**
- Installation wires should be changed to be 1.5-2.5mm<sup>2</sup> hard line.
- Please rightly connect the wires strictly according to the connect diagram. Don't make water, mud and other debris into the thermostat, otherwise it will damage the thermostat.


## WIFI Configure

### 1. Install APP on phone

- For iOS system: Login in App Store, search “ Beok RF Boiler”, you can download it on your iphone.
- For Android System: Login in Google Play, search “ Beok RFBoiler ”, you can download it on your phone.


### 2. Connection Thermostat with Phone

Thermostat Setting

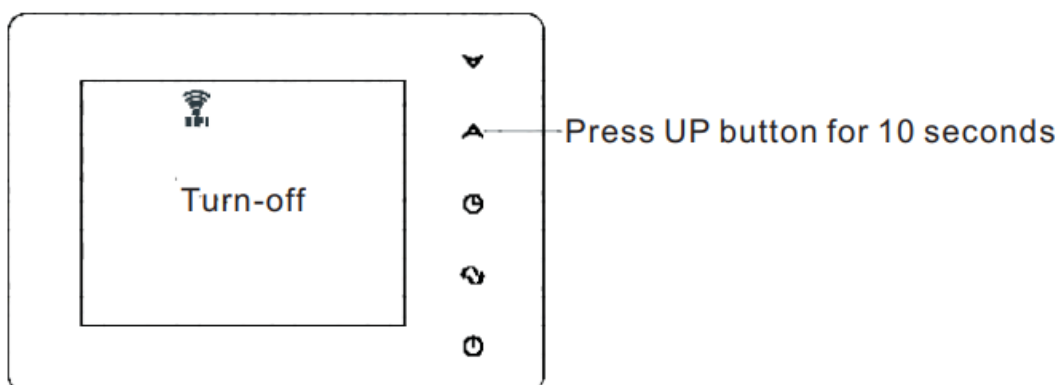


1. Download and Install APP on phone.
3. Press thermostat **▲** button for 10 seconds when thermostat is in turn-off state, then WIFI signal will appear and quickly twinkle.
4. Enter your wifi name and password, then start connection configure.



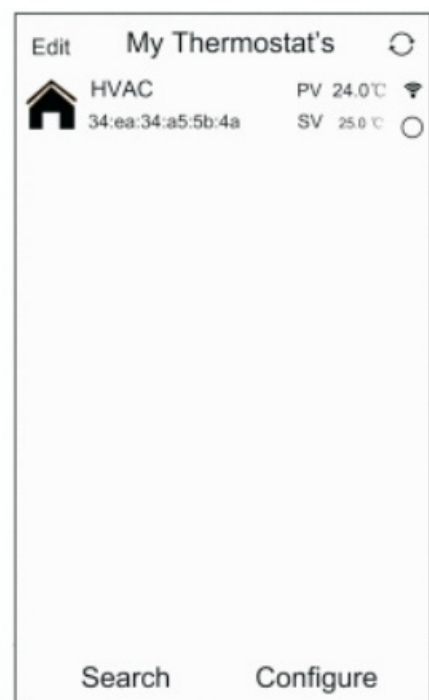



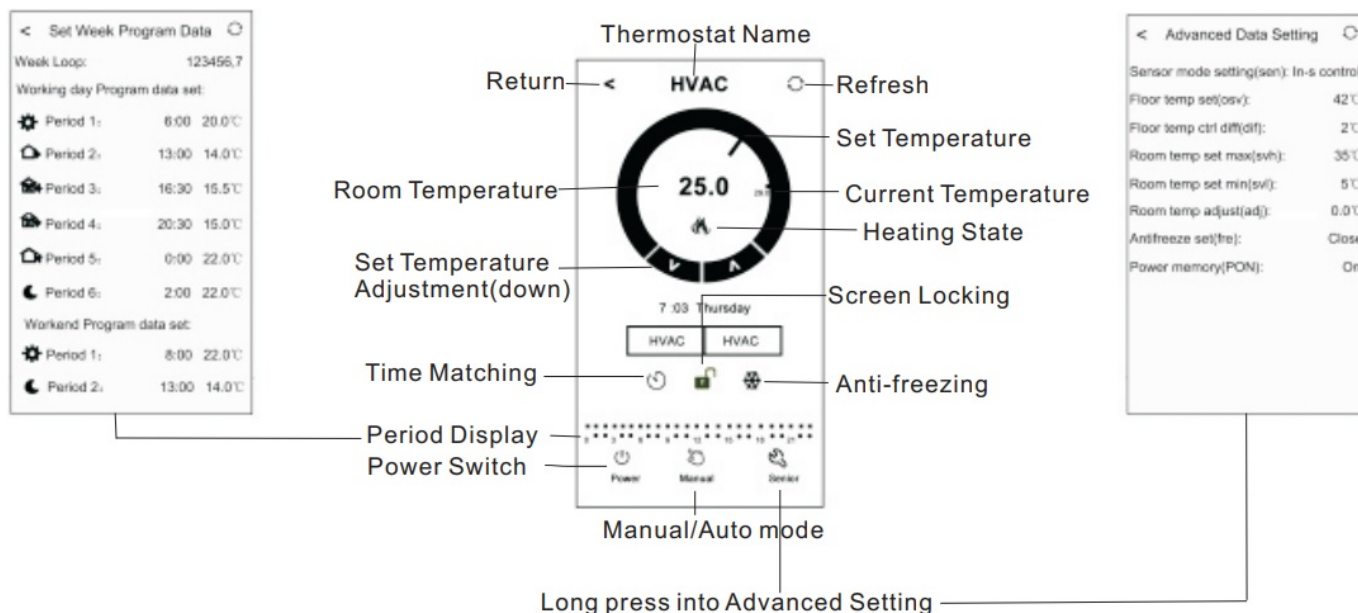








**APP Interface on the Phone**



## Thermostat Setting through Phone Operation

1. Clock : You can press Time Matching switch to match your phone clock with thermostat clock.
2. Children lock (screen locking) : Press  to lock the thermostat.
3. Anti-Freezing: Press  thermostat will show  on the screen , it means Anti-freezing function open.
4. Temperature setting: You can directly drag the pointer  on Temperature Setting Dial to set temperature.  
Or press  and  temperature step.
5. Period setting: Long press Period Display  then you will go into the Period Setting mode:
6. Advanced Setting: Long Press Senior  you will go into Advanced setting mode:
7. Switch of Manual mode and Auto mode: Press  to switch manual mode or Auto mode.
8. Power off : Press  to turn on or off thermostat.

## Installation Instruction

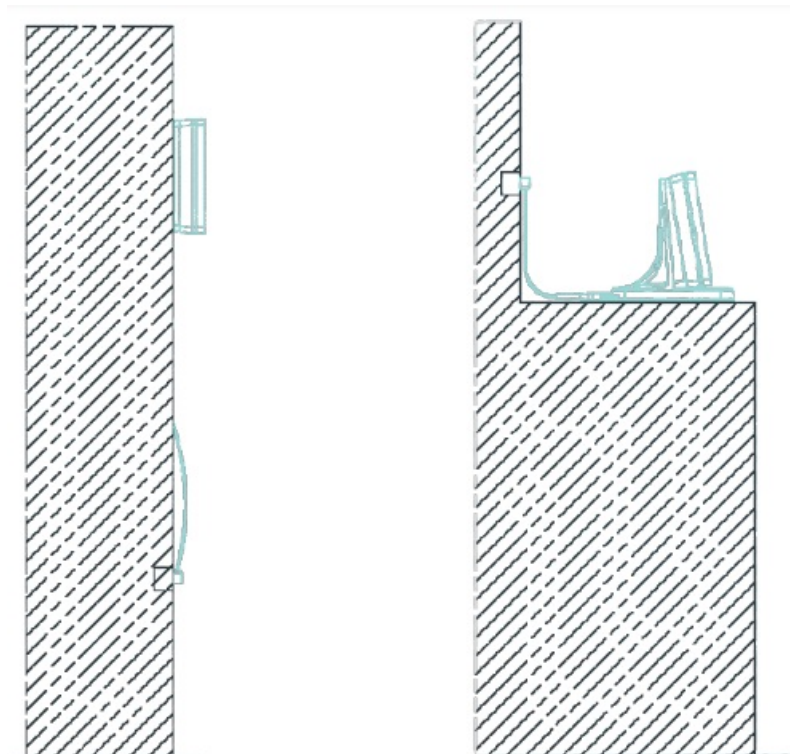


Insert the equipped USB (Type-C) connector into the charger.




## Set Sequence Number


1. Every thermostat has a matched receiver, and thermostat and receiver have a same group of sequence number. If user mix during installation, sequence number can be set through the following method. (Sequence number is unique)

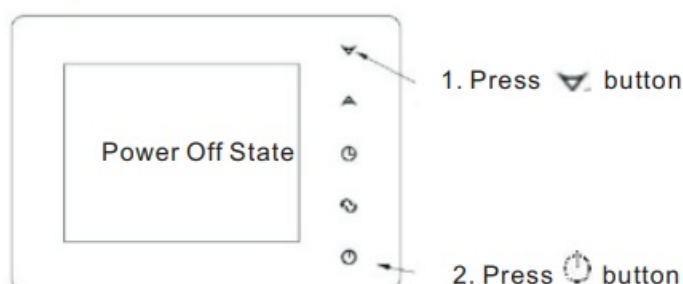


2. In Advance Setting, SNP need to be set 01. Then to set SN through the following four steps.




- The first step, press  button under power off state, then press  button, then press  button to enter parameter setting;

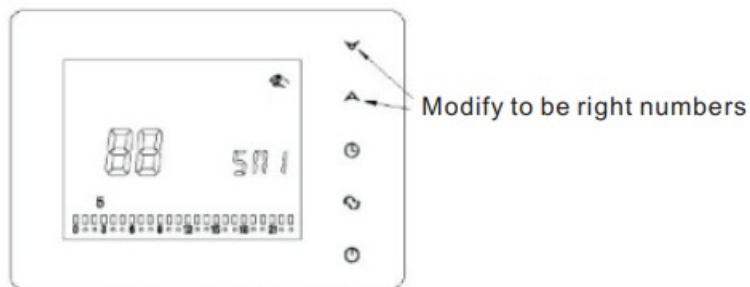

- The second step, after appearing SN1, press ▲ or ▼ to modify the number;

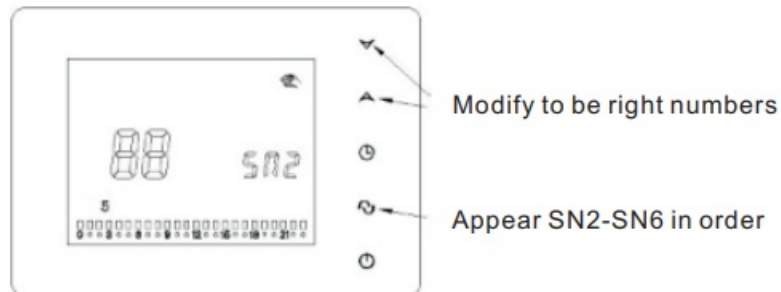

- The third step, every time pressing once ↗ , it will appear SN2, SN3, SN4, SN5 and SN6 in order. Refer to second step, press or to modify.

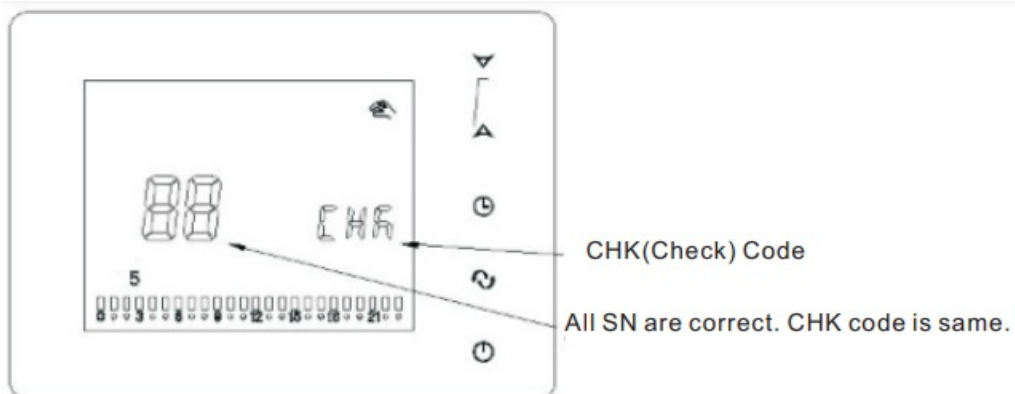

- The forth step, after SN is finished setting, if CHK Code is the same with bar code, it is correct. If not consistent, it is not correct. Please input again.

### 3. VAC: Control valves1-8 place numbers. The default value is 01.

(This setting is only useful when thermostat is applied to control Wireless Main-Control Centralize d Controller. If thermostat is used to control boiler, this setting must be 01.)


### ATT:

- Thank you for buying this product!
- Please read this manual for complete instructions on installing and operating your thermostat. If you require further assistance, please feel free to contact us.
- In the box you will find:

Model	BOT-W306	BOT-X306	BOT306RF-WIFI
Thermostat	✓	✓	✓
User Manual	✓	✓	✓
Screws	✓	✓	✓
Receiver		✓	✓
USB Cable			✓
Support Bracket			✓

#### Our Service:

- We offer the warranty of 24 months from the sales day.
- During the warranty, if it is belong to the quality issue, we will fix or replace them for you by free after test them.
- If it is not quality problem or beyond the warranty time, we will charge for the after-sales service.

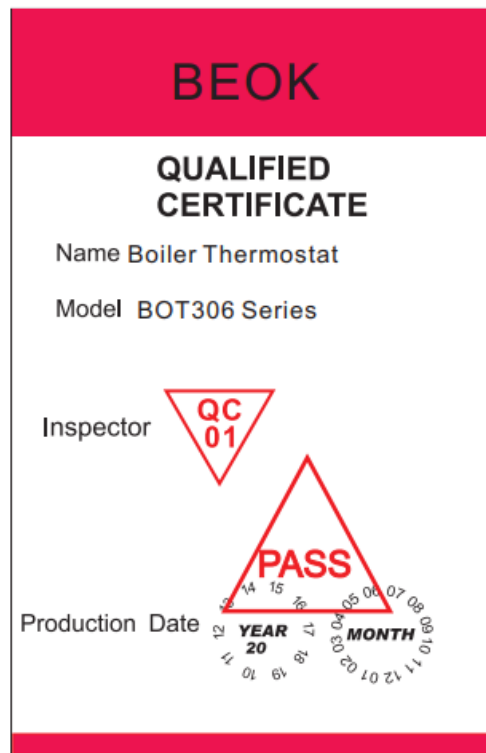


#### WARNING



- The symbol means the unit is being installed, it may cause electrical shock hazard during maintaining, so please make sure it is operated by the professional technical worker.



## Documents / Resources

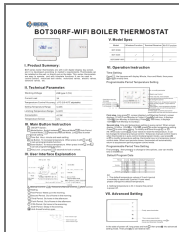

[BEOK BOT306RF-WIFI Thermostat](#) [pdf] Owner's Manual  
BOT306RF-WIFI Thermostat, BOT306RF-WIFI, Thermostat

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.