



## Contents [ [hide](#) ]

[1 CATTRON 36-10100-120I-AC Series Voltage Input Transmitters](#)

[2 DESCRIPTION](#)

[3 APPROVALS](#)

[4 INSTALLATION](#)

[5 TERMINAL STRIP WIRING](#)

[6 GENERAL OPERATION](#)

[7 CONTROLS AND INDICATORS](#)

[8 SPECIFICATIONS](#)

[9 DIMENSIONS](#)

[10 ACCESSORIES](#)

[11 LIMITED WARRANTY STATEMENT](#)

[12 Documents / Resources](#)

[12.1 References](#)

# CATTRON

## CATTRON 36-10100-120I-AC Series Voltage Input Transmitters



## DESCRIPTION

The AIR-EAGLE SR PLUS TX is an R.F. transmitter capable of sending a single 120VAC input command to an Air-Eagle SR Receiver from up to 600 feet away. Any number of transmitters and receivers can be combined to create a medium-range remote control system that operates hazardous or hard-to-reach electrical apparatus from safe, convenient locations. This unit has eight user-selectable network frequencies to allow multiple systems to operate simultaneously in the same area without interference.

## APPROVALS

- United States (FCC) MCQ-XBEE3
- Canada (IC) 1846A-XBEE3
- Europe (CE) ETSI

## INSTALLATION

DISCONNECT Power from all equipment before installation.

1. Mount the transmitter in a convenient location.
2. Install input wiring to terminal strip.
3. Install antenna onto antenna connector located on the right side on the enclosure.
4. Connect supplied power input cable to your external power source.

## TERMINAL STRIP WIRING


TER 3 VOLTAGE INPUT		TER 2 RELAY OUTPUT		TER 1 AC/DC POWER INPUT	
1	120VAC – (N)	1	Not Used	1	100-250 VAC
2	120VAC – (H)	2	Not Used	2	100-250 VAC
		3	Not Used	3	Ground

## GENERAL OPERATION

When 120VAC appears on the input the unit transmits to energize relay 1 (or another relay as selected by the channel code transmitted) in any receiver within transmit range. The signal transmits continuously as long 120VAC is present and ceases when 120VAC is removed



## CONTROLS AND INDICATORS

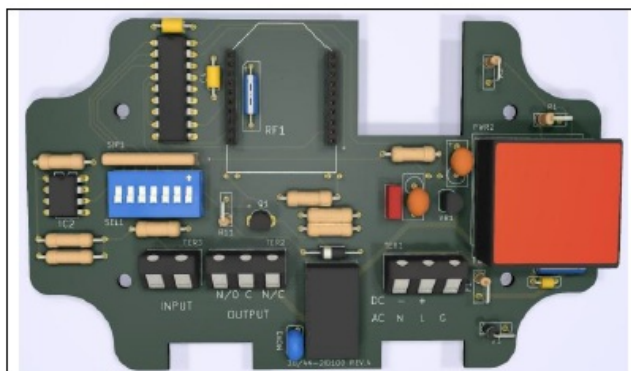

Power – LED1	Illuminates green when unit is powered
TX – LED2	Illuminates red when unit is transmitting
Relay – LED3	Not used on this model
RF1	RF module that sends data to the remote receiver
SEL1	Seven dip switches for selecting options & network frequency
TER3	Voltage input
TER2	Relay output
TER1	Power Input

## CHANNEL CODE & FREQUENCY SET-UP

The unit is shipped from the factory with all SEL1 switches in the open positions. By default, it is transmitting Channel #1 code and operating on Frequency #1. If you wish to transmit a different channel code or and/or change the frequency, follow the instructions on the table below.

1. Remove power from unit then remove back cover.
2. Select desired channel code and/or frequency using table below.
3. Reattach cover and apply power. Programming is now complete.

CHANNEL SELECTION SET-UP					
	Channel Code To Be Transmitted	SW1	SW2	SW3	SW4
	1 (default)	OPEN	OPEN	OPEN	OPEN

S  
E  
L  
1  
(  
S  
W  
1-  
4)

2	CLOSED	OPEN	OP EN	OP EN
3	OPEN	CLOSED	OP EN	OP EN
4	CLOSED	CLOSED	OP EN	OP EN
5	OPEN	OPEN	CL OS ED	OP EN
6	CLOSED	OPEN	CL OS ED	OP EN
7	OPEN	CLOSED	CL OS ED	OP EN
8	CLOSED	CLOSED	CL OS ED	OP EN
9	OPEN	OPEN	OP EN	CL OS ED
10	CLOSED	OPEN	OP EN	CL OS ED
11	OPEN	CLOSED	OP EN	CL OS ED

12	CLOSED	CLOSED	OP EN	CL OS ED
13	OPEN	OPEN	CL OS ED	CL OS ED
14	CLOSED	OPEN	CL OS ED	CL OS ED
15	OPEN	CLOSED	CL OS ED	CL OS ED
16	CLOSED	CLOSED	CL OS ED	CL OS ED

**FREQUENCY SET-UP**

	Network Frequency	SW5	SW6	SW 7
	1 (default)	OPEN	OPEN	OP EN
	2	CLOSED	OPEN	OP EN
	3	OPEN	CLOSED	OP EN
	4	CLOSED	CLOSED	OP EN


SEL1 (SW5-7)	5	OPEN	OPEN	CLOSED
	6	CLOSED	OPEN	CLOSED
	7	OPEN	CLOSED	CLOSED
	8	CLOSED	CLOSED	CLOSED

## SPECIFICATIONS

Power Input	100-250 VAC, 5 W, 50/60 Hz
Transmitter Frequency	2.4 GHz Spread Spectrum
RF Output Power	60 mW
Transmit Range	Up to 600 Feet
<p>Note: Max range figures are estimates, based on free-air terrain with limited sources of interference. Actual range will vary based on transmitting power, orientation of transmitter and receiver, height of transmitting antenna, height of receiving antenna, weather conditions, interference sources in the area, and terrain between receiver and transmitter, including, but not limited to, indoor and outdoor structures such as walls, metal objects, trees, buildings, hills, and mountains.</p>	
RF Networks	Eight Independent Frequencies

Antenna Connection	TNC Female Connector
Operating Temperature	-40° F to +185° F
Enclosure	Polycarbonate NEMA 4, 12, 13 – IP66
Weight	Approx 2 lbs.

## DIMENSIONS

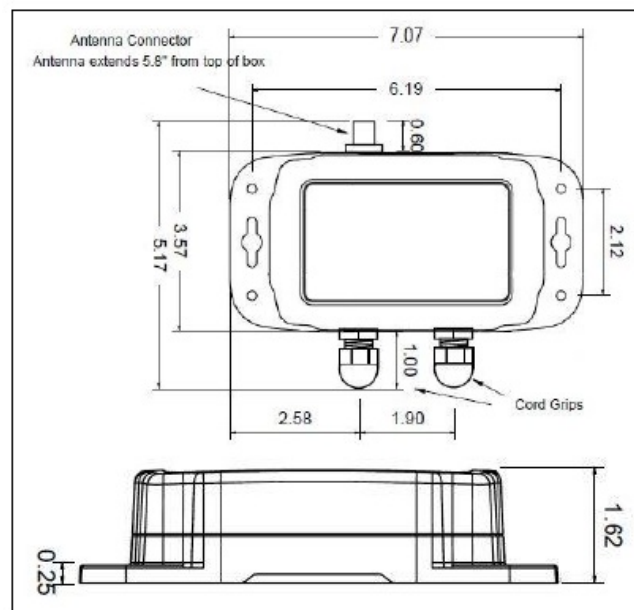

## ACCESSORIES

Standard Antenna (Included):	
2.4GHz TNC "Rubber Duck" Antenna	49-1201
Mobile/Base Antennas –  Used to help achieve max range in both non line of sight and line of sight applications. – Contact BWI Eagle for recommendations	
2.4GHz Thru-Hole Mount Mobile Antenna	49-2201
2.4GHz Magnet Mount Mobile Antenna	49-2202



2.4GHz Omni Directional Base Antenna	49-3201
2.4GHz Yagi Directional Base Antenna	49-3202
High Quality Coax Cables –  Used to connect external high gain antennas to control unit	
Flex Coax Cable w/Connectors – Available in  5',15',25',30',40',60',80',100' Lengths	49-4000-XX (XX = # of  Feet)
Bulkhead Extensions –  Used to provide an external antenna connection when mounting control unit inside an other enclosure	
TNC Male to TNC Bulkhead Cable Assembly –  Available in 2', 4', 7' Lengths	49-5004-X-ISO  (X = # of Feet)


## LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond

those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 07/21/2021 / PRODUCT REV. 5

## Documents / Resources

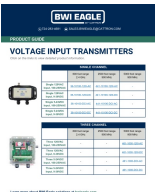	<p><a href="#">CATTRON 36-10100-120I-AC Series Voltage Input Transmitters [pdf]</a></p> <p>User Guide</p> <p>36-10100-120I-AC, 36-10100-120I-DC, 36-10100-DCI-AC, 36-10100-DCI-DC, 441-10100-120I-AC, 441-10100-120I-DC, 441-10100-DCI-AC, 441-10100-DCI-DC, 36-10100-120I-AC Series Voltage Input Transmitters, 36-10100-120I-AC Series, Voltage Input Transmitters, Input Transmitters, Transmitters</p>
--	--

## References

- [User Manual](#)

■ CATTRON

◆ 36-10100-120I-AC, 36-10100-120I-AC Series, 36-10100-120I-AC Series Voltage Input Transmitters, 36-10100-120I-DC, 36-10100-DCI-AC, 36-10100-DCI-DC, 441-10100-120I-AC, 441-10100-120I-DC, 441-10100-DCI-AC, 441-10100-DCI-DC, CATTRON, Input Transmitters, Transmitters, Voltage Input Transmitters

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.