



CISCO CG113-W6B Catalyst Wireless Gateways Installation Guide

[Home](#) » [Cisco](#) » CISCO CG113-W6B Catalyst Wireless Gateways Installation Guide 

Contents

- 1 CISCO CG113-W6B Catalyst Wireless Gateways
- 2 Product Information
- 3 Product Usage Instructions
- 4 Frequently Asked Questions (FAQ)
- 5 INTRODUCTION
- 6 Overview
 - 6.1 Cisco Catalyst Wireless Gateway CG113-W6
 - 6.2 Cisco Catalyst Wireless Gateway CG113-4GW6
- 7 Safety Guidelines and Warnings
- 8 Install Cisco Catalyst Wireless Gateways
- 9 Connect Devices
- 10 Declarations of Conformity and Regulatory Information
 - 10.1 USA Conformity and Regulatory Information
 - 10.2 Canada Conformity and Regulatory Information
 - 10.3 European Community and UK Conformity and Regulatory Information
 - 10.4 RF Exposure, Additional Information
- 11 Additional References
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts





Product Information

Specifications

- **Product Name:** Cisco Catalyst Wireless Gateway
- **Model:** CG113-W6 / CG113-4GW6
- **Manufacturer:** Cisco Systems, Inc.
- **First Published:** 2023-01-16
- **Last Modified:** 2023-08-17

Hardware Installation Guide

This guide provides instructions for installing the Cisco Catalyst Wireless Gateway hardware components.

Package Contents

The package includes the Cisco Catalyst Wireless Gateway unit, power supply, antennas, and necessary cables.

Hardware Specifications

- Ethernet Interfaces
- Power Port
- Reset Button
- SIM Card Slots (CG113-4GW6 only)
- LED Indicators
- Antenna Information
- Power Supply

LED Indicators

The LED indicators on the gateway provide status information such as power, network connectivity, and activity.

Antenna Information

The antennas included with the gateway are designed to optimize wireless signal strength and coverage.

Power Supply

The power supply provided with the gateway ensures proper and reliable operation.

Product Usage Instructions

Installation Steps

1. Connect the Ethernet cable from your network to the gateway's Ethernet port.
2. Plug in the power supply to the gateway and a power source.
3. If applicable (CG113-4GW6), insert the SIM card into the designated slot.
4. Power on the gateway by pressing the power button or connecting the power supply.

Configuration

Access the gateway's management interface via a web browser to configure network settings, wireless parameters, and security options.

Troubleshooting

If you encounter any issues with the gateway, refer to the troubleshooting section of the user manual for guidance on resolving common problems.

Frequently Asked Questions (FAQ)

- **How do I reset the gateway to factory settings?**

To reset the gateway to factory settings, locate the reset button on the device and press and hold it for at least 10 seconds until the LED indicators flash.

- **Can I use third-party antennas with the Cisco Catalyst Wireless Gateway?**

It is recommended to use antennas provided by Cisco to ensure optimal performance and compatibility. The use of third-party antennas may affect wireless signal quality.

INTRODUCTION

- THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.
- THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.
- The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.
- NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF

THESE SUPPLIERS ARE PROVIDED “AS IS” WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

- IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.
- All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.
- Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.
- Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)
- © 2023 Cisco Systems, Inc. All rights reserved.

Overview

- Cisco Catalyst Wireless Gateways extend an enterprise network to remote workers, providing numerous advantages:
 - Hardware-based stable connectivity to an enterprise VPN
 - Optimized network performance with Wi-Fi 6
 - Cellular network connectivity, in supporting models, providing a cellular internet connection (with one active and one standby SIM) for uninterrupted internet connectivity
 - Separate service set identifiers (SSIDs) for connecting work and personal devices
- Cisco Catalyst Wireless Gateway connectivity is as follows:
 - The Cisco Catalyst Wireless Gateway CG113-W6 accesses the internet using a wired WAN connection at a remote site.
 - The Cisco Catalyst Wireless Gateway CG113-4GW6 accesses the internet using a wired WAN connection at a remote site or using a cellular link. The device supports two SIM cards: one active, and one on standby. If the wired WAN connection fails, the device fails over to the cellular link to ensure internet connectivity.

Note

The device has a single cellular connection, so only one SIM can be active at a given time. You can configure which of the two SIM slots serves as primary and which serves as secondary (failover).

The following sections provide hardware specifications and other information about the Cisco Catalyst Wireless Gateway CG113-W6.

Package Contents

The package for this device contains the following:

- Device chassis
- Power supply
- Pointer card, providing a link to the product documentation

Hardware Specifications

Item	Specifications
Interfaces	
2.5 Gigabit ethernet	1
1 Gigabit ethernet	2
Wi-Fi	
Wi-Fi bands	2.4 GHz, 5 GHz
Antennas	Dual 2×2 MIMO (internal)
Cellular	
None	
Operating Conditions	
Temperature	0°C to 45°C (32°F to 113°F)
Humidity	10 to 90% RH Non-condensing
Altitude	3000 m (10,000 ft)
Storage Conditions	
Temperature	-25°C to 70°C (-13°F to 158°F)
Humidity	5 to 95% RH Non-condensing
Altitude	4570 m (15,000 ft)

Power	
Power adapter	12V, 3A maximum Models, according to region: CG113-4G-PWR-US, -EU, -AU
Power connector	USB-C
Mounting and Accessories	
The device is installed on a desk or other flat surface. No additional mounting equipment is supplied.	

Ethernet Interfaces, Power Port, and Reset Button

The ethernet interfaces, power port, and reset button are located on the back panel of the device

Figure 1: Back Panel


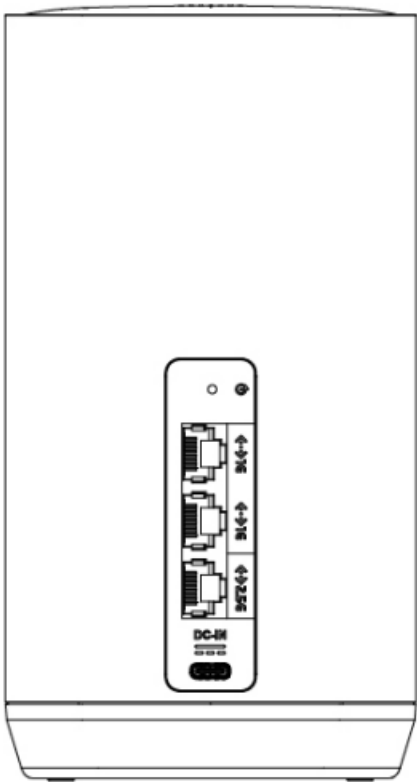


Figure 2: Reset Button, Interfaces, and Power Port

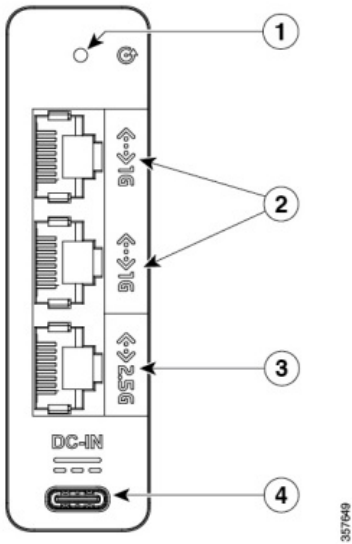

1	Reset button
2	1 Gbps ethernet interfaces
3	2.5 Gbps ethernet interface
4	USB-C power port

LED Indicators

The single LED indicator appears on the front panel of the device.

Figure 3: Front Panel


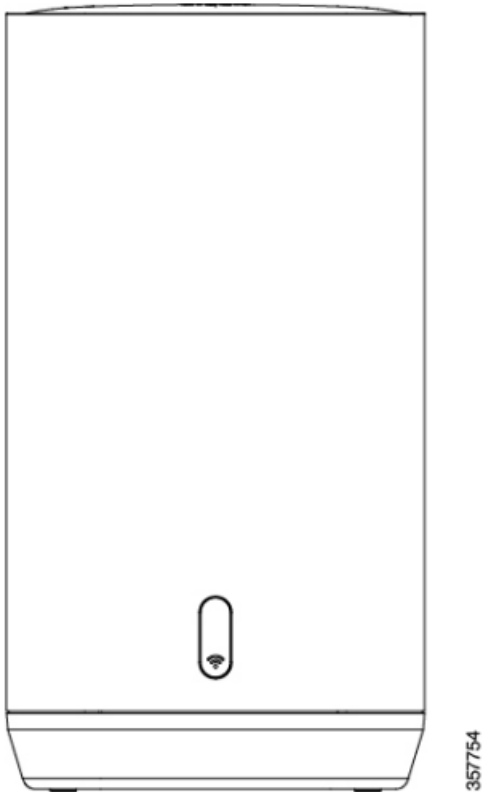


Figure 4: LED Indicator on Front Panel

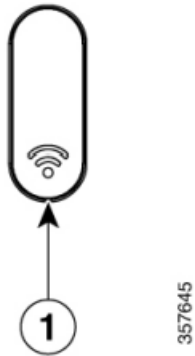

1	LED indicator for Wi-Fi connectivity
---	--------------------------------------

Table 2: LED Indicator Behavior

LED	Color	Description
Wi-Fi	Red, blinking	Device is booting
	Red, solid	Wi-Fi not ready
	Green, solid	Wi-Fi ready, no devices connected
	Blue, solid	Wi-Fi ready, one or more devices connected

Antenna Information

- Antennas, Gain, and Impedance

Table 3: List of Internal Antennas Supported on Cisco CG113-W6

Antenna Type	Antenna Gain	Antenna Impedance
Antenna type: Wi-Fi Single-Port/Dual Band/Omni-directional (Linear Polarization, Wi-Fi 1)	2.4GHz: 4dBi 5GHz: 5dBi	50 ohms
Antenna type: Wi-Fi Single-Port/Dual Band/Omni-directional (Linear Polarization, Wi-Fi 2)	2.4GHz: 2.6dBi 5GHz: 4.8dBi	50 ohms

• **Maximum Transmitted Power**

The frequency and the maximum transmitted power are listed below:

- 2412-2472MHz: 19.99 dBm
- 5180-5240MHz: 22.92 dBm
- 5260-5320MHz: 22.95 dBm
- 5500-5700: 29.97 dBm

Power Supply

The following power supplies are included with the device, depending on region.

Table 4: Power Supply Part and Model Numbers, by Region

Region	Cisco Part Number	Model Number
USA	CG113-4G-PWR-US	ADH-36DW B
Australia	CG113-4G-PWR-AU	ADH-36DW E
EU, UK	CG113-4G-PWR-EU	ADH-36DW C

Table 5: Power Supply Specifications

Specification	Description
Input	100-240V AC 50-60Hz

Cisco Catalyst Wireless Gateway CG113-4GW6

The following sections provide hardware specifications and other information about the Cisco Catalyst Wireless Gateway CG113-4GW6.

Package Contents

The package for this device contains the following:

- Device chassis
- Power supply

- Pointer card, providing a link to the product documentation

Hardware Specifications

Table 6: Hardware Specifications, Cisco Catalyst Wireless Gateway CG113-4GW6

Item	Specifications
Interfaces	
2.5 Gigabit ethernet	1
1 Gigabit ethernet	2
Wi-Fi	
Wi-Fi bands	2.4 GHz, 5 GHz
Antennas	Dual 2x2 MIMO (internal)
Cellular	
SIM slots	2
Cellular bands	4G/Cat7
Operating Conditions	
Temperature	0°C to 45°C (32°F to 113°F)
Humidity	10 to 90% RH Non-condensing
Altitude	3000 m (10,000 ft)
Storage Conditions	
Temperature	-25°C to 70°C (-13°F to 158°F)
Humidity	5 to 95% RH Non-condensing
Altitude	4570 m (15,000 ft)
Power	
Power adapter	12V, 3A maximum Models, according to region: CG113-4G-PWR-US, -EU, -AU
Power connector	USB-C
Mounting and Accessories	
The device is installed on a desk or other flat surface. No additional mounting equipment is supplied.	

Ethernet Interfaces and Power Port

The ethernet interfaces, power port, and reset button are located on the back panel of the device.

Figure 5: Back Panel


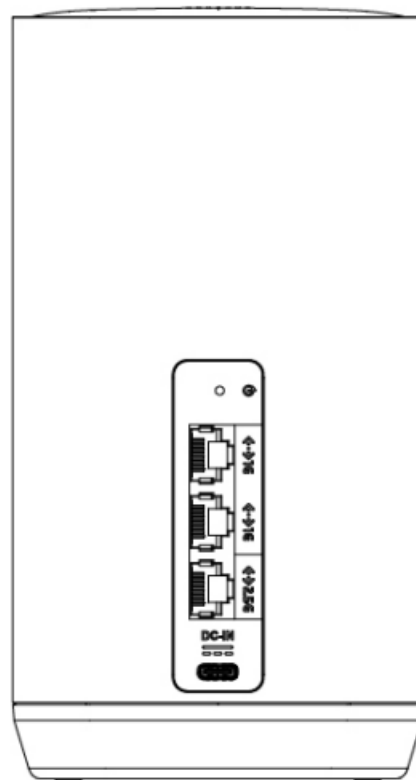


Figure 6: Reset Button, Interfaces, and Power Port

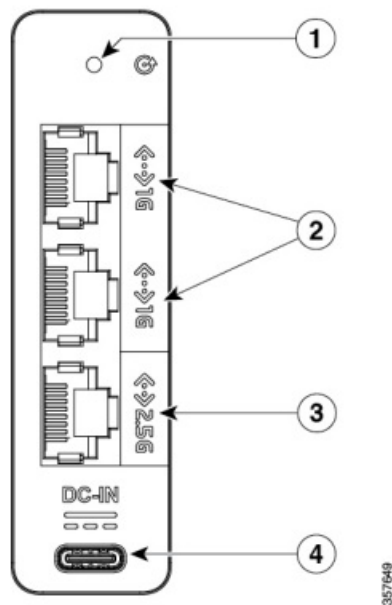


1	Reset button
2	1 Gbps ethernet interfaces
3	2.5 Gbps ethernet interface
4	USB-C power port

SIM Card Slots


The SIM card slots are accessible from the bottom panel of the device. For information about installing SIM cards, see *Install SIMs, LTE Models*, on page 20.

Figure 7: Bottom Panel

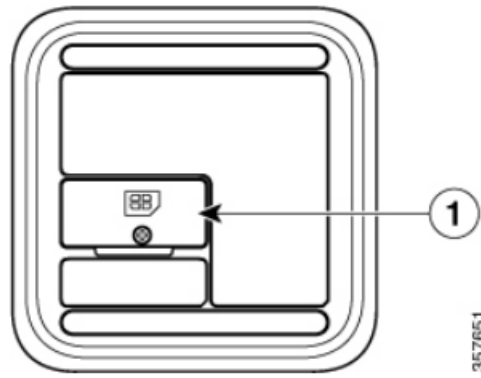


1	Cover for SIM card slots
---	--------------------------

Figure 8: SIM Card Slots, with the Cover Removed

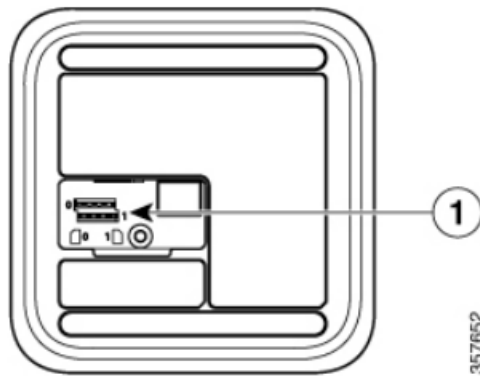

1	SIM card slots 0 and 1
---	------------------------

Figure 9: SIM Card Slots

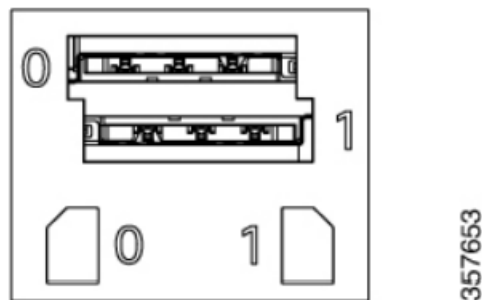

LED Indicators

The LED indicators appear on the front panel of the device.

Figure 10: Front Panel


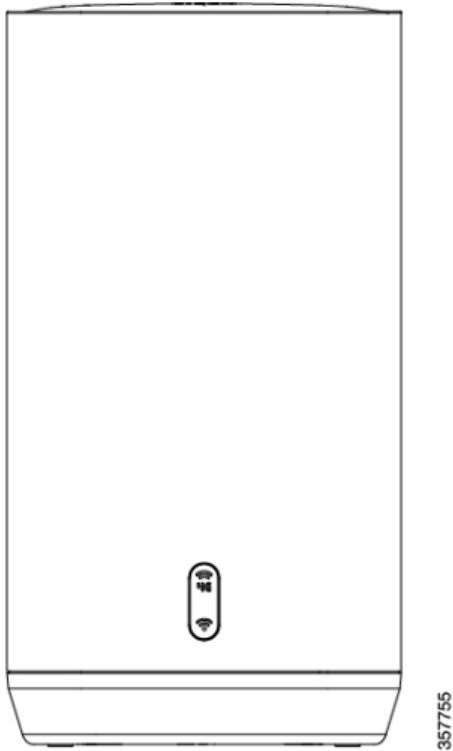


Figure 11: LED Indicators on Front Panel

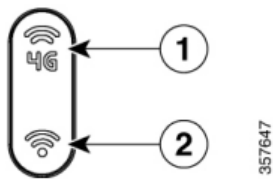

1	LED indicator for cellular connectivity
2	LED indicator for Wi-Fi connectivity

Table 7: LED Indicator Behavior

LED	Color	Description
Wi-Fi	Red, blinking	Device is booting
	Red, solid	Wi-Fi not ready
	Green, solid	Wi-Fi ready, no devices connected
	Blue, solid	Wi-Fi ready, one or more devices connected
	Green, blinking	Firmware upgrade in progress

4G	Red, blinking	Device is booting
	Red, solid	Completed boot, no SIM detected, not connected to network
	Green, solid	SIM detected, connected to network, wired connection is active and cellular connection is standby
	Green, blinking	Firmware upgrade in progress
	Blue, blinking	SIM detected, connected to network, cellular connection is active, weak signal
	Blue, solid	SIM detected, connected to network, cellular connection is active, strong signal

Antenna Information

• Antennas, Gain, and Impedance

Table 8: List of Internal Antennas Supported on Cisco CG113-4GW6 (Includes LTE)

Antenna Type	Antenna Gain	Antenna Impedance
Antenna type: Wi-Fi Single-Port/Dual Band/Omni-directional (Linear Polarization, Wi-Fi 1)	2.4GHz: 4dBi 5GHz: 5dBi	50 ohms
Antenna type: Wi-Fi Single-Port/Dual Band/Omni-directional (Linear Polarization, Wi-Fi 2)	2.4GHz: 2.6dBi 5GHz: 4.8dBi	50 ohms
Antenna type: LTE Single-Port/LTE Full Band/Omni-directional (Mixed Polarization, LTE Main)	617-960MHz: 2.1dBi 1710-2700MHz: 4.1dBi 3300-3800MHz: 3.6dBi	50 ohms
Antenna type: LTE Single-Port/LTE Full Band/Omni-directional (Vertical Polarization, LTE Auxiliary)	617-960MHz: 2.1dBi 1710-2700MHz: 4.1dBi 3300-3800MHz: 3.6dBi	50 ohms

• Maximum Transmitted Power

The frequency and the maximum transmitted power are listed below:

- 2412-2472MHz: 19.99 dBm
- 5180-5240MHz: 22.92 dBm
- 5260-5320MHz: 22.95 dBm

- 5500-5700: 29.97 dBm

Power Supply

The following power supplies are included with the device, depending on region.

Table 9: Power Supply Part and Model Numbers, by Region

Region	Cisco Part Number	Model Number
USA	CG113-4G-PWR-US	ADH-36DW B
Australia	CG113-4G-PWR-AU	ADH-36DW E
EU, UK	CG113-4G-PWR-EU	ADH-36DW C

Table 10: Power Supply Specifications

Specification	Description
Input	100-240V AC 50-60Hz

Safety Guidelines and Warnings

Statement 1071—Warning Definition

WARNING

- IMPORTANT SAFETY INSTRUCTIONS
- Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Read the installation instructions before using, installing, or connecting the system to the power source. Use the statement number provided at the end of each warning statement to locate its translation in the translated safety warnings for this device.

SAVE THESE INSTRUCTIONS

Statement 407—Japanese Safety Instruction

NOTE

- You are strongly advised to read the safety instruction before using the product.
<https://www.cisco.com/web/JP/techdoc/pldoc/pldoc.html>
- When installing the product, use the provided or designated connection cables/power cables/AC adapters.

〈製品仕様における安全上の注意〉

www.cisco.com/web/JP/techdoc/index.html

接続ケーブル、電源コードセット、ACアダプタ、バッテリーなどの部品は、必ず添付品または指定品をご使用ください。添付品・指定品以外をご使用になると故障や動作不良、火災の原因となります。また、電源コードセットは弊社が指定する製品以外の電気機器には使用できないためご注意ください。

Statement 1004—Installation Instructions

Warning Read the installation instructions before using, installing, or connecting the system to the power source.

Statement 1033—Safety Extra-Low Voltage (SELV)—IEC 60950/ES1—IEC 62368 DC Power Supply

Warning To reduce risk of electric shock, connect the unit only to a DC power source that complies with the SELV requirements in IEC 60950-based safety standards or ES1 requirements in IEC 62368-based safety standards.

Statement 1047—Overheating Prevention

Warning To reduce the risk of fire or bodily injury, do not operate the unit in an area that exceeds the maximum recommended ambient temperature of: 45°C.

Statement 1074—Comply with Local and National Electrical Codes


Warning To reduce risk of electric shock or fire, installation of the equipment must comply with local and national electrical codes.

Install Cisco Catalyst Wireless Gateways

Device Placement

- Place the Cisco Catalyst Wireless Gateway on a flat surface, with access to a household power outlet and to an ethernet connection providing internet connectivity. The device has two rubber pads for resting on a desk or shelf. No special hardware is required for mounting.
- The dimensions of the device are shown in the following illustration.

Figure 12: Product Dimensions

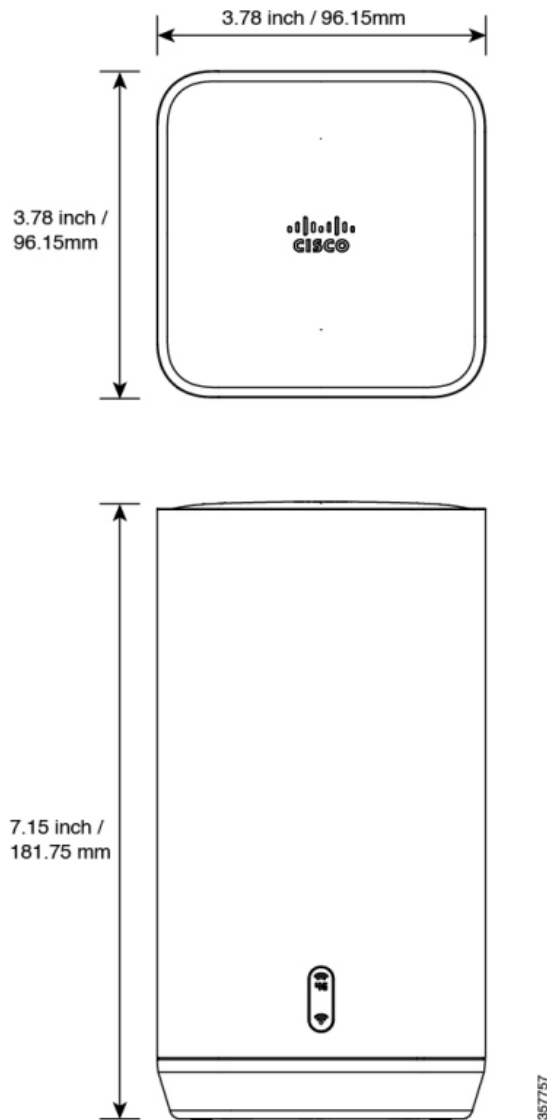

Install SIMs, LTE Models

For LTE models, install one or two SIM cards to provide cellular connectivity. For an illustration of the SIM card slots, see SIM Card Slots.

- **Required Equipment**

Small Phillips-head screwdriver

- **Install SIMs**

1. On the bottom of the Cisco Catalyst Wireless Gateway, open the cover for the SIM slots using the a small Phillips-head screwdriver.
2. Install either one (1) or two (2) SIM cards in the two slots, marked 0 and 1.
If you are installing two SIM cards, make note of which SIM card you place in each slot. This information is required during configuration of the two slots as primary and secondary.
3. Replace the cover for the SIM slots.

Power

- Connect the power adapter to an household power outlet, and connect its cable to the USB-C port on the back of the Cisco Catalyst Wireless Gateway.

- Ensure that the power cable is properly secured.

Data Connections

Ensure that any data cables connected to the device are properly secured.

Table 11: Data Connections

Connection	Description
Internet	Connect the device to a WAN providing internet access, using the 2.5 Gbps ethernet interface.

Connect Devices

Ensure that any data cables connected to the device are properly secured.

Table 12: Connections

Connection	Description
Non-corporate wired LAN	To connect a non-corporate device, such as a personal laptop, by wired ethernet, connect it to the 1 Gbps ethernet interface that your organization has configured for general, non-corporate use. For information about which interface this is, contact your organization.
Corporate Wi-Fi	To connect your corporate device, such as a work laptop, by Wi-Fi, connect it to the Wi-Fi SSID that your organization has configured for corporate use. For information about which SSID this is, contact your organization.
Non-corporate Wi-Fi	To connect your non-corporate device, such as a work laptop, by Wi-Fi, connect it to the Wi-Fi SSID that your organization has configured for general, non-corporate use. For information about which SSID this is, contact your organization.

Declarations of Conformity and Regulatory Information

USA Conformity and Regulatory Information

Manufacturers Federal Communication Commission Declaration of Conformity Statement

- FCC Mark



- Certifications

Model	Certification Number
CG113-W6B	(Wi-Fi): LDKCG1132477
CG113-4GW6B	(Wi-Fi): LDKCG1132477 (LTE): N7NEM74B

- **Manufacturer**

Cisco Systems, Inc. 170 West Tasman Drive, San Jose, CA 95134-1706 USA

- **Compliance**

- This device complies with Part 15 rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference.
 2. This device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and radiates radiofrequency energy, and if not installed and used according to the instructions, it may cause harmful interference. Hence, professional installation is recommended. However, there is no guarantee that interference will not occur. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one of the following measures:
 - Reorient or relocate the receiving antenna
 - Increase separation between the equipment and receiver
 - Connect the equipment to an outlet on a circuit different from which the receiver is connected
 - Consult the dealer or an experienced radio/TV technician

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter. For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible. FCC regulations restrict the operation of this device to indoor use only. The operation of this device is prohibited on oil platforms, cars, trains, boats, and aircraft, except that operation of this device is permitted in large aircraft while flying above 10,000 feet. Operation of transmitters in the 5.925-7.125 GHz band is prohibited for control of or communications with unmanned aircraft systems.

- **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 44cm between the radiator and your body.

Canada Conformity and Regulatory Information

Canada Compliance Statement

- **Certifications**

Model	Certification Number
CG113-W6A	(Wi-Fi): 2461N-CG1132477
CG113-4GW6A	(Wi-Fi): 2461N-CG1132477 (LTE): 2417C-EM74B

- **Manufacturer**

Cisco Systems, Inc. 170 West Tasman Drive, San Jose, CA 95134-1706 USA

- **Product Use**

- For indoor use only.
- The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
- The transmitter module may not be co-located with any other transmitter or antenna.
- For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

- **IC Radiation Exposure Statement**

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 25cm between the radiator and your body.

- **License-Exempt Transmitters/Receivers**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

European Community and UK Conformity and Regulatory Information

European Community, Switzerland, Norway, Iceland, and Liechtenstein Compliance

- **CE Mark**

The product carries the CE Mark:



- **Models**

- CG113-W6E

- CG113-4GW6E

- **Manufacturer**

Cisco Systems, Inc. 125 West Tasman Drive, San Jose, CA 95134-1706 USA

- **Importer**

Cisco Systems, Inc. 125 West Tasman Drive, San Jose, CA 95134-1706 USA

- **Product Use**

The device is restricted to indoor use only.

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm (7.87 inches) between the radiator & your body.

Note: This equipment is intended to be used in all EU and EFTA countries. Outdoor use may be restricted to certain frequencies and/or may require a license for operation. For more details, contact Cisco Corporate Compliance.

- **Maximum Transmitted Power**

The frequency and the maximum transmitted power in EU are listed below:

- **2412-2472MHz:** 19.99 dBm
- **5180-5240MHz:** 22.92 dBm
- **5260-5320MHz:** 22.95 dBm
- **5500-5700:** 29.97 dBm

- **Declaration of Conformity**

- Hereby, Cisco Systems, Inc. declares that the radio equipment type CG113-4GW6E, CG113-W6E is in compliance with Directive 2014/53/EU.
- The full text of the EU declaration of conformity is available at the following internet address:

<https://www.cisco.com/web/dofc/EU89192.pdf>

- **European Community and UK Radiation Exposure Statement**

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body

United Kingdom Compliance

- **UKCA Mark**



- **Models**

- CG113-W6E
- CG113-4GW6E

- **Manufacturer**

Cisco Systems, Inc. 125 West Tasman Drive, San Jose, CA 95134-1706 USA

- **Importer**

Cisco Systems, Inc. 125 West Tasman Drive, San Jose, CA 95134-1706 USA

- **Product Use**

- The device is restricted to indoor use only.
- This equipment should be installed and operated with minimum distance 20 cm (7.87 inches) between the radiator & your body.

- **Declaration of Conformity**

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.cisco.com/web/dofc/UK89249.pdf>

- **European Community and UK Radiation Exposure Statement**

This equipment complies with EU radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

RF Exposure, Additional Information

This section contains information on compliance with guidelines related to RF exposure.

Generic Discussion on RF Exposure

- The Cisco products are designed to comply with the following national and international standards on Human Exposure to Radio Frequencies:
 - US 47 Code of Federal Regulations Part 2 Subpart J
 - American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers / IEEE C 95.1 (99)
 - International Commission on Non Ionizing Radiation Protection (ICNIRP) 98
 - Ministry of Health (Canada) Safety Code 6. Limits on Human Exposure to Radio Frequency Fields in the range from 3kHz to 300 GHz
 - Australia Radiation Protection Standard
- To ensure compliance with various national and international Electromagnetic Field (EMF) standards, the system should only be operated with Cisco approved antennas and accessories.


Additional Information on RF Exposure

- **You can find additional information on the subject at the following links:**
 - Cisco Systems Spread Spectrum Radios and RF Safety white paper at this URL:
http://www.cisco.com/warp/public/cc/pd/witc/ao340ap/prodlit/rfhr_wi.htm
 - FCC Bulletin 56: Questions and Answers about Biological Effects and Potential Hazards of Radio Frequency Electromagnetic Fields
 - FCC Bulletin 65: Evaluating Compliance with the FCC guidelines for Human Exposure to Radio Frequency Electromagnetic Fields
- **You can obtain additional information from the following organizations:**
 - World Health Organization International Commission on Non-Ionizing Radiation Protection
 - United Kingdom, National Radiological Protection Board
 - Cellular Telecommunications Association at this URL: <https://www.ctia.org>
 - The Mobile & Wireless Forum at this URL: <https://www.mwfai.org>

Additional References

Reference	Description
Release Notes for Cisco Catalyst Wireless Gateways	Description of new features in each release, and lists of any open or resolved caveats in each release.
Cisco Catalyst Wireless Gateways Software Configuration Guide	
Cisco Catalyst Wireless Gateway Web-Based Interface	Description of the web-based interface for monitoring and configuring Cisco Catalyst Wireless Gateways.
Regulatory Compliance and Safety Information – Cisco Catalyst Wireless Gateways	Regulatory compliance and safety information.

Documents / Resources

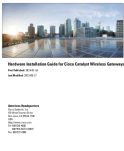	CISCO CG113-W6B Catalyst Wireless Gateways [pdf] Installation Guide CG113-W6B, CG113-W6B Catalyst Wireless Gateways, CG113-W6B, Catalyst Wireless Gateways, Wireless Gateways, Gateways
---	--

References

- [Cisco Trademarks - Cisco](#)
- [Cisco Catalyst Wireless Gateway - Release Notes - Cisco](#)
- [- Cisco](#)
- [CTIA - Home](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.