

CL Racing F7 Dual V2 Flight Controller Manual

[Home](#) » [CL Racing](#) » CL Racing F7 Dual V2 Flight Controller Manual 

Contents

1 CL RACING F7 DUAL V2

1.1 Main Features

1.2 General Overview

1.3 BETAFLIGHT SETUP

2 Related Posts


CL RACING F7 DUAL V2

The Flight Controller for RACERS

Main Features


1. MCU: STM32F722RET6216MHz
2. DUAL 6-Axis ICM20602Separated Interrupts
3. Build in Beta flight OSD
4. Up to 8S(36V) direct battery
5. Build in Voltage monitoring resistor
6. Build in 5V/3A BEC and 3.3V
7. Led strip share 5V with 5V/3.0A
8. 5V OR VBAT, camera and VTX POWER VIA Pit Switch
9. 6 Full UARTS: UART1, UART2
10. Buildin Camera Control pin wi camera connection
11. Buzzerpads for external buzzer
12. VBAT Polarity protection
13. Build in 32MB Blackbox flash chip

14. M4 Can be selected either led strip signal or M4 signal for RPM filtering

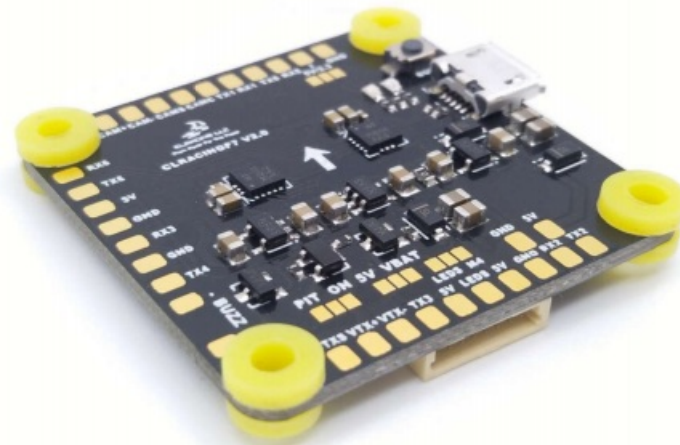


General Overview


1. FC TOP VIEW

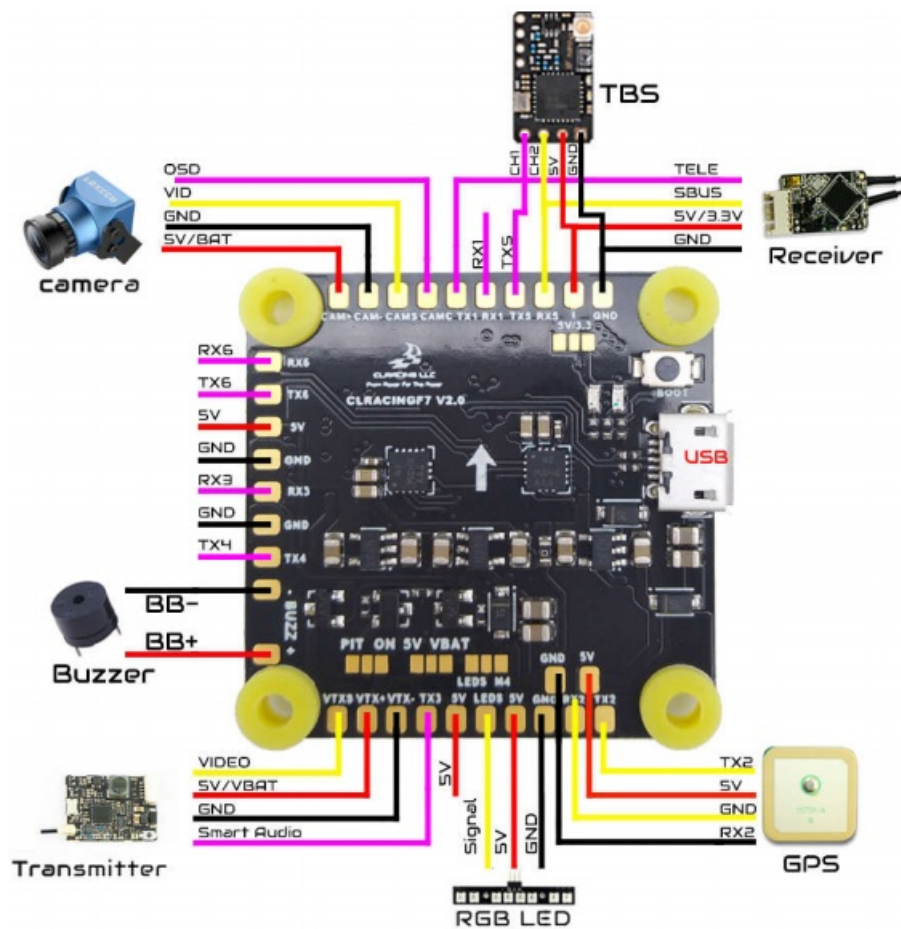


2. FC BOTTOM VIEW

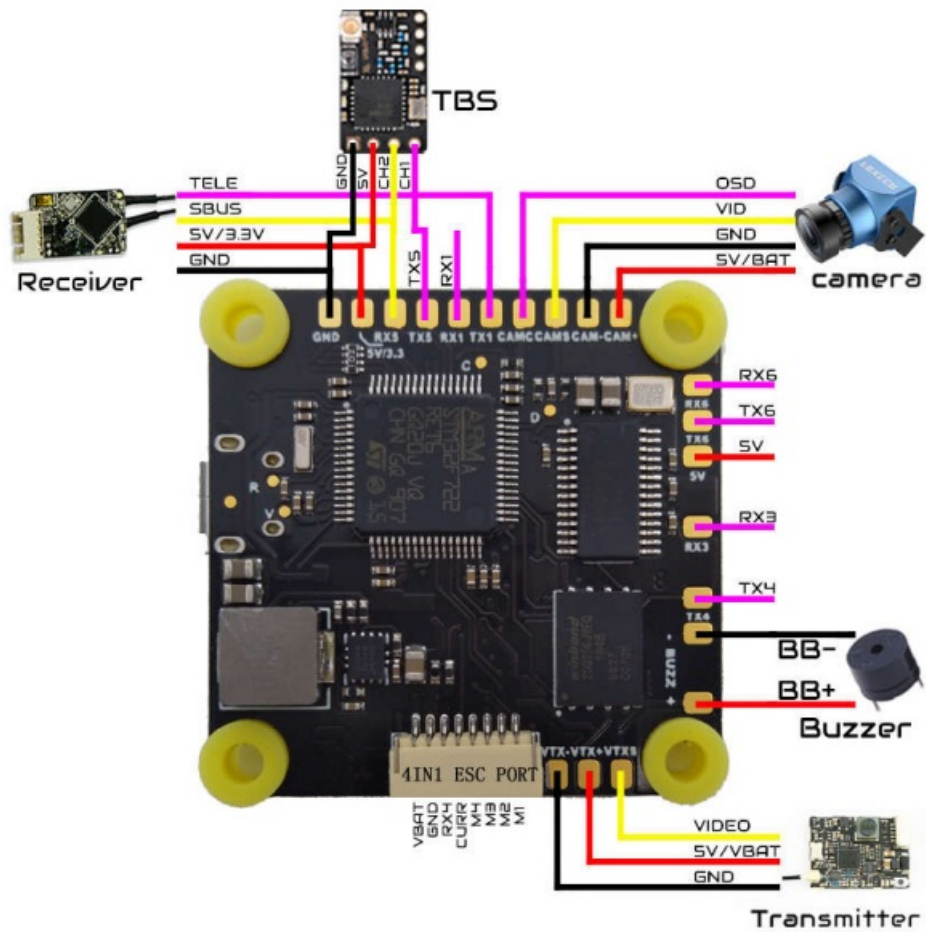



3. FC + 4in1 ESC

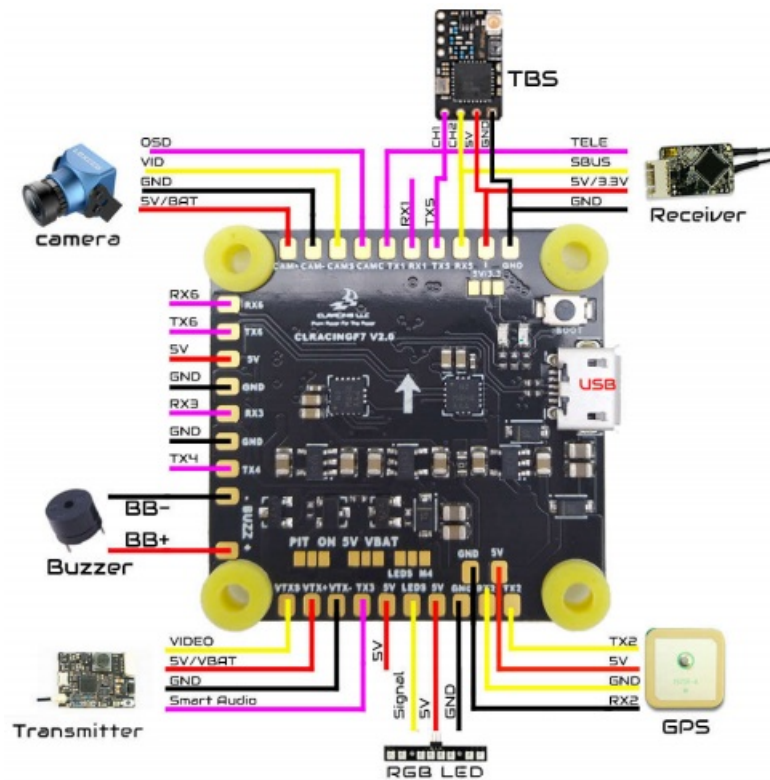

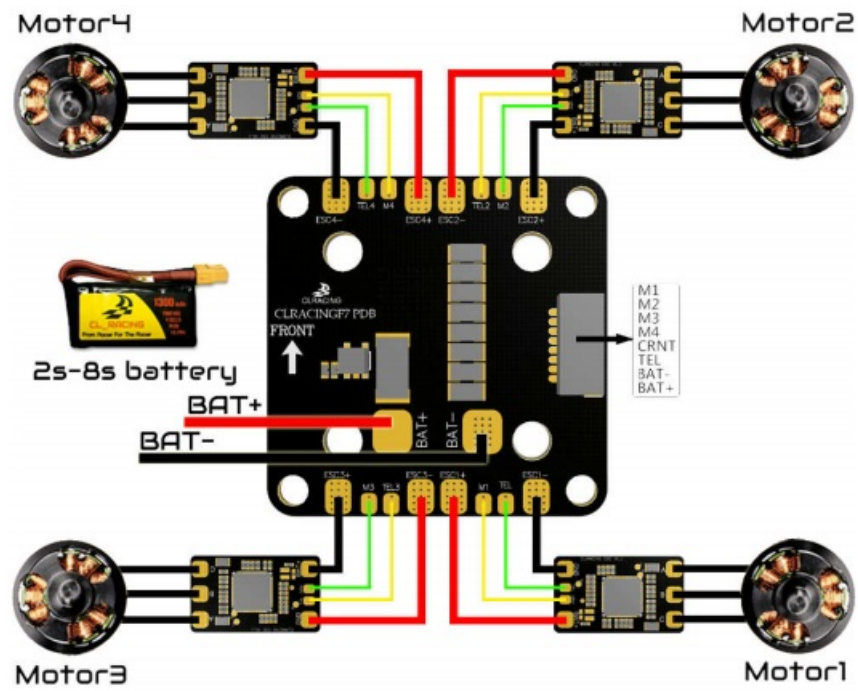

4. FC + 4in1 ESC

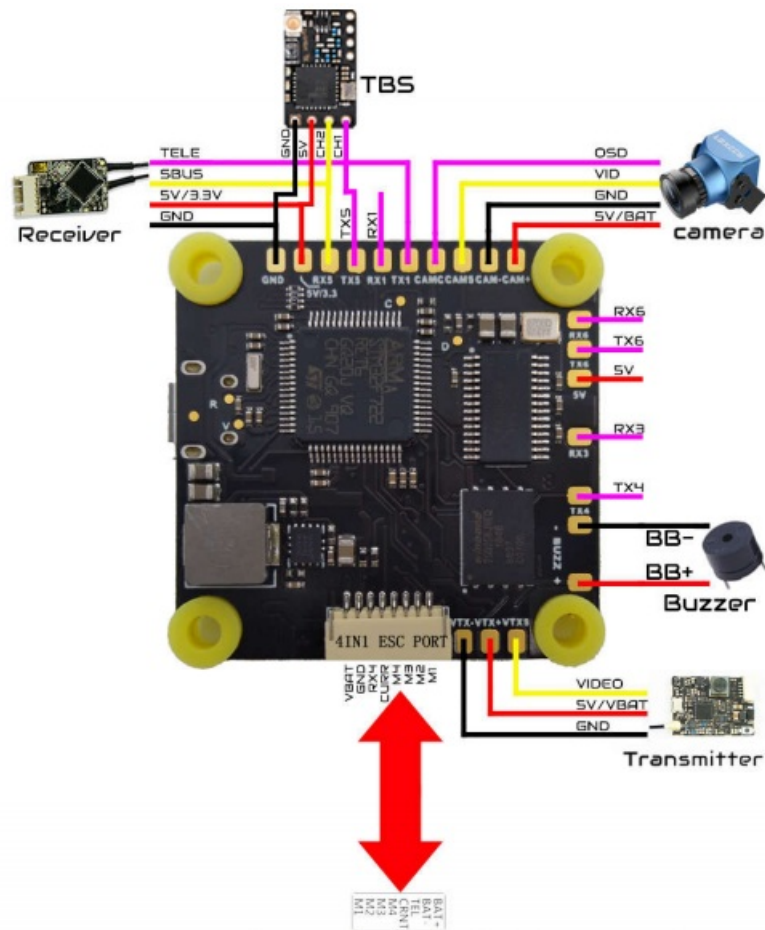

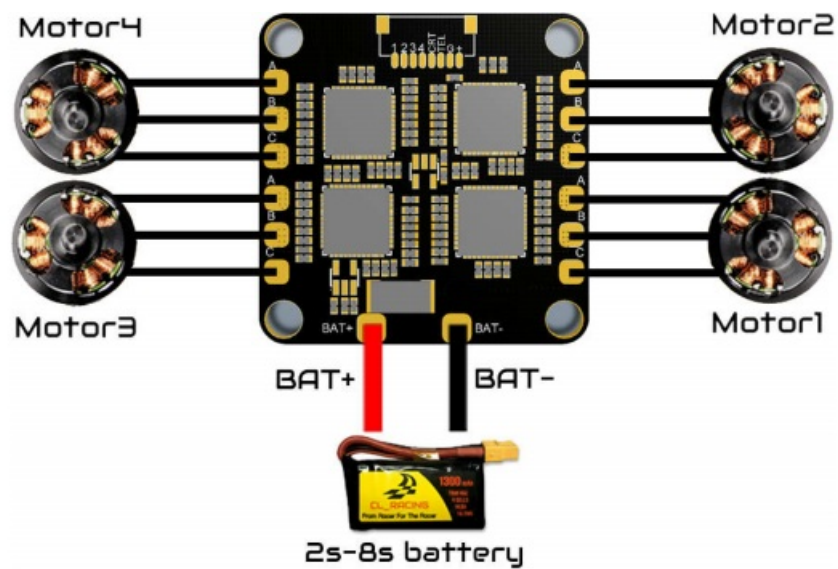

| Pad Name | function | Pad Name | function |
|----------|----------------------------------|----------|-------------------|
| VBAT | POWER VBAT+ | TX1 | UART1 TX |
| GND | GROUND VBAT- | RX1 | UART1 RX |
| CAM+ | VBAT+ or 5V | TX2 | UART2 TX |
| CAM- | GROUND VBAT- | RX2 | UART2 RX |
| CAMC | CAMERA OSD PIN | TX3 | UART3 TX |
| CAMS | CAMERA SIGNAL | RX3 | UART3 RX |
| VTXS | VTX SIGNAL | TX4 | UART4 TX |
| VTX+ | VBAT+ or 5V | RX4 | UART4 RX |
| VTX- | GROUND VBAT- | TX5 | UART5 TX |
| LED_S | RGB LED SIGNAL | RX5 | UART5 RX |
| BB+ | BEEPER + | TX6 | UART6 TX |
| BB- | BEEPER - | RX6 | UART6 RX |
| ON | VTX POWER CONSTANT ON | 5V | 5V OUTPUT FROM FC |
| PIT | VTX POWER CONTROLABLE FROM RADIO | | |

BETAFLIGHT SETUP

1. Sbus

Choose UART 5 AS Serial RX, Solder your sbus signal to RX5 pad

Ports

Note: Not all combinations are valid. When the flight controller firmware detects this the serial port configuration will be reset.
Note: Do NOT enable VCP on the first serial port unless you know what you are doing. You may have to refresh and save your configuration if you do.

| Identifier | Configuration/MSP | Serial Rx | Telemetry Output | Sensor Input | Peripherals |
|------------|--|-------------------------------------|------------------|-----------------|---------------------|
| USB VCP | <input checked="" type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART1 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | SmartPort • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART2 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART3 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | TBS SmartAux • AUTO |
| UART4 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART5 | <input type="checkbox"/> 115200 | <input checked="" type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART6 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |

Then in the configuration tab Choose


Receiver

Serial-based receiver (SPEKSAT, S) Receiver Mode

Note: Remember to configure a Serial Port (via Ports tab) and choose a Serial Receiver Provider when using RX_SERIAL feature.

SBUS Serial Receiver Provider

2. RX Voltage selection Jumper

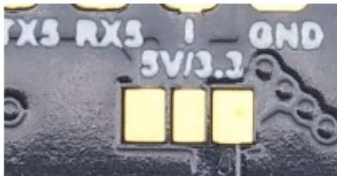

Solder on the left will output 5v , Solder the jumper on the right will output 3.3V

3. Smart port telemetry

Choose UART1 AS Smart port on the telemetry output, then go to CLI

Enter set tlm_halfduplex = OFF Save

| Identifier | Configuration/MSP | Serial Rx | Telemetry Output | Sensor Input | Peripherals |
|------------|--|-------------------------------------|------------------|-----------------|---------------------|
| USB VCP | <input checked="" type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART1 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | SmartPort • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART2 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART3 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | TBS SmartAux • AUTO |
| UART4 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART5 | <input type="checkbox"/> 115200 | <input checked="" type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |
| UART6 | <input type="checkbox"/> 115200 | <input type="checkbox"/> | Disabled • AUTO | Disabled • AUTO | Disabled • AUTO |

4. Use True Pit mode for Team racing

VBAT and 5V jumper control both VTX power and Camera Power

First Solder Jumper pad on PIT side



Then go to CLI Copy the following command to the CLI

resource PINIO 1 A14

set pinio_box = 39,0,0,0

save

wait for the FC reboot then go to “modetab “set VTX PIT MODE on a AUX switch you prefer

PREARM

Add Range

VTX PIT MODE

AUX 3

Min: 1700 Max: 2100

0

CAUTION: when using PIT mode, FC power up will not power your VTX until you turn on the switch on your radio you assigned to the VTX PIT mode

5. Use LEDS signal for Motor 4 enable RPM filtering

For normal use solder the jumper on the M4 side.



For RPM FILTERING

Solder Jumper pads to the LEDS side, LEDS pad will be output as motor 4.

In the CLI type in

resource MOTOR 4 none

resource LEDS_STRIP 1 none

resource motor 8 none

resource MOTOR 4 B01

save

now you can go ahead use the RPM filtering setting from BF wiki to enable RPM filtering feature

CL Racing F7 Dual V2 Flight Controller Manual – [Download \[optimized\]](#)

CL Racing F7 Dual V2 Flight Controller Manual – [Download](#)