




Control4 C4-CA1-V2 CA-1 Automation Controller Installation Guide

[Home](#) » [Control4](#) » Control4 C4-CA1-V2 CA-1 Automation Controller Installation Guide 



Supported model

- C4-CAI-V2 Automation Controller, CA-1, V2

Contents

- [1 Introduction](#)
- [2 Requirements and specifications](#)
- [3 Specifications](#)
- [4 Additional resources](#)
- [5 Front view](#)
- [6 Back view](#)
- [7 Installing the controller](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Introduction

The Control4® CA-1 Automation Controller enables control of lights, security systems, sensors, door locks, and other devices controlled by IP, ZigBee, 2-Wave®, or serial connections. The controller has a fast processor, external antenna for ZigBee® radio, an internal slot for a Z-Wave™ module (sold separately), and can be powered by PoE. This controller is perfect for home, apartments, and other installations that do not require IR control or audio streaming.

After you install and configure the controller with other Control4 devices, your customers can control their system using the Control4 apps, system remote controls, touch screens, or other Control4-supported interface devices (sold separately).

Box contents

- CA-1 Automation Controller
- External power supply with international plug adaptors
- Antennas (1 for ZigBee)

Accessories available for purchase

- 2-Wave Module – Region H (C4-ZWH)
- Z-Wave Module – Region U (C4-ZWU)
- Z-Wave Module – Region E (C4-ZWE)

Warnings



Caution! To reduce the risk of electrical shock, do not expose this apparatus to rain or moisture.



Caution! In an over-current condition on USB, the software disables the output. If the attached USB device does not appear to power on, remove the USB device from the controller.

For more information, visit the Products pages at dealer.control4.com.

Requirements and specifications



Note: The Ethernet should be installed before starting the CA-1 controller a installation.



Note: The software required to configure this device is Composer Pro. See the Composer Pro User Guide (ctri4.co/cpro-ug) for details.

Specifications

Model number	C4-C.41-1/7
Connections	
Network	Ethernet-10/100BaseT compatible (required for controller setup)
Zigboo Pro	80215.
Zigboe antenna	External wrest° SMA connector
USB port	2 USB 2.0 ports-500mA
Serial out	1 serial out RJ45 port (RS-232)
Z-Wave	Integrated 2-Wave slot accepts Control4 2-Wave modules (sold separately)
Music services	Requires Triad One for audio output. Does not support Spotty Connect. Shari Bridge, or My Music scanning.
Power	
Power requirements	5V DC 3h, external power supply included
Power supply	AC power supply accepts 100-240V II 50-60 Hz (0 5A)
PoE	802 lot (<13W)
Power consumption	Max 15W (51 BTU/hr)
Miscellaneous	
Operating temperature	3V – 104° F (0° – 40° C)
Storages temperature	4° – 156. F (-20° – 70° C)
Dimensions (L x W x H)	5.5° k 5.5* k 125' (14 .14 k 3.8 cm)
Weight	0.65 ll> (0.3 kg)
Shipping weight	1.5 lb (0.68 kg)

Additional resources

The following resources are available for more support.

- Control4 Knowledgebase: kb.control4.com
- Deller Forums: forums.control4.com
- Control4 Technical Support: dealer.control4.com/dealer/support
- Control4 website: www.control4.com
- Composer Pro documentation in online help or POF format available on the Dealer Portal under Support: ctrl4.co/docs
- Z-Wave documentation: ctrl4.co/z-wave


Front view



A Status LED—The RGB status LED gives system status feedback. See “Troubleshooting” in this document for LED status information.

B Z-Wave port—Removable plastic cover on top of the controller with a Z-Wave port underneath for a Control4 Z-Wave module.

Back view

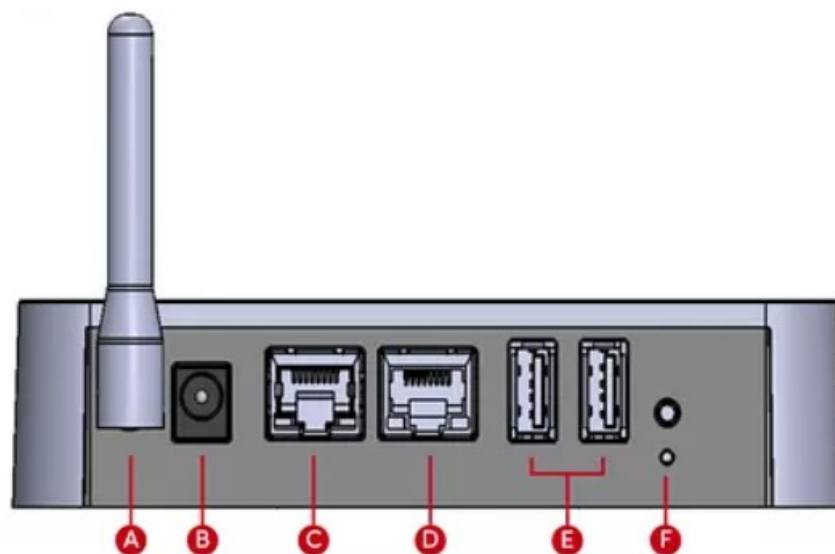

A ZigBee—External antenna connector for ZigBee radio.

B Power port—Power connection for external power supply.

C ETHERNET (PoE)—RJ-45 port for 10/100BaseT Ethernet network connection. Network connection used for configuration and device control. Supports PoE.

D SERIAL—R)-45 port for serial communications. Can be used for RS-232 communication for device control.

E USB—Two USB 2.0 ports for external USB drives (e.g., FAT32-formatted devices). See “Setting up external storage devices” in this document.

F ID / RESET buttons—Buttons used to identify the device in Composer Pro and reset the controller. See “Troubleshooting” in this document.

Installing the controller

Requirements:

- Ensure that the home network is in place before starting system setup.
- Aired connection to the network is required for initial controller setup.
- The controller requires a network connection to use all of the features as designed.

When connected, the controller can communicate with other IP devices in the home and access Control4 system updates.

- Composer Pro software version 2.10.0 or newer is required for configuration.

Mounting options:

- On-wall—The controller can be mounted to the wall using screws. Remove the rubber feet, measure the distance between them, and insert 2 screws into the wall so that the heads are about 1/4 to 1/2 inch from the wall. Position the holes on the back of the controller over the screw heads and slide the controller onto the screws.
- DIN rail—The controller can be mounted to the wall using a section of DIN rail channel. Mount the rail to the wall, and then attach the controller to the rail.



Important: The CA-1 is not rated to be installed inside an electrical panel. DIN- T4 rail installation is only intended for a wall-mount or other section of DIN rail outside of an electrical panel.

Connecting the controller

1. Connect the controller to the network.
 - Ethernet—To connect using an Ethernet connection, plug the data cable from the home network connection into the controller's RJ-45 port (labeled "Ethernet") and the network port on the wall or at the network switch.
2. Attach serial devices as described in "Connecting the serial port." Serial port is only used for controlling external devices, the controller must be connected over Ethernet to set up the Control4 programming.
3. Connect any external storage devices (USB) as described in "Setting up external storage devices" in this document.
4. Connect the power cord to the controller's power port and then into an electrical outlet (if the controller is not powered by PoE).

Connecting the serial port (optional)

The controller includes one RJ- 45 serial port that can be configured for RS-232 serial communication.

The following serial communication configurations are supported:

- RS-232—Hardware flow control, up to 115,200 Kbps. (TXD, RXD, CTS, RTS, GND)

To set up the serial port:

1. Connect a serial device to the controller using Cat5/Cat6 cable and an RJ-45 connector.



Important: The serial port pinout follows the EIA/TIA-561 serial wiring standard. Use the wiring shown in the diagram below. Many pre-built DB9 to RS-232 cables, including network switch console cables, will not work.


2. To configure the serial port settings, make the appropriate connections in your project using Composer Pro. See the Composer Pro User Guide for details.



Note: Serial settings are defined in the device driver in Composer. Serial settings (baud, parity, and serial port type) are automatically configured when device driver is connected in Composer Pro to the serial port connection of the CA-1 driver.

Serial port pinout and wiring recommendation

RS-232 pinout

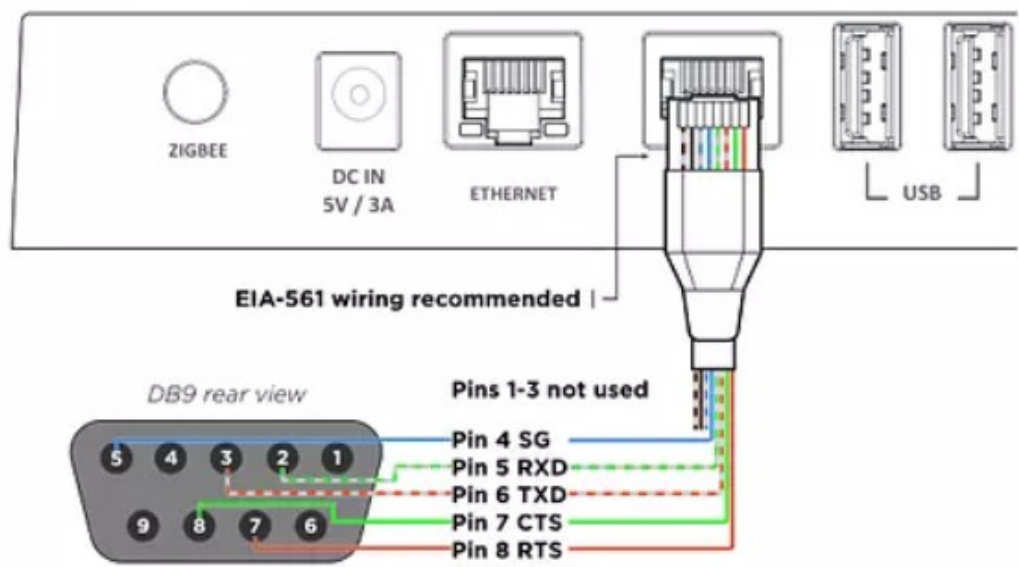

Documents / Resources

	<p>Control4 C4-CA1-V2 CA-1 Automation Controller [pdf] Installation Guide C4CA1V2, R33C4CA1V2, R33C4CA1V2, C4-CA1-V2, CA-1 Automation Controller, C4-CA1-V2 CA-1 Automation Controller, Automation Controller, Controller</p>
--	---