



Daikin Air Conditioner Remote Buttons and Functions Guide

[Home](#) » [Daikin](#) » Daikin Air Conditioner Remote Buttons and Functions Guide 

Contents

- [1 Daikin Air Conditioner Remote Buttons and Functions Guide](#)
- [2 Introduction](#)
- [3 Name of Parts](#)
- [4 Preparation before Operation](#)
- [5 ATTENTION](#)
- [6 AUTO · DRY · COOL · HEAT · FAN Operation](#)
- [7 Adjusting the Airflow Direction](#)
- [8 INTELLIGENT EYE Operation](#)
- [9 TIMER Operation](#)
 - [9.1 Note for Multi System](#)
- [10 Care and Cleaning](#)
- [11 \[Maintenance\]](#)
- [12 Troubleshooting](#)
- [13 FAQs](#)
- [14 Related Posts](#)



Daikin Air Conditioner Remote Buttons and Functions Guide




Introduction


Daikin is a well-known manufacturer of air conditioning systems, and they also offer remote controls to conveniently operate their air conditioners. Daikin air conditioner remote controls are designed to provide users with easy and intuitive control over various functions of their air conditioning units. These remotes typically feature a compact and ergonomic design for comfortable handling. With a Daikin air conditioner remote control, users can adjust the temperature, switch between different modes such as cooling, heating, or ventilation, set timers for automatic operation, control the fan speed, and regulate other settings depending on the specific model and features of the air conditioner.

Name of Parts


Remote Controller: ARC452A9

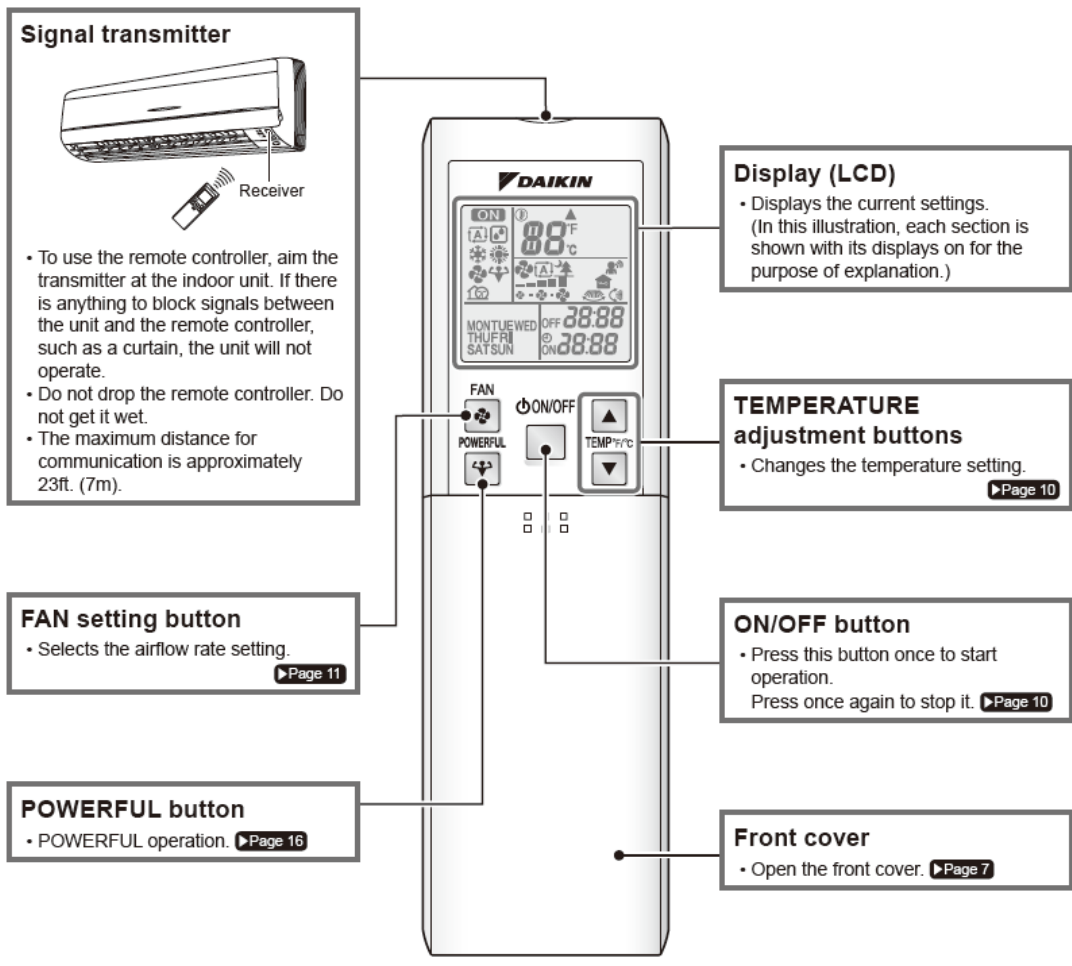

Open the front cover

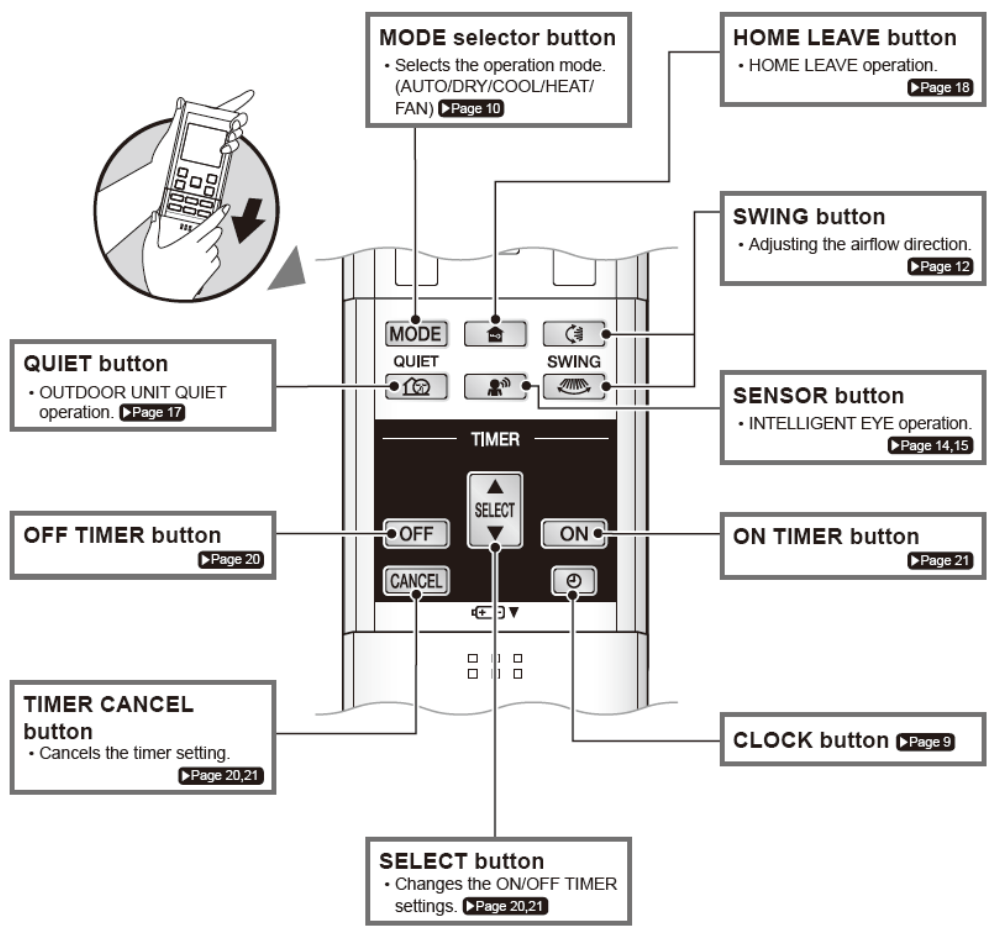

Preparation before Operation

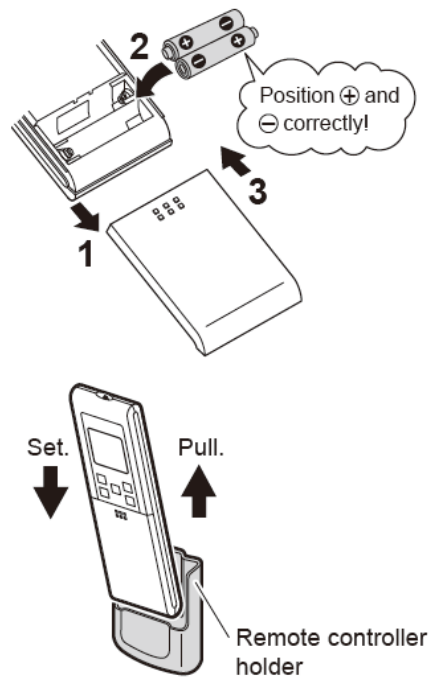

To set the batteries

1. Slide the front cover to take it off.
2. Set two dry batteries AAA.LR03 (alkaline).
3. Set the front cover as before.

To fix the remote controller holder on the wall

1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar with the screws supplied with the holder.
3. Place the remote controller in the remote controller holder.

Celsius/Fahrenheit display switch

- The Celsius or Fahrenheit display is selectable with the following buttons.



TEMP°F/°C



- Press TEMP°F/°C simultaneously for 5 seconds.
- The temperature will be displayed in Fahrenheit if it is presently displayed in Celsius, and vice versa

ATTENTION

About Batteries

- When replacing the batteries, use batteries of the same type, and replace both batteries at the same time.
- When the system is not used for a long time, take the batteries out.
- The batteries will last for approximately 1 year. If the remote controller display begins to fade and the degradation of reception performance occurs within a year, however, replace both batteries with new, size

AAA.LR03 (alkaline).

- The attached batteries are provided for the initial use of the system.
- The usable period of the batteries may be short depending on the manufactured date of the air conditioner.

About remote controller


- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off the dust with a soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as an inverter-type lamp) is in the room. Consult the shop if that is the case.
- If the remote controller signals happen to operate another appliance, move that appliance somewhere else, or consult the service shop.

Celsius/Fahrenheit display change function of the remote controller


- The set temperature may increase when the display is changed to Celsius from Fahrenheit because a fraction of 0.5°C is rounded up.
- Example: A set temperature of 64°F (equivalent to 18.5°C) will be converted into 19°C.
- When the display is changed to Fahrenheit again, the set temperature will be converted to 66°F (equivalent to 19°C) instead of the original set temperature (64°F) but a set temperature of 66°F (equivalent to 19°C) will be converted into 19°C with no temperature change.
- A reception sound will go off for the transmission of the set temperature to the indoor unit at the time of setting the Celsius/Fahrenheit display change function.

Turn the breaker on

Turning on the breaker closes the louvers. (This is a normal procedure.)

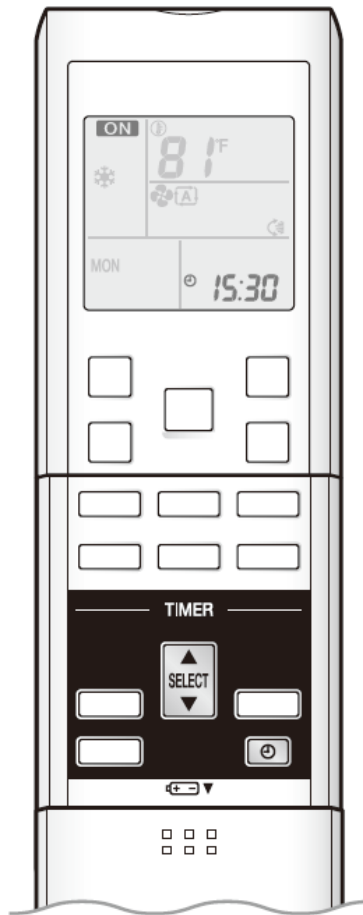

1. To set the clock

2. Press  to set the current day of the week.


3. Press



"0:00" is displayed.

"MON" and "⌚" blinks.





4. Press  to set the clock to the present time.

Holding down or rapidly increases or decreases the time display.



"⌚" blinks.

5. Press 

Always point the remote controller at the indoor unit when pressing the  buttons  when setting the indoor unit's internal clock.



"." blinks.

NOTE

Tips for saving energy

- Be careful not to cool (heat) the room too much.
- Keeping the temperature setting at a moderate level helps save energy.
- Cover windows with a blind or a curtain.
- Blocking sunlight and air from outdoors increases the cooling (heating) effect.
- Clogged air filters cause inefficient operation and waste energy. Clean them once about every 2 weeks.

Please note

- The air conditioner always consumes 50-120btu/h (15-35W) of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker off.
- Use the air conditioner in the following conditions.


Mode	Operating conditions	If operation is continued out of this range
COOL	Outdoor temperature : 14-115°F (–10-46 °C) Indoor temperature : 64-90°F (18-32 °C) Indoor humidity : 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. (In multi system, it may work to stop the operation of the outdoor unit only.) <ul style="list-style-type: none"> • Condensation may occur on the indoor unit and drip.
HEAT	Outdoor temperature : 5-64°F (–15-18°C)) Indoor temperature : 50-86°F (10-30°C)	<ul style="list-style-type: none"> • A safety device may work to stop the operation.
DRY	Outdoor temperature : 14-115°F (–10-46 °C) Indoor temperature : 64-90°F (18-32 °C) Indoor humidity : 80% max.	<ul style="list-style-type: none"> • A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

Recommended temperature setting

- For cooling: 78-82°F (26-28°C)
- For heating: 68-75°F (20-24°C)

Operation outside this humidity or temperature range may cause a safety device to disable the system.


AUTO · DRY · COOL · HEAT · FAN Operation

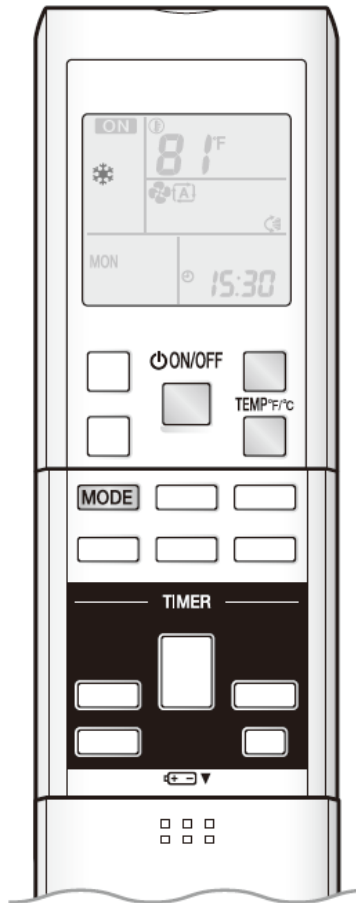


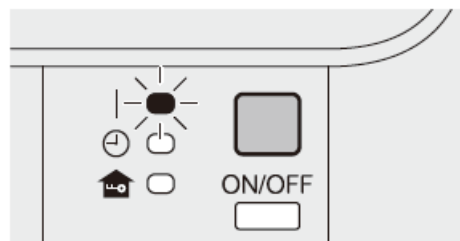
The air conditioner operates with the operation mode of your choice. From the next time on, the air conditioner will operate with the same operation mode.

To start operation

1. Press **MODE** and select an operation mode Each pressing of the button advances the mode setting in sequence.

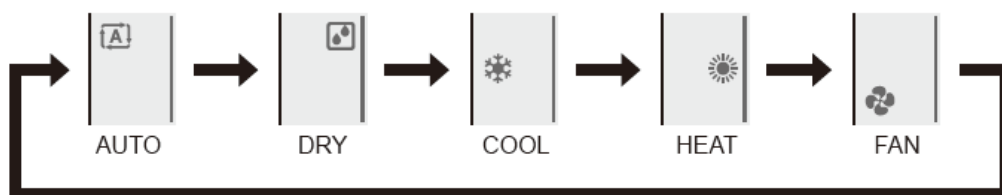

2. Press .
 - “ **ON** ” is displayed on the LCD.
 - The OPERATION lamp lights up.



Display


To stop operation



Press again.

- “ON” is no longer displayed on the LCD.
- The OPERATION lamp goes off.

To change the temperature setting




Press .

- The displayed items on the LCD will change whenever either one of the buttons is pressed.



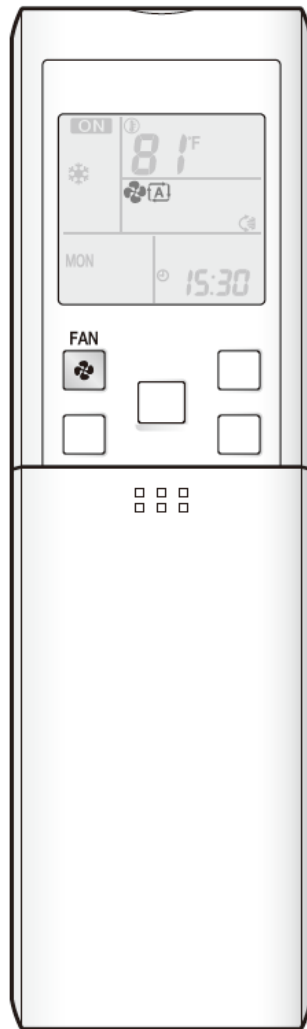


DRY or FAN operation	COOL operation	HEAT operation	AUTO operation	
The temperature setting is not	64-90°F (18-32°C)	50-86°F (10-30°C)	64-86°F (18-30°C)	
variable.	Press ▲ to ▼ raise the temperature and press			to lower the
	temperature.			


To change the airflow rate setting



Press 

- Indoor unit quiet operation

DRY operation	AUTO or COOL or HEAT or FAN operation
The airflow rate setting is not variable.	5 levels of airflow rate setting from “  ” to “  ” plus “  ” and “  ” are available. 

- When the airflow is set to “”, the noise from the indoor unit will become quieter.
- Use this when making the noise quieter.
- The unit might lose capacity when the airflow rate is set to a weak level.
- Each pressing of the button advances the airflow rate setting in sequence.



NOTE

Notes on HEAT operation

- Since this air conditioner heats the room by taking heat from outdoor air to indoors, the heating capacity becomes smaller in lower outdoor temperatures. If the heating effect is insufficient, it is recommended to use

another heating appliance in combination with the air conditioner.

- The heat pump system heats the room by circulating hot air around all parts of the room. After the start of the HEAT operation, it takes some time before the room gets warmer.
- In HEAT operation, frost may occur on the outdoor unit and lower the heating capacity. In that case, the system switches into defrosting operation to take away the frost.
- During defrosting operation, hot air does not flow out of the indoor unit.

Note on the COOL operation

This air conditioner cools the room by blowing the hot air in the room outside, so if the outside temperature is high, the performance of the air conditioner drops.

Note on DRY operation

The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.

Notes on AUTO operation

- In AUTO operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.
- The system automatically reselects the setting at regular intervals to bring the room temperature to a user-setting level.


Note on FAN operation

This is valid for fans only.

Note on airflow rate setting

At smaller airflow rates, the cooling (heating) effect is also smaller.



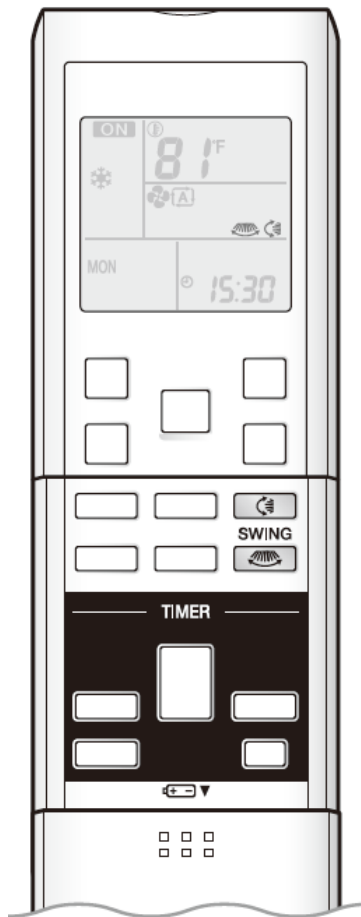

Adjusting the Airflow Direction







You can adjust the airflow direction to increase your comfort.

Adjusting the upper and lower airflow direction





To adjust the louvers (horizontal blades)

1. Press .
 - “” is displayed on the LCD and the louvers will begin to swing.
2. When the louvers have reached the desired position, press  once more.
 - The louvers will stop moving.
 - “” is no longer displayed on the LCD.



Adjusting the right and left airflow direction To adjust the fins (vertical blades)

3. Press .
 - “” is displayed on the LCD.
 - When the fins have reached the desired position, press  once more.
 - The fins will stop moving.
 - “” is no longer displayed on the LCD.


To start 3-D airflow

Press the and the: the “” and “” display will light up and the  louvers  and fins will move in turn.

To cancel 3-D airflow

Press  either the or  the

NOTE

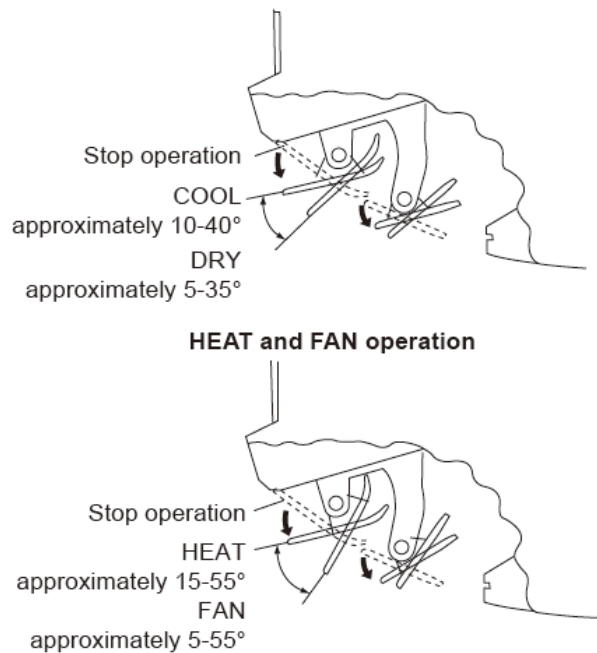

Note the angles of the louvers When is selected, the louvers swinging range depends on the operation. (See the figure.)


Note on 3-D airflow

Using 3-D airflow ow circulate cold air, which tends to collect at the bottom of the room, and hot air, which tends to collect near the ceiling, throughout the room, preventing areas of cold and hot developing.

ATTENTION

Always use a remote controller to adjust the angles of the louvers and fins. If you attempt to move it forcibly with your hand when it is swinging, the mechanism may be broken. Always use a remote controller to adjust the fi ns angles. Inside the air outlet, a fan is rotating at a high speed.

INTELLIGENT EYE Operation

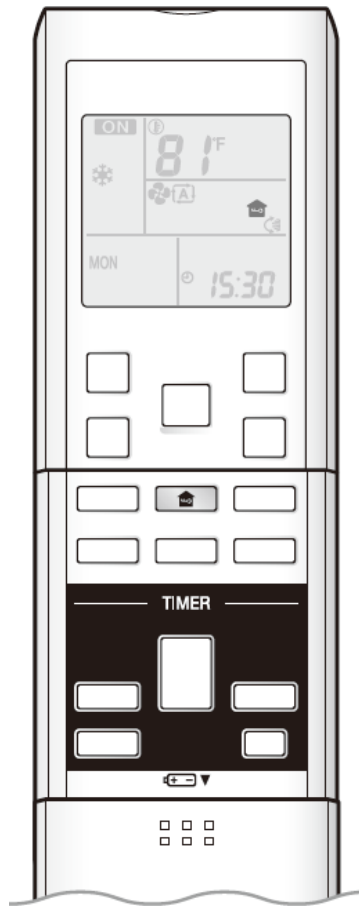


“**INTELLIGENT EYE**” is an infrared sensor that detects human movement.
To start an INTELLIGENT EYE operation

1. Press  .


“  ” is displayed on the LCD.

To cancel INTELLIGENT EYE operation

2. Press  again.

“  ” is no longer displayed on the LCD.

[Example]

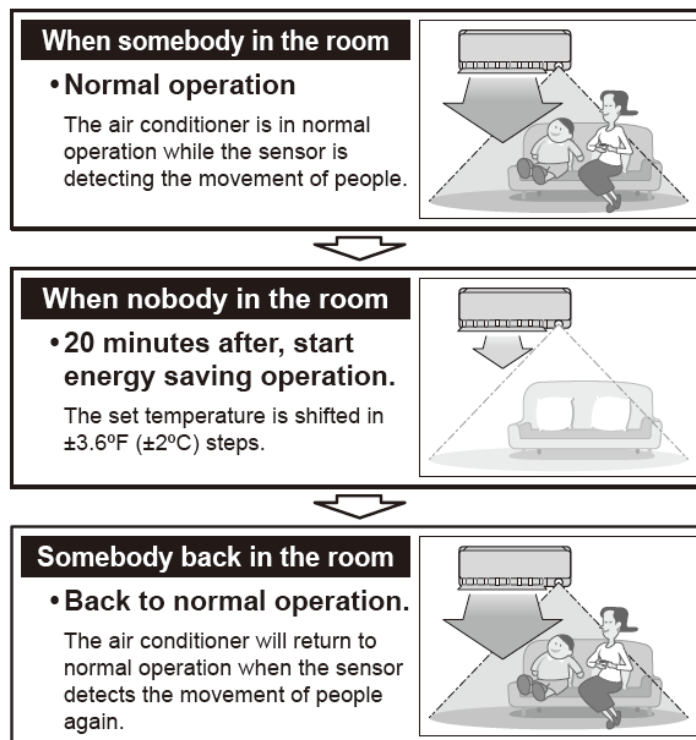


“INTELLIGENT EYE” is useful for energy saving
Energy saving operation

- Change the temperature -3.6°F (-2°C) in HEAT / $+3.6^{\circ}\text{F}$ ($+2^{\circ}\text{C}$) in COOL / $+1.8^{\circ}\text{F}$ ($+1^{\circ}\text{C}$) in DRY operation from set temperature.
- Decrease the airflow rate slightly in FAN operation only.
- If no presence is detected in the room for 20 minutes.

NOTE

Notes on the INTELLIGENT EYE operation Application range are as follows.

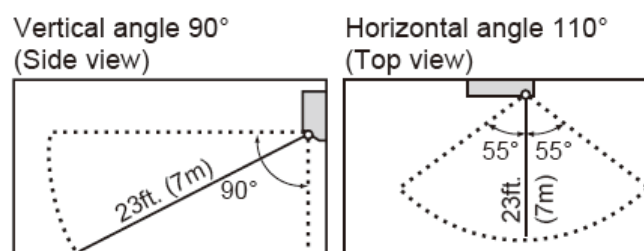


- The sensor may not detect moving objects further than 23ft. (7m) away. (Check the application range.)
- Sensor detection sensitivity changes according to indoor unit location, the speed of passersby, temperature range, etc.
- The sensor also mistakenly detects pets, sunlight, fluttering curtains and light reflected off of mirrors as passersby.
- INTELLIGENT EYE operation will not go on during POWERFUL operation.
- NIGHT SET mode Page 20 will not go on during the use of INTELLIGENT EYE operation.

CAUTION

- Do not place large objects near the sensor.
- Also, keep heating units or humidifiers outside the sensor's detection area. This sensor can detect undesirable objects.
- Do not hit or forcefully push the INTELLIGENT EYE sensor. This can lead to damage and malfunction.


POWERFUL Operation

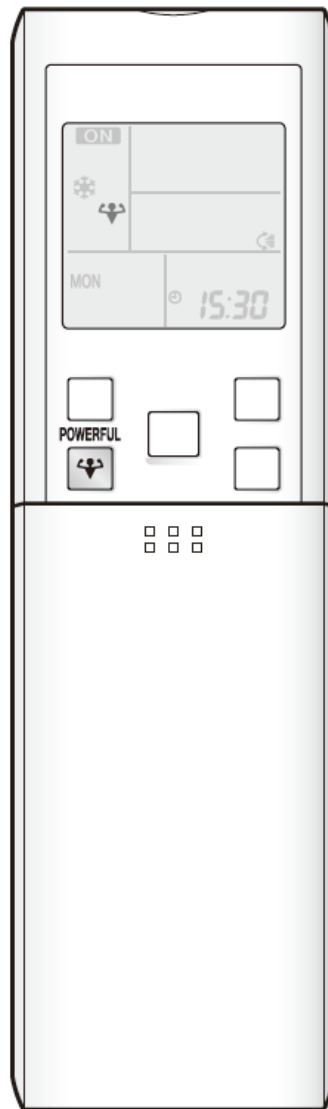

The POWERFUL operation quickly maximizes the cooling (heating) effect in any operation mode. You can get the maximum capacity.


To start a POWERFUL operation

Press  during operation.

- POWERFUL operation ends in 20 minutes. Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” is displayed on the LCD.
- When using POWERFUL operation, there are some functions that are not available.

To cancel the POWERFUL operation

Press  again.

- “” is no longer displayed on the LCD.

NOTE

Notes on POWERFUL operation

The POWERFUL operation cannot be used together with the QUIET operation. Priority is given to the function of whichever button is pressed last.

In COOL and HEAT operation

To maximize the cooling (heating) effect, the capacity of the outdoor unit must be increased and the airflow rate be fixed to the maximum setting.

The temperature and airflow settings are not variable.

In DRY operation

The temperature setting is lowered by 4.5°F (2.5°C) and the airflow rate is slightly increased.

In FAN operation


The airflow rate is fixed to the maximum setting.

In AUTO operation

To maximize the cooling (heating) effect, the capacity of the outdoor unit must be increased and the airflow rate be fixed to the maximum setting.

The POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.

OUTDOOR UNIT QUIET Operation

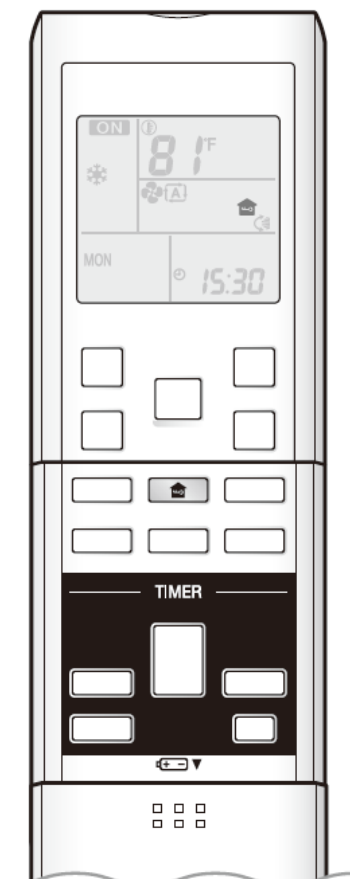


OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during the night. To start the OUTDOOR UNIT QUIET

operation Press .

“  ” is displayed on the LCD.

To cancel the OUTDOOR UNIT QUIET operation

Press  again.

“  ” is no longer displayed on the LCD.


NOTE

Notes on OUTDOOR UNIT QUIET operation

- If using a multi-system, this function will work only when the OUTDOOR UNIT QUIET operation is set on all operated indoor units.
- However, if using the priority room setting, see note for multi-system. Page 22
- This function is available in COOL, HEAT, and AUTO operations. (This is not available in FAN and DRY operations.)
- POWERFUL operation and OUTDOOR UNIT QUIET operation cannot be used at the same time.
- Priority is given to the function of whichever button is pressed last.
- If the operation is stopped using the remote controller or the indoor unit ON/OFF switch when using OUTDOOR UNIT QUIET operation, “ ” will remain on the remote controller display.
- The OUTDOOR UNIT QUIET operation will drop neither the frequency nor fan speed if the frequency and fan speed have already dropped low enough.


HOME LEAVE Operation


HOME LEAVE operation is a function that allows you to record your preferred temperature and airflow rate settings.

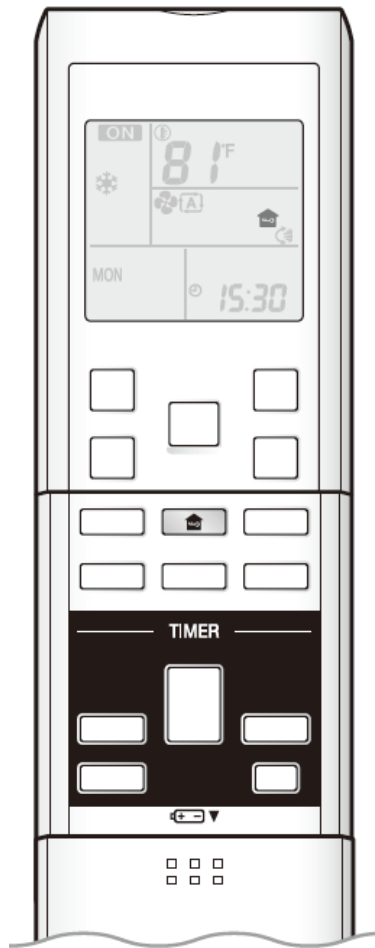

To start the HOME LEAVE operation

Press .


“” is displayed on the LCD.
The HOME LEAVE lamp lights up.

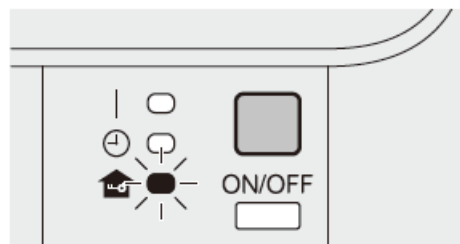

Display

To cancel the HOME LEAVE operation

Press  again.

“” is no longer displayed on the LCD.
The HOME LEAVE lamp goes off.


Before using the HOME LEAVE operation.

To set the temperature and airflow rate for the HOME LEAVE operation When using the HOME LEAVE operation for the first time, please set the temperature and airflow rate for the HOME LEAVE operation. Record your preferred temperature and airflow rate.

	Initial setting		Selectable range	
	Temperature	Airflow rate	Temperature	Airflow rate
Cooling	77°F (25°C)	AUTO	64-90°F (18-32°C)	5 step, "A" and "🌳"
Heating	77°F (25°C)	AUTO	50-86°F (10-30°C)	5 step, "A" and "🌳"


1. Press. Make sure "🏠" is displayed in the remote controller display.
2. Adjust the set temperature with or as you like.
3. Adjust the airflow rate with the FAN setting button as you like.
4. HOME LEAVE operation will run with these settings the next time you use the unit. To change the recorded information, repeat steps 1 – 3.

What's the HOME LEAVE operation?

Is there a set temperature and airflow rate that is most comfortable, a set temperature and airflow rate that you use the most? HOME LEAVE operation is a function that allows you to record your favorite set temperature and airflow rate. You can start your favorite operation mode simply by pressing  on the remote controller. This function is convenient in the following situations.

Useful in these cases

Use as an energy-saving mode. Set the temperature 3-5°F(2-3°C) higher (COOL) or lower (HEAT) than normal. Setting the fan speed to the lowest setting allows the unit to be used in energy-saving mode. Also convenient for use while you are out or sleeping. Every day before you leave the house...

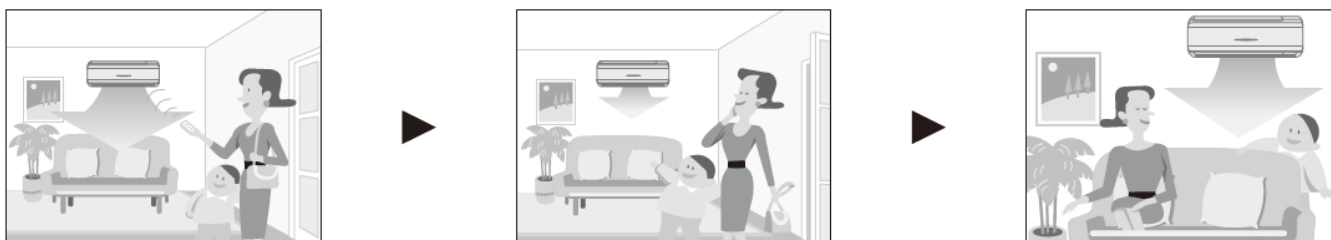

- When you go out, press and the air conditioner will adjust capacity to reach the preset temperature for HOME LEAVE operation
- When you return, you will be welcomed by a comfortably air-conditioned room.
- Press again, and the air conditioner will adjust capacity to the set temperature for normal operation



- Set the unit to HOME LEAVE operation before leaving the living room when going to bed.
- The unit will maintain the temperature in the room at a comfortable level while you sleep.
- When you enter the living room in the morning, the temperature will be just right. Disengaging the HOME LEAVE operation will return the temperature to that set for normal operation. Even the coldest winters will pose no problem!

Use as a favorite mode.


Once you record the temperature and airflow rate settings you most often use, you can retrieve them by pressing

them. You do not have to make all the selections again.

NOTE

- Once the temperature and airflow rate for the HOME LEAVE operation is set, those settings will be used whenever the HOME LEAVE operation is used in the future. To change these settings, please refer to the before using the HOME LEAVE operation section above.
- HOME LEAVE operation is only available in COOL and HEAT operations. It cannot be used in AUTO, DRY, and FAN operations.
- HOME LEAVE operation runs in accordance with the previous operation mode (COOL or HEAT) before using HOME LEAVE operation.
- HOME LEAVE operation and POWERFUL operation cannot be used at the same time. The last button that was pressed has priority.
- The operation mode cannot be changed while the HOME LEAVE operation is being used.
- When the operation is shut off during the HOME LEAVE operation, using the remote controller or the indoor unit ON/OFF switch, “ ” will remain on the remote controller display.

TIMER Operation

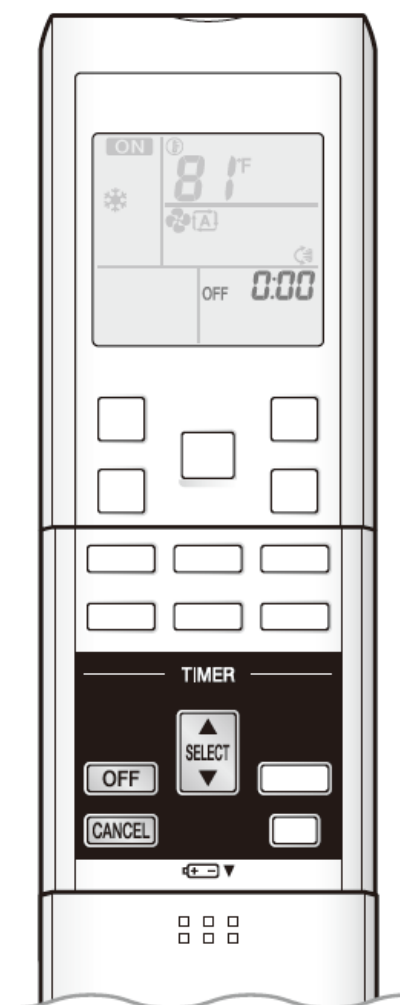

Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning. You can also use OFF TIMER and ON TIMER in combination.

To use OFF TIMER operation

Check that the clock is correct. If not, set the clock to the present time. Page 9

1. Press **OFF**.



"0:00" is displayed.


"OFF" blinks.



2. Press **SELECT** until the time setting reaches the point you like. Each pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press **OFF** again. The TIMER lamp lights up.

To cancel OFF TIMER operation

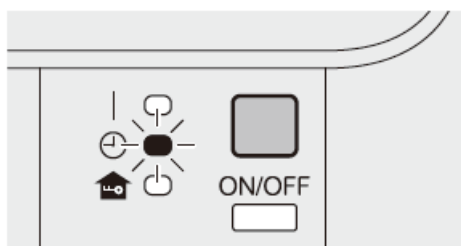

Display

Press **CANCEL**.

The TIMER lamp goes off.

NOTE


Notes on TIMER operation

- When TIMER is set, the present time is not displayed.
- Once you set the ON/OFF TIMER, the time setting is kept in the memory. (The memory is canceled when remote controller batteries are replaced.)
- When operating the unit via the ON/OFF TIMER, the actual length of operation may vary from the time entered by the user. (Maximum approximately 10 minutes)

NIGHT SET mode


When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.9°F (0.5°C) up in COOL, 3.6°F (2.0°C) down in HEAT) to prevent excessive cooling (heating) for your pleasant sleep

To use ON TIMER operation

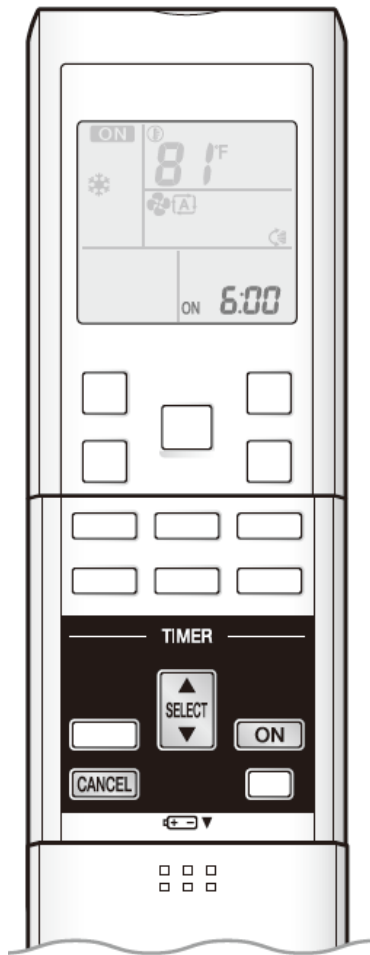


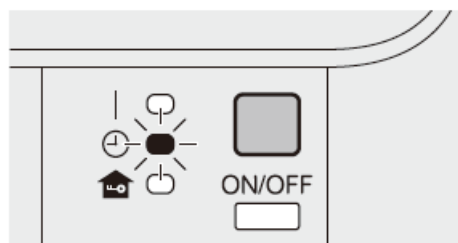
Check that the clock is correct.
If not, set the clock to the present time.

1. Press  on

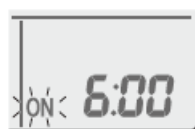

"6:00" is displayed.
" ON " blinks.

2. Press  on until the time setting reaches the point




Display

you like

Each pressing of either button increases or decreases the time setting by 10 minutes. Holding down either button changes the setting rapidly.

3. Press again.

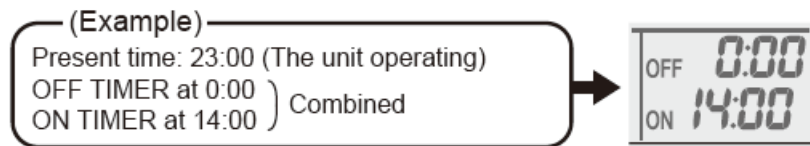

The TIMER lamp lights up.

To cancel ON TIMER operation

Press.

The TIMER lamp goes off.

To combine ON TIMER and OFF TIMER

A sample setting for combining the two timers is shown below.

ATTENTION


- In the following cases, set the timer again.
- After a breaker has been turned off.
- After a power failure.
- After replacing the batteries in the remote controller.

Note for Multi System

What is a multi-system?

This system has one outdoor unit connected to multiple indoor units.

Selecting the operation mode

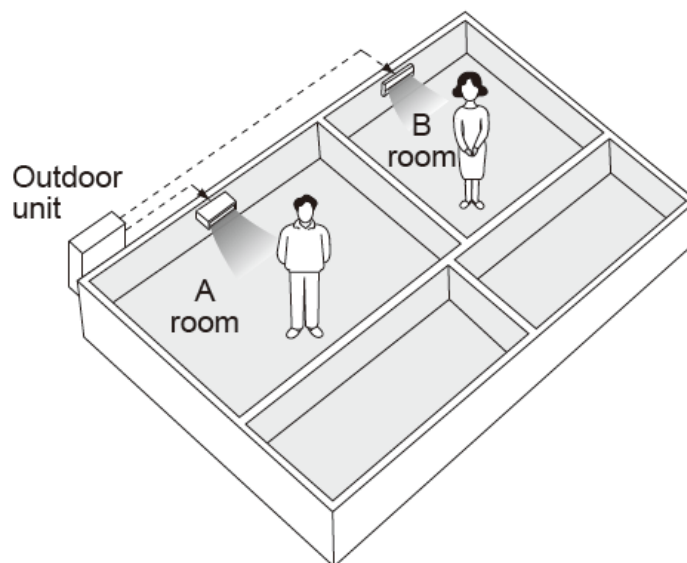

With the priority room setting present but inactive or not present. When more than one indoor unit is operating, priority is given to the first unit that was turned on. In this case, set the units that are turned on later to the same operation mode (*1) as the first unit.

Otherwise, they will enter the standby state, and the OPERATION lamp will flash: this does not indicate malfunction. (*1)

- COOL, DRY, and FAN operations may be used at the same time.
 - AUTO operation automatically selects COOL operation or HEAT operation based on the room temperature.
- Therefore, the AUTO operation is available when selecting the same operation mode as that of the room with the first unit to be turned on.

CAUTION

Normally, the operation mode in the room where the unit is first run is given priority, but the following situations are exceptions, so, please keep this in mind. If the operation mode of the first room is FAN operation, then using HEAT operation in any room after this will give priority to HEAT operation. In this situation, the air conditioner running in FAN operation will go on standby, and the OPERATION lamp will flash. With the priority room setting active. See the priority room setting on the next page.

NIGHT QUIET mode (Available only for COOL operation)

- NIGHT QUIET mode requires initial programming during installation. Please consult your retailer or dealer for assistance.
- NIGHT QUIET mode reduces the operation noise of the outdoor unit during the nighttime hours to prevent annoyance to neighbors.
- The NIGHT QUIET mode is activated when the temperature drops 9°F (5°C) or more below the highest temperature recorded that day. Therefore, when the temperature difference is less than 9°F (5°C), this function will not be activated.
- NIGHT QUIET mode reduces slightly the cooling efficiency of the unit.

OUTDOOR UNIT QUIET operation Page 17

With the priority room setting present but inactive or not present. When using the OUTDOOR UNIT QUIET operation feature with the multi-system, set all indoor units to OUTDOOR UNIT QUIET operation using their remote controllers. When clearing the OUTDOOR UNIT QUIET operation, clear one of the operating indoor units using its remote controller. The OUTDOOR UNIT QUIET operation display remains on the remote controller for other rooms. We recommend you release all rooms using their remote controllers. With the priority room setting active. See priority room setting.

COOL/HEAT mode lock (Available only for heat pump models)

The COOL/HEAT mode lock requires initial programming during installation. Please consult your authorized dealer for assistance. The COOL/HEAT mode lock sets the unit forcibly to either COOL or HEAT operation. This function is convenient when you wish to set all indoor units connected to the multi-system to the same operation mode.

Priority room setting

The priority room setting requires initial programming during installation. Please consult your authorized dealer for assistance. The room designated as the priority room takes priority in the following situations;

Operation mode priority

As the operation mode of the priority room takes precedence, the user can select a different operation mode from other rooms. < Example > Room A is the priority room in the examples. When the COOL operation is selected in room A while operating the following modes in Room B: Priority when the POWERFUL operation is used. < Example > Room A is the priority room in the examples. The indoor units in rooms A and B are all operating. If the unit in room A enters POWERFUL operation, operation capacity will be concentrated in room A. In such a case, the cooling (heating) efficiency of the units in room B may be slightly reduced.

Operation mode in room B	Status of room B when the unit in room A is in COOL operation
COOL or DRY or FAN	Current operation mode maintained
HEAT	The unit enters standby mode. Operation resumes when the room A unit stops operating.
AUTO	If the unit is set to COOL operation, it continues. If the unit is set to HEAT operation, it enters standby mode. Operation resumes when the room A unit stops operating.

Priority when using OUTDOOR UNIT QUIET operation

< Example >

Room A is the priority room in the examples. Just by setting the unit in room A to QUIET operation, the air conditioner starts OUTDOOR UNIT QUIET operation. You don't have to set all the operated indoor units to QUIET operation.

Care and Cleaning

CAUTION Before cleaning, be sure to stop the operation and turn the breaker off.


Units

Indoor unit, outdoor unit, and remote controller Wipe them with a soft cloth when dirty.

Front panel


Open the front panel

Hold the front panel by the panel tabs on both sides and open it.

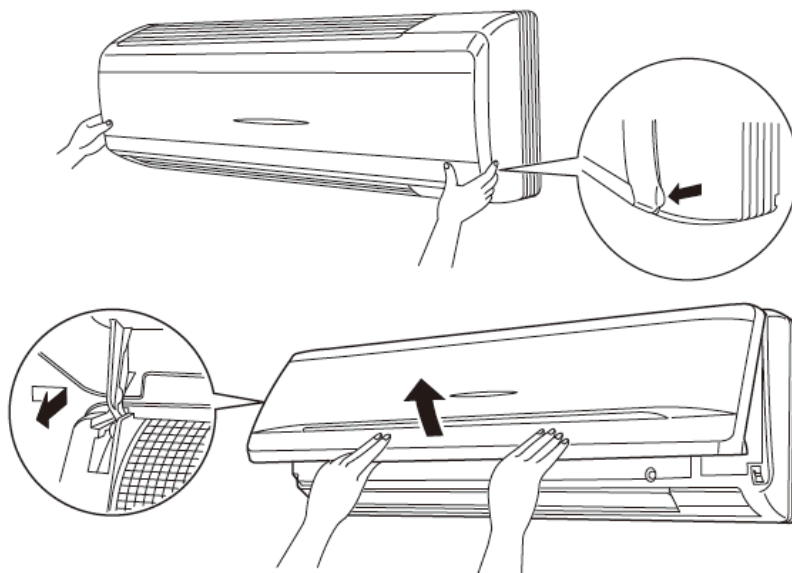


Remove the front panel

Slide the front panel to either the left or right and pull it toward you. Disconnect the front panel shaft on the other side in the same manner.

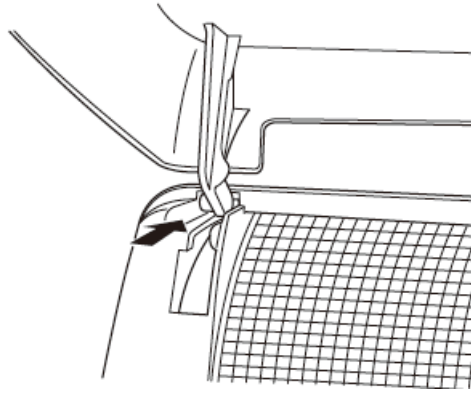

Clean the front panel

- Wipe it with a soft cloth soaked in water.
- Only neutral detergent may be used.

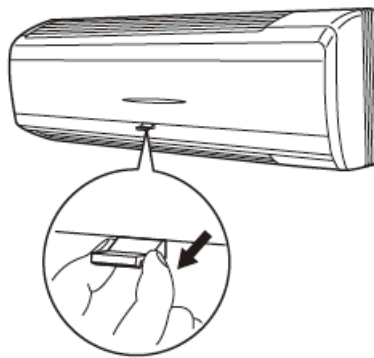

- If you wash the panel with water, wipe it with a dry soft cloth, and allow it to dry in the shade.

Attach the front panel


Align the front panel shaft on the left and right of the front panel with the slots, then push them all the way in. Close the front panel slowly. (Press the panel at both sides and the center.)

CAUTION



- When the packaging materials are attached to the front panel, please remove them.
- Do not touch the metal parts of the indoor unit. If you touch those parts, this may cause an injury.
- When removing or attaching the front panel, use a robust and stable stool and watch your steps carefully.
- When removing or attaching the front panel, support the panel securely with a hand to prevent it from falling.
- For cleaning, do not use hot water above 104°F (40°C), benzine, gasoline, thinner, nor other volatile oils, polishing compounds, scrubbing brushes, or other hand stuff.
- After cleaning, make sure that the front panel is securely fixed.

Filters


1. Open the front panel. Page 24

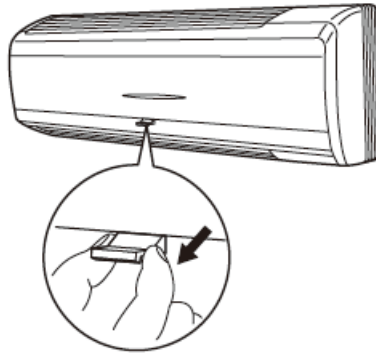

2. Pull out the air filters. Push a little upwards the tab at the center of each air filter, then pull it down.
3. Take off the air-purifying filter with the photocatalytic deodorizing function. Press the top of the air-cleaning filter onto the tabs (3 at the top). Then press the bottom of the filter up slightly, and press it onto the tabs (2 at the bottom).
4. Clean or replace each filter. See figure.

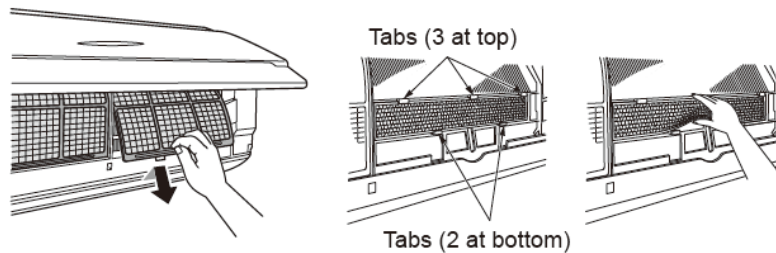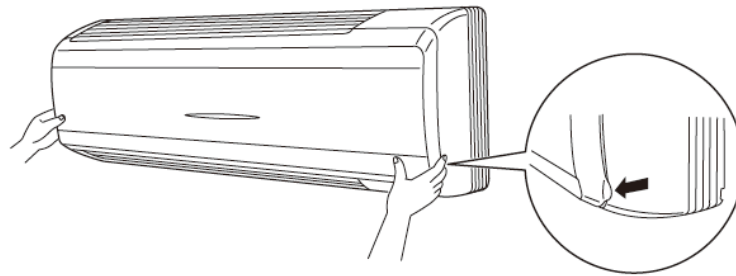

5. Set the air filter and the air-purifying filter with photocatalytic deodorizing function as they were and close the front panel.
6. Press the front panel at both sides and the center.

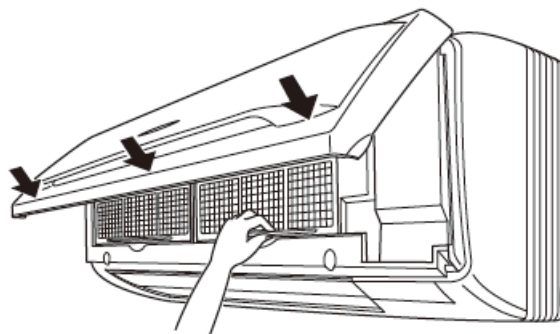

CAUTION

Do not touch the aluminum fins by bare hand at the time of dismounting or mounting the filter.

Air filter

Wash the air filters with water or clean them with a vacuum cleaner.

- If the dust does not come off easily, wash them with neutral detergent thinned with lukewarm water, then dry them up in the shade.
- It is recommended to clean the air filters every 2 weeks.



- Air-purifying filter with photocatalytic deodorizing function
- The air-purifying filter with photocatalytic deodorizing function can be renewed by washing it with water once every 6 months.
- We recommend replacing it once every 3 years.

[Maintenance]

1. Vacuum dust, and soak in warm water or water for about 10 to 15 minutes if the dirt is heavy.
2. Do not remove the filter from the frame when washing with water.
3. After washing, shake off the remaining water and dry in the shade.
4. Since the material is made out of paper, do not wring out the filter when removing water from it.
5. Remove the tabs on the filter frame and replace them with a new filter.
6. Dispose of the old filters as flammable waste.

NOTE

Operation with dirty filters:

Item	Part No.
Air-purifying filter with photocatalytic deodorizing function (without frame) 1 set	KAF952A42

1. cannot deodorize the air,
2. cannot clean the air, results in poor heating or cooling,
3. may cause odor. To order an air-purifying filter with a photocatalytic deodorizing function contact the service shop where you purchased the air conditioner.
4. Dispose of the old filters as flammable waste.

ATTENTION



Do not throw away the filter frame. Reuse the filter frame when replacing the air-purifying filter with a photocatalytic deodorizing function.

CHECK

- Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
- Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
- Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.

- If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

Before a long idle period

1. Operate the FAN only for several hours on a nice day to dry out the inside.
2. Press mode and select “” operation.
3. Press  and start the operation.
4. After the operation stops, turn off the breaker for the room air conditioner.
5. Clean the air filters and set them up again.
6. Take out batteries from the remote controller.

Troubleshooting

These incidents are not malfunctions. The following incidents do not indicate a malfunctioning air conditioner and have explanations. The air conditioner can continue to operate.

Case	Explanation
Operation does not start soon. <ul style="list-style-type: none"> When "ON/OFF" button was pressed soon after operation was stopped. When the mode was reselected. 	<ul style="list-style-type: none"> This is to protect the air conditioner. You should wait for about 3 minutes.
Hot air does not flow out soon after the start of HEAT operation.	<ul style="list-style-type: none"> The air conditioner is warming up. You should wait for 1 to 4 minutes. (The system is designed to start discharging air only after it has reached a certain temperature.)
The HEAT operation stops suddenly and a flowing sound is heard.	<ul style="list-style-type: none"> The system is taking away the frost on the outdoor unit. You should wait for about 4 to 12 minutes.
The outdoor unit emits water or steam.	<ul style="list-style-type: none"> In HEAT operation <ul style="list-style-type: none"> The frost on the outdoor unit melts into water or steam when the air conditioner is in defrost operation. In COOL or DRY operation <ul style="list-style-type: none"> Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mist comes out of the indoor unit.	<ul style="list-style-type: none"> This happens when the air in the room is cooled into mist by the cold airflow during COOL operation. This is because the air in the room is cooled by the heat exchanger and becomes mist during defrost operation.
The indoor unit gives out odor.	<ul style="list-style-type: none"> This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the airflow. If this happens, it is recommended to have the indoor unit washed by a technician. Consult the service shop where you purchased the air conditioner.
The outdoor fan rotates while the air conditioner is not in operation.	<ul style="list-style-type: none"> After operation is stopped <ul style="list-style-type: none"> The outdoor fan continues rotating for another 60 seconds for system protection. While the air conditioner is not in operation <ul style="list-style-type: none"> When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
Operation stopped suddenly. (OPERATION lamp is on.)	<ul style="list-style-type: none"> For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.
No remote controller signals are displayed. Remote controller sensitivity is low. Display is low in contrast or blacked out. Display runs out of control.	<ul style="list-style-type: none"> The batteries are dying and the remote controller is malfunctioning. Replace all the batteries with new size batteries, AAA.LR03 (alkaline). For details, refer to set the batteries of this manual. ▶Page 8
Possible sounds.	<ul style="list-style-type: none"> Flowing water <ul style="list-style-type: none"> Generated because the refrigerant in the air conditioner is flowing. This is a pumping sound of the water in the air conditioner and heard when the water is pumped out from the air conditioner in cooling or drying operation. The refrigerant flows in the air conditioner even if the air conditioner is not working when the indoor units in other rooms are in operation. Blowing <ul style="list-style-type: none"> Generated when the flow of the refrigerant in the air conditioner is switched over. Pinging <ul style="list-style-type: none"> Generated when the size of the air conditioner slightly expands or shrinks as a result of temperature changes.

Check again.

Please check again before calling a repair person

Case	Check
The air conditioner does not operate. (OPERATION lamp is off.)	<ul style="list-style-type: none"> • Is a breaker off or a fuse blown? • Is there a power failure? • Are batteries set in the remote controller? • Is the timer setting correct?
Cooling (Heating) effect is poor.	<ul style="list-style-type: none"> • Are the air filters clean? • Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? • Is the temperature setting appropriate? • Are the windows and doors closed? • Are the airflow rate and the airflow direction set appropriately?
Operation stopped suddenly. (OPERATION lamp flashes.)	<ul style="list-style-type: none"> • Are the air filters clean? • Is there anything to block the air inlet or the outlet of the indoor and the outdoor units? • Clean the air filters or take all obstacles away and turn the breaker off. Then turn it on again and try operating the air conditioner with the remote controller. If the lamp still flashes, call the service shop where you purchased the air conditioner. • Are operation modes all the same for indoor units connected to outdoor units in the multi system? If not, set all indoor units to the same operating mode and confirm that the lamps flash. Moreover, when the operating mode is in AUTO, set all indoor unit operating modes to COOL or HEAT for a moment and check again that the lamps are normal. If the lamps stop flashing after the above steps, there is no malfunction. ▶Page 22
An abnormal functioning happens during operation.	<ul style="list-style-type: none"> • The air conditioner may malfunction with lightning or radio waves. Turn the breaker off, turn it on again and try operating the air conditioner with the remote controller.
The louvers do not immediately swing. The louvers move soon after startup.	<ul style="list-style-type: none"> • The air conditioner is adjusting the louvers position. The louvers will start moving soon.


Call the service shop immediately.

WARNING

- When an abnormality (such as a burning smell) occurs, stop the operation and turn the breaker off.
- Continued operation in an abnormal condition may result in malfunctioning, electric shocks or fire.
- Consult the service shop where you purchased the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself.
- Incorrect work may result in electric shocks or fire.
- Consult the service shop where you purchased the air conditioner.
- If one of the following symptoms occurs, call the service shop immediately.
- The power cord is abnormally hot or damaged.
- An abnormal sound is heard during the operation.
- The safety breaker, a fuse, or the ground leakage breaker cuts off the operation frequently.
- A switch or a button often fails to work properly.
- There is a burning smell.
- Water leaks from the indoor unit.
- Turn the breaker off and call the service shop.
- After a power failure, The air conditioner automatically resumes operation in about 3 minutes. Wait for it to restart.
- Lightning If lightning may strike the neighboring area, stop operation and turn the breaker off for system protection.
- Disposal requirements Dismantling the unit, and treatment of refrigerant, oil, and other parts, should be done in accordance with the relevant local and national regulations. We recommend periodic maintenance.

- In certain operating conditions, the inside of the air conditioner may get soiled after several seasons of use, resulting in poor performance. It is recommended to have periodic maintenance by a specialist aside from regular cleaning by the user.
- For specialist maintenance, contact the service shop where you purchased the air conditioner.
- The maintenance cost must be borne by the user.

Fault diagnosis

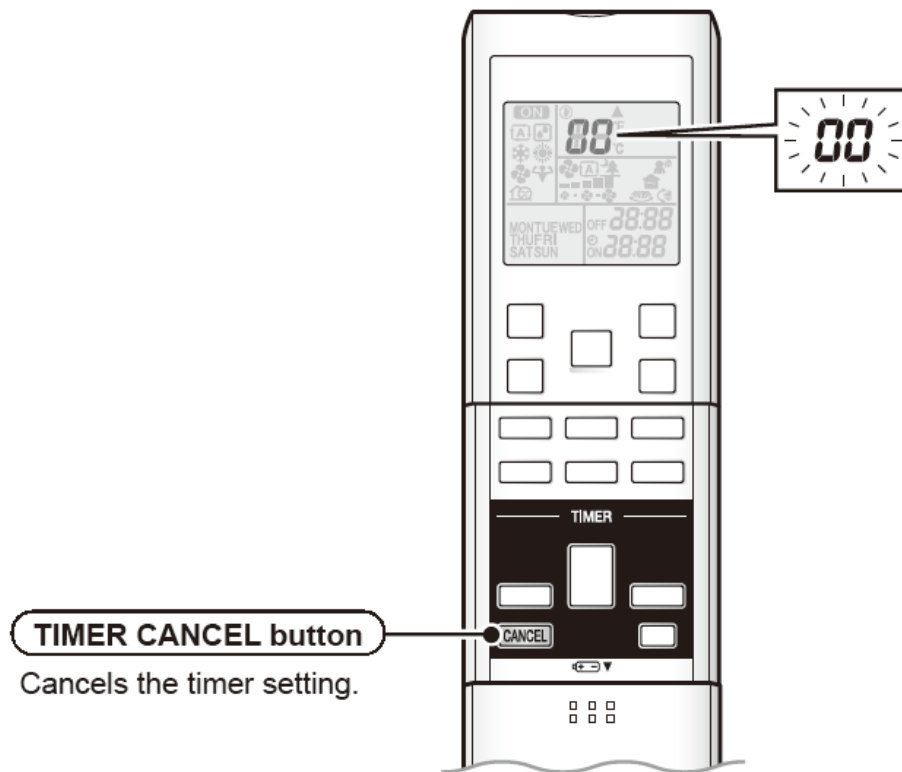

Fault diagnosis by remote controller The remote controller can receive a corresponding error code from the indoor unit. When is held down for 5 seconds, a “ **CANCEL** ” indication blinks on the temperature display section Press repeatedly until a continuous beep is produced. The code indication changes as displayed in the following table, and notifies with a long beep.

	CODE	MEANING
SYSTEM	00	NORMAL
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
OUTDOOR UNIT	EA	COOLING-HEATING SWITCHING ERROR
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	E8	OVERCURRENT INPUT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	DC CURRENT SENSOR FAULT
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

NOTE

- A short beep and two consecutive beeps indicate non-corresponding codes.
- To cancel the code display, hold for 5 seconds. The code display also cancels itself if the button is not pressed for 1 minute.

FAQS

Q: What are the basic functions of a Daikin air conditioner remote control?

A: The basic functions of a Daikin air conditioner remote control typically include power on/off, temperature adjustment, mode selection (such as cooling, heating, fan, etc.), fan speed control, timer settings, and swing or direction control for airflow.

Q: Is Daikin remote always on?

A: If not, please contact your nearest Daikin representative. The remote controller display is always illuminated.

Q: What do the symbols on Daikin remote mean?

A: Cool, Heat, Vent, Fan, Dry or Auto The words "Cool", "Heat", "Vent", "Fan", "Dry" or "Auto" are displayed to present the Operation Mode. The Airflow Rate (Airflow level/Fan Speed) symbol is displayed to show the airflow rate that is set for the indoor unit.

Q: What is the frequency of the Daikin AC remote?

A: Daikin air-conditioner IR code success The learning window indicated that the signal was 33.5 kHz. So I learnt the code again and accepted burst, then changed number of repetitions to 1, and frequency to 35 kHz (as you can't select lower than that) and voilà, it works!

Q: What is the temperature range of the Daikin remote?

A: Wide Temperature Range Daikin offers precise temperature environments from -35°C to 30°C depending on stored item, application, and scale of operation.

Q: What is Daikin sleep mode?

A: As our body needs less cooling when we are sleeping, by switching to sleep mode, your air conditioner will automatically regulate the air around you and increase the temperature bit by bit without you even noticing it (up to a maximum of +3 degrees, depending on your air conditioning brand and model).

Q: What is Daikin sensor mode?

A: This mode has a sensor that detects human movement in the room. If no one is in the room for more than 20 minutes, the operation automatically changes to energy saving operation

Q: What is the powerful mode in Daikin?

A: If a quick boost or reduction in temperature is needed, then you can use Powerful mode. This mode cannot be combined with other functions such as Econo or Comfort mode and only runs for 20 minutes, after which it returns to the previous settings.

Q: What is the difference between auto and cool on Daikin?

A: "Auto Mode" use for Maintain the Set Temperature & After reaching the set point it will Switch to Heater. Cool Mode won't switch to Heat if it gets too cold. Heat Mode won't switch to Cool if it gets too warm. Auto Mode will use Heat or Cool to hold a room temperature.

Q: Why is Daikin the best AC?

A: This Daikin 3 Star AC comes with KATAI technology, a ODU heat exchanger technology that increases the durability of air conditioners. It offers you a stabilizer-free operation and a Coanda airflow feature that evenly circulates the air in all corners of the room, making it one of the best 1.8 ton ACs one can find.

Download PDF: [Daikin Air Conditioner Remote Buttons and Functions Guide](#)