



# Danfoss AK-CC55 Refrigeration Multi Coil Case User Guide

[Home](#) » [Danfoss](#) » Danfoss AK-CC55 Refrigeration Multi Coil Case User Guide 

## Contents




- 1 Danfoss AK-CC55 Refrigeration Multi Coil Case
- 2 Danfoss AK-CC55 Multi Coil Case controllers
- 3 Copyright, Limitation of Liability and Revision Rights
- 4 Modbus Communication
- 5 The parameter list for Multi Coil (084B4084)
- 6 Documents / Resources
- 7 Related Posts



## Danfoss AK-CC55 Refrigeration Multi Coil Case



## Danfoss AK-CC55 Multi Coil Case controllers

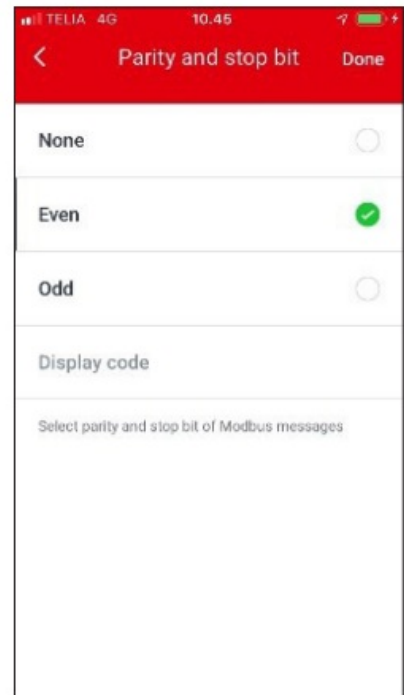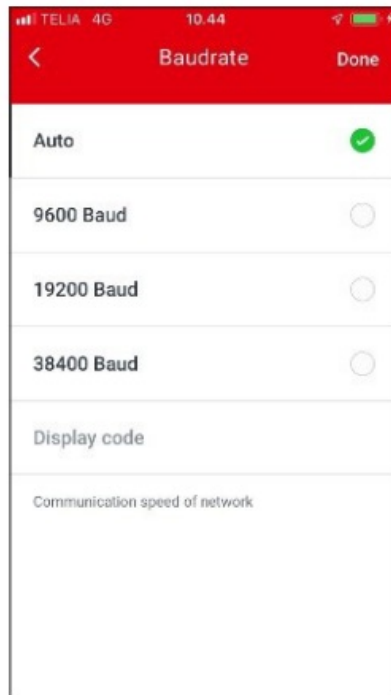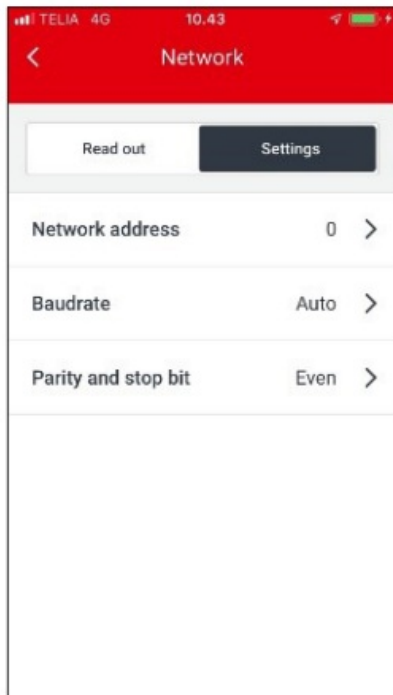

## Copyright, Limitation of Liability and Revision Rights

This publication contains information proprietary to Danfoss. By accepting and using this interface description the user agrees that the information contained herein will be used solely for operating equipment from Danfoss or equipment from other vendors provided that such equipment is intended for communication with Danfoss AK-CC55 Multi Coil Controllers over the RS 485 Modbus serial communication link.

This publication is protected under the Copyright laws of Denmark and most other countries.

Danfoss does not guarantee that a software program produced according to the guidelines provided in this manual will function properly in every physical, hardware or software environment.

Although Danfoss has tested and reviewed the documentation within this interface description, Danfoss makes no warranty or representation, either express or implied, with respect to this documentation, including its quality, performance, or fitness for a particular purpose.

In no event shall Danfoss be liable for direct, indirect, special, incidental, or consequential damages arising out of the use, or the inability to use information contained in this interface description, even if advised of the possibility of such damages.

In particular, Danfoss is not responsible for any costs including but not limited to those incurred as a result of lost profits or revenue, loss or damage of equipment, loss of computer programs, loss of data, the costs to substitute these, or any claims by third parties.

Danfoss reserves the right to revise this publication at any time and to make changes in its contents without prior notice or any obligation to notify previous users of such revisions or changes.

## Modbus Communication

Danfoss AK-CC55 controllers are using Modbus RTU.

Communication speed is default “auto-detection”

Default communication settings are “8 bit, Even parity, 1 stop bit”.

The network address can be set via the AK-UI55 setting display and Network address, as well as Network communication settings, can be changed via the AK-UI55 Bluetooth display and the AK-CC55 Connect service app. For further information see AK-CC55 Documentation.

Danfoss AK-CC55 controllers are Modbus compliant and MODBUS Application Protocol Specification can be found via <http://modbus.org/specs.php>

AK-CC55 Documentation:

AK-CC55 User Guides and Installation Guides can be found via [www.danfoss.com](http://www.danfoss.com):

<https://www.danfoss.com/en/products/electronic-controls/dcs/evaporator-and-room-control/#tab-overview>


### The parameter list for Multi Coil (084B4084)

Parameter	PNU	Value	Min.	Max.	Type	RW	Scale	A
<b>Readouts</b>								
--- Sum alarm	2541	0	0	1	Boolean	R	1	
u00 Ctrl. State	2007	0	0	48	Integer	R	1	
U74 Ctrl.State B	2734	0	0	48	Integer	R	1	X
U83 Ctrl.State C	2743	0	0	48	Integer	R	1	X
u17 Ther. air	2532	0	-2000	2000	Float	R	0.1	
U77 Ther. air B	2737	0	-2000	2000	Float	R	0.1	X
U86 Ther. air C	2746	0	-2000	2000	Float	R	0.1	X
u26 EvapTemp Te	2544	0	-2000	2000	Float	R	0.1	
u20 S2 temp	2537	0	-2000	2000	Float	R	0.1	
U79 S2 temp. B	2739	0	-2000	2000	Float	R	0.1	X
U88 S2 temp. C	2748	0	-2000	2000	Float	R	0.1	X
u16 S4 air temp.	2531	0	-2000	2000	Float	R	0.1	
U76 S4 temp B	2736	0	-2000	2000	Float	R	0.1	X
U85 S4 temp C	2745	0	-2000	2000	Float	R	0.1	X
u09 S5 temp	1011	0	-2000	2000	Float	R	0.1	X
u75 S5 temp. B	2595	0	-2000	2000	Float	R	0.1	X
U72 Food temp	2702	0	-2000	2000	Float	R	0.1	
u23 EEV OD %	2528	0	0	100	Integer	R	1	X
U82 EEV OD % B	2742	0	0	100	Integer	R	1	X
U91 EEV OD % C	2751	0	0	100	Integer	R	1	X
U73 Def.StopTemp	2703	0	-2000	2000	Float	R	0.1	
U93 Def.StopTemB	2763	0	-2000	2000	Float	R	0.1	X
U94 Def.StopTemC	2764	0	-2000	2000	Float	R	0.1	X
u57 Alarm air	2578	0	-2000	2000	Float	R	0.1	
u86 Ther. band	2607	1	1	2	Integer	R	0	
U34 Alarm air B	2671	0	-2000	2000	Float	R	0.1	X
U92 Alarm air C	2762	0	-2000	2000	Float	R	0.1	X
u13 Night cond	2533	0	0	1	Boolean	R	1	
u90 Cutin temp.	2612	0	-2000	2000	Float	R	0.1	
u91 Cutout temp.	2513	0	-2000	2000	Float	R	0.1	
u21 Superheat	2536	0	-2000	2000	Float	R	0.1	
u22 SuperheatRef	2535	0	-2000	2000	Float	R	0.1	
U80 Superheat B	2740	0	-2000	2000	Float	R	0.1	X
U81 SH Ref B	2741	0	-2000	2000	Float	R	0.1	X
U89 Superheat C	2749	0	-2000	2000	Float	R	0.1	X
U90 SH Ref C	2750	0	-2000	2000	Float	R	0.1	X
<b>Settings</b>								
r12 Main switch	117	0	-1	1	Integer	RW	1	
r00 Cutout	100	20	-500	500	Float	RW	0.1	

**Note:** Parameters marked with “X” in the “A” (App mode column) is not present in all App modes (for further info see AK-CC55 User Guide).

Parameter	PNU	Value	Min.	Max.	Type	RW	Scale	A
r01 Differential	101	20	1	200	Float	RW	0.1	
--- Def. Start	1013	0	0	1	Boolean	RW	1	
d02 Def. Stop temp	1001	60	0	500	Float	RW	0.1	
A03 Alarm delay	10002	30	0	240	Integer	RW	1	
A13 HighLim Air	10019	80	-500	500	Float	RW	0.1	
A14 LowLim Air	10020	-300	-500	500	Float	RW	0.1	
r21 Cutout 2	131	2.0	-60.0	50.0	Float	RW	1	
r93 Diff Th2	210	2.0	0.1	20.0	Float	RW	1	
d02 Def.StopTemp	1001	6.0	0.0	50.0	Float	RW	1	
d04 Max Def.time	1003	45	d24	360	Integer	RW	0	
d28 DefStopTemp2	1046	6.0	0.0	50.0	Float	RW	1	
d29 MaxDefTime2	1047	45	d24	360	Integer	RW	0	
<b>Alarms</b>								
--- Contr. error	20000	0	0	1	Boolean	R	1	
--- RTC error	20001	0	0	1	Boolean	R	1	
--- Pe error	20002	0	0	1	Boolean	R	1	
--- S2 error	20003	0	0	1	Boolean	R	1	
--- S4 error	20004	0	0	1	Boolean	R	1	
--- S5 error	20005	0	0	1	Boolean	R	1	
--- S5 error B	20006	0	0	1	Boolean	R	1	
--- RH input err	20007	0	0	1	Boolean	R	1	
--- S4 error B	20008	0	0	1	Boolean	R	1	
--- S4 error C	20009	0	0	1	Boolean	R	1	
--- S2 error B	20010	0	0	1	Boolean	R	1	
--- S2 error C	20011	0	0	1	Boolean	R	1	
--- High t.alarm	20012	0	0	1	Boolean	R	1	
--- Low t. alarm	20013	0	0	1	Boolean	R	1	
--- Door alarm	20014	0	0	1	Boolean	R	1	
--- Max HoldTime	20015	0	0	1	Boolean	R	1	
--- No Rfg. sel.	20016	0	0	1	Boolean	R	1	
--- DI1 alarm	20017	0	0	1	Boolean	R	1	
--- DI2 alarm	20018	0	0	1	Boolean	R	1	
--- Standby mode	20019	0	0	1	Boolean	R	1	
--- Case clean	20020	0	0	1	Boolean	R	1	
--- HighTemp. B	20021	0	0	1	Boolean	R	1	
--- Low Temp. B	20022	0	0	1	Boolean	R	1	
--- CO2 Alarm	20023	0	0	1	Boolean	R	1	
--- Refg. Leak	20024	0	0	1	Boolean	R	1	
--- HighHumidity	20025	0	0	1	Boolean	R	1	
--- Low Humidity	20026	0	0	1	Boolean	R	1	
--- High Temp. C	20027	0	0	1	Boolean	R	1	
--- Low Temp. C	20028	0	0	1	Boolean	R	1	
--- Max Def.Time	20029	0	0	1	Boolean	R	1	
--- MaxDefTime B	20030	0	0	1	Boolean	R	1	
--- MaxDefTime C	20031	0	0	1	Boolean	R	1	

## Documents / Resources

	<p><a href="#">Danfoss AK-CC55 Refrigeration Multi Coil Case [pdf]</a> User Guide</p> <p>AK-CC55 Refrigeration Multi Coil Case, AK-CC55, Refrigeration Multi Coil Case, Multi Coil Case, Coil Case, Case</p>
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------