



Danfoss APP 53 High Pressure APP Pump Instructions

[Home](#) » [Danfoss](#) » Danfoss APP 53 High Pressure APP Pump Instructions 



ENGINEERING
TOMORROW




Instruction
APP Pump Instruction
APP 53 / APP 65 / APP 78 / APP 86 / APP 92

Contents

- [1 Identification](#)
- [2 System design](#)
- [3 Building up the pump unit with BoWex coupling](#)
- [4 Initial start-up](#)
- [5 Operation](#)
- [6 Service and warranty](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Identification

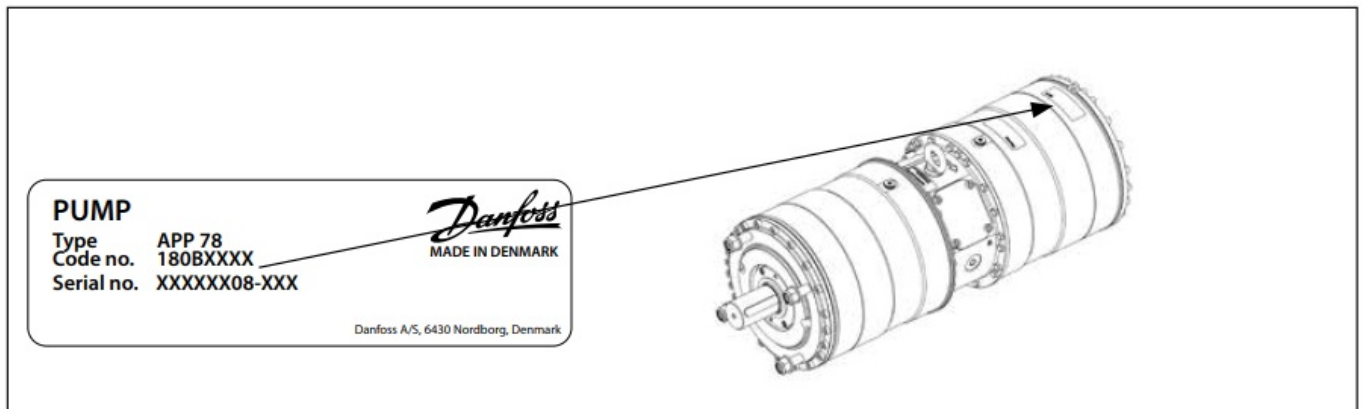

System design

The design of the system must ensure that the self-emptying of the pump during a standstill is avoided. The inlet pressure of the pump must never exceed the outlet pressure. This may typically occur in boosted or open-ended systems with a direct water supply.

2.1 Open-ended systems with direct water supply

Axial piston pumps require a certain inlet pressure to perform as intended. Please find the min. required feed pressure in the pump data sheet. Please also note that feed pressure must not exceed 5 bar (72.5 PSIG). To protect the pump from being damaged by peaks of high pressure in case the pump stops momentarily, it is required to mount a low-pressure relief valve on the inlet line.

Note: The inlet connection must be properly tightened, as the possible entrance of air will cause cavitation.


2.2 Preferred RO system design without ERD

1. Dimension the inlet line to obtain minimum pressure loss (large flow, minimum pipe length, minimum number of bends/ connections, and fittings with small pressure losses).
2. Place an inlet filter (1) in front of the APP pump (2). Please consult the Danfoss filter data sheet for guidance on how to select the right filter. Thoroughly clean pipes and flush the system prior to start-up.
3. Place a monitoring pressure switch (3) set at min. inlet pressure between the filter and pump inlet. The monitoring switch must stop the pump at pressures lower than minimum pressure.
4. Use flexible hoses (4) to minimize vibrations and noise.
5. In order to eliminate the risk of damage and cavitation, positive pressure at the inlet (5) is always to be maintained at min. inlet pressure and max. inlet pressure. It is recommended to install a safety valve or a

pressure relief valve (9) in order to avoid high-pressure peaks in case the pump stops momentarily or is spinning backward.

6. For easy system bleeding and flushing, a bypass non-return valve (6) is integrated in the APP pump.
7. A non-return valve (7) in the outlet can be installed in order to avoid the backspin of the pump. The volume of water in the membrane vessel works as an accumulator and will send flow backward in case of the pump stops momentarily.
8. A safety valve or a pressure relief valve (8) can be installed in order to avoid system damage as the Danfoss APP pump creates pressure and flow immediately after start-up, regardless of any counter pressure.

Note: If a non-return valve is mounted in the inlet line, a low-pressure relief valve is also required between the non-return valve and pump as protection against high-pressure peaks.

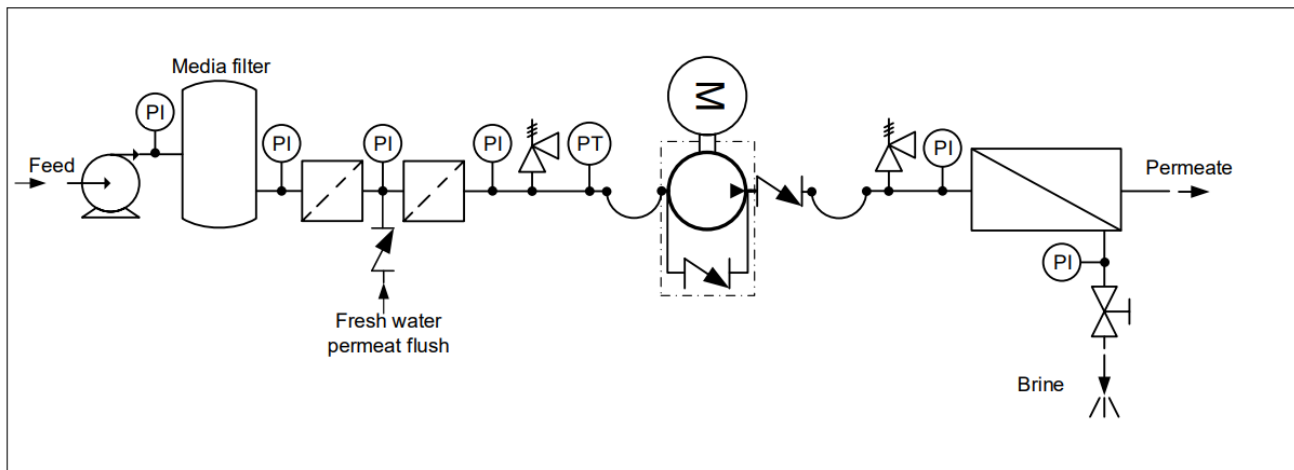

2.3 Preferred RO system design with ERD

For the P&ID of a setup with an image, please see the iSave® Data sheet 521B1378

2.4 Preferred RO system design with pumps and ERDs in parallel

For systems with Danfoss pumps and ERDs in parallel, please see our publication 180R9354, Guideline for Parallel-coupled pumps and ERD.

2.5 Reversible pumps

If exposed to high pressure in the outlet while the electric motor is not energized, the pumps may start spinning backward. This will not harm the pumps as long as the pressure in the inlet does not exceed the max. pressure peak of 10 bar (145 psi). If a non-return valve is mounted in the inlet line, a low-pressure relief valve is required as protection

against high-pressure pulses and high-pressure in general.

Alternatively, a high-pressure check valve can be mounted in the pump discharge line to prevent the pump from reversing.

The setup of an “open-end system” ensures that the inlet pressure does not exceed 10 bar (145 PSIG), when a non-return valve is mounted in the inlet.

2.6 General comments

Good filtration is vital to ensure a long and trouble-free life of the pump.

As water has very low viscosity, the APP pumps have been designed with very narrow clearance in order to control internal leakage rates and improve component performance. Therefore it is important that the inlet water is filtered properly to minimize the wear of the pump.

The main filter must have a filtration efficiency of 99.98% at 10 µm. We recommend using precision depth filter cartridges rated 10 µm abs. $\beta_{10} \geq 5000$ (equivalent to a filtration efficiency of 99.98%). Bag filters and string wound filter cartridges typically have only 50% filtration efficiency. This means that for every 100,000 particles reaching

the filter, 50,000 particles pass through it compared to only 20 particles in a filter with an efficiency of 99.98%.

For more information on the importance of proper filtration, please see our data sheet 521B1009 on “Filtration”, which also will provide you with an explanation of filtration definitions and guidance on how to select the right filter.






Monitoring

It is recommended to continuously monitor the following conditions:


- Filter clogging
- Pressure (inlet- and outlet side of the pump)

Building up the pump unit with BoWex coupling

3.1 Assembly of the coupling

	We recommend inspecting bores, shafts, keyways,s and feather keys for dimensional accuracy before assembly.
	Heating the hubs lightly (approx. 80 °C) allows for easier mounting on the shaft.
	Please pay attention to the ignition risk in potentially explosive atmospheres!
	Touching the heated hubs causes burns. Please wear safety gloves.
	With the assembly please make sure that the spline of the hub is fully covered by the internal spline of elastomer (please observe mounting dimensions Lcoupling). Disregarding this advice may cause damage to the coupling.

3.2 Alignment between the motor and pump shaft

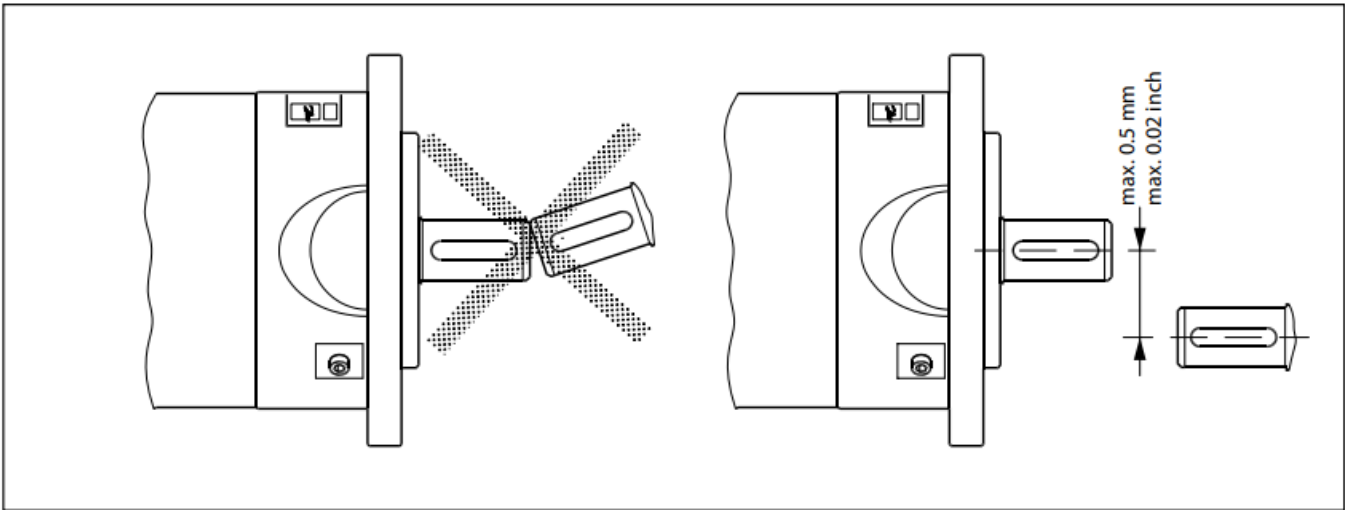

3.3 Overall assembly with coupling BoWex-ELASTIC®, type HEW compact

Danfoss recommends using a Bowex Elastic HEW Compact Coupling.

See the Coupling Manual from BoWex.

1: Bolts 190 Nm ± 10
2: Nuts 100 Nm ± 10
3: Torque see table

Thread size	M5	M6	M8	M10
Torque [Nm]	2	4.8	10	17

Component	Quantity	Description
1	1	Elastomer part
2	1	Hub
4	1	Coupling flange
5	10	Cap screws DIN EN ISO 4762
7	2	Setscrews DIN EN ISO 4029

3.3.1 Mounting

1. Mount the coupling flange (component 4) in front of the elastomer part (component 1) and screw the components together with a tightening torque of 120 Nm. Lubricate inside the coupling hubs (not the shafts).



If used in potentially explosive atmospheres the setscrews to fasten the hubs, as well as all screw connections, must be secured against working loose additionally, e.g. conglomerating with Loctite (average strength).



Please observe the manufacturer’s instructions regarding the use of adhesives. Do not apply glue on the rubber surfaces.


2. Mount the bell housing on the pump. Secure nuts with the right torque.
3. Push the coupling part all the way down to the shoulder of the pump shaft and secure it with the right torque on the locking screws. Measure the distance “a” from the end of the bell housing to the end of the toothing of the coupling.
4. Mount the coupling on the motor shaft without using a hammer. If needed then polish the motor shaft/key and inside coupling hub.
5. On the motor shaft position the coupling so that the length from the end of the coupling to the end of the motor

flange is “ $b = a + 32.5 \text{ mm} \pm 2 \text{ mm}$ ”.

6. Secure the coupling on the motor shaft with the right torques on the locking screws.
7. Connect carefully pump/bell housing to the motor. Turn the motor shaft so coupling teeth can interact.
8. Mount motor flange bolts to the bell housing and tighten with the right torque.
9. Check coupling space. The pump coupling should be in a position so there is still 3-7 mm space.

If alternative mounting is desired, please contact Danfoss High-Pressure Pumps.

Please take care to observe the recommended length tolerances of the chosen coupling, as an axial force on the pump will damage the pump.

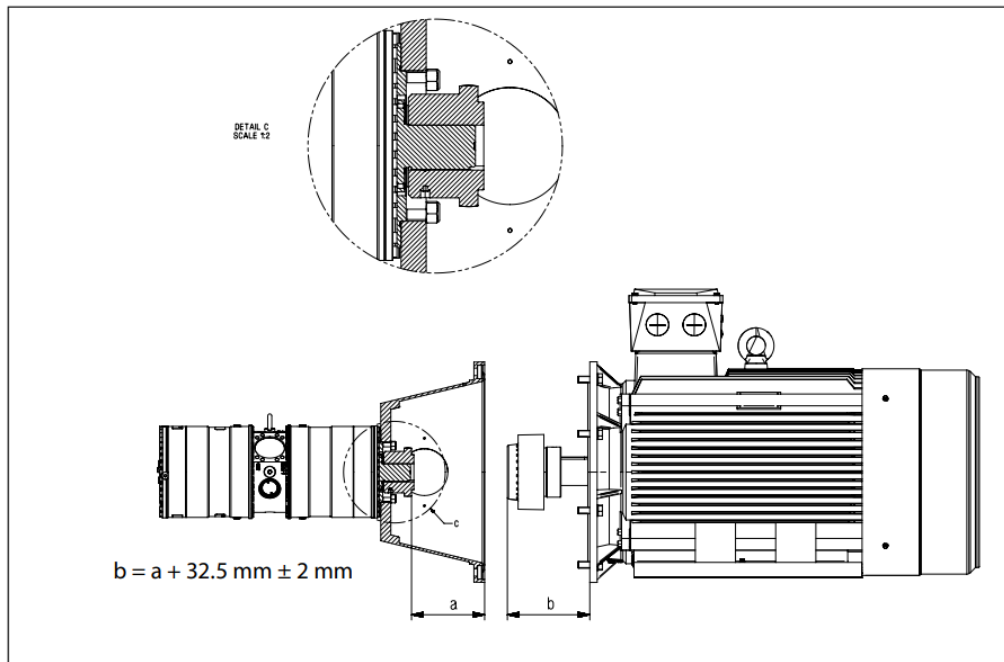

3.4 Direction of rotation

Is indicated by an arrow engraved in the flange of the pump.

3.5 Orientation

APP 53-92 can be mounted/orientated in steps of 45 degrees. Please see Data sheet 521B1340.

3.6 Protection from too-high pressures


The pump should be protected against too high pressure by means of a safety valve or a pressure relief valve.

The opening characteristics of the valve must not result in peak pressures higher than 100 bar (1450 psi).


The valve should be placed as close to the pump as possible. We recommend installing flexible soft hoses both in the inlet and outlet lines.

The valve outlet must not be connected directly to the pump suction line.

It must be connected directly to the drain.

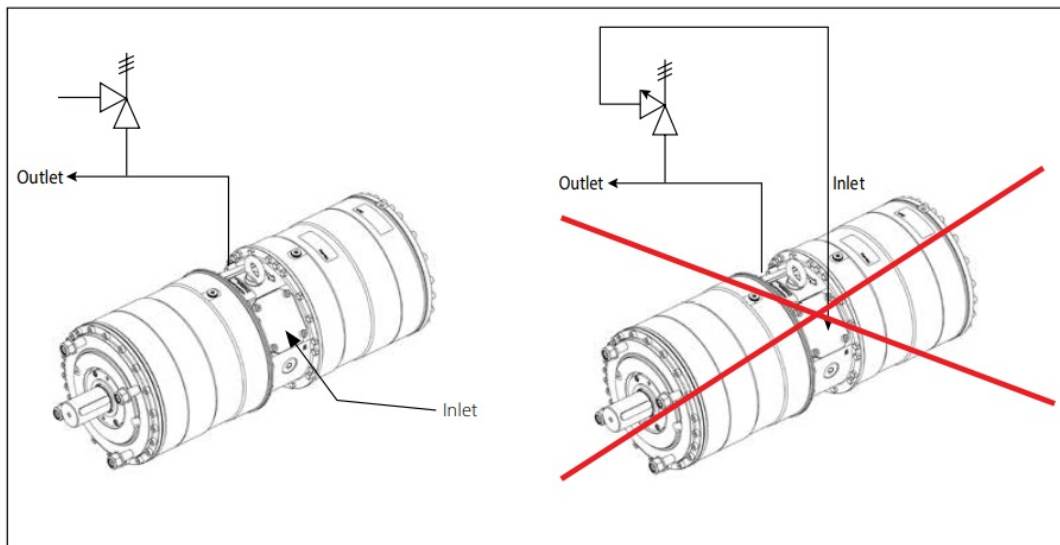

Building up the pump unit with jaw coupling

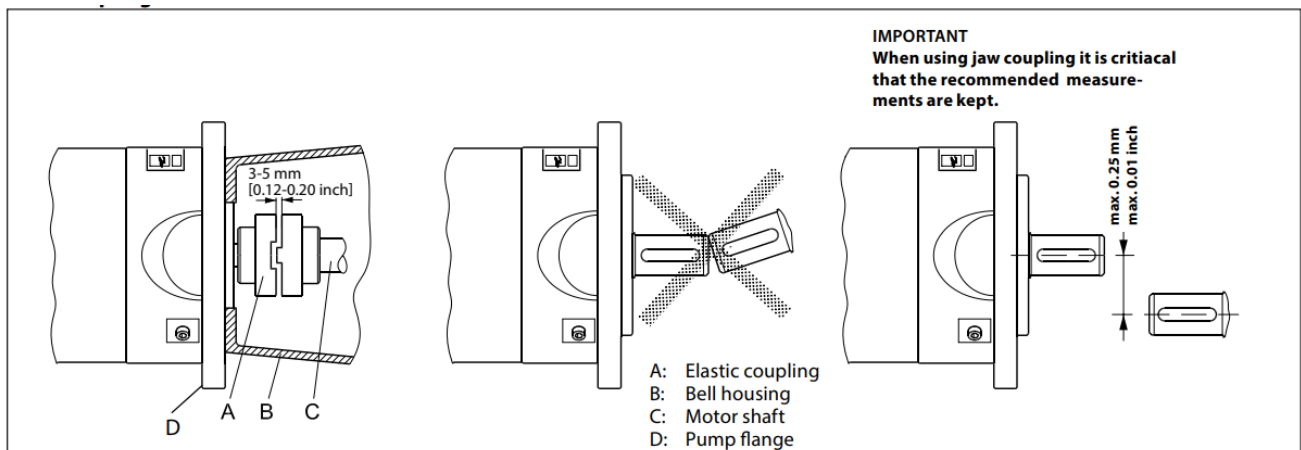


4.1 Mounting

1. Mount the coupling flush with the pump shaft end or a maximum of 1 mm offset from the pump shaft end. Ensure an air gap between coupling parts of 3-5 mm (0.12-0.2 inch).
2. Mount the bell housing on the pump. Secure nuts with the right torque.
3. Measure the longest distance "A" from the top of the bell housing to the button of coupling claw.
4. Mount the coupling on the motor shaft. Ensure the coupling and motor flange are not in contact with each other.
5. Measure from the motor flange to the top of the coupling. That measurement "B" shall be 3-5 mm (0.12-0.2 inch) shorter than the measurement "A".
("A" and "B" can be found on the next page).
6. Adjust respectively, verify the measurement, and secure both couplings with the right request on the locking screws (see coupling operation & mounting instruction).
7. Mount the elastic gear ring and mount the bell housing/pump on the motor. After mounting it must be possible to move the elastic gear ring 3-5 mm (0.12 – 0.2 inch) axial "C". The check can be done through the inspection hole of the bell housing. Secure flange bolts with the right torque.


If alternative mounting is desired, please contact Danfoss High-Pressure Pumps. Choose proper tolerances to ensure an easy mounting of the elastic coupling without use of tools.

Please take care to observe the recommended length tolerances of the chosen coupling, as an axial force on

the pump will damage the pump.

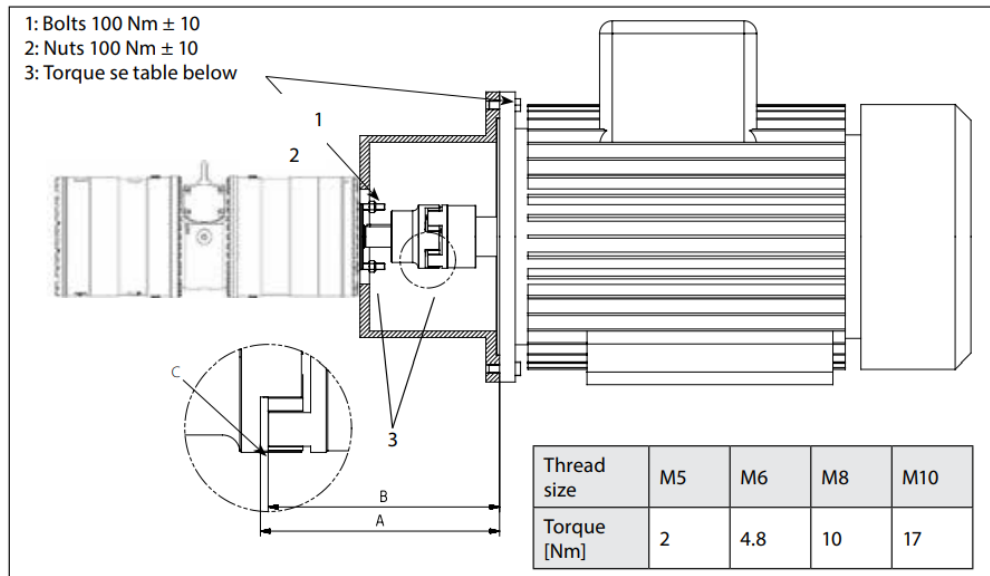

4.2 Connections

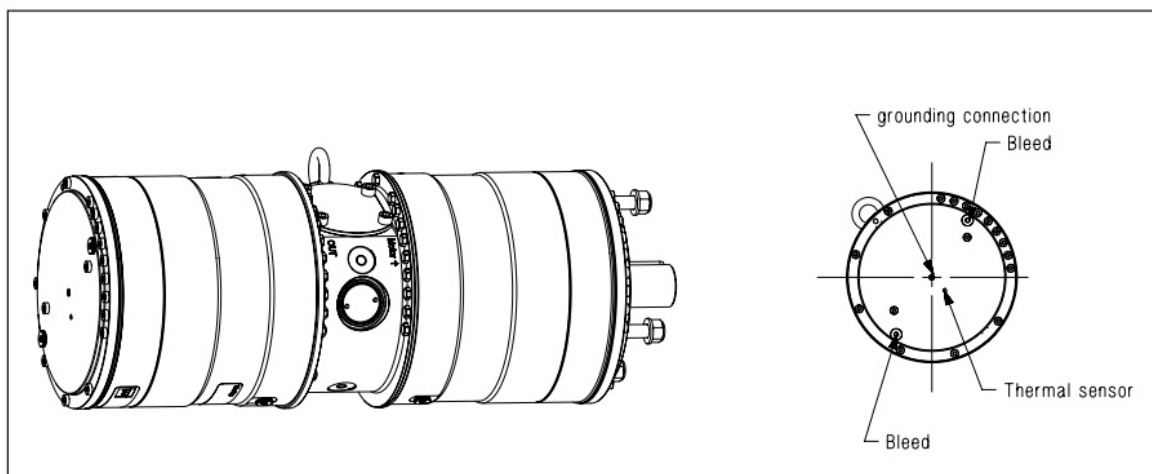


To prevent stray current corrosion we recommend grounding of the pump and all other parts in the system. All parts in the system must be electrical potential equalized to a single reference point (grounding point). It is recommended that the electrical resistance in the grounding cable is equal to or below 0.25 Ohm toward the grounding point.

Initial start-up

1. Flush the inlet line before connecting the pump, to remove possible impurities from pipes, hoses, etc.
2. Connect pump inlet to inlet line and flush the pump for 5 min. by means of the internal flushing valve, to remove possible impurities from pipes, hoses, etc.
3. Loosen the top bleeding plug (see item 3.5) and sign an Allen key (only plugs with internal hexagon sockets). Retighten the plug, when water appears from the bleeding plug.
4. Make sure that the direction of rotation of the electric motor corresponds to the direction of rotation of the pump, shown on the pump flange.
5. Now the pump is ready for start-up.

WARNING

Make sure that the direction of rotation of the electric motor corresponds to the direction of rotation of the pump. Otherwise, the pump will be damaged if a check valve is placed between the pump and the feed pump.

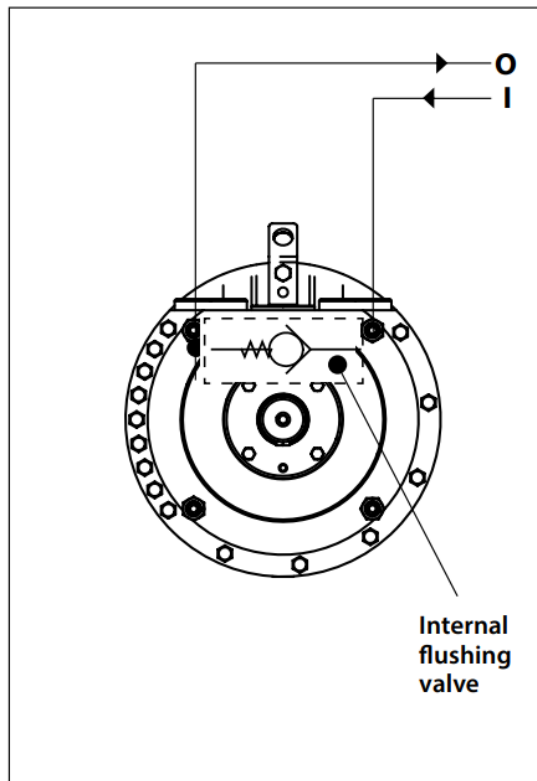

Operation

6.1 Temperature

Fluid temperature:

Min. +2°C to the max. +50°C

(Min. +35.6°F to the max. +122°F)

Ambient temperature:


Min. +2°C to the max. +50°C

(Min. +35.6°F to the max. +122°F)

In case of lower operating temperatures, please contact Danfoss High-Pressure Pumps.

The chart below illustrates the corrosive resistance of different types of stainless steel related to NaCl concentration and temperature. The APP water pump is made of Duplex and Super Duplex.

If the water pump is operated above the Super Duplex line, always flush the water pump with fresh water at the operation stop in order to minimize the risk of crevice corrosion.

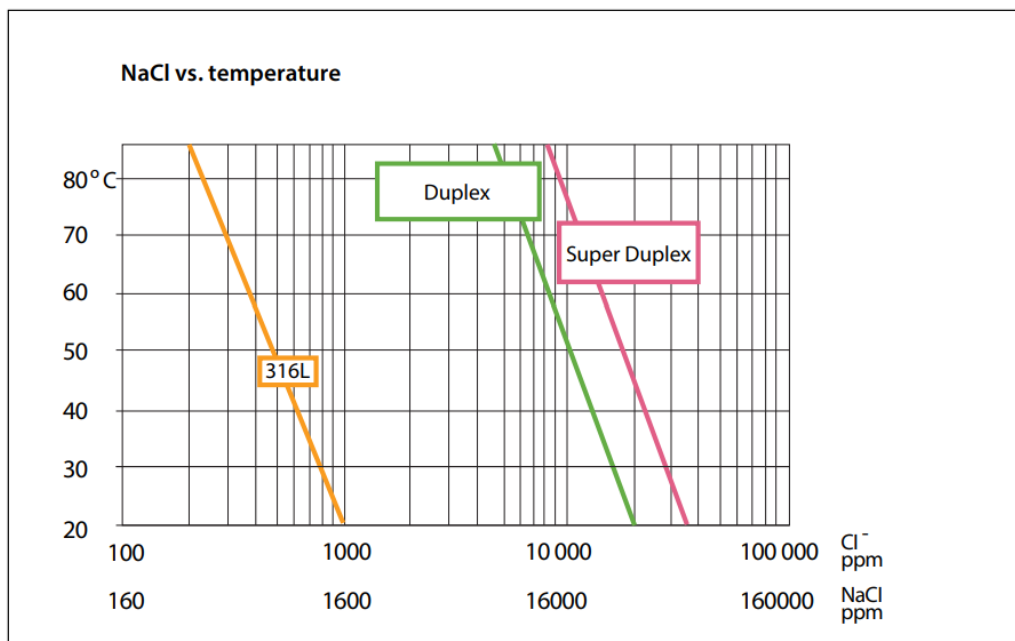

6.2 Pressure

The inlet pressure shall be min. 2 barg (30 PSIG) and max. 5 barg (72.5 PSIG). At lower pressures the pump will cavitate, resulting in damage of the pump.

Max. inlet pressure peak (e.g. in case the pump stops momentarily) up to 10 barg (145 PSIG) are acceptable.

Max. pressure on the pump's outlet line shall be limited at 80 barg (1160 PSIG) continuously. For APP 86 min. inlet pressure shall be 2.5 barg (36 PSIG) and max. outlet pressure shall be 70 barg (1015 PSIG).

For APP 92 min. inlet pressure shall be 3.5 barg (50 PSIG) and max. outlet pressure shall be 70 barg (1015 PSIG).

Note: The pump unit should include a pressure gauge on the high-pressure side.

6.3 Dry running

When running, the pump must always be connected to the water supply in order to avoid damage if it should run dry.

6.4 Disconnection

If the inlet line is disconnected from the water supply, the pump will be emptied of water through the disconnected inlet line.

When starting up again, follow the bleeding procedure described under section 4: Initial start-up.

6.5 Storage

Storage temperature:

Min. -40°C to the max. +70°C

(Min. -40°F to the max. +158°F)

When preparing the pump for long-term storage at temperatures below the freezing point, flush the pump with an anti-freeze medium-type mono-propylene glycol to prevent internal corrosion or frost in the pump.

For further information on anti-freeze media, please contact Danfoss High-Pressure Pumps.

Recommended procedure:

1. Disconnect the water supply to the pump.
2. Through the lower bleeding plug, empty the pump housing of water and close it again.
3. Connect the pump to a tank containing an anti-freeze additive. Connect a hose to the inlet port of the pump and via another hose return the flow from the outlet port to the tank with antifreeze additives.
4. Quickly start and stop the pump. Make sure that the pump does not run dry. The pump is now protected

against internal corrosion and frost.

Storage:

Storage of pumps that have been in operation: For shorter periods of storage flush the pump with permeate by rotating the pump for 10 sec. empty permeate and store.

For long-term storage (more than 2 months) Danfoss recommends servicing the product and cleaning any biological growth on the surfaces. Store the pump without water inside.

Service and warranty

Warranty

Danfoss APP pumps are designed for long operation, low maintenance, and reduced lifecycle costs.

Provided that the pump has been running according to the Danfoss specifications, Danfoss guarantees 8,000 hours of service-free operation, however, max. 18 months from the date of production.

If Danfoss's recommendations concerning system design are not followed, it will strongly influence the life of the APP pumps.

Other factors that affect pump performance and lifetime include:

- Insufficient filtration
- Insufficient bleeding and venting
- Running the pump at a speed outside specifications.
- Supplying the pump with water at a temperature higher than recommended.
- Running the pump at inlet pressure outside specifications.
- Running the pump at outlet pressure outside the specifications.
- Wrong direction of rotation.

Maintenance

After 8,000 hours of operation, it is strongly recommended to inspect the pump and change any worn parts, e.g. pistons and shaft seal. This is done in order to prevent a potential breakdown of the pump. If the parts are not replaced, more frequent inspection is recommended according to our guidelines.

Pump shutdown:

The APP pumps are made of Duplex/Super Duplex materials with excellent corrosion properties. It is, however, always recommended to flush the pump with fresh water when the system is shut down.

When stopping the pump for more than 1 day flush the pump with permeate by rotating the pump for 10 sec.

Flushing through the flashing valve of the pump without rotating the pump is not enough for cleaning the inside of the pump. The pump can be flushed with biocide-like membranes. The biocide must be compatible with the materials used in our pump (materials can be found in the parts list in the Service Guide and Operating manual).

Repair


In case of an irregular function of the APP pump, please contact Danfoss High-Pressure Pumps.



Danfoss A/S
High Pressure Pumps
DK-6430 Nordborg
Denmark

Danfoss can accept no responsibility for possible errors in catalogs, brochures, and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed upon. All trademarks in this material are the property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Documents / Resources

	<p>Danfoss APP 53 High Pressure APP Pump [pdf] Instructions APP 53, High Pressure APP Pump, APP 53 High Pressure APP Pump, APP Pump, Pump, APP 65, APP 78, APP 86, APP 92</p>
---	---