



# Danfoss AS-CX06 Lite Programmable Controller Installation Guide

[Home](#) » [Danfoss](#) » Danfoss AS-CX06 Lite Programmable Controller Installation Guide 




## AS-CX06 Lite Programmable Controller Installation Guide

### Contents

- [1 Identification](#)
- [2 Dimensions](#)
- [3 Connections](#)
- [4 Data communication](#)
- [5 AKV info \(only for Mid+ version\)Technical data](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)


### Identification

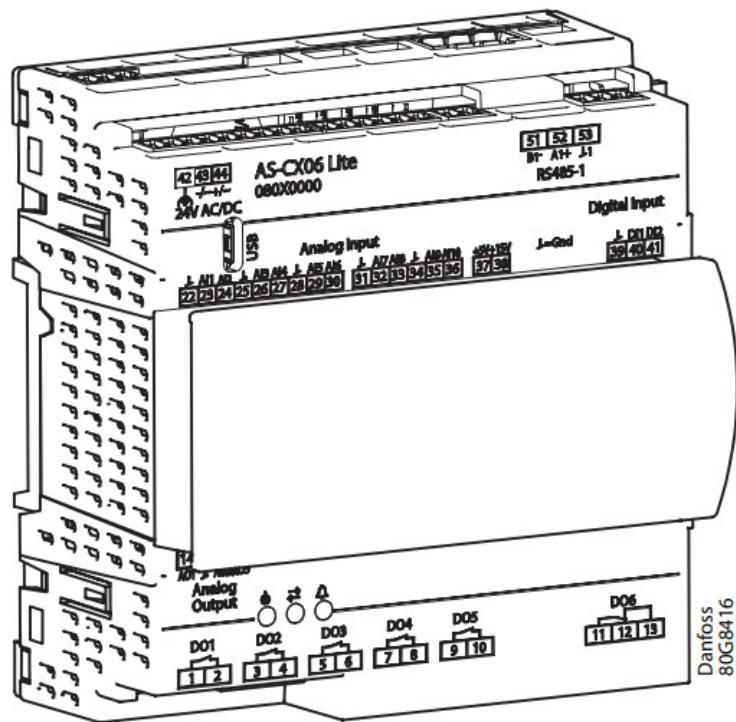


AS-CX06 Lite	080G6008
AS-CX06 Mid	080G6006
AS-CX06 Mid+	080G6004
AS-CX06 Pro	080G6002
AS-CX06 Pro+	080G6000

## Dimensions

Without LCD display

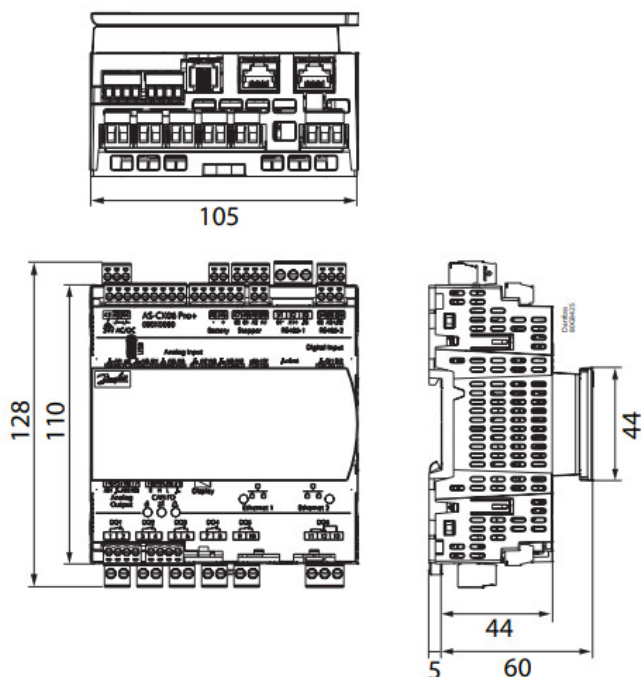


With Snap-on LCD display: 080G6016

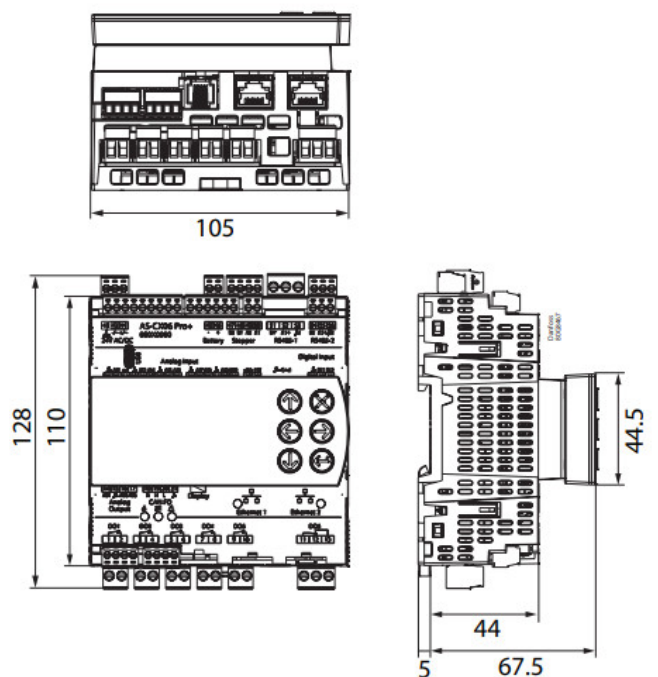


## Connections

### System connections

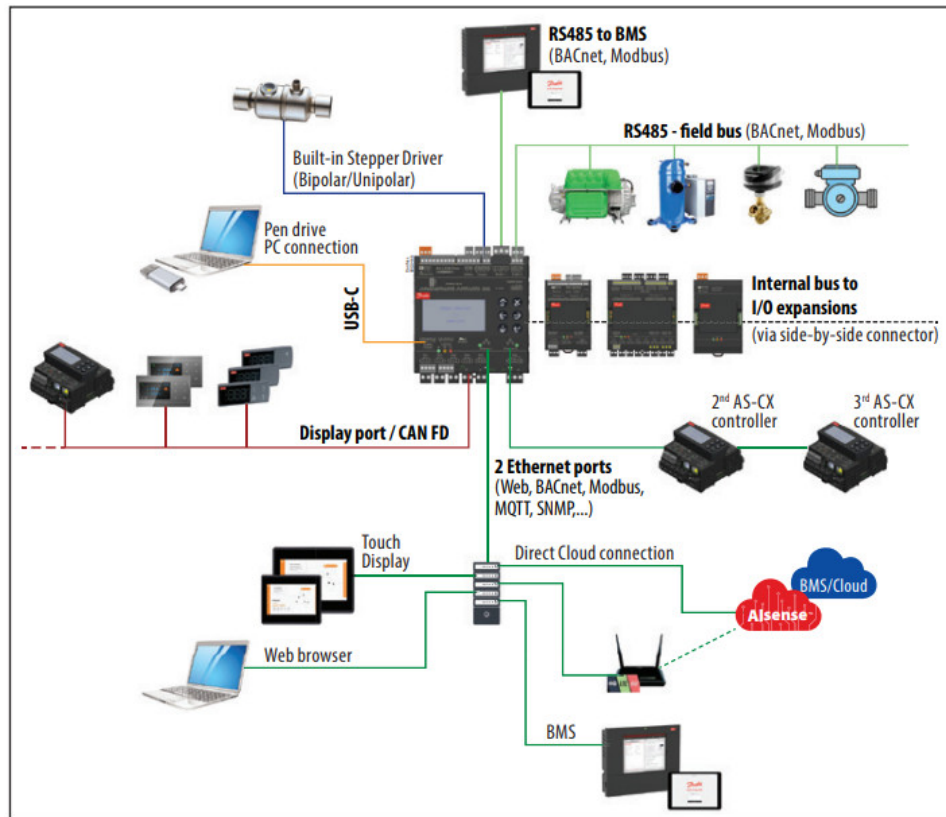



### Top Board

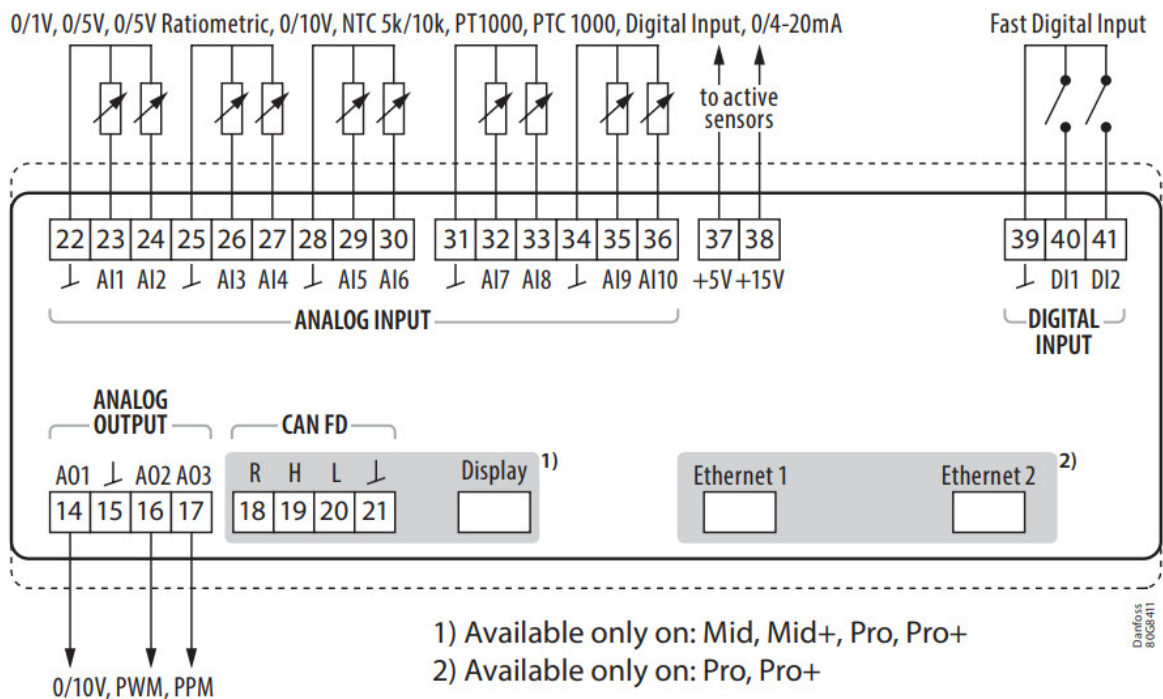

### Bottom Board


input for battery back-up modules to secure closure of electronic stepper valves (e.g. EKE 2U)

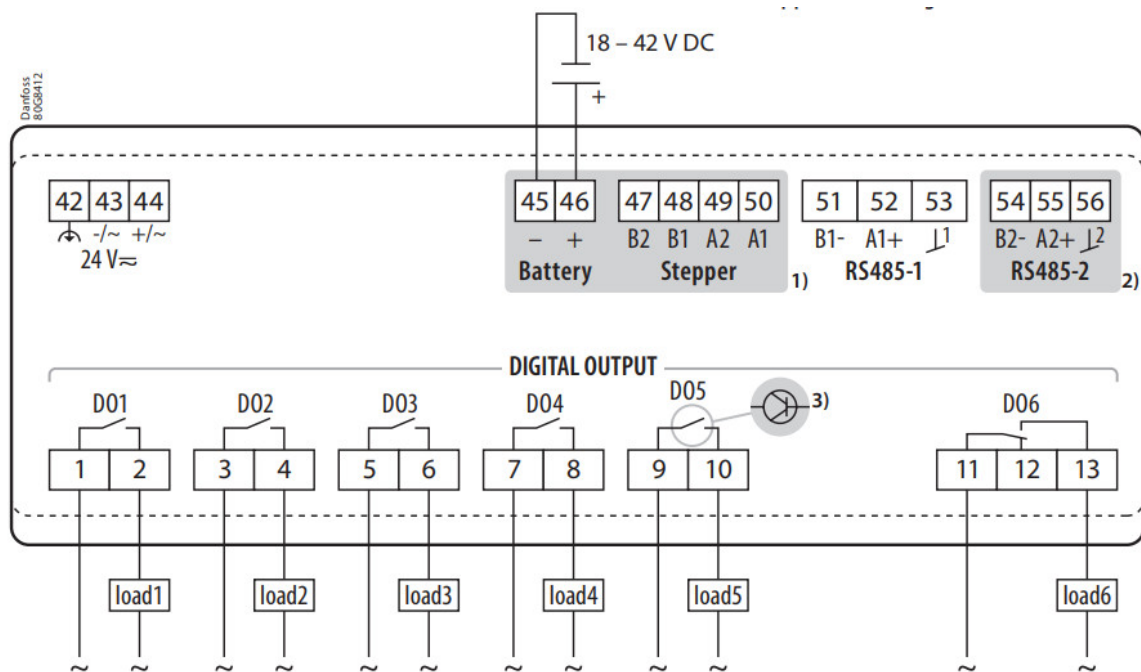

1. Available only on: Mid+, Pro+
2. Available only on: Mid, Mid+, Pro, Pro+
3. SSR  is used in the place of SPST relay on Mid+

## Data communication

### Ethernet (only for Pro and Pro+ versions)

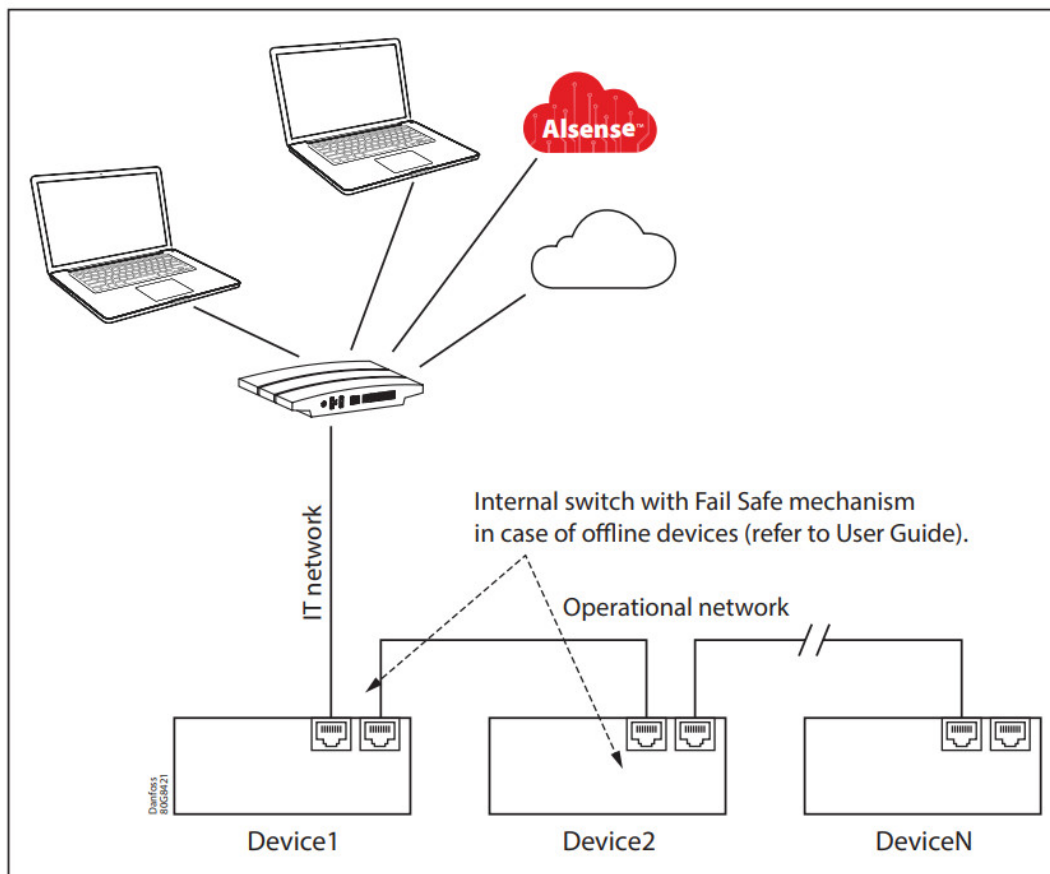


Point to point star topology with network hubs/switches. Each AS-CX device incorporates a switch with fail-safe technology.

- Ethernet type: 10/100TX auto MDI-X
- Cable type: CAT5 cable, 100 m max.
- Cable type connector: RJ45

### First access information

The device automatically acquires its IP address from the network via DHCP.

To check the current IP address, press ENTER  to access the default settings menu and select Ethernet Settings.

Enter the IP address in your preferred web browser to access the web front-end. You will be directed to a login screen with the following default credentials:

**Default User:** Admin

**Default Password:** Administrator


**Default Numeric Password:** 12345 (to be used on LCD screen) You will be prompted to change your password after your initial successful login.

**Note:** there is not a way to retrieve a forgotten password.

### RS485: Modbus, BACnet

RS485 ports are isolated and can be configured as client or server. They are used for fieldbus and BMS systems communication.

### Bus topology

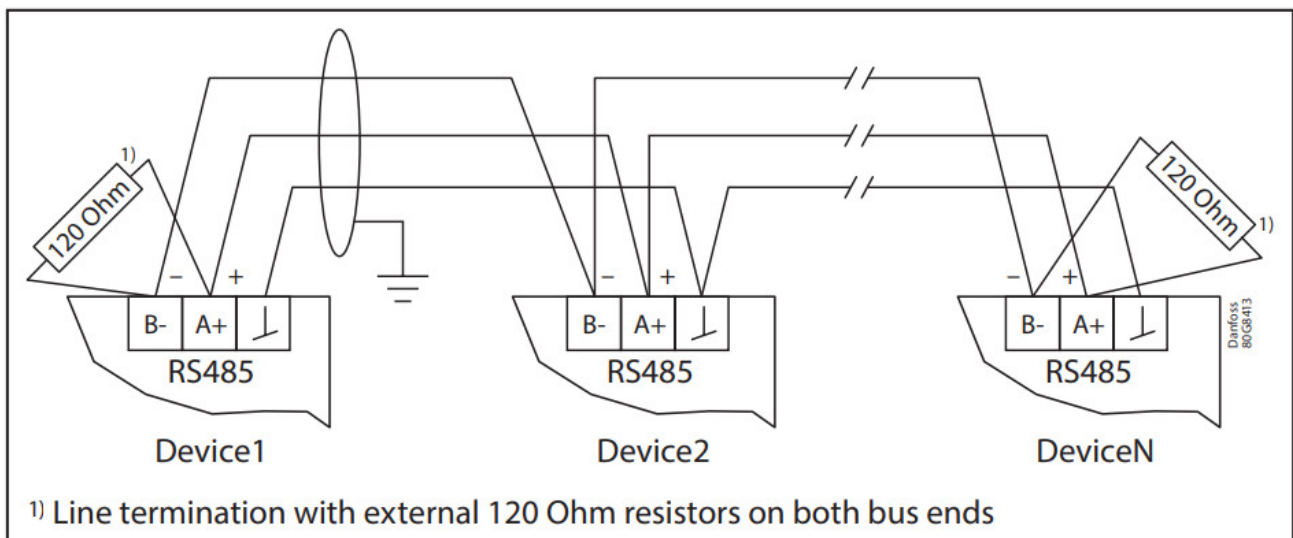

Cable type recommendations:

- Twisted pair with ground: short leads (i.e. <10 m), no power lines in proximity (min. 10 cm).
- Twisted pair + ground and shield: long leads (i.e. >10 m), EMC- disturbed environment.


### Max. number of nodes: up to 100

Wire length (m)	Max. baud rate	Min. wire size
1000	125 kbit/s	0.33 mm <sup>2</sup> – 22 AWG

### CAN FD

CAN FD communication is used for device-to-device communication. It is also used to connect Alsmart remote HMI via display port.

### Bus topology

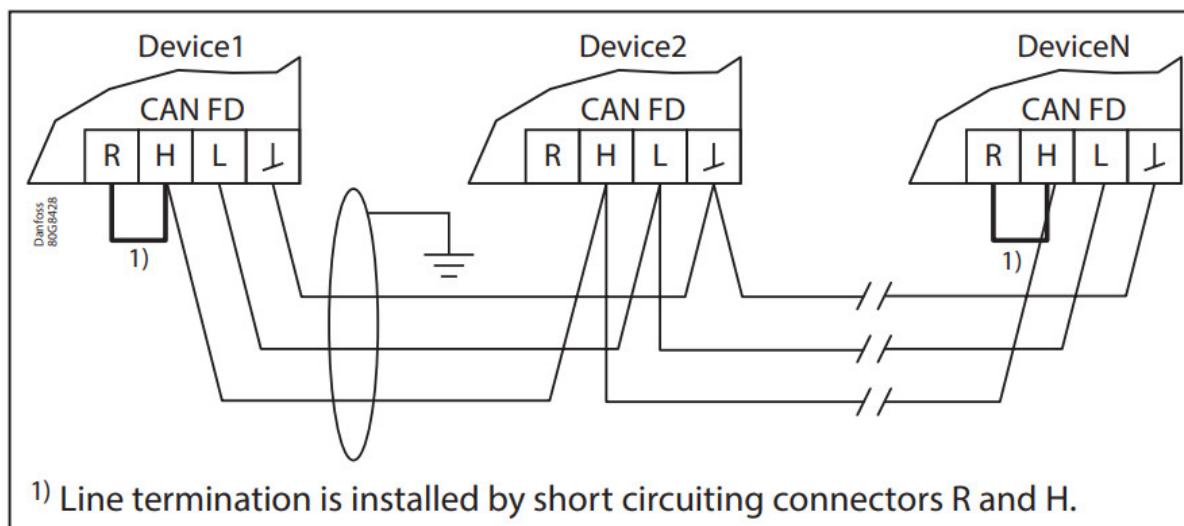

#### Cable type:


- Twisted pair with ground: short leads (i.e. <10 m), no power lines in proximity (min. 10 cm).
- Twisted pair + ground and shield: long leads (i.e. >10 m), EMCdisturbed environment

Max. number of nodes: up to 100

Wire length (m) 1000	Max. baudrate CAN	Min. wire size
1000	50 kbit/s	0.83 mm <sup>2</sup> – 18 AWG
500	125 kbit/s	0.33 mm <sup>2</sup> – 22 AWG
250	250 kbit/s	0.21 mm <sup>2</sup> – 24 AWG
80	500 kbit/s	0.13 mm <sup>2</sup> – 26 AWG
30	1 Mbit/s	0.13 mm <sup>2</sup> – 26 AWG

#### Installation of RS485 and CAN FD


- Both fieldbuses are of two wire differential type, and it is fundamental for reliable communication to connect all the units in a network also with a ground wire.  
Use one twisted pair of wires for connecting the differential signals and use another wire (for example a second twisted pair) for connecting the ground. For example:

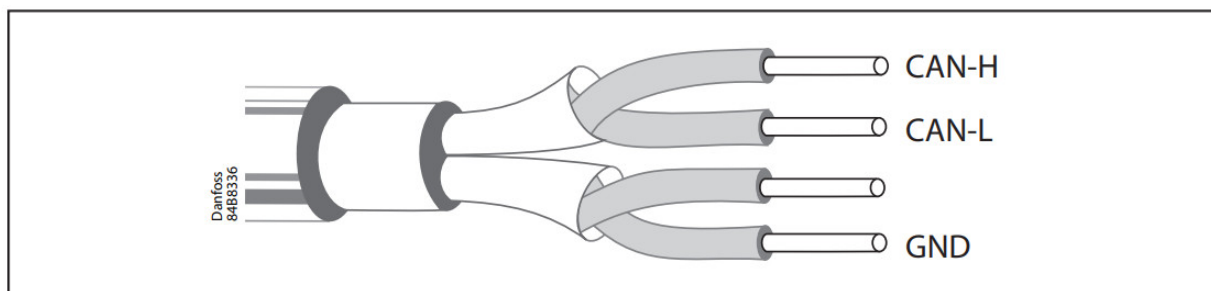

- The line termination must be present on both bus ends to ensure proper communication.  
The line termination can be installed in two different ways:  
1. Make a short circuit on CAN-FD H and R terminals (only for CANbus); 2. Connect a 120  $\Omega$  resistor between CAN-FD H and L terminals for the CANbus or A+ and B- for RS485.
- The installation of the data communication cable must be performed correctly with sufficient distance to high




voltage cables.

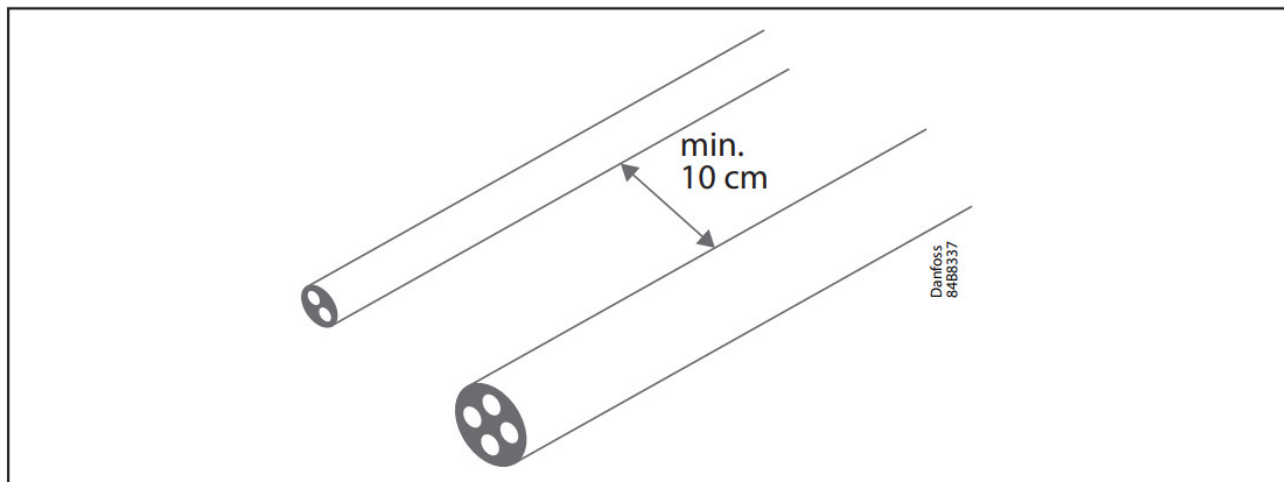


- The devices should be connected according to the “BUS” topology. That means that the communication cable is wired from one device to the next without stubs.

If stubs are present in the network, they should be kept as short as possible (<0.3 m at 1 Mbit; <3 m at 50 kbit).

Note that remote HMI connected to the display port makes a stub.

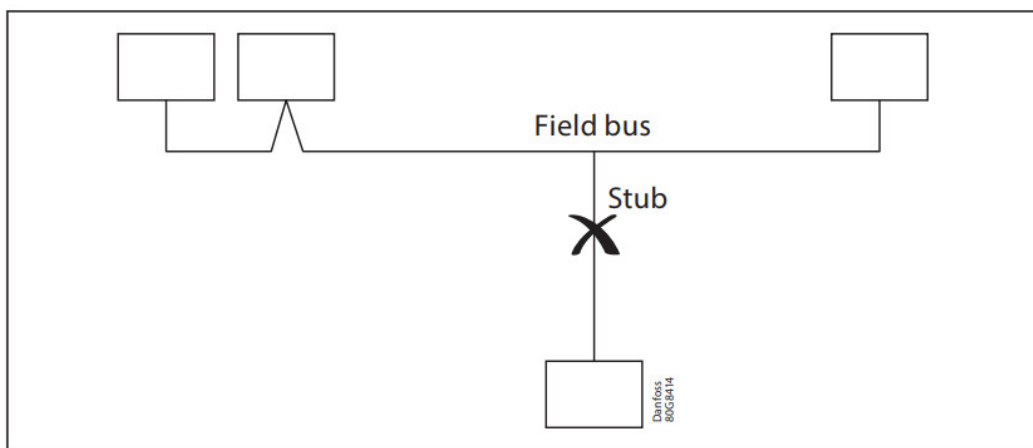


- There must be a clean (not disturbed) ground connection between all devices connected in the network. The units must have floating ground (not connected to earth), which is tied together between all units with the ground wire.
- In case of three conductor cable plus shield, the shield must be grounded in one location only.

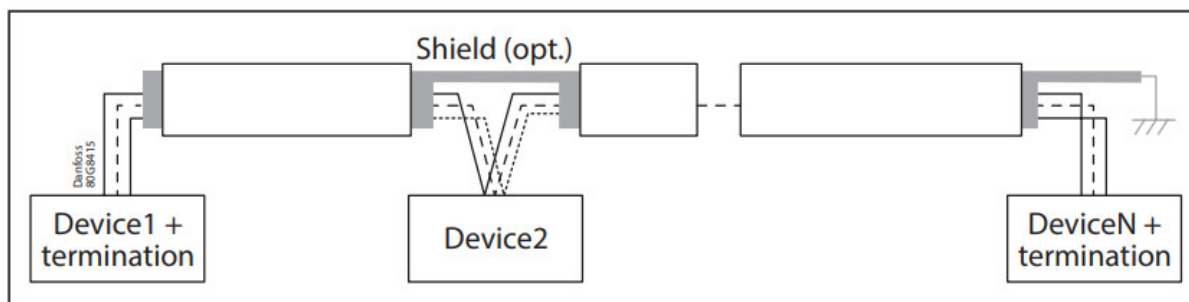


### Pressure transmitter info

Example: DST P110 with ratio-metric output

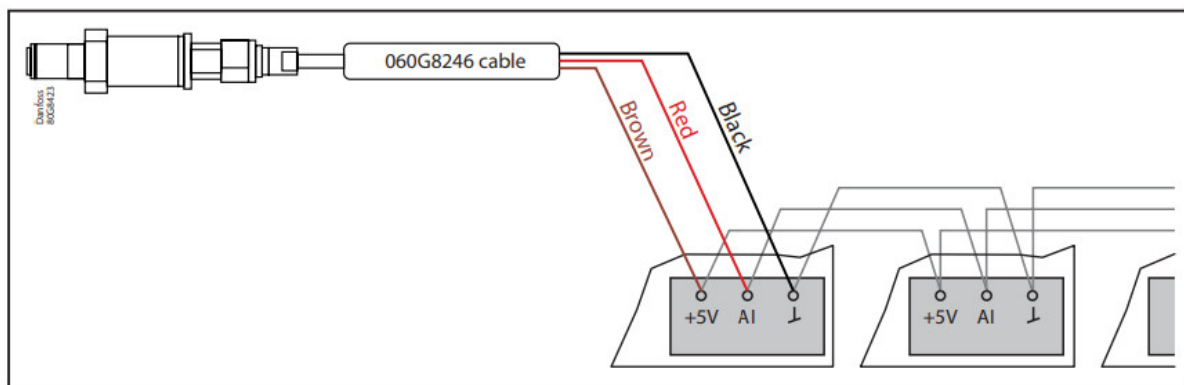

### ETS Stepper Valve info

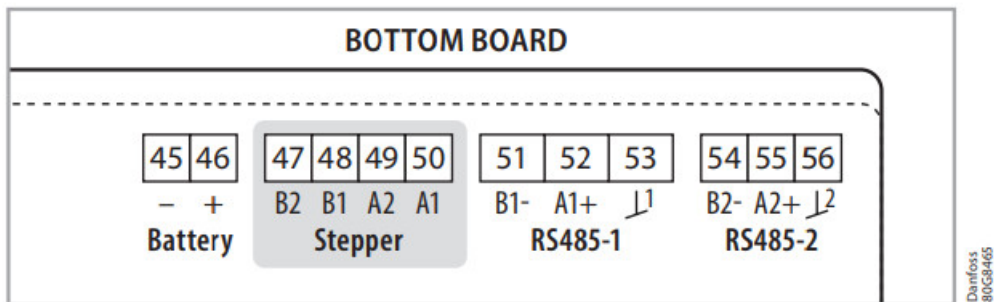

### Valve cable connection

Maximum cable length: 30 m


CCM / CCMT / CTR / ETS Colibri® / KVS Colibri® / ETS / KVS

Danfoss M12 cable	White	Black	Red	Green
CCM/ETS/KVS Pins	3	4	1	2
CCMT/CTR/ETS Colibri/KVS Colibri Pins	A1	A2	B1	B2
AS-CX terminals	A1	A2	B1	B2

### ETS 6

Wire color	Orange	Yellow	Red	Black	Grey
AS-CX terminals	A1	A2	B1	B2	Not connected

### AKV info (only for Mid+ version)

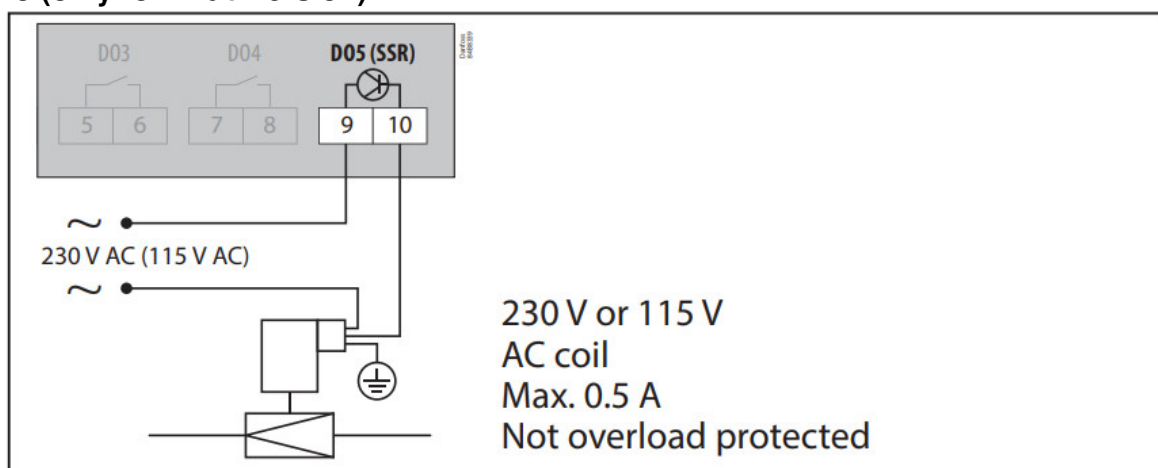

### Technical data



## Electrical specifications

Electrical data	Value
Supply voltage AC/DC [V]	24V AC/DC, 50/60 Hz (1)(2)
Power supply [W]	22 W @ 24 V AC, min. 60 V A if transformer used or 30 W DC power supply(3)
Electrical cable dimensioning [mm <sup>2</sup> ]	0.2 – 2.5 mm <sup>2</sup> for 5 mm pitch connectors 0.14 – 1.5 mm <sup>2</sup> for 3.5 mm pitch connectors

(1) A higher DC voltage can be applied if the control is installed in an application where the manufacturer declares a reference standard and a voltage level for accessible SELV/ PELV circuits to be considered non-hazardous by the application standard. That voltage level can be used as power supply input though 60 V DC must not be exceeded.

US: Class 2 < 100 VA (3) In short circuit condition DC power supply must be capable of supply 6 A for 5 s or average output power < 15 W

### Input/Output specifications

**Maximum cable length:** 30m

Analog input: AI1, AI2, AI3, AI4, AI5, AI6, AI7, AI8, AI9, AI10

Type	Feature	Data
0/4-20 mA	Accuracy	± 0.5% FS
	Resolution	1 µA
0/5 V Radiometric		Relative to 5 V DC internal supply (10 – 90 %)
	Accuracy	±0.4% FS
	Resolution	1 mV
0 – 1 V 0 – 5 V 0 – 10 V	Accuracy	±0.5% FS (FS intended specifically for each type)
	Resolution	1 mV
	Input resistance	>100 kOhm
PT1000	Meas. range	-60 to 180 °C
	Accuracy	±0.7 K [-20...+60 °C ], ±1 K otherwise
	Resolution	0.1 K
PTC1000	Meas. range	-60...+80 °C
	Accuracy	±0.7 K [-20...+60 °C ], ±1 K otherwise

	Resolution	0.1 K
NTC10k	Meas. range	-50 to 200 °C
	Accuracy	± 1 K [-30...+200 °C]
	Resolution	0.1 K
NTC5k	Meas. range	-50 to 150 °C
	Accuracy	± 1 K [-35...+150 °C]
	Resolution	0.1 K
Digital Input	Stimulation	Voltage free contact
	Contact cleaning	20 mA
	Other feature	Pulse counting function 150 ms denounce time

#### Aux power output

Type	Feature	Data
+5 V	+5 V DC	Sensor supply: 5 V DC / 80 mA
+15 V	+15 V DC	Sensor supply: 15 V DC / 120 mA

#### Digital input: DI1, DI2

Type	Feature	Data
Voltage free	Stimulation	Voltage free contact
	Contact cleaning	20 mA
	Other feature	Pulse counting function max. 2 kHz

#### Analog output: AO1, AO2, AO3

Type	Feature	Data
	Max. load	15 mA
0 – 10 V	Accuracy	Source: 0.5% FS
		Sink 0.5% FS for Vout > 0.5 V 2% FS whole range (I<=1mA)
	Resolution	0.1% FS
Async PWM	Voltage output	Vout_Lo Max = 0.5 V Vout_Hi Min = 9 V
	Frequency range	15 Hz – 2 kHz
	Accuracy	1% FS
	Resolution	0.1% FS
Sync PWM/ PPM	Voltage output	Vout_Lo Max = 0.4 V Vout_Hi Min = 9 V
	Frequency	Mains frequency x 2
	Resolution	0.1% FS

## Digital output

Type	Data
DO1, DO2, DO3, DO4, DO5	
Relay	SPST 3 A Nominal, 250 V AC 10k cycles for resistive loads UL: FLA 2 A, LRA 12 A
DO5 for Mid+	
Solid State Relay	SPST 230 V AC / 110 V AC /24 V AC max 0.5 A
DO6	
Relay	SPDT 3 A Nominal, 250 V AC 10k cycles for resistive loads
Isolation between relay in the DO1-DO5 group is functional. Isolation between DO1-DO5 group and DO6 is reinforced.	
Stepper motor output (A1, A2, B1, B2)	
Bipolar/ Unipolar	Danfoss valves: <ul style="list-style-type: none"> <li>• ETS / KVS / ETS C / KVS C / CCMT 2–CCMT 42 / CTR</li> <li>• ETS6 / CCMT 0 / CCMT 1 Other valves:</li> <li>• Speed 10 – 300 pps</li> <li>• Drive mode full step – 1/32 microstep</li> <li>• Max. peak phase current: 1 A</li> <li>• Output power: 10 W peak, 5 W average</li> </ul>
Battery backup	V battery: 18 – 24 V DC(1), max. power 11 W, min. capacity 0.1 Wh

## Function data

Function data	Value
Display	LCD 128 x 64 pixel (080G6016)
LED	Green, Orange, Red LED controlled by software application.
External display connection	RJ12
Data communication built-in	MODBUS, BACnet for fieldbus and communication to BMS systems. SMNP for communication to BMS systems. HTTP(S), MQTT(S) for communication to web browsers and cloud.
Clock accuracy	+/- 15 ppm @ 25 °C, 60 ppm @ (-20 to +85 °C)
Clock battery backup power reserve	3 days @ 25 °C
USB-C	USB Version 1.1/2.0 high speed, DRP and DRD support. Max. current 150 mA For connection to pen drive and laptop (refer to User Guide).
Mounting	DIN rail, vertical position
Plastic housing	Self extinguishing V0 and glowing/hot wire test at 960 °C. Ball test: 125 °C Leakage current: $\geq 250$ V according to IEC 60112
Type of control	To be integrated in Class I and/or II appliances
Type of action	1C; 1Y for version with SSR
Period of electric stress across insulating	Long
Pollution	Suitable for use in environments with degree of pollution 2
Immunity against voltage surges	Category II
Software class and structure	class A

## Environmental condition

Environmental condition	Value
Ambient temperature range, operating [°C]	-40 to +70 °C for Lite, Mid, Pro versions. -40 to +70 °C for Mid+, Pro+ versions without I/O expansions attached. -40 to +65 °C otherwise.
Ambient temperature range, transport [°C]	-40 to +80 °C
Enclosure rating IP	IP20 IP40 on the front when plate or display are mounted
Relative humidity range [%]	5 – 90%, non-condensing
Max. installation height	2000 m

### Electric noise

Cables for sensors, low voltage DI inputs and data communication must be kept separate from other electric cables:

- Use separate cable trays
- Keep a distance between cables of at least 10 cm
- Keep I/O cables as short as possible

### Installation considerations

- Accidental damage, poor installation, or site conditions can give rise to malfunctions of the control system, and ultimately lead to a plant breakdown.
- Every possible safeguard is incorporated into our products to prevent this. However, a wrong installation could still present problems. Electronic controls are no substitute for normal, good engineering practice.
- During installation ensure that proper method is made to prevent a wire to get loose and create a potential risk in regards to shock or fire.
- Danfoss will not be responsible for any goods, or plant components, damaged as a result of the above defects. It is the installer's responsibility to check the installation thoroughly, and to fit the necessary safety devices.
- Your local Danfoss agent will be pleased to assist with further advice, etc.

### Certificates, declarations, and approvals (in progress)

Mark(4)	Country
CE	EU
cULus (only for AS-PS20)	NAM (US and Canada)
cURus	NAM (US and Canada)
RCM	Australia/New Zealand
EAC	Armenia, Kyrgyzstan, Kazakhstan
UA	Ukraine

(4) The list contains the main possible approvals for this product type. Individual code number may have some or all of these approvals, and certain local approvals may not appear on the list. Some approvals may be still in progress and others may change over time. You can check the most current status at the links indicated below.



<http://scn.by/krzp87a5z2alf9>

EU declaration of conformity can be found in the QR code.



<http://scn.by/krzp87a5z2alfa>

Information about usage with flammable refrigerants and others can be found in Manufacturer Declaration in the QR code.

#### **Danfoss/S**

Climate Solutions • [danfoss.com](http://danfoss.com) • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, on line or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not

delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.



© Danfoss | Climate Solutions | 2023.10

AN431124439347en-000201

© Danfoss | Climate Solutions | 2023.10

AN431124439347en-000201






080R6005



AN431124439347en-000201

---

## Documents / Resources

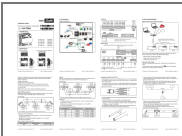

[Danfoss AS-CX06 Lite Programmable Controller](#) [pdf] Installation Guide

AS-CX06 Lite Programmable Controller, AS-CX06 Lite, Programmable Controller, Controller

## References

-  [Engineering Tomorrow | Danfoss](#)