

Danfoss FC 360 Control Cassette Controller Installation Guide



Contents

- [1 Installation Guide](#)
- [2 Control Cassettes](#)
 - [2.1 VLT® AutomationDrive FC 360](#)
 - [2.2 1 Description](#)
 - [2.3 2 Items Supplied](#)
 - [2.4 3 Safety Precautions](#)
 - [2.4.1 Mounting the Control Cassette](#)
 - [2.5 4 Mounting the Control Cassette](#)
 - [2.6 5 Software Update](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Installation Guide

Control Cassettes

VLT® AutomationDrive FC 360

1 Description

This installation guide explains how to install the standard control cassette and the control cassette with PROFIBUS/PROFINET for VLT® AutomationDrive FC 360.

The following control cassettes are for VLT® AutomationDrive FC 360:

- Standard control cassette.
- Control cassette with PROFIBUS.
- Control cassette with PROFINET.

The installation instructions in this guide apply to all control cassettes. For control cassette with PROFIBUS/PROFINET, mount the decoupling kit after mounting the control cassette. Find the instructions on mounting the decoupling kit in the kit package.

2 Items Supplied



Table 1: Items Supplied

Description		Code number
1 of the 4 types of control cassettes	Standard control cassette	132B0255
	Control cassette with PROFIBUS	132B0256
	Control cassette with PROFINET	132B0257
	Control cassette with PROFINET (supports VLT® 24 V DC Supply MCB 106)	132B2183
Control card for enclosure sizes J8–J9 ⁽¹⁾		132G0279
Screws		–
PROFIBUS/PROFINET decoupling kit		–

1) Refer to the control card installation guide for enclosure sizes J8J9 in <https://www.danfoss.com/en/products/dds/low-voltage-drives/vlt-drives/vlt-automationdrive-fc-360/#tab-overview>.

3 Safety Precautions

Only qualified personnel are allowed to install the item described in this installation guide.
For important information about safety precautions for installation, refer to the drive's operating guide.

 WARNING	
	<p>DISCHARGE TIME</p> <p>The drive contains DC-link capacitors, which can remain charged even when the drive is not powered. High voltage can be present even when the warning indicator lights are off. Failure to wait the specified time after power has been removed before performing service or repair work could result in death or serious injury.</p> <ul style="list-style-type: none"> • Stop the motor. • Disconnect AC mains, permanent magnet type motors, and remote DC-link supplies, including battery back-ups, UPS, and DC-link connections to other drives. • Wait for the capacitors to discharge fully. The minimum waiting time is specified in the table Discharge time and is also visible on the nameplate on the top of the drive. • Before performing any service or repair work, use an appropriate voltage measuring device to make sure that the capacitors are fully discharged.

Mounting the Control Cassette

Table 2: Discharge Time

Voltage [V]	Power range [kW (hp)]	Minimum waiting time (minutes)
380–480	0.37–7.5 (0.5–10)	4
380–480	11–90 (15–125)	15

4 Mounting the Control Cassette

1. Remove the old control cassette. See the chapter Assembly and Disassembly in the service guide for instructions to remove a control cassette.
2. Connect the control cassette with the drive as shown in Figure 1, bending the cable as shown in Figure 2.

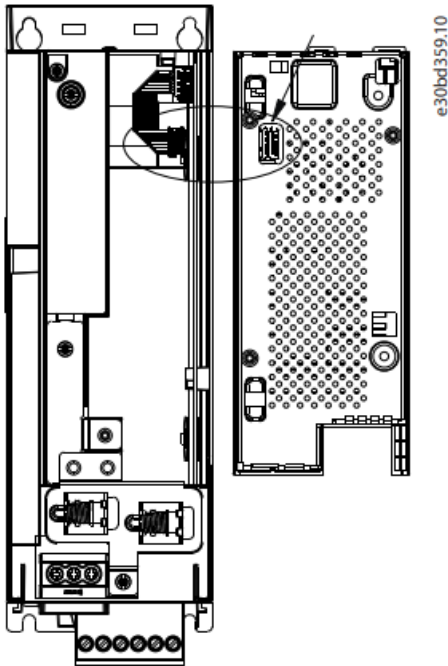


Figure 1: Connection Point on the Control Cassette

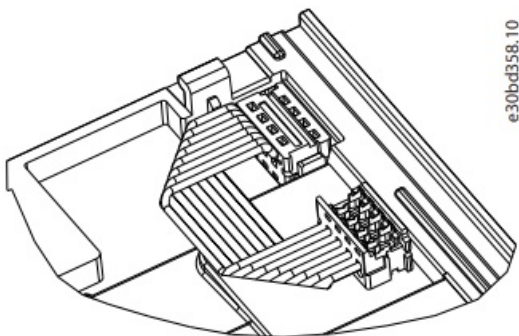


Figure 2: Bend the Connection Cable

3. Place the control cassette on the drive and slide it into place as shown in Figure 3.

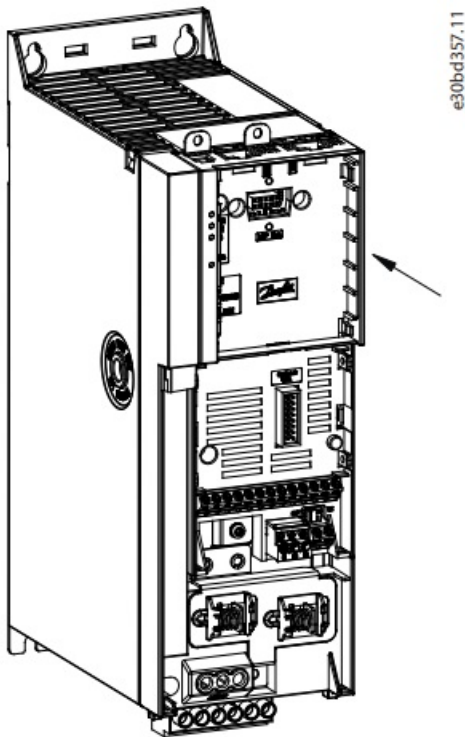


Figure 3: Slide the Control Cassette into Place

4. Fasten the control cassette on the drive using 2 screws (supplied) as shown in Figure 4. Tightening torque: 0.7--1.0 Nm (6.2-8.8 in-lb).

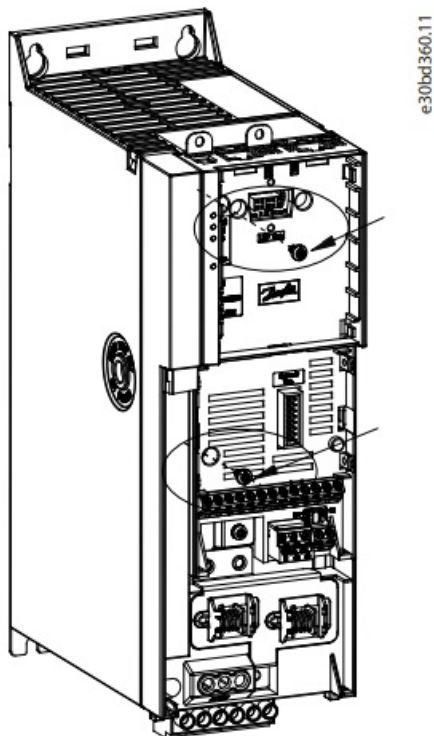


Figure 4: Tighten Screws

5 Software Update

NOTICE

It is necessary to update the software in the drive when a new control cassette is installed. Use VLT® Motion Control Tool MCT 10 for the new control cassette to be properly recognized by the drive.

1. Select MCT 10 setup software in the Start menu.
2. Select Configure bus.
3. Fill in the relevant data in the Serial fieldbus configuration window.
4. Click the Scan bus icon and find the drive.
⇒ The drive appears in the ID view.
5. Click Software upgrader.
6. Select the oss file.
7. In the dialog window, tick Force upgrade and then click Start upgrade.
⇒ The firmware flashes.
8. Click Done when the upgrade is complete.

Danfoss A/S

Ulsnaes 1

DK-6300 Graasten

drives.danfoss.com



Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalog descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogs, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product. All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.

MI06C

Danfoss A/S © 2024.06



132R0208

AN361179840392en-000401 / 132R0208

Documents / Resources

	<p>Danfoss FC 360 Control Cassette Controller [pdf] Installation Guide FC 360, FC 360 Control Cassette Controller, Control Cassette Controller, Cassette Controller, Controller</p>
--	---

References

-  [Global AC drive manufacturer - Danfoss Drives | Danfoss](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.