



## Contents [ [hide](#) ]

[1 DB DRIVE X-Series Amplifiers](#)

[2 Introduction](#)

[3 X-SERIES AMPLIFIER'S SPECIFICATION](#)

[4 X-SERIES AMPLIFIER'S CONTROL & CONNECTION.](#)

[5 INSTALLATION](#)

[6 TROUBLE SHOOTING](#)

[7 LIMITED WARRANTY](#)

[8 FAQ](#)

[9 Documents / Resources](#)

[9.1 References](#)



## DB DRIVE X-Series Amplifiers



## Specifications

### • X-A1200 – Digital Monoblock Amplifiers

- Load: 4ohm, 2ohm, 1ohm
- Voltage & THD: 14.4 volts & 1%
- Power Output: 1 X 150 Watts, 1 X 300 Watts, 1 X 600 Watts
- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K
- Signal to Noise Ratio: 90dB
- Remote Gain Level Control: 0.2-6V
- Bass Boost Frequency: 40Hz -100Hz
- Low Pass Filter: 50Hz-150Hz
- Phase: 0-180
- Variable Bass Boost: 0-18dB
- *\*X-SERIES Mono Amplifiers are not recommended to run under 1 ohm.*

### X-A2000 – Digital Monoblock Amplifiers

- Load: 4ohm, 2ohm, 1ohm
- Voltage & THD: 14.4 volts & 1%

- Power Output: 1 X 250 Watts, 1 X 500 Watts, 1 X 1000 Watts
- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K
- Signal to Noise Ratio: 90dB
- Remote Gain Level Control: 0.2-6V
- Bass Boost Frequency: 40Hz -100Hz
- Low Pass Filter: 50Hz-150Hz
- Phase: 0-180
- Variable Bass Boost: 0-18dB
- *\*X-SERIES Mono Amplifiers are not recommended to run under 1 ohm.*

## **Introduction**

Congratulations on your purchase of a X-Series state-of-the-art amplifier. Your selection of a X-Series product indicates a true appreciation of fine musical reproduction. Whether adding to an existing system or including your X-Series amplifier in a new system, you are certain to notice immediate performance benefits.

## **Product Commitment**

DB's engineering professionals harnessed years of expertise, experience and passion, coupled with exhaustive testing and creative design to develop the optimal product and performance for your musical enjoyment. This is our commitment to you. It's what you deserve and have come to expect from DB DRIVE. We appreciate the confidence and look forward to your positive experience.

## **Keep Your Sales Receipt**

Take this time to attach your sales receipt to the manual and put in a safe place. In case of any unforeseen reason this product may need warranty service, your receipt will be necessary to establish purchase date.

## **Recommendation**

A power amplifier's performance is only as good as its installation. Proper installation will maximize the system's overall performance. It is recommended that you have our product installed by an authorized DB Drive retailer. However, if you decide to install it yourself, please carefully read through this manual and take your time to do a quality

installation.

## Optimal Product Choice

To get the Maximum performance out of your stereo system, we recommend using 100% authentic DB Drive electronics and DB LINK wiring and accessories. Matching DB Drive amplifiers and speakers with your state-of the art electronics purchase is critical to optimize your system's performance. Wiring is the lifeblood of a system, make sure your audio system has the adequate current and signal transfer it deserves and needs. DB Link has it all, from wiring rolls; speaker power ground, remote to amplifier kits, RCAs, fuse holders, distribution blocks and battery connectors. Insist on getting the best, DB LINK. It's what you deserve to get the optimum performance from your audio system.

## IMPORTANT!

Before making any connections, disconnect the car's battery until the installation is completed to avoid possible damage to the electrical system.

## WARNING!

Exposure to a high power sound system can cause hearing loss or damage. Listening to your system at loud levels while driving will impair your ability to hear traffic sounds and emergency vehicles. Use common sense when listening to your system.

- Serial # \_\_\_\_\_
- Model # \_\_\_\_\_

## X-SERIES AMPLIFIER'S SPECIFICATION

### X-A1200 – Digital Monoblock Amplifiers

Load	Voltage & THD	X-A1200
4ohm	14.4 volts & 1%	1 X 150 Watts
2ohm	14.4 volts & 1%	1 X 300 Watts
1ohm	14.4 volts & 1%	1 X 600 Watts

- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K
- Signal to Noise Ratio: 90dB
- Remote Gain Level Control: 0.2-6V
- Bass Boost Frequency: 40Hz -100Hz
- Low Pass Filter: 50Hz-150Hz
- Phase: 0-180
- Variable Bass Boost: 0-18dB

\*X-SERIES Mono Amplifiers are not recommended to run under 1 ohm. Running them below recommended value could cause serious damage to internal components and would void warranty.

### **X-A2000 – Digital Monoblock Amplifiers**

<b>Load</b>	<b>Voltage &amp; THD</b>	<b>X-A2000</b>
4ohm	14.4 volts & 1%	1 X 250 Watts
2ohm	14.4 volts & 1%	1 X 500 Watts
1ohm	14.4 volts & 1%	1 X 1000 Watts

- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K
- Signal to Noise Ratio: 90dB
- Remote Gain Level Control: 0.2-6V
- Bass Boost Frequency: 40Hz -100Hz
- Low Pass Filter: 50Hz-150Hz

- Phase: 0-180
- Variable Bass Boost: 0-18dB

\*X-SERIES Mono Amplifiers are not recommended to run under 1 ohm. Running them below recommended value could cause serious damage to internal components and would void warranty.

### **X-A4002 – 2 Channel Amplifier**

- Frequency Response: 20Hz – 20KHz
- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K S/N
- Ratio: 90dB
- Variable Filter: 30Hz-320Hz
- Variable Bass Boost: 0-12dB

<b>Load</b>	<b>Voltage &amp; THD</b>	<b>X-A4002</b>
4ohm	14.4 volts & 1%	2 X 75 Watts
2ohm	14.4 volts & 1%	2 X 150 Watts
4ohm Bridged	14.4 volts & 1%	1 X 300 Watts

### **X-A4004 – 4 Channel Amplifier**

- Frequency Response: 20Hz – 20KHz
- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K S/N
- Ratio: 90dB
- Variable Filter: 30Hz-320Hz
- Variable Bass Boost: 0-12dB

<b>Load</b>	<b>Voltage &amp; THD</b>	<b>X-A4004</b>
-------------	--------------------------	----------------

4ohm	14.4 volts & 1%	4 X 75 Watts
2ohm	14.4 volts & 1%	4 X 150 Watts
4ohm Bridged	14.4 volts & 1%	2 X 300 Watts

\*X-SERIES 4 Channel Amplifiers are not recommended to run under 2 ohm stereo or 4 ohm mono. Running them below recommended value could cause serious damage to internal components and would void warranty.






### **X-A7505 – 5 Channel Amplifier**

- Frequency Response: 20Hz – 20KHz
- Input Sensitivity: 0.2V – 6V
- Input Impedance: 10K S/N
- Ratio: 90dB
- Remote Gain Level Control: 0.2-6V
- High Pass Filter: 40Hz-250Hz
- Low Pass Filter: 50Hz-150Hz
- Variable Bass Boost: 0-12dB

<b>Load</b>	<b>Voltage &amp; THD</b>	<b>X-A7505</b>
4ohm	14.4 volts & 1%	4 x 75 Watts + 1 x 250 Watts
2ohm	14.4 volts & 1%	4 x 150 Watts + 1 x 350 Watts

### **X-SERIES AMPLIFIER'S CONTROL & CONNECTION.**

#### **X\_SERIES – 2 Channel / Monoblock Amplifiers**

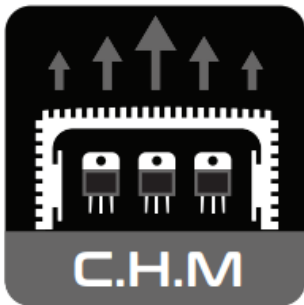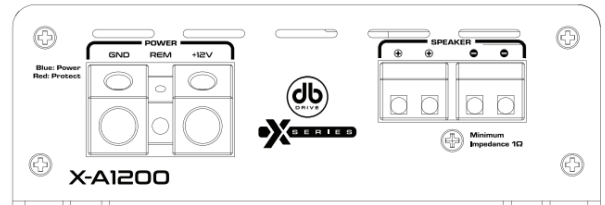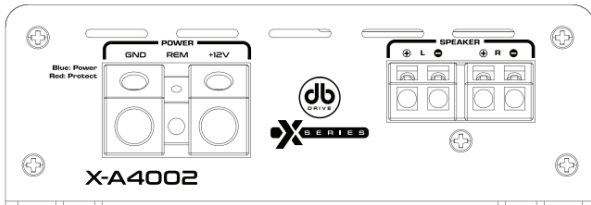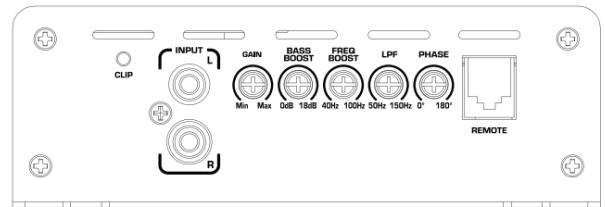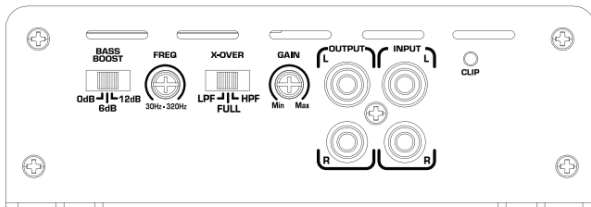

### COLLECTIVE HEAT MANAGEMENT

The X-Series amplifiers use a specially designed heat radiation heatsink to avoid excessive heat from the circuitry



### AUDIO PROTECTION CIRCUIT

**POWER & PROTECTION INDICATOR** Power LED – BLUE-lit shows normal operation  
Protect LED – RED-lit shows general malfunction, faulty connection or thermal protection



### SIGNAL EVALUATION STATUS INDICATOR.

RED-lit LED shows clipping peaks of audio signal



## **GAIN ( 6V ~ 0.2V )**

Matching the output voltage of the head unit's RCA line-outs to X-Series amplifiers' input section.

## **BASS BOOST**

2 Channel Amplifier: 0-12dB Selectable Monoblock Amplifiers: 0-18dB Variable

## **PHASE ( 0 ~ 180 degree ) Mono Amps**

It controls phase from 0 ~ 180 degree

## **MONOBLOCK AMPLIFIERS**

Low Pass Filter: 50Hz – 150Hz

## **2 CHANNEL AMPLIFIER**

Variable Filter: 30Hz – 320Hz

## **REMOTE LEVEL CONTROL PORT**

This port is for connecting remote gain level control.

## **+12V ( POWER CONNECTION )**

This must be connected to the fuse positive terminal ( +12V ) of the battery.

## **GND ( GROUND CONNECTION )**

It is connected to the Negative or chassis ground on the Vehicle.

## **POWER WIRE INPUT**

MODEL	GAUGE
X-A1200	4
X-A2000	4
X-A4002	4

## **REM ( REMOTE )**





It is connected to switched +12V with a trigger cable coming from the head unit

## SPEAKER OUTPUTS

It connects amplifier's terminals to subwoofer speakers. Minimum speaker wire is 12 guage.


Minimum impedance is 1 ohm

## X\_SERIES – 4 Channel Class D Amplifier / 5 Channel Class D Amplifier

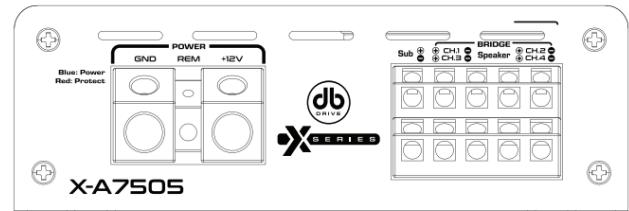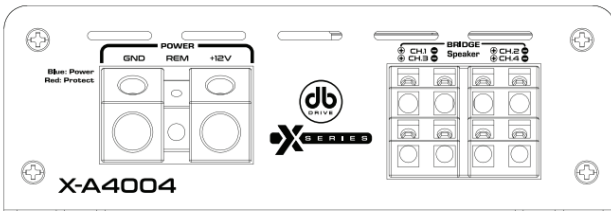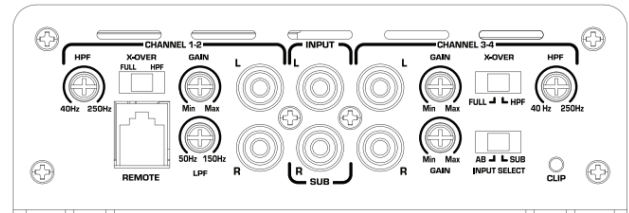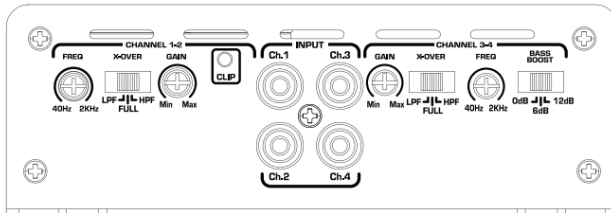

## MODE ( CH2 / CH 4 )

Selectable input setting.

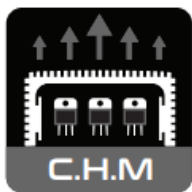

## COLLECTIVE HEAT MANAGEMENT

The X-Series amplifiers use a specially designed heat radiation heatsink to avoid excessive heat from the circuitry



## AUDIO PROTECTION CIRCUIT ON POWER TERMINAL

POWER & PROTECTION INDICATOR Power LED – BLUE-lit shows normal operation

Protect LED – RED-lit shows general malfunction, faulty connection or thermal protection.



## **SIGNAL EVALUATION STATUS INDICATOR.**

RED-lit LED shows clipping peaks of audio signal

### **GAIN ( 6V ~ 0.2V )**

The gain control matches the voltage of the head unit's RCA line-outs to X-SERIES amplifiers' input section.

### **HIGH PASS FILTER**

Controls the high pass point for the speaker outputs.

\*Refer to section 2-3A for more details.

### **LOW PASS FILTER**

Controls the low pass x-over point for the speaker outputs.

### **4 CHANNEL AMPLIFIER**

- High Pass Filter: 30Hz – 320Hz
- Low Pass Filter: 30Hz – 320Hz

### **5 CHANNEL AMPLIFIER**

- High Pass Filter: 40Hz – 250Hz
- Low Pass Filter: 50Hz – 150Hz

### **REMOTE LEVEL CONTROL PORT**

This port is for connecting the remote gain level control.

### **GND ( GROUND CONNECTION )**

It is connected to the Negative Chassis Ground the Vehicle.

### **POWER WIRE INPUT**

## **MODEL GAUGE**

X-A4004 4

X-A7505 4

## **REM ( REMOTE )**

Connected to switched +12V remote cable from the head unit.

## **+12V ( POWER CONNECTION )**

This must be connected to a fused positive terminal ( +12V ) of the battery.

## **SPEAKER OUTPUTS**

The minimum recommended speaker wire is 16 gauge. The minimum impedance is 2 ohm stereo or 4 ohm Bridged

## **INSTALLATION**

In case you install the X-Series amplifiers by yourself, please read owner's manual very carefully. Before you start your installation, please take all steps into consideration, or you can have a DB Drive or DB Research's authorized dealer check the installation and help set your car audio systems.

## **MOUNTING PREPARATION**

Disconnect the negative ( – ) battery cable before mounting your X-Series amplifier or making any connections. Check the battery and alternator ground ( - ) connections. Make sure they are properly connected and free of corrosion before selecting a mounting location. Please also take into consideration cooling efficiency and safety.

## **MOUNTING PREPARATION**

The X-SERIES amplifier uses a specially designed heat radiation heatsink to avoid excessive heat from X-Series circuitry. But for better heat dissipation, it is recommended to find the mounting location where you can install X-Series where the heatsink fins have better air flow. For safety, you have to find a dry well ventilated location. Before mounting, be sure the location and drilling of pilot cables will not present a hazard to any cables, control cables, fuel lines, fuel tanks, hydraulic lines or other vehicle systems or components.

## **+12V, GND, REM CONNECTION**

### **12V ( POWER CONNECTION )**

Before mounting X-Series amplifiers, disconnect the negative ( ) wire from battery to protect any accidental damage to the amplifier and the audio system. X-A4002, X-A4004, & X-A7505 are designed to use, at a minimum, 4 gauge power and ground cables X-A1200 & X-A2000 are designed to use, at a minimum, 0 gauge cables. Connect the power cables to power terminal labeled as + 12V.


### **GND ( GROUND CONNECTION )**

- Locate a secure grounding connection as close to X-Series amplifiers as possible.
- Make sure the location is clean and provides a direct electrical connection to the frame of the vehicle.
- Connect one end of a short piece of the same gauge cable as the power cable to the grounding point. Run the one end of the cable to the grounding point.
- Run the other end of the cable to the mounting location.
- Connect the ground cable to the screw terminal labeled as GND.

### **REM ( REMOTE CONNECTION )**

Run a remote turn on cable from the head units remote switched + 12V output.


## **X-SERIES +12V, GROUND, REMOTE CONNECTION DIAGRAM**

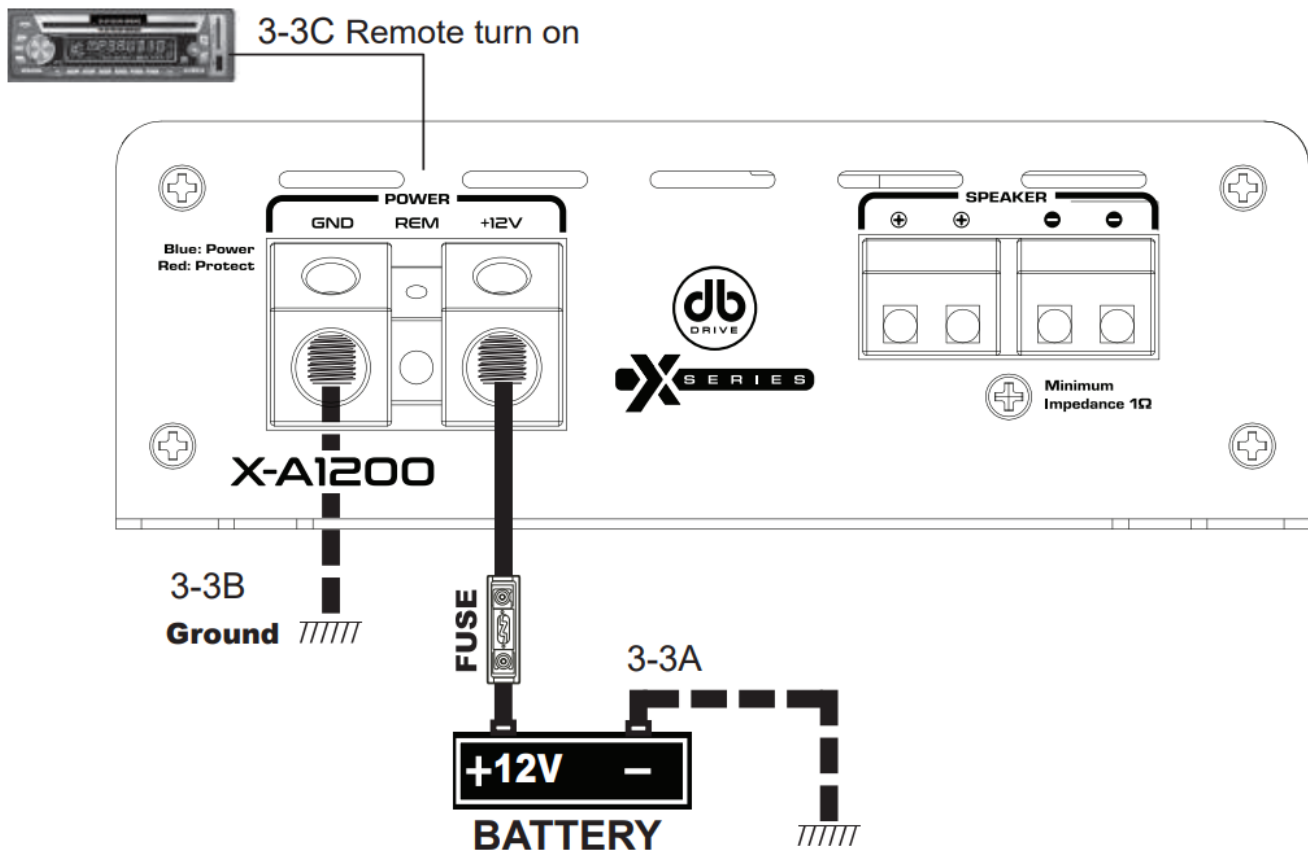


## SPEAKER CONNECTION

DB Drive recommends to use a minimum of 12 gauge speaker connecting cables. Run 12 gauge speaker connecting cables from your speakers to X-Series amplifier's mounting location. Keep speaker cables away from power cables and X-Series amplifier's input cables. Use grommets anywhere the cables have to pass through the holes in the metal frame or sheet metal. Connect to the speakers according to the type of the terminals on each speaker. Strip 3/8" of insulation from the end of each cable and twist the cables strands together tightly. Make sure there are no stray strands that might touch other cables or terminals causing a short. Crimp spade lugs over the cable ends or tin the ends with solder to provide a secure termination. Connect the cable ends to X-Series amplifiers as shown on speaker system diagrams.

## X-SERIES MONOBLOCK AMPLIFIERS' SPEAKER CONNECTION DIAGRAM 1.

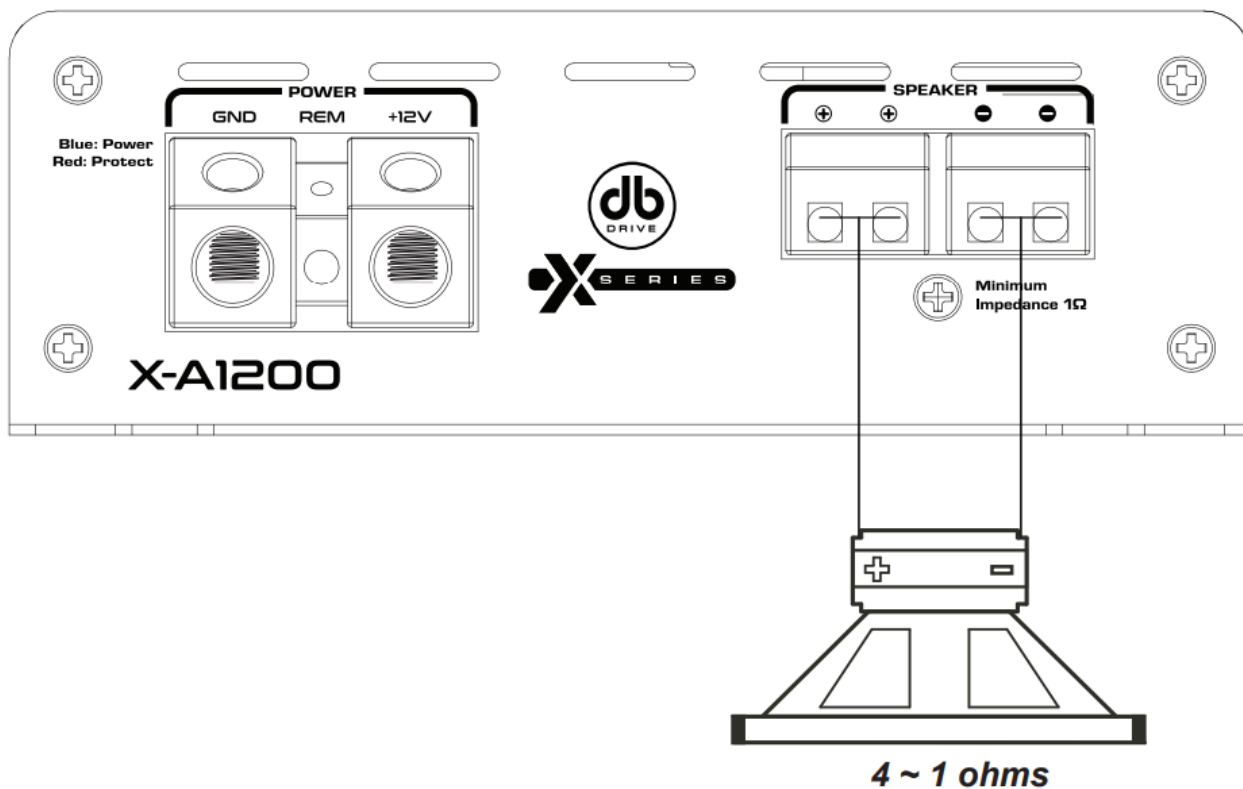

**X-SERIES MONOBLOCK AMPLIFIERS' SPEAKER CONNECTION DIAGRAM 2.**

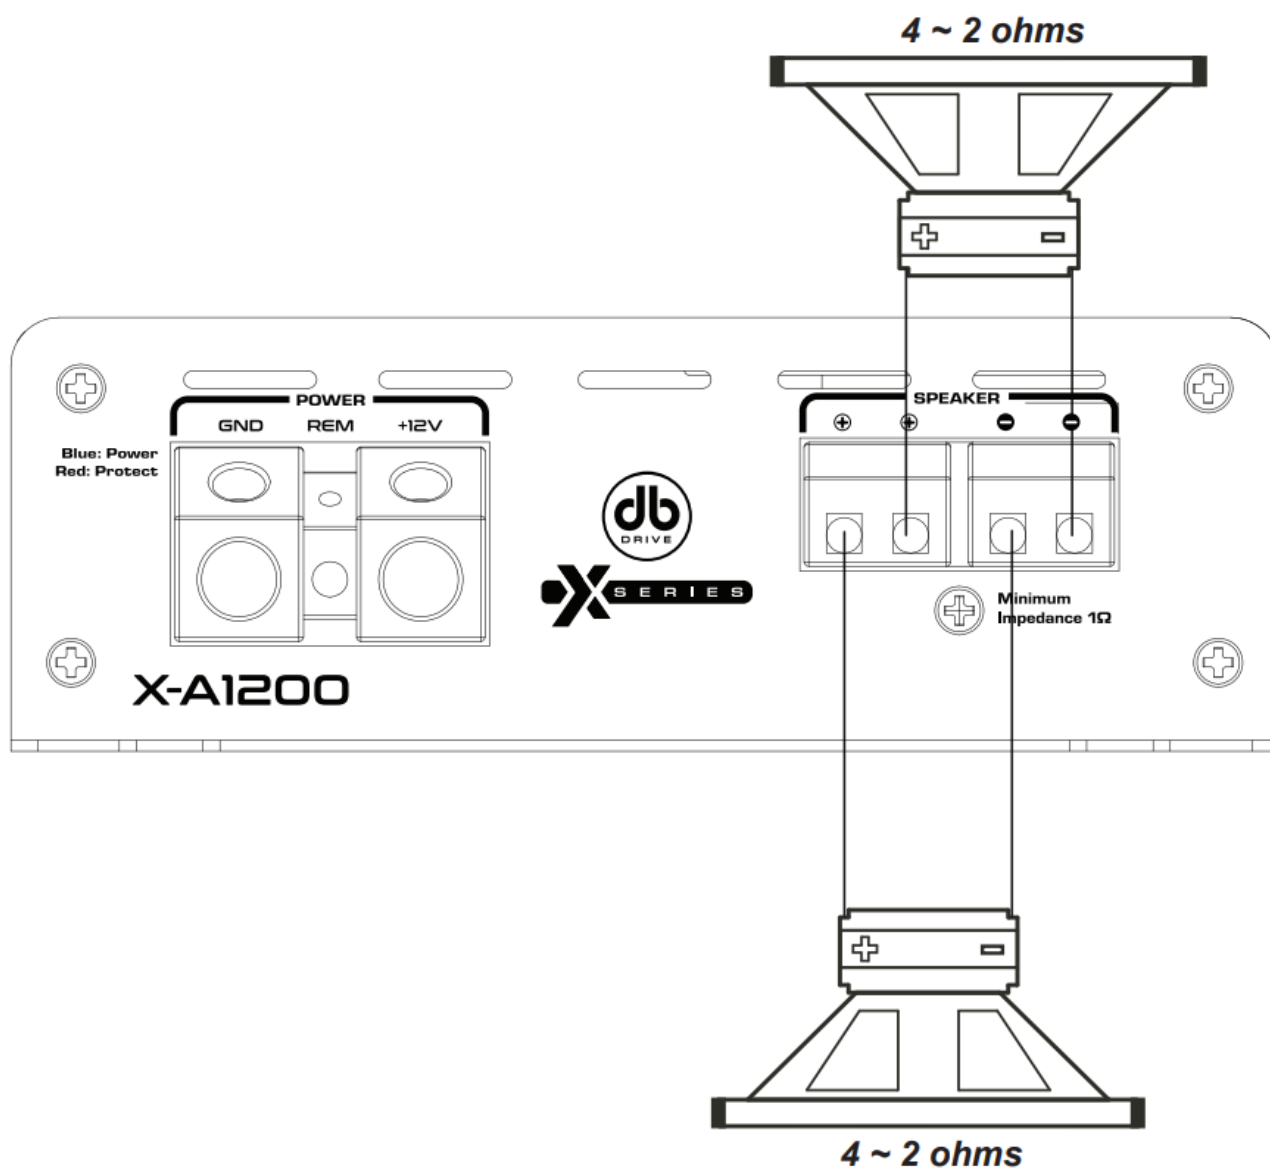


## CAUTION !


X-A1200 and X-A2000 amplifiers minimum impedance is 1 ohms.

**X-SERIES 2 CHANNEL AMPLIFIERS' SPEAKER CONNECTION DIAGRAM 1.**



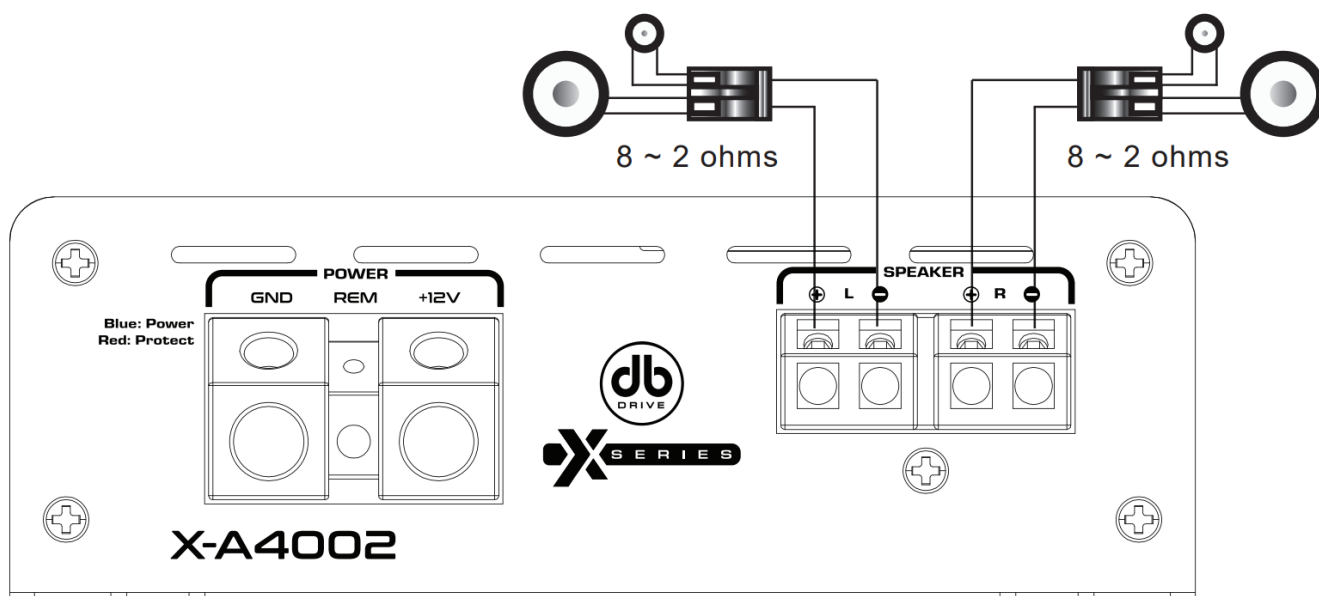


**X-SERIES 2 CHANNEL AMPLIFIERS' SPEAKER CONNECTION DIAGRAM 2.**

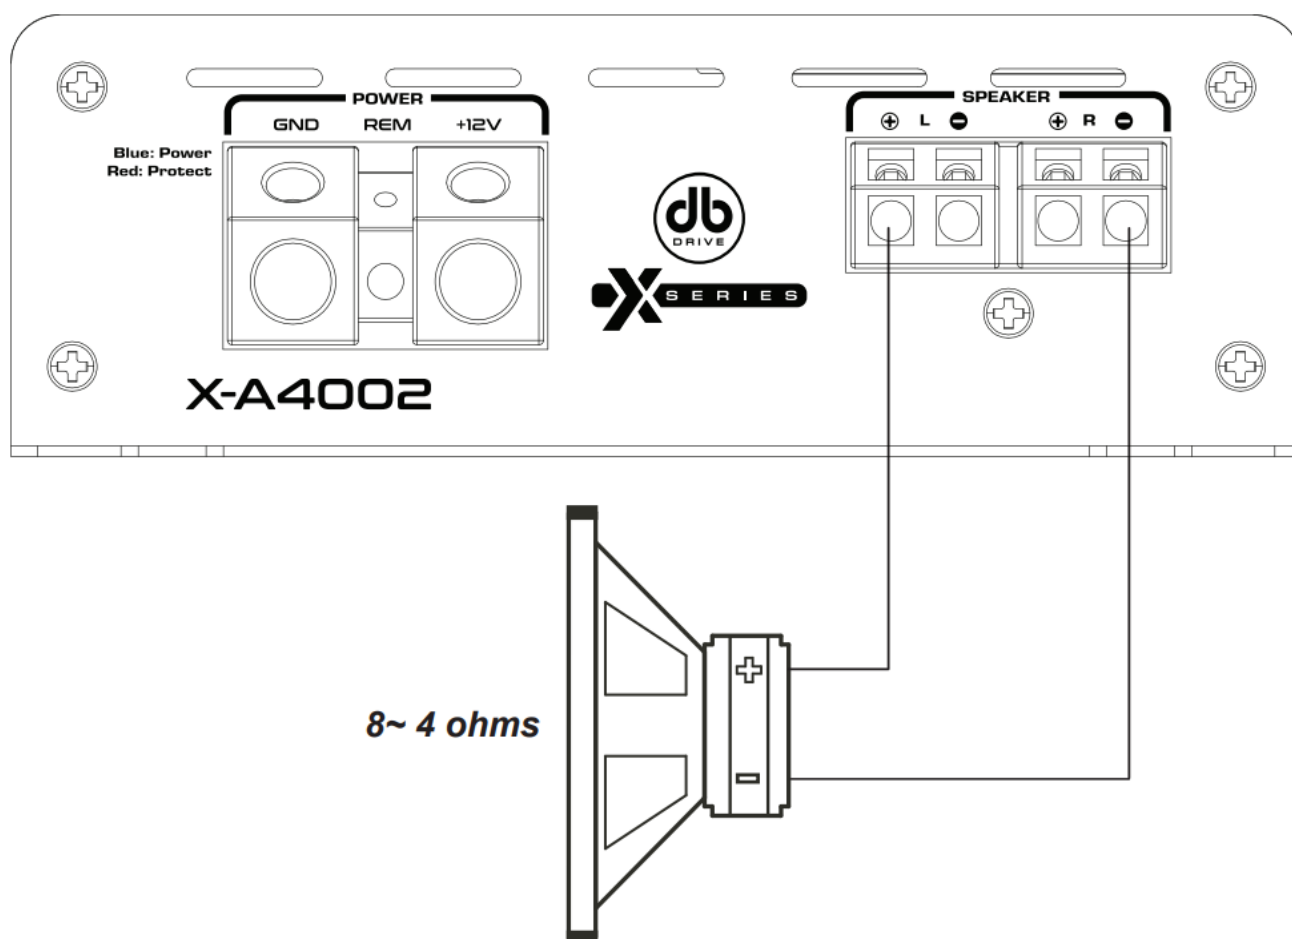


**CAUTION !**

X-A4002 Amplifier's minimum impedance is 2 ohms stereo or 4 ohm mono.

**X-SERIES 4 CHANNEL AMPLIFIERS' SPEAKER CONNECTION DIAGRAM 1.**

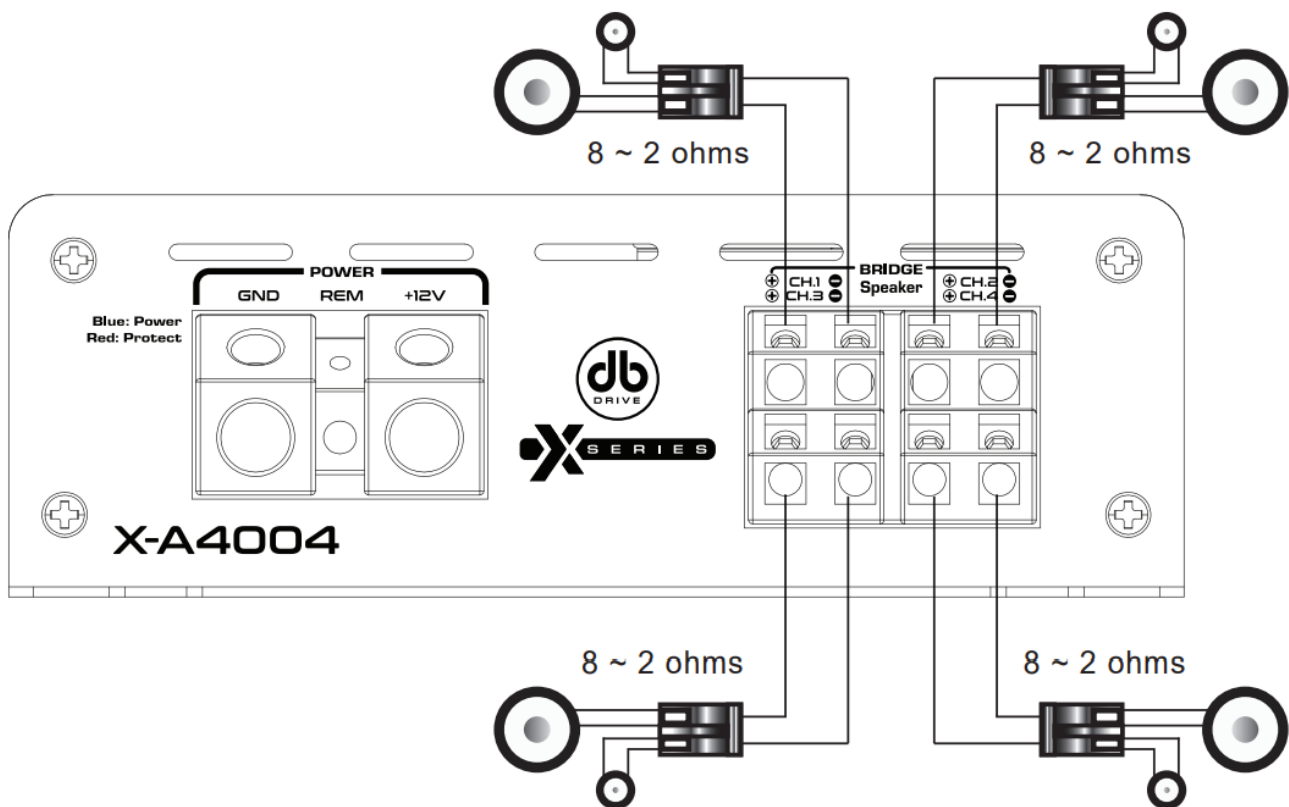


**X-SERIES 4 CHANNEL AMPLIFIERS' SPEAKER CONNECTION DIAGRAM 2.**

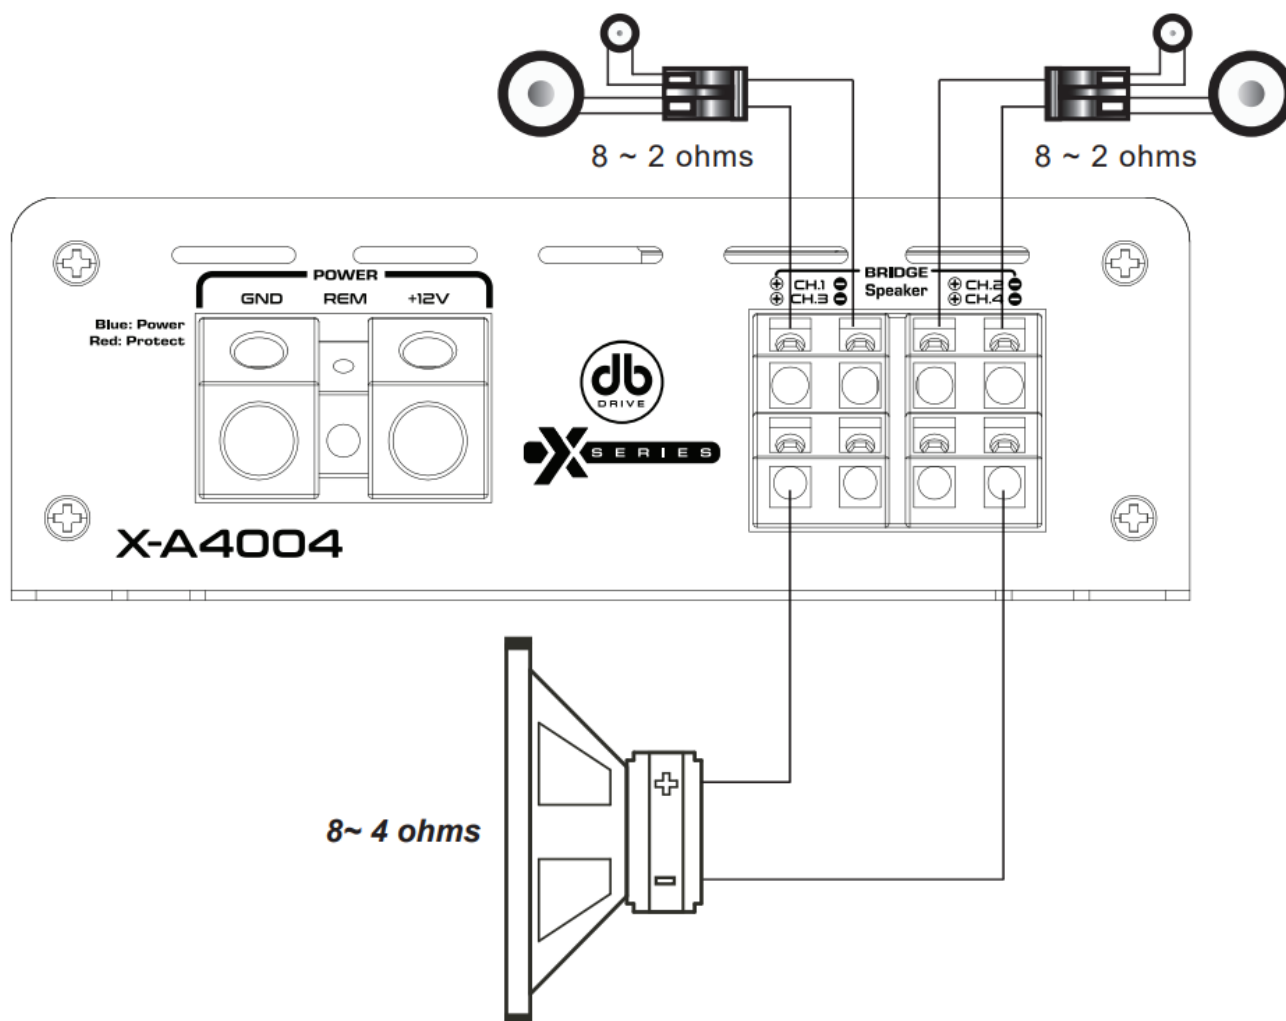

### CAUTION !

X-A4002 Amplifiers' minimum impedance is 2 ohms stereo or 4 ohm mono

### X-SERIES 5 CHANNEL AMPLIFIER'S SPEAKER CONNECTION DIAGRAM 1.

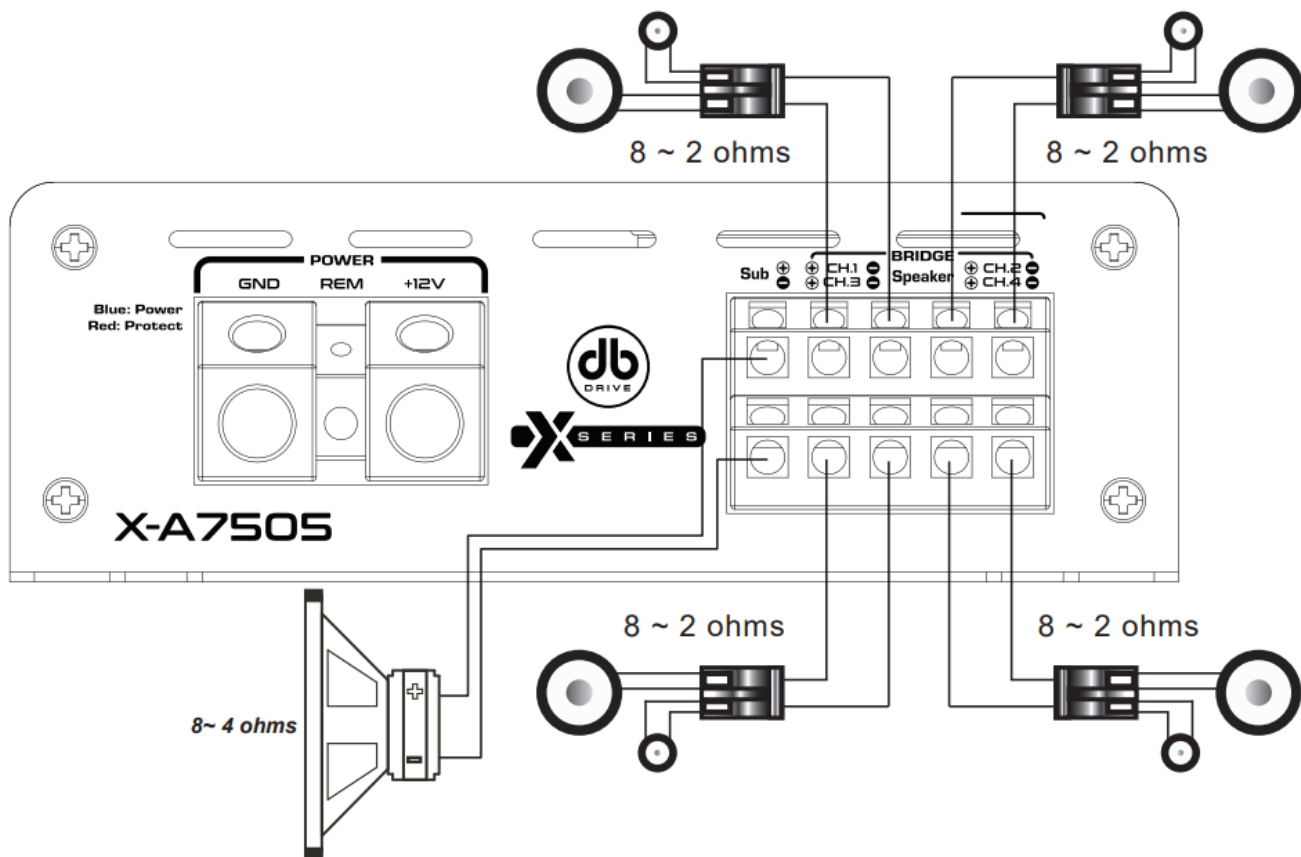

## TROUBLE SHOOTING

### NO SOUND ( NO OUTPUT )

1. Please check all connections, cables' routing, short and voltage at X-Series amplifiers and headunit.
2. Please check external fuse at the battery. If any are blown, replace with new one.
3. Please check whether speakers work well. You can test speakers by connecting to another amplifier.

## PROTECTION

1. Please check overload, overheat ( thermal ), short, voltage and DC offset.
2. Minimum working impedance for 4 channel amplifiers is 2 ohm stereo or 4 ohm mono  
Minimum working impedance for all Class D mono amplifiers is 1 ohm for single unit and 2 ohm for linked operation.
3. If X-Series amplifier shuts down due to overheat, Reset by turning off the remote input and allowing time to cool down.

Please make sure there are no airflow obstructions around X-Series amplifiers to

prevent thermal protection.

4. X-A1200 and X-A2000 have voltage operation of 9V~16V

If Voltage is out of range of above, X-Series amplifiers will be protected.

## **POOR BASS RESPONSE**

1. Please check speaker polarities

## **WHINING NOISE**

1. Engine noise is caused by poor grounding of X-Series amplifiers, headunit, other components, battery or alternator, so please check all grounding connections.

## **LIMITED WARRANTY**

- DB Drive™ warrants any X-Series amplifiers purchased in the USA from an authorized X-Series dealer. All X-Series amplifiers are warranted to be free from defects in material and workmanship under normal use and service for a period of one (1) year when the unit is installed by an authorized dealer. Non-authorized dealers installed amplifiers carry one (1) year parts and labor limited warranty. This warranty applies to original purchase only, non-transferable.
- DB Drive™ will either repair or replace (at its option) any unit that has been found to be defective and under warranty.
- This limited warranty does not extend to units that have been subjected to misuse, abuse, neglect, accident, or defaced. Products that in DB Drive™'s judgment show evidence of having been altered, modified, abused or serviced without DB Drive™'s authorization, will be ineligible under this warranty.
- The original sales invoice must be presented at the time any warranty will be inspected before any warranty agreement is issued.
- To obtain warranty services please contact your local retailer or DB Research directly or visit our website [www.dbdrive.net](http://www.dbdrive.net) for more details.

DB Research L.L.P.

- 302 Hanmore Industrial Parkway
- Harlingen, TX 78550

- Ph: [877-787-0101](tel:877-787-0101)
- Fax: [956-421-4513](tel:956-421-4513)
- tech support: [support@dbdrive.net](mailto:support@dbdrive.net)
- Designed and Engineered in the U.S.A

## FAQ


- **Q: What should I do if my amplifier is running below the recommended load?**

**A:** Running the amplifier below the recommended load could cause serious damage to internal components and void the warranty. It is crucial to operate within the specified load range.


- **Q: How can I maximize the performance of my amplifier?**

**A:** Proper installation is key to maximizing performance. Consider having the product installed by an authorized retailer for optimal results.

## Documents / Resources

	<p><a href="#">DB DRIVE X-Series Amplifiers [pdf]</a> User Manual</p> <p>X-A1200, X-A2000, X-A4002, X-A4004, X-A7505, X-Series Amplifiers, X-Series Amplifiers</p>
---	--

## References

-  [DB Drive, Euphoria, Expert](#)
- [User Manual](#)

DB  
DRIVE

Amplifiers, DB DRIVE, X Series, X-A1200, X-A2000, X-A4002, X-A4004, X-A7505, X-Series Amplifiers

—Previous Post

[db DRIVE DX-AS8 8 inch Amplified Compact Enclosure User Manual](#)

Next Post—

[DB DRIVE DX Series Amplifier User Manual](#)

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.