



Contents [[hide](#)]

- [1 DICKSON TH8 Temperature and Humidity Recorder](#)
- [2 GETTING STARTED](#)
- [3 DISPLAY SYMBOLS TH8P](#)
- [4 BUTTON OPERATION](#)
- [5 DIP SWITCH SETUP](#)
- [6 Recording Time](#)
- [7 PEN HOME ADJUST](#)
- [8 USER CALIBRATION](#)
- [9 TROUBLESHOOTING](#)
- [10 WARRANTY](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

DICKSON

DICKSON TH8 Temperature and Humidity Recorder



GETTING STARTED

- 7-day chart rotation
- + 32 to J 20°F (TH8P0/2)
- -20 to+ J 20°F (TH8P3/5)

QUICK START

1. Remove the protective pen caps.
2. Check to make sure the Replaceable Sensor is connected firmly to the recorder. If using model TH8P3/5 make sure the extension cord is connected firmly to the recorder and that the Replaceable Sensor is plugged in firmly to the extension cable.
3. Insert batteries and plug in AC adapter (See Figure 3). THE P0:4 AA batteries required; TH8P2/3/5: 4 AA batteries backup power only (See Power section for backup life). Unit will power on.
4. The instrument will move pens to the appropriate readings.
5. Install the chart that matches the Dip Switch settings (See Dip Switch Setup). Press the PEN HOME key to move the pens to the outside of the chart. The pen is automatically raised off the chart.
Remove the old chart, place the new chart on the Chart Hub being certain that the edge of the chart slides under the Chart Guide Clips located at the outside of the

chart.

6. Set the appropriate time. There are two ways to adjust the chart and set the appropriate time:

- Set the chart time manually by inserting a coin into the groove in the chart hub and turning clockwise until the correct hour (and day if applicable) on the chart is referenced to the timing arrow (Just to the right of the pen tip on the dial). Press Pen Home to move the pens back onto the chart.

The following feature should be used for fine adjustment only.


- To adjust the chart time, press and hold Adjust-Up and Adjust-Down buttons located on the back of the unit next to the dip switch (see Figure 3).

The green LED will blink rapidly for about five seconds, then the LED will remain solid green. While in this state the Adjust-Up button will move the chart backward (counter clockwise) and the Adjust-Down button will move the chart forward (clockwise).

Rotate the chart until the correct hour (and day if applicable) on the chart is referenced to the timing arrow. Once you have set your chart, press the Pen Home button to exit Chart Adjust Mode. The unit will take one minute to exit the Chart Adjust Mode once Pen Home is pressed. Press Pen Home to move the pens back onto the chart.


- Place the THE recorder on a flat vibration-free surface. Be sure it is in a vertical position and level. For best performance and longevity, the location should be a clean environment, free from dust and corrosive fumes. Do not exceed temperature specifications. Wall Mount: Keyhole slots are provided on the THE recorder for wall mounting.

DISPLAY SYMBOLS TH8P

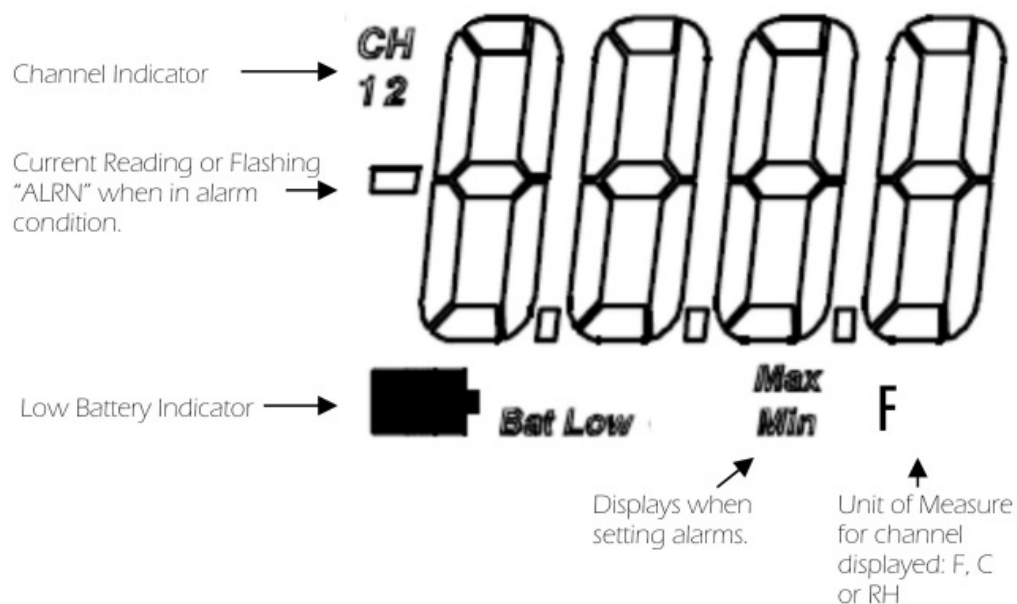

BUTTON OPERATION

Figure 2
TH8P3/5

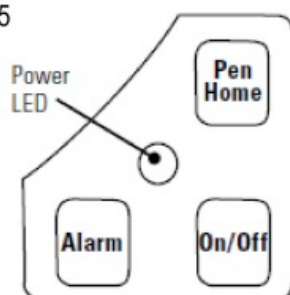

TH8P0/2


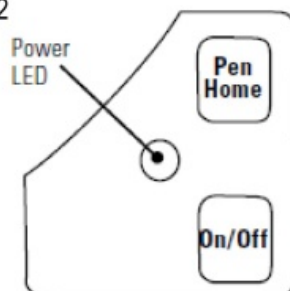


Figure 3

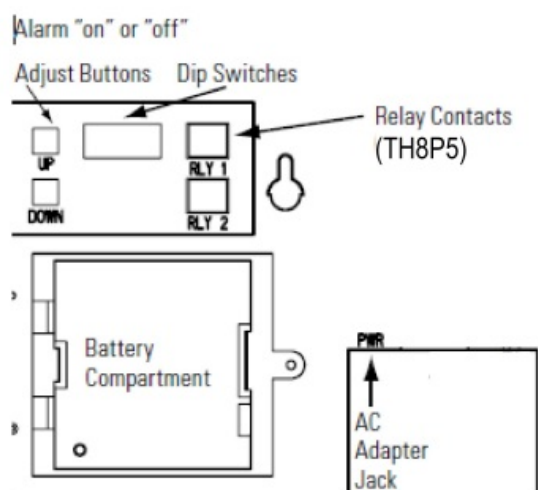

On/Off

The On/Off key turns the unit on and off.

Pen Home (Down Arrow)

If the pens are located on the outside edge of the chart, press the Pen Home to move pen(s) to recording position. If the pens are located on the chart, press the Pen Home key to move the pen(s) to the outside edge of the chart.

Alarm Optional

- Pen 1: = Red Pen
- Pen 2: = Blue Pen

1. To set the alarm, make sure unit is on and press and hold the Alarm button. The LED will blink red rapidly for about five seconds, then the LED will turn solid green. Release the Alarm button and the LED will turn solid red. At this point the display will show “On” or “Off”.

Pressing either the Adjust-Up or Adjust-Down buttons, located on the back of the unit next to the dip switch, will toggle the alarm on or off.

2. Pressing PEN HOME will scroll to the next alarm options.

- Pen 1 alarm minimum
- Pen 1 alarm maximum
- Pen 2 alarm minimum
- Pen 2 alarm maximum

3. In order to set pen alarm minimums and maximums, pressing Adjust-Up will increase the alarm value, and pressing Adjust-Down will decrease the alarm value. There is acceleration if the Adjust-Up button is held down.

Repetitively pressing the Pen Home button will scroll through the five options until the Alarm button is pressed to exit from alarm adjust. Each press of the Pen Home or Alarm button will store the new settings. The unit will take one minute to exit Alarm Set Mode once the Alarm button is pressed.

4. If the alarm is triggered, the LED will show as solid red and the alarm will sound. Press the Alarm button to silence the audible alarm.

Alarm Relays

The SPST 24V 500mA relay contacts are Normally open and will close on alarm conditions when the alarms are enabled. Relay contacts are always functional when the alarm is enabled. The relay will close only during minimum and maximum alarm conditions. Two pen models have 2 sets of relay contacts which operate independently. Relays will not operate under battery only power conditions.


PENS

The blue pen has a longer pen arm and records humidity or dew point (depending on your dip switch selection, see pg. 4). The red pen has a shorter arm and records temperature. The pens are offset to allow the red pen to glide under the blue pen. The

blue pen indicates the correct time and the red pen precedes it by 3/ 16 of an inch.

DIP SWITCH SETUP

- To setup the TH8 recorder for your specific application, you might need to change some of the Dip Switches. The Dip Switches are located on the back of the unit. (Figure 3)
- Use a Pen or small screw driver to flip the switches. Remember to install the correct chart to match the corresponding Dip Switch setting.

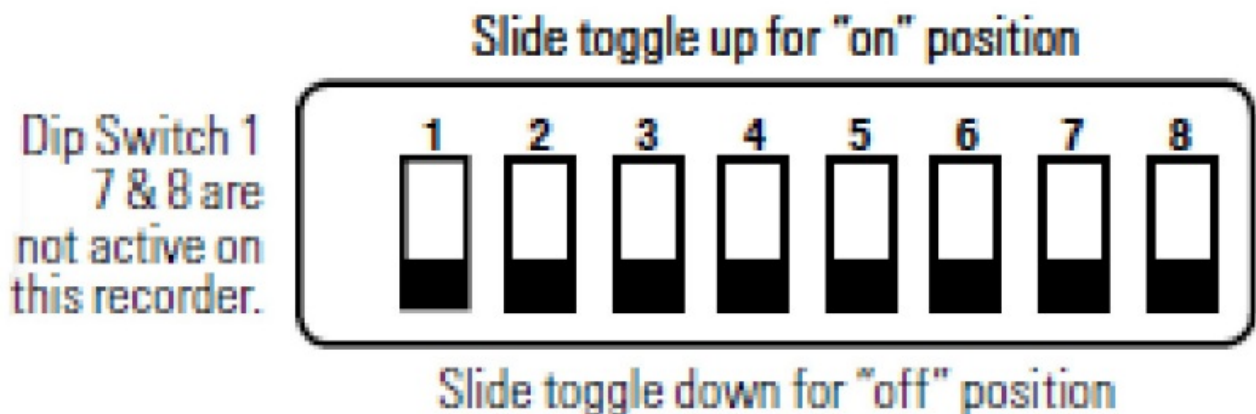

Dip Switches for Ranges:

DICKSON TH8 Dip Switch Settings: Up = On; Down = Off							
Switches 1 - 6	For Model	1	2	3	4	5	6
7 Day	All Models	D	D				
24 Hour	All Models	D	U				
31 Day	TH8P2/P3/P5	U	U				
RH	All Models						D
Dew Point	All Models						U
-20° to 120°F	All Models			D	D	D	
40° to 110°F	TH8P2/P3/P5			D	D	U	
0° to 200°F	TH8P3/P5			D	U	U	
-20° to 50°C	All Models			U	D	D	
5° to 40°C	TH8P2/P3/P5			U	U	D	
Remember to install the correct chart to match corresponding switch setting							
Dickson - Addison, IL www.DicksonData.com							

Note: TH8P0 – On Dip Switch label:

- 20 to J 20°F = + 32 to J 20°F
- 20 to 50 °C =Oto 50 °C

Recording Time

All the TH8 recorders feature user selectable recording times.

24-hour all models	#1 down
	#2 up
7-day all models	#1 down
	#2 down
31-day (TH8P2/3/5)	#1 up
	#2 up
Temperature Ranges	
-20 to +120°F	#3 down
	#4 down
	#5 down
+40 to +110°F	#3 down
	#4 down
	#5 up
-20 to +50°C	#3 up
	#4 down
	#5 down
+5 to +40°C	#3 up
	#4 up
	#5 down
0 - 200°F	#3 down
	#4 up
	#5 up

RH /Dew IPo int

Dip switch allows you to select whether RH or dew point is recorded by the blue pen and shown on the display for the models with displays. (The red pen always records temperature.)

RH	#6 down
Dew Point	#6 up

Note: When the blue pen is recording dew point, the reading indicates the temperature at which dew will form or frost point, so, you should use the temperature scale on the chart to read dew point.

POWER

The TH8 operates on AC power with an optional 4 AA battery backup. Depending on chart rotation selected and model; battery backup will last

TH8P2/3/5

- 24 Hour Chart Rotation = 1 Day Backup
- 7 Day Chart Rotation = 2 Day Backup
- 3 1 Day Chart Rotation = 1 Week Backup

Note: Alarm and relays will not operate under battery only power.

THBP0

- At 70F 24 Hour Chart Rotation = 1 Month 7 Day Chart Rotation = 6 Months
- At 32F 24 Hour Chart Rotation = 3 Weeks 7 Day Chart Rotation = 4 Months

Note: (Unit should not be placed in an environment below 32F)

LED Indicators

- AC Power with Battery Backup – Solid Green
- AC Power with Low Battery or No Battery – Blinks Red
- Battery Only – Blinks Green
- Battery Only (Low Battery) – Solid Red

Note: THBP0 operates on battery only and will blink one time every minute to conserve battery life.

PEN HOME ADJUST

If over time the pen location does not match the display, you may need to adjust the pen location on the chart. A Pen Home Adjustment will not affect calibration of the sensor, but rather corrects for the natural drift that occurs with mechanical moving parts over time.

1. While the unit is on, press and hold both Pen Home and On/Off buttons until the LED is solid green. Release the Pen Home and On/Off buttons. The LED will flash amber and green for one second then the LED will turn off.

Note: Press Pen Home first so the unit will not turn off

2. Both pens will move to the outer edge of the chart, and then the shorter red pen will move to the outer chart ring (maximum temperature/RH line).

3. If the red pen tip does not line up with the outer chart ring line, use the Adjust-Up and Adjust-Down buttons (on the back of the unit) to move the red pen so that the pen tip is on top of the outer chart ring.
4. Once the shorter red pen is set, press Pen Home to switch pen positions moving the longer blue pen to the outer chart ring line.
5. If the blue pen tip does not line up with the outer chart ring line, use the Adjust-Up and Adjust-Down buttons to move the blue pen so that the pen tip is on top of the outer ring line.
6. Once the blue pen is set, pressing the Pen Home button will move the longer blue pen to the outer edge of the chart and the shorter red pen will move to the outer chart ring line.
7. Each time Pen Home is pressed the two pens will switch positions (moving the most recently adjusted position) until On/Off is pressed to exit pen adjust mode.

Note: Pressing the On/Off button will exit the adjustment and return the unit to normal operation. Each time the Pen Home or On/Off button is pressed, the adjustment currently in progress will be stored. The unit will take one minute to exit Pen Adjust Mode once the On/Off button is pressed.

CAUBRATION

The R200/R250 Replaceable Sensor was carefully tested and calibrated before being shipped from the factory. For greatest accuracy, we recommend replacing the sensor every 6-12 months (does not include N400 and N450). To order a Calibrated Replacement Sensor Call customer se Nice at [630-543-3747](tel:630-543-3747) or go to www.dicksondata.com. When your new Replaceable Sensor arrives, simply turn off the recorder, remove and discard the old sensor, plug in the new one and power the recorder back on. Your recorder will continue to record temperature and humidity without interruption.

USER CALIBRATION

If you have an accurate standard to compare against, the Replaceable Sensor calibration can be adjusted at one point. This will not adjust the span and is not as accurate as replacing the Replaceable Sensor with a newly calibrated one.

1. To activate Calibration mode, turn the unit on and press and hold both the On/Off and the Adjust-Down button until the LED is solid green. The LED will then blink amber at which point only the pen being adjusted will show on the display.
Note: Make sure to press the Adjust-Down button first so the unit will not turn off
2. To raise the unit of measurement, press the Adjust-Down button. To lower the unit of measurement, press the Adjust-Up button. Pressing Pen home switches between the red and blue pens on a two pen unit and stores the current adjustment value.
3. When Calibration is complete, press the On/Off button. The adjustment is stored in memory even after you turn the unit off or if AC power fails.

Note: After two hours, if no buttons are pressed, the unit will time out of Calibration mode and resume normal operation. If you wish to cancel the Calibration, simply enter Calibration mode and toggle through the steps without adjusting displayed readings. Exit by pressing the On/Off button. You have now restored factory calibration settings.

Note: It is recommended that you use a controlled chamber when determining if Calibration is necessary. Adjusting the pen locations in an open room is not recommended as humidity can vary greatly within a very small area.

NEED TO KNOW

The pen movement for the TH8P0 is slower than on the AC powered models in order to conserve battery power. In 24-hour mode the pen will move every 1 minute and 30 seconds. In 7-day mode the pen will move every 8 minutes and 30 seconds.

The recorder takes temperature readings every 50 seconds. An average of the reading taken between pen movements is what is drawn on the chart.

TROUBLESHOOTING

Why isn't the chart keeping time or running slow?

The chart may be hung up or restricted, possibly caused by a rip on the outer edge of the chart or the chart hub, or the chart may be caught between the arm and pen arm platform. Incorrect chart installed for the selected chart speed.

Why does the display read PROB7

Check the TH sensor pod. Make sure it is properly plugged into the unit. Is the unit locked up? This can be confirmed by pressing any of the buttons on the keypad, if the unit is locked up there will be no response to button presses and the unit may appear to be working, but the readings won't change, also the chart will not rotate. Remove power and battery, and then re-power.

Why does calibration seem to be off?

What is the tolerance of the unit it's being compared to? It's ok if the unit is within the sum of the two tolerances. Has an outside calibration house attempted calibration? It may not have been adjusted properly. Walk through calibration adjustment, found in the manual

Why won't the battery back-up work?

Are there good batteries in the Chart Recorder? Keep in mind that battery back up varies significantly depending on temperature, pen movement and chart rotation speed. If there was a momentary power outage (Brown out), the unit may not have had enough time to recognize this and switch to battery mode. (The Chart Recorder may lock up or shut off in this situation) This situation may also occur if the unit is plugged into an outlet that shares the circuit with other machinery that has phase motors or compressors that cycle periodically. As these other machines cycle, they momentarily have a high current draw, therefore drawing from the unit.

Why won't the chart recorder respond to changes?

Is the unit locked up? this can be confirmed by pressing any of the buttons on the keypad, if the unit is locked up there will be no response to button presses and the unit may appear to be working, but the readings won't change, also the chart will not rotate. Remove power and battery, and then re-power.

Why won't the unit power up?

Remove the batteries and power adapter for a minute or two, this will reset the unit. The unit should respond when the adapter is plugged in.

WARRANTY

Dickson warrants that this line of instruments will be free from defects in material and workmanship under normal use and service for a period of twelve months after delivery. This warranty does not cover routine calibration and battery replacement. For Specifications and Technical Support go to www.DicksonData.com

FACTORY SERVICE AND RETURNS

Contact Customer Service (630.543.3747) for a Return Authorization (RAJ Number) before returning any instrument. Please have the model number, serial number and a PO number ready before calling.

Replaceable Sensor Certificate of Validation


Dickson ensures that the Replaceable Sensors/ Instruments listed below were developed, tested and validated together.

- **Replaceable Sensor Model:** R200 and R250 Instrument Model: TH8P0, TH8P2, TH8P3, TH8PS
- **Operation:** The Instruments and Replaceable Sensor models listed above were specifically designed to work together. No other sensors will work with the Instrument models listed. No other Instrument will work with the Replaceable Sensors listed. The Replaceable Sensor must be connected to the Instrument for the Instrument to operate properly.
- **Calibration:** Only the Replaceable Sensor is calibrated. The sensor, and all calibration defaults and adjustments are stored on the Replaceable Sensor. Accuracy is strictly controlled by the sensor – no adjustments are made by the Instrument. Readings are sent from the Replaceable Sensor to the Instrument for storage purposes only. Certificates of Calibration/ NISTs are only supplied for the Replaceable Sensor for this

reason.

Recalibration: When a Replaceable Sensor is due for recalibration the existing Replaceable Sensor can be replaced with a new Replaceable Sensor thus eliminating the need to return the entire instrument for recalibration. Replaceable Sensors can be returned for recalibration as well.


Documents / Resources

	DICKSON TH8 Temperature and Humidity Recorder [pdf] User Guide TH8, TH8P, TH8PO, TH8P2, TH8P3, TH8P5, TH8 Temperature and Humidity Recorder, TH8, Temperature and Humidity Recorder, Humidity Recorder
---	---

References

- [User Manual](#)

 Dickson

 Dickson, humidity recorder, Temperature and Humidity Recorder, TH8, TH8 Temperature and Humidity Recorder, TH8P, TH8P2, TH8P3, TH8P5, TH8PO

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.