



DIGITUS DN-170110 All In One UPS system User Manual

[Home](#) » [DIGITUS](#) » DIGITUS DN-170110 All In One UPS system User Manual 

Contents

- [1 DIGITUS DN-170110 All-In-One UPS system](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Safety Warning](#)
- [5 INTRODUCTION](#)
- [6 PACKAGE CONTENT](#)
- [7 SPECIFICATION](#)
- [8 SYSTEM DESCRIPTION](#)
- [9 Inspection](#)
- [10 Charging](#)
- [11 Placement](#)
- [12 Connection](#)
- [13 Turn On/Off](#)
- [14 TROUBLESHOOTING](#)
- [15 Documents / Resources](#)
 - [15.1 References](#)
- [16 Related Posts](#)



DIGITUS DN-170110 All-In-One UPS system



Product Information

The UPS (Uninterruptible Power Supply) is a device that provides backup power to connected devices in case of power outages or voltage fluctuations. The UPS contains a sealed, lead-acid battery with six cells and an internal voltage of 12Vdc. The UPS is designed to be operated by laymen and has full protection against discharge, overcharge, and overload. It comes in two variants with a capacity of 600VA and 800VA.

The UPS has a simulated sine wave output waveform, which means that the output is not a pure sine wave but is similar to it. It has a USB charger with a maximum output of 5.0V/2.0A and an RJ45 port for network protection. The UPS has several LED indicators that show the operating mode of the device.

Product Usage Instructions

Safety Warning: The UPS utilizes voltages that may be hazardous. Do not attempt to disassemble the unit as it contains no user-serviceable parts. Only factory service personnel may perform repairs.

Precautions when working on batteries:

- Remove watches, rings, or other metal objects from the hands.
- Use tools with insulated handles.
- Wear rubber gloves and boots.
- Do not lay tools or metal parts on top of the batteries.
- Disconnect the charging source prior to connecting or disconnecting battery terminals.

Servicing of batteries: should be performed or supervised by personnel knowledgeable of batteries and the required precautions. Keep unauthorized personnel away from batteries.

Installation: During the installation of this equipment, it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.

The main socket outlet that supplies the UPS shall be installed near the UPS and shall be easily accessible.

Beware of electric shock: when disconnecting this unit from the mains, hazardous voltage still may be accessible through supply from the battery. The battery supply should be, therefore, disconnected from the plus and minus pole of the battery when maintenance or service work inside the UPS is necessary.

System Description: The UPS has a power switch, LED indicators, USB charger, USB port, input, bypass, output, RJ45 port, mounting hole, and battery cover. The LED indicators show the operating mode of the device. Green indicates AC mode, yellow indicates battery mode, and red indicates fault mode.

Inspection: Remove the UPS from its packaging and inspect it for damage that may have occurred during shipping.

If any damage is discovered, repack the unit and return it to the place of purchase.

Safety Warning

1. The UPS utilizes voltages that may be hazardous. Do not attempt to disassemble the unit. The unit contains no user-serviceable parts. Only factory service personnel may perform repairs.
2. The internal battery voltage is 12Vdc. sealed, lead-acid, 6 cells battery.
3. Connection to any other type of receptacle other than a two-pole, three-wire grounded receptacle may result in shock hazard as well as violation to local electrical codes.
4. In the event of an emergency, press the OFF button and disconnect the power cord from the AC power supply to properly disable the UPS.
5. Do not allow liquids or any external objects to enter the UPS. Do not place beverages or any other liquid-containing vessels on or near the unit.
6. This unit is designed for installation in a controlled environment (temperature controlled, indoors are free of conductive contaminants). Avoid installing the UPS in locations where there is static or flowing water, or excessive humidity.
7. Do not plug the UPS input into its own output.
8. Do not attach a power strip or surge suppressor to the UPS.
9. Do not connect non-computer-related items, such as medical equipment, life-support equipment, microwave ovens, or vacuum cleaners to UPS.
10. To reduce the risk of overheating the UPS, do not cover the UPS cooling vents and avoid exposing the unit to direct sunlight or installing the unit near heat-emitting appliances such as air heaters or furnaces.
11. Unplug the UPS prior to cleaning and do not use liquid or spray detergent.
12. Do not dispose of the batteries into a fire as they may explode.
13. Do not open or mutilate the battery or batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.
14. A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:
 - Remove watches, rings, or other metal objects from the hands.
 - Use tools with insulated handles.
 - Wear rubber gloves and boots.
 - Do not lay tools or metal parts on the top of batteries.
 - Disconnect charging source prior to connecting or disconnecting batteries terminals.
15. Servicing of batteries should be performed or supervised by personnel knowledgeable of batteries and the

required precautions. Keep unauthorized personnel away from batteries.

16. When replacing batteries, replace with the same number and type of sealed lead-acid battery. The maximum ambient temperature rating is 40°C.
17. This pluggable type A equipment with the battery already installed by the supplier is operator installable and may be operated by laymen.
18. During the installation of this equipment, it should be assured that the sum of the leakage currents of the UPS and the connected loads does not exceed 3.5mA.
19. Beware of the possibility of electric shock when disconnecting of this unit from the mains, hazardous voltage still may be accessible through supply from battery. The battery supply should be therefore disconnected from the plus and minus pole of the battery when maintenance or service work inside the UPS is necessary.
20. The main socket outlet that supplies the UPS shall be installed near the UPS and shall be easily accessible.

INTRODUCTION

This UPS is specially designed for Personal computers with multi-functions. Its lightweight, compact design perfect fits to the limited working environment. The line of UPS is equipped with boost and buck AVR to stabilize the input voltage range. It is also built-in with DC start function. This function enables the UPS to be started up without AC power supplied. Although it's a small UPS, the main features of UPS are listed below:

- Microprocessor control guarantees high reliability
- Equipped with boost and buck AVR
- Green Power Function for energy saving is for optional
- DC start function
- Auto restart while AC recovery
- Compact size, light wright
- Provides AC overload protection

PACKAGE CONTENT

- **Main unit:** UPS
- UPS quick installation guide
- UPS software license
- Power cord (Input and output)

SPECIFICATION

Capacity	VA	600VA	800VA
Input	Voltage	220VAC/230VAC/240VAC	
	Voltage Range	162-290VAC	
	Voltage Regulation (Batt. Mode)	+/- 10%	



Output	Frequency	50Hz or 60Hz	
	Frequency Regulation (Batt. Mode)	+/- 1Hz	
	Output Waveform	Simulated Since Wave	
Battery	Battery Type	12V/7.0 AHx1	12V/9.0 AHx1
	Recharge Time	6-8 hours to 90% after complete discharge	
Transfer Time	Typical	2-6 ms	
USB Charger	Typical	5.0V/2.0A Max.	
Indicator	AC Mode	Green LED lighting	
	Battery Mode	Yellow LED lighting	
	Fault Mode	Red LED lighting	
Audible alarm	Backup Mode	Sounding every 10 seconds	
	Low Battery	Sounding every 1 second	
	Overload	Sounding every 0.5 second	
	Fault	Continuously Sounding	
Protection	Full Protection	Discharge, overcharge, and overload protection	
Physical	Dimension (mm), L x W x H	293 x 202 x 93	
	Weight	4.5 kg	5.2 kg
Environment	Operating Environment	0-90% RH @ 0-40°C (non-condensing)	


	Noise Level	Less than 40dB
--	-------------	----------------

SYSTEM DESCRIPTION

Product Overview:

- 1. Power Switch
- 2. LED indicator
- 3. USB Charger
- 4. USB Port
- 5. Input
- 6. Bypass
- 7. Output
- 8. RJ45 Port
- 9. Mounting Hole
- 10. Battery Cover

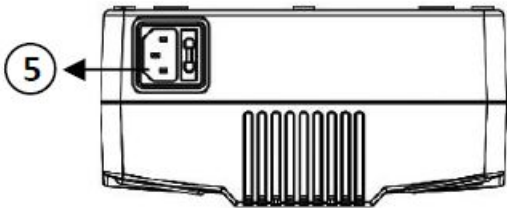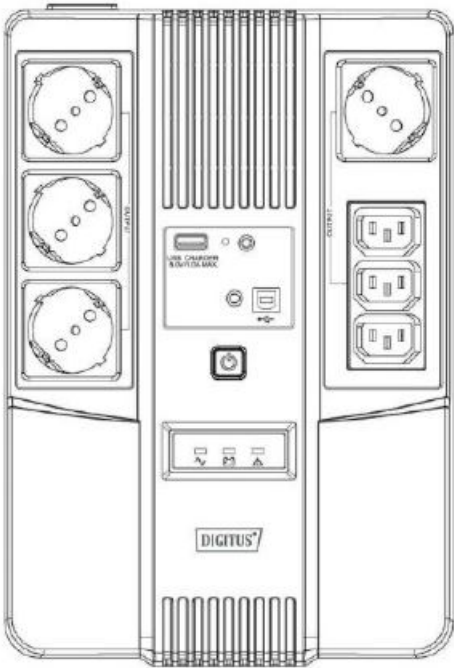

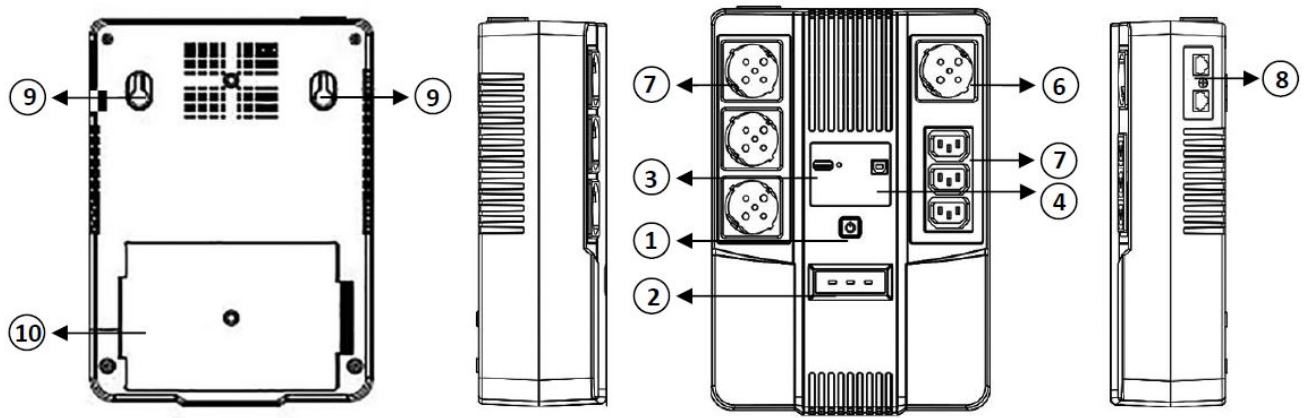

LED Indicators:


- **AC Mode:** Green LED lighting
- **Battery Mode:** Yellow LED flashing
- **Fault Mode:** Red LED lighting

Inspection

Remove the UPS from its packaging and inspect it for damage that may have occurred during shipping. If any damage is discovered, repack the unit and return it to the place of purchase.

Charging

This unit is shipped from the factory with its internal battery fully charged. However, some charge may be lost during shipping and the battery should be recharged prior use. Turn on the UPS, plug the unit into an appropriate power supply and allow the UPS to charge fully by leaving it plugged in for at least 6 hrs with no load (no electrical devices such as computers, monitors, etc.) connected.

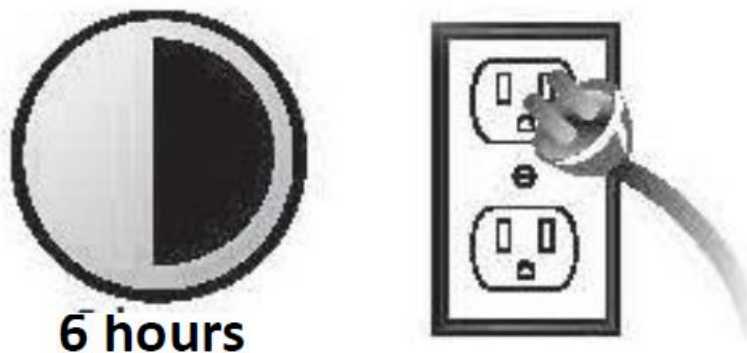


Placement

Install the UPS unit in any protected environment that provides adequate airflow around the unit, and is free from excessive dust, corrosive fumes and conductive contaminants. Do not operate your UPS in an environment where the ambient temperature or humidity is high.




On the other hand, place the UPS away from the monitor at least 20cm to avoid interference.

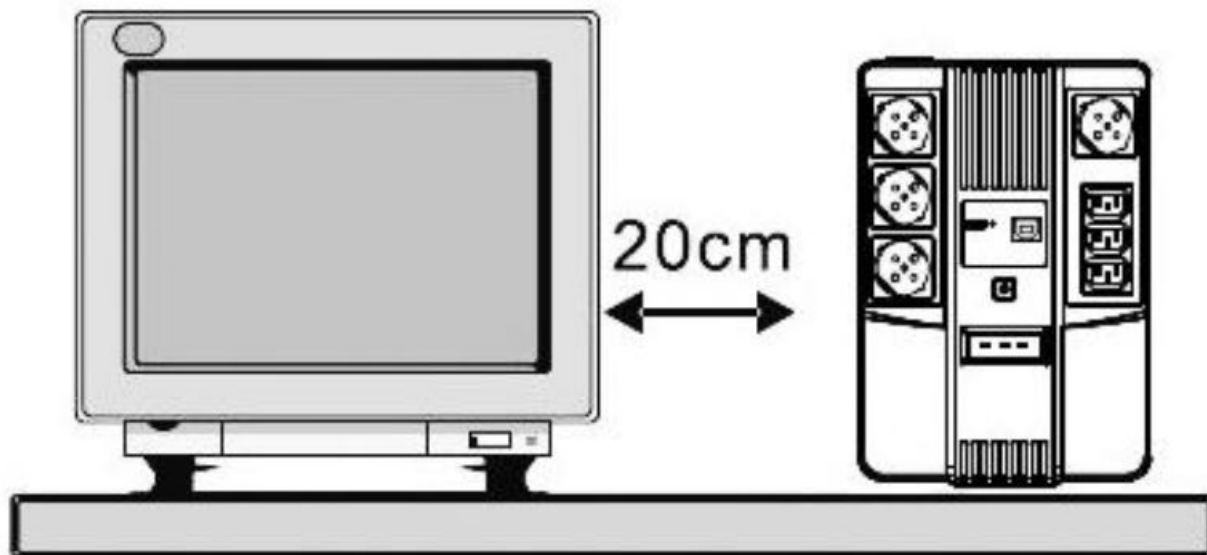


Connection

Plug the UPS into a 2-pole, 3-wire grounded receptacle. Then connect one computer-related device into each of the power receptacles supplied on the back of the UPS.

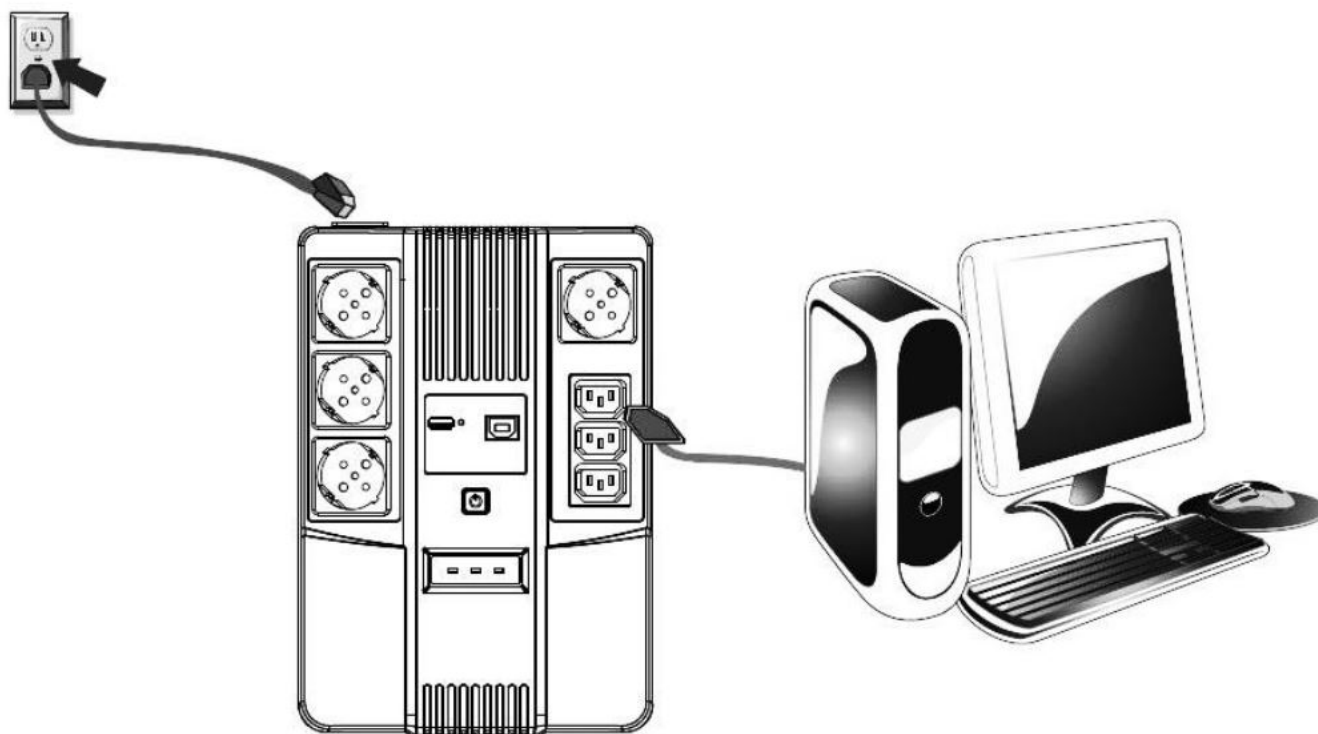

Turn On/Off

To turn on the UPS unit, press the power switch lightly. To turn off the UPS unit, press the power switch again

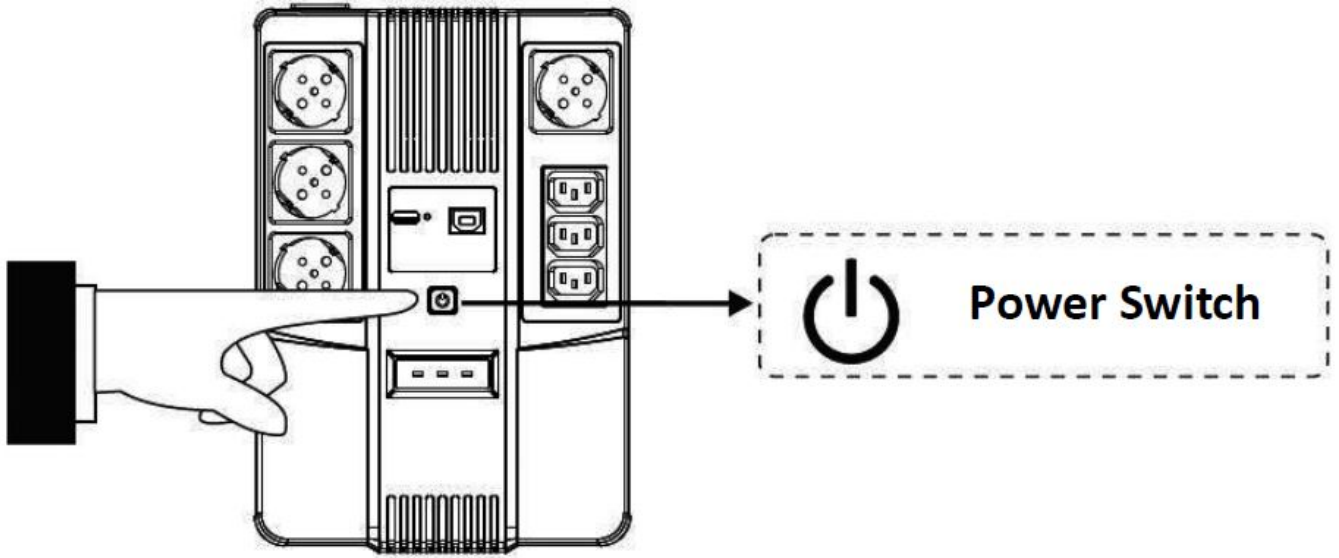

DC start

All series are equipped with DC Start. To start UPS when AC utility power is not available, simply press the power switch.

TROUBLESHOOTING

Symptom	Possible Cause	Proposed Action
No LED display on the front panel	Battery weak	Charge battery up to 8 hours
	Battery defect	Replace with the same type of battery
	Power switch is not pressed	Press the power switch again
The alarm buzzer beeps continuously when the AC supply is normal	Overload of the UPS	Verify that the load matches the UPS capability specified in the specs
When power failure, backup time is shortened	Overload of the UPS	Remove some non-critical load
	Battery voltage is too low	Charge battery 8 hours or more
	Battery defect due to high-temperature operation environment, or improper operation to battery	Replace with the same type of battery
Mains normal but yellow LED is flashing	Power cord is loose	Reconnect the power cord properly

The manual content may be changed. Please also refer to the latest version on the webshop.

This is a Class A product. In-home environment, this product may cause radio interference. In this case, the user may be required to take appropriate measures.

Hereby Assmann Electronic GmbH declares that the Declaration of Conformity is part of the shipping content. If the Declaration of Conformity is missing, you can request it by post under the below-mentioned manufacturer address.

www.assmann.com Assmann Electronic GmbH Auf dem Schüffel 3 58513 Lüdenscheid Germany

Documents / Resources



[DIGITUS DN-170110 All In One UPS system](#) [pdf] User Manual
DN-170110, DN-170111, DN-170110 All In One UPS system, All In One UPS system, One UPS system, UPS system

References

- [ASSMANN Electronic GmbH | Germany](#)
- [ASSMANN Electronic GmbH | Germany](#)