



DRAGINO LDS02 LoRaWAN Door Sensor User Manual

[Home](#) » [DRAGINO](#) » DRAGINO LDS02 LoRaWAN Door Sensor User Manual 



LDS02 LoRaWAN Door Sensor User Manual
Document Version: 1.3
Image Version: v1.3

Version	Description	Date
1	Release	2021-May-16
1.1	Add more Battery Description	2021-Jul-1
1.3	Update LDS02 photo for with new version	2022-Jan-8

Contents

- 1 Introduction
 - 1.1 What is LDS02 LoRaWAN Door Sensor
 - 1.2 Features
 - 1.3 Applications
 - 1.4 Dimension
 - 1.5 Firmware Change log
- 2 Power ON LDS02
- 3 How to install LDS02
- 4 Operation Mode
 - 4.1 How it works?
 - 4.2 Example to join LoRaWAN network
 - 4.3 Uplink Payload
 - 4.4 Downlink Payload
 - 4.5 Integrate with Datacake
 - 4.6 Alarm Base on Timeout
 - 4.7 LEDs
- 5 Battery & How to replace
 - 5.1 Battery Type and replace
 - 5.2 Battery Life Analyze
- 6 Use AT Command
 - 6.1 Access AT Command
- 7 FAQ
 - 7.1 How to upgrade the image?
 - 7.2 How to change the LoRa Frequency Bands/Region?
 - 7.3 Can I disable uplink for each event to save battery life?
- 8 Order Info
- 9 Packing Info
- 10 Support
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Introduction

What is LDS02 LoRaWAN Door Sensor

The Dragino LDS02 is a LoRaWAN Door Sensor. It detects door open/close status and uplink to IoT server via LoRaWAN network. user can see the door status, open time, open counts in the IoT Server.

LDS02 is powered by 2 x AAA batteries and target for long time use, these two batteries can provide about 16,000 ~ 70,000 uplink packets. After battery running out, user can easily open the enclosure and replace with 2 common AAA batteries.

The LDS02 will send periodically data every day as well as for each door open/close action. It also counts the door open times and calculate last door open duration. User can also disable the uplink for each open/close event, instead, device can count each open event and uplink periodically.

LDS02 has the open alarm feature, user can set this feature so device will send Alarm if the door has been open

for a certain time.

Each LDS02 is pre-load with a set of unique keys for LoRaWAN registration, register these keys to LoRaWAN server and it will auto connect after power on.



Features


- LoRaWAN Class A v1.0.3
- Frequency Bands: CN470/EU433/KR920/US915/EU868/AS923/AU915/IN865/RU864
- SX1262 LoRa Core
- Door Open/Close detect
- Door open/close statistics
- 2 x AAA LR03 Batteries
- AT Commands to change parameters
- Uplink on periodically and open/close action
- Remote configure parameters via LoRa Downlink
- Firmware upgradable via program port

Applications

- Smart Buildings & Home Automation
- Logistics and Supply Chain Management
- Smart Metering
- Smart Agriculture
- Smart Cities
- Smart Factory

Dimension

Unit: mm

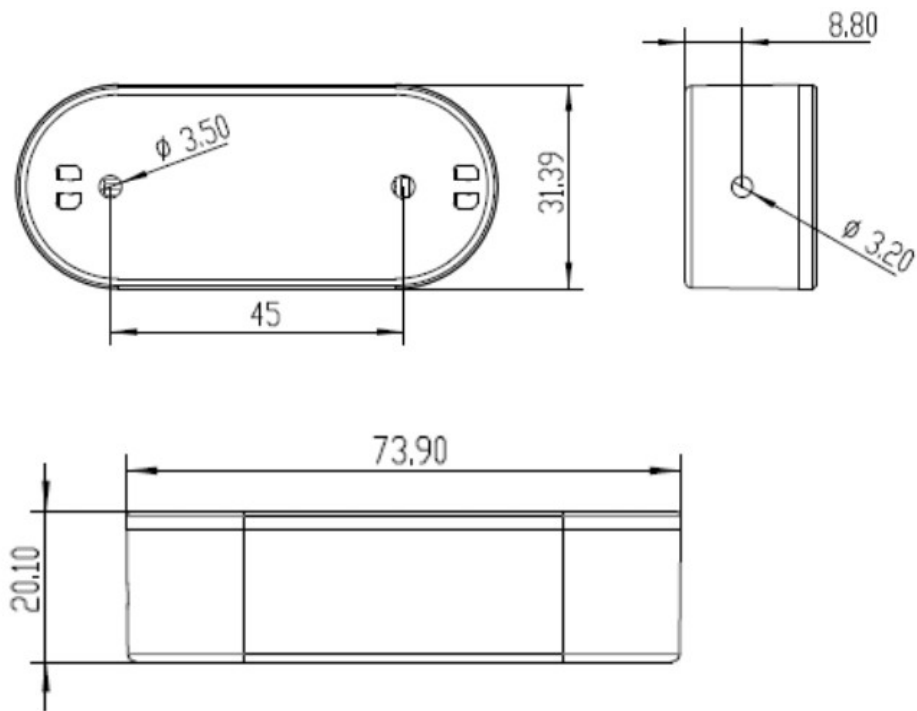

Firmware Change log

LDS02 use the same firmware as LDS01.


LDS02 Image files [Download link](#)

Power ON LDS02

When receive the LDS02, please open the enclosure and add 2 x AAA batteries to power it. The LED will blink when device is powered.

How to install LDS02

When install the LDS02 on wall. Please make sure install as below so the marks will close to each other when close the door. Open/Close threshold range: ~ 25mm

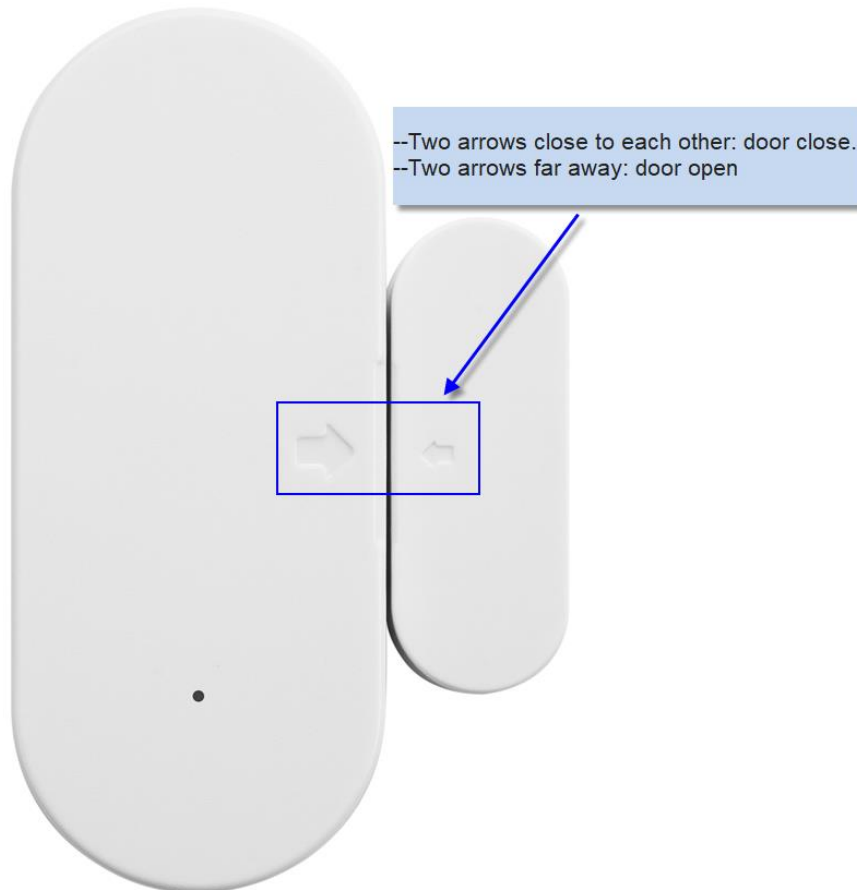

Operation Mode

How it works?

The LDS02 is configured as LoRaWAN OTAA Class A mode by default. It has OTAA keys to join network. To connect a local LoRaWAN network, user just need to input the OTAA keys in the network server and **power on** the LDS02. It will auto join the network via OTAA.

In case user can't set the OTAA keys in the network server and has to use the existing keys from server. User can **use AT Command** to set the keys in the devices.

Example to join LoRaWAN network

Here shows an example for how to join the **TTN V3 Network**. Below is the network structure, we use LG308 as LoRaWAN gateway here.



The LDS02 is installed on the door edge to detect the open / close event. And send the status to LoRaWAN server. The LDS02 will uplink two type of messages to the server.

- A keep-alive message which send once per day.
- A door event message when there is a door open/close. (**Alarm event can be disabled**)

The LG308 is already set to connect to **TTN V3 network**. What we need to now is only configure the TTN V3:

Step 1: Create a device in TTN V3 with the OTAA keys from LDS02.

Each LDS02 is shipped with a sticker with unique device EUI:



User can enter this key in their LoRaWAN Server portal. Below is TTN V3 screen shot: Add APP EUI in the application.

Add application

Owner*

davidhuang



Application ID*

my-new-application

Application name

My new application

Description

Description for my new application

Optional application description; can also be used to save notes about the application

[Create application](#)

CCC

ID: 123

4 End devices

2 Collaborators

2 API keys

Created 95 days ago

General information

Application ID

123



Created at

Feb 2, 2021 11:12:30

Last updated at

Apr 30, 2021 11:00:33

Live data

[See all activity →](#)

↑ 10:09:42 1231234234... Forward data message to Application Server

ⓘ 10:09:42 1231234234... Store upstream data message

↑ 10:09:42 1231234234... Forward uplink data message

↑ 10:09:42 1231234234... Receive uplink data message

↑ 10:09:42 1231234234... Successfully processed data message

↑ 10:09:42 1231234234... Drop data message

End devices (4)

Search by ID

Import end devices

[+ Add end device](#)

ID ↕

Name ↕

DevEUI

JoinEUI

Created ↕

Register end device

[From The LoRaWAN Device Repository](#)

[Manually](#)

1. Select the end device

Brand *

Dragino Technology Co.,...

Model *

Type to search...

Cannot find your exact end device?

LBT1

LDDS20

LDDS75

LDS01

LGT92

LHT65

LSE01

LSN50-V2

2. Enter registration data

Please choose an end device first to

Register end device

[From The LoRaWAN Device Repository](#)

[Manually](#)

1. Select the end device

Brand ? *

Dragino Technology Co.,...

Model ? *

LDS02

Hardware Ver. ? *

Unknown ..

Firmware Ver. ? *

1.5

Profile (Region) *

EU_863_870



LDS02

MAC V1.0.3, PHY V1.0.3 REV A, Over the air activation (OTAA), Class A

LoRaWAN Door Sensor

[Product website](#) [Data sheet](#)

2. Enter registration data

Frequency plan ? *

Select...

AppEUI ? *

.. .. .

Fill with zeros

Add APP KEY and DEV EUI

2. Enter registration data

Frequency plan ⓘ *

Europe 863-870 MHz (SF12 for RX2)

The frequency plan used by the end device

AppEUI ⓘ *

.....00

The AppEUI uniquely identifies the owner of the end device. If no AppEUI is provided by the device manufacturer (usually for dev

DevEUI ⓘ *

.....

The DevEUI is the unique identifier for this end device

AppKey ⓘ *

.....

The root key to derive session keys to secure communication between the end device and the application

End device ID *

my-new-device

After registration

Step 2: Power on LDS02 and it will auto join to the TTN V3 network. After join success, it will start to upload message to TTN V3 and user can see in the panel.

• Last seen 8 seconds ago ↑ 315 ↓ 36 Created 82 days ago

Overview **Live data** Messaging Location Payload formatters Claiming General settings

Time	Type	Data preview
15:29:21	Store upstream data message	DevAddr: 26 08 00 41
15:29:21	Forward data message to Appli...	DevAddr: 26 08 00 41 MAC payload: 78 AC 18 03 73 22 59 21 87 AA FPort: 18 SNR: 10 RSSI: -51 Bandwidth: 125000
15:29:21	Forward uplink data message	payload: { ALARM: 0, BAT_V: 3.130, DOOR_OPEN_STATUS: 0, DOOR_OPEN_TIMES: 147, LAST_DOOR_OPEN_DURATION: 0, MOD: 1 } 0C 42 61 00 00 93 00 00 00
15:29:21	Receive uplink data message	DevAddr: 26 08 00 41
15:29:21	Successfully processed data me...	DevAddr: 26 08 00 41 FCnt: 315 FPort: 18 MAC payload: 78 AC 18 03 73 22 59 21 87 AA Bandwidth: 125000 SNR: 10 RSSI: -51 Raw payload:
15:29:21	Drop data message	Uplink is a duplicate
15:29:21	Receive data message	DevAddr: 26 08 00 41 FCnt: 315 FPort: 18 MAC payload: 78 AC 18 03 73 22 59 21 87 AA Bandwidth: 125000 SNR: 9.5 RSSI: -89 Raw payload:
15:29:21	Drop data message	Uplink is a duplicate
15:29:21	Receive data message	DevAddr: 26 08 00 41 FCnt: 315 FPort: 18 MAC payload: 78 AC 18 03 73 22 59 21 87 AA Bandwidth: 125000 SNR: 8.5 RSSI: -105 Raw payload:

Uplink Payload

Uplink Payload total 10 bytes.

Size(bytes)	2	1	3	3	1
value	Status&BAT	MOD Always:0x01	Total open door events	Last door open duration (unit: min)	Alarm

Example:

The screenshot shows the TTN V3 Live data interface. The 'Forward uplink data message' entry is selected, displaying the following details:

- Time: 15:29:21
- Type: Forward uplink data message
- DevAddr: 26 08 D0 41
- FCnt: 315
- FPort: 18
- MAC payload: 7B AC 18 03 73 22 59 21 87 AA
- Bandwidth: 125000
- SNR: 10
- RSSI: -51
- Raw payload: 0C 42 01 00 00 93 00 00 00

payload: 0B 88 01 00 25 00 01 BAT_V: 2.952 DOOR_OPEN_STATUS: 0 DOOR_OPEN_TIMES: 37
LAST_DOOR_OPEN_DURATION: 1MOD: 1

Example Payload Decoder in TTN V3: http://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/LDS02/Payload/

Downlink Payload

Downlink Control Type	Type Code	Downlink payload size(bytes)
TDC (Transmit Time Interval—Keep Alive Interval)	0x01	4
RESET	0x04	2
Set confirmed mode	0x05	2
Clear Counting	0xA6	2
Enable/Disable Alarm	0xA7	2
Control ADR/DR	0xA8	3
Set Alarm Timeout	0xA9	4

Example Downlink payload setting in TTN V3:

Uplink

Downlink

Schedule downlink

Insert Mode

☒ Replace downlink queue
☐ Push to downlink queue (append)

FPort*

1

Payload

01 00 00 3C |

The desired payload bytes of the downlink message

☐ Confirmed downlink

Schedule downlink

isa grade private LoRaWAN networks - The Things Industries

Type Code 0x01

If the payload=0100003C, means to control the LDS02's Keep Alive interval to 0x00003C=60(S)

Type Code 0x04

If payload = 0x04FF, it will reset the LDS02.

Type Code 0x05

0x05 00: Set uplink to LoRaWAN unconfirmed mode

0x05 01: Set uplink to LoRaWAN confirmed mode

Type Code 0xA6

Example: 0xA601: Clear Counting

For LDS02: reset both count number and time.

Type Code 0xA7

0xA7 01 : Equal to AT+DISALARM=1

0xA7 00 : Equal to AT+DISALARM=0

Type Code 0xA8

Format: 0xA8 aa bb

aa: 1: Enable ADR; 0: Disable ADR (Same as AT+CADR command)

bb: set DR (Same as AT+CDATARATE ,only valid after ADR=0)

Example: 0x A8 00 02 : Set ADR=0 and DR=1

Type Code 0xA9

See Alarm Base Timeout for detail.

Integrate with Datacake

Datacake provides a human friendly interface to show the sensor data, once we have data in TTN V3, we can use Datacake to connect to TTN V3 and see the data in Datacake. Below are the steps:

Step 1: Be sure that your device is programmed and properly connected to the network at this time.

Step 2: To configure the Application to forward data to Datacake you will need to add integration. To add the Datacake integration, perform the following steps:

The screenshot shows the 'Add' webhook template selection screen in The Things Stack Community Edition. The left sidebar has 'Webhooks' highlighted. The main area displays a grid of templates: Ubidots, Datacake (selected with a red arrow), TagoIO, Akenza Core, ThingSpeak, Qubitro, and theethings.io. The breadcrumb trail at the bottom is: Applications > lgt92test > Webhooks > Add > Datacake.

Add custom webhook

Template information



Datacake

Send data to Datacake via TTI adapter

[About Datacake](#) | [Documentation](#)


Template settings

Webhook ID *

Token *


Datacake API Token

Create datacake webhook

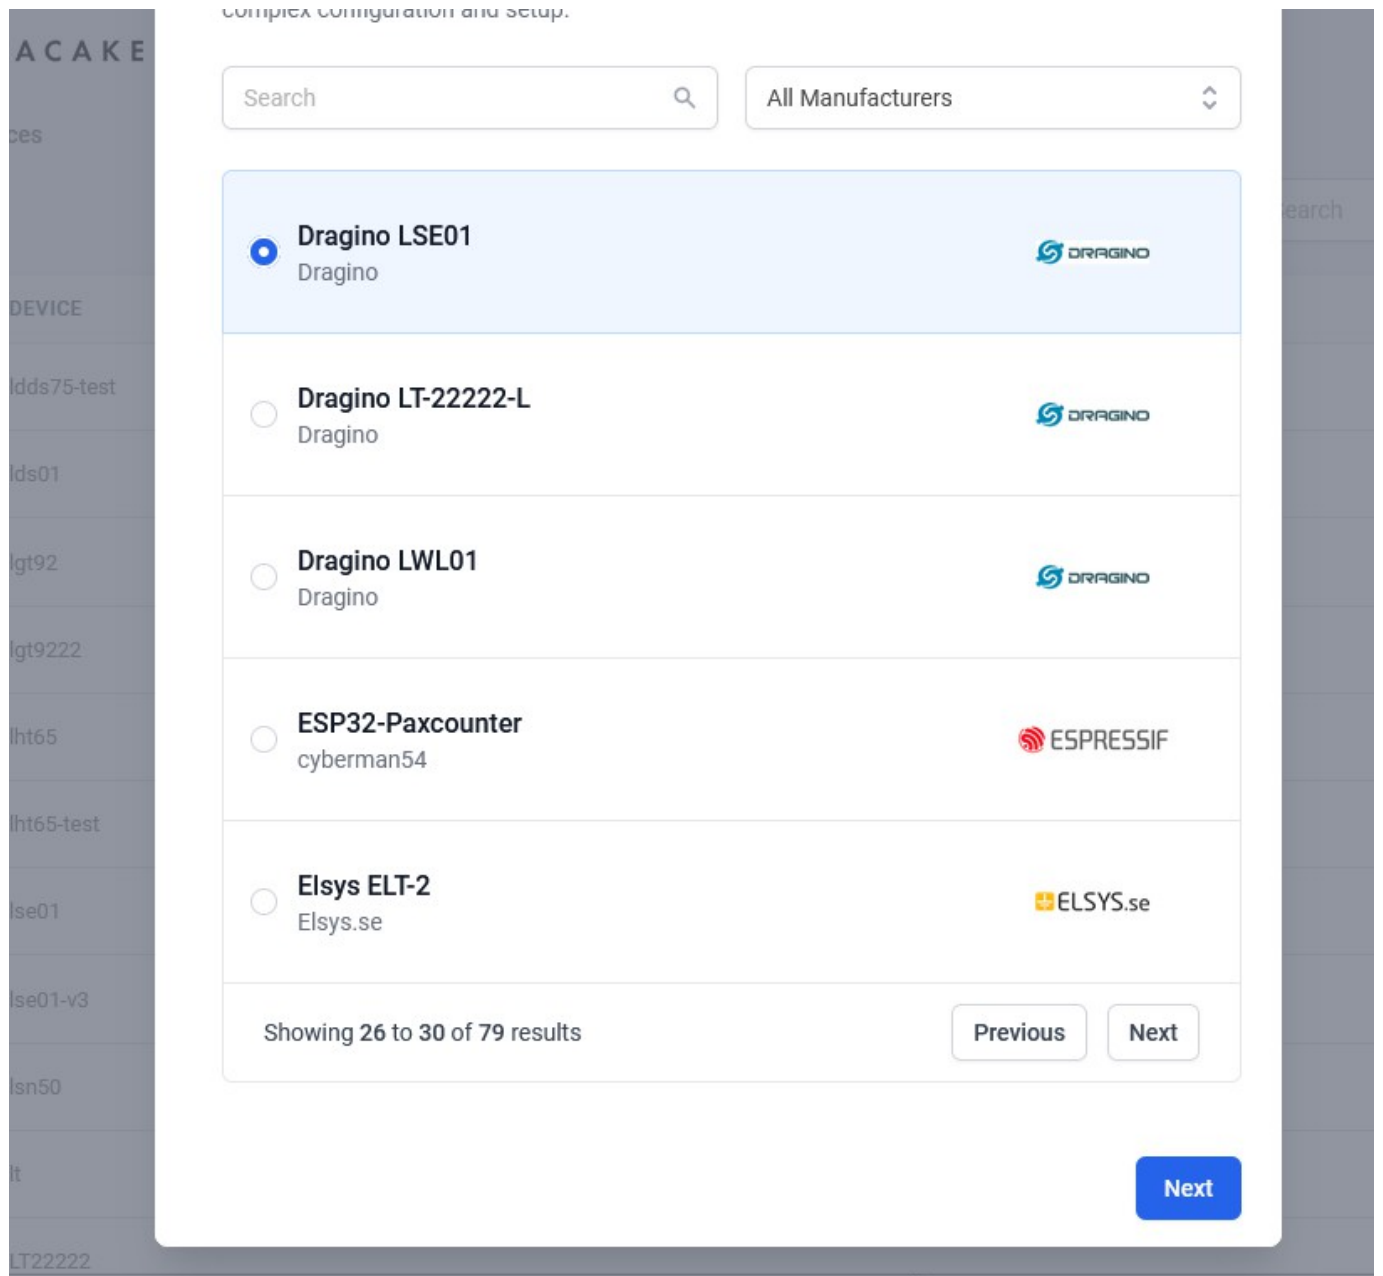

Step 3: Create an account or log in Datacake.

Step 4: Search LDS02 and add DevEUI.

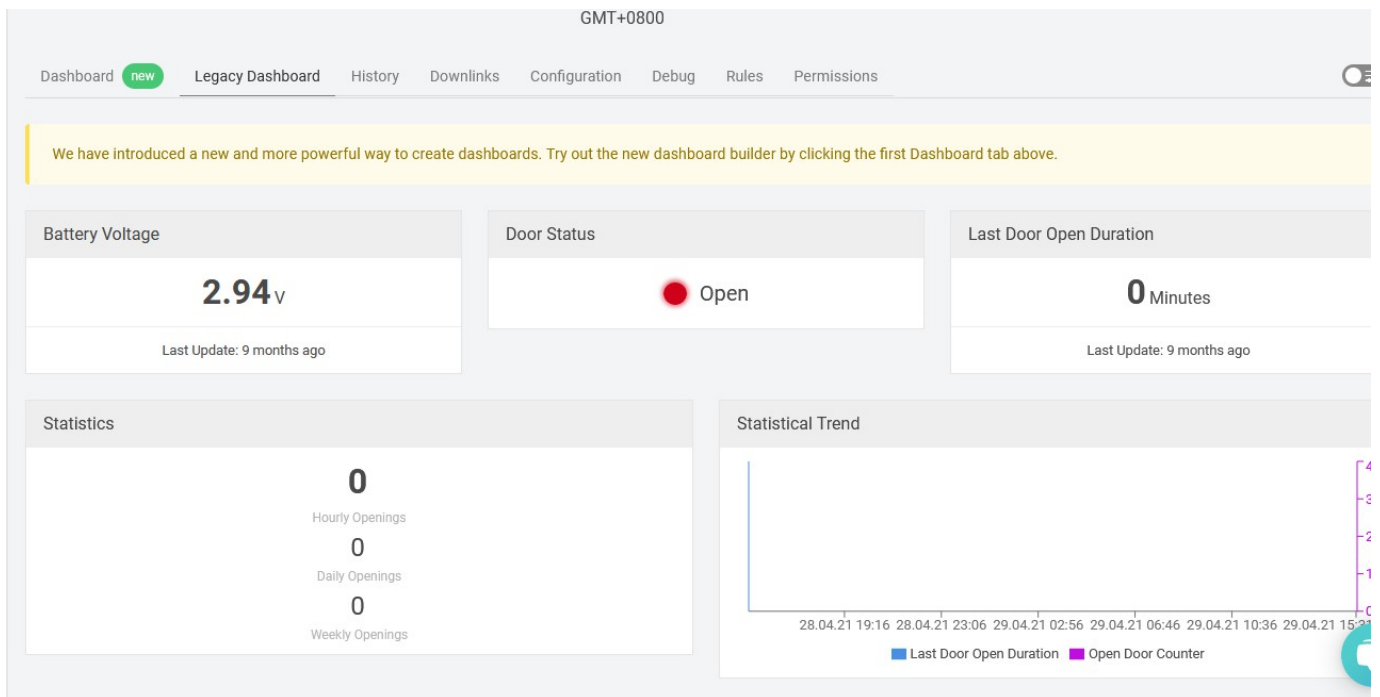

Alarm Base on Timeout

LDS02 can monitor the timeout for a status change, this feature can be used to monitor some event such as open fridge too long etc.

User configure this feature by using:

AT Command to configure:

- AT+TTRIG=1,30 → When status change from close to open, and device keep in open status for more than 30 seconds. LDS02 will send an uplink packet, the Alarm bit (the lowest bit of 10th byte of payload) on this uplink packet is set to 1.
- AT+TTIG=0,0 → Default Value, disable timeout Alarm.

Downlink Command to configure:

Command: 0xA9 aa bb cc

A9: Command Type Code

aa: status to be monitor

bb cc: timeout.

If user send 0xA9 01 00 1E: equal to AT+TTRIG=1,30 Or 0xA9 00 00 00: Equal to AT+TTRIG=0,0. Disable timeout Alarm.

LEDs

Action	LED behavior
Power On	GREEN on 1s, RED on 1s, BLUE on 1s
Joined successful	GREEN LED on 5s
Send an uplink message	GREEN LED blinks once
Got a downlink message	BLUE LED blinks once

Battery & How to replace

Battery Type and replace

LDS02 is equipped with 2 x AAA LR03 batteries. If the batteries running low (shows 2.1v in the platform). User can buy generic AAA battery and replace it.

Note:

1. The LDS02 doesn't have any screw, use can use nail to open it by the middle.
2. Make sure the direction is correct when install the AAA batteries.

Important Notice: Make sure use new AAA LR03 battery and the battery doesn't have broken surface.

Example of AAA LR03 batter:




Battery Life Analyze

Dragino battery powered products are all run in Low Power mode. User can check the guideline from this link to calculate the estimate battery life: https://www.dragino.com/downloads/downloads/LoRa_End_Node/Battery_Analyze/DRAGINO_Battery_Life_Guide.pdf

Use AT Command

Access AT Command

LDS02 supports AT Command set. User can use a USB to TTL adapter to configure LDS02 via use AT command, as below.

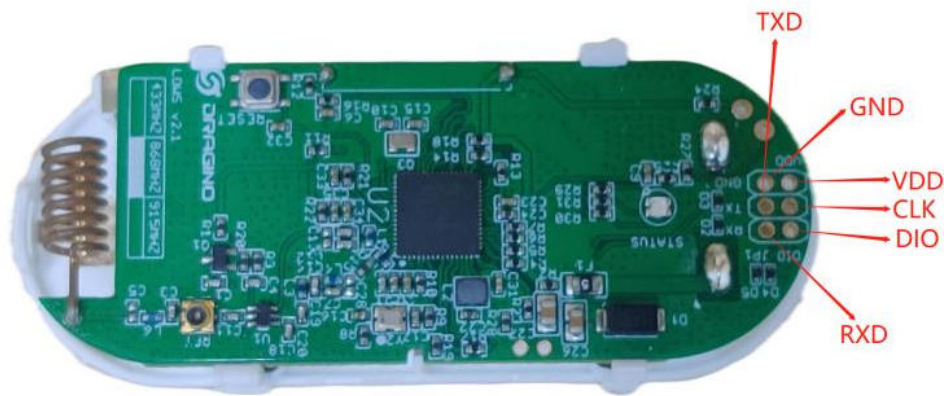


USB to TTL <- -> LDS02

RX <- -> TXD

TX <- -> RXD

GND <- -> GND

In PC, User needs to set serial tool(such as putty, SecureCRT) baud rate to 115200 to access to access serial console of LDS02. Below is the output for reference: The AT Access password is **123456**.

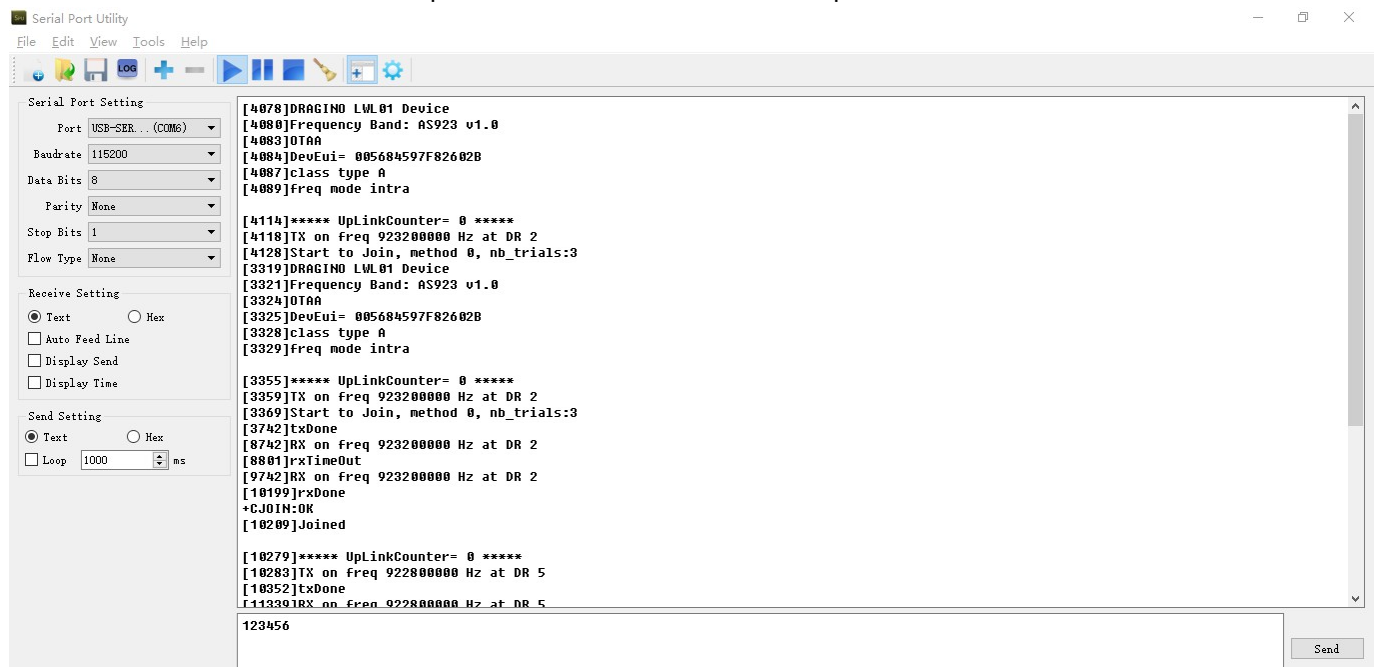

Each AT Command need to add an ENTER at the end before send.

When entering the first command, the RED LED will on and user can now input AT Commands. After input all needed AT Commands, please input AT+CLPM=1 to set the device to work in Low Power mode and RED LED will be off.

More detail AT Command manual can be found at AT Command Manual

FAQ

How to upgrade the image?

User can upgrade the firmware of LDS02 for bug fix, new features, or change working region. The upgrade instruction are here:

http://wiki.dragino.com/index.php?title=Firmware_Upgrade_Instruction

How to change the LoRa Frequency Bands/Region?

If user has for example US915 frequency and want to change it to AS923 frequency. User can follow the introduction for **how to upgrade image**. When download the images, choose the required image file for download.

Can I disable uplink for each event to save battery life?

Yes, User can use below method to disable this:

via AT Command:

AT+DISALARM=1, End node will only send packet in TDC time.

AT+DISALARM=0, End node will send packet in TDC time or status change for door sensor.

via LoRaWAN downlink Command:

0xA701 : Equal to AT+DISALARM=1

0xA700 : Equal to AT+DISALARM=0

LoRaWAN Door Sensor User Manual

Order Info

Part Number: LDS02-XXX

XXX:

- **EU433**: frequency bands EU433
- **EU868**: frequency bands EU868
- **KR920**: frequency bands KR920
- **CN470**: frequency bands CN470
- **AS923**: frequency bands AS923
- **AU915**: frequency bands AU915
- **US915**: frequency bands US915
- **IN865**: frequency bands IN865
- **CN779**: frequency bands CN779

Packing Info

Package Includes:

- LDS02 x 1

Dimension and weight:

- Device Size: 69.2 x 29.2 x 14.8 mm



Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different timezones we cannot offer

live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.

- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to support@dragino.com

Documents / Resources

	DRAGINO LDS02 LoRaWAN Door Sensor [pdf] User Manual LDS02, LoRaWAN Door Sensor
	DRAGINO LDS02 LoRaWAN Door Sensor [pdf] User Manual LDS02, ZHZLDS02, LDS02 LoRaWAN Door Sensor, LDS02, LoRaWAN Door Sensor

References

- [Dragino :: Open Source WiFi, Linux Appliance](#)
- [Dragino Download Server ./downloads/LoRa_End_Node/LDS01/](#)
- [Dragino Download Server ./downloads/LoRa_End_Node/LDS01/Firmware/](#)
- [Dragino Download Server ./downloads/LoRa_End_Node/LDS01/Payload/](#)
- [The Things Network Console](#)
- [Download PuTTY: latest release \(0.78\)](#)
- [Dragino Download Server ./downloads/LoRa_End_Node/Battery_Analyze/](#)