



DRAGINO LSN50v2 LoRaWAN Temperature Sensor User Manual

[Home](#) » [DRAGINO](#) » DRAGINO LSN50v2 LoRaWAN Temperature Sensor User Manual 

DRAGINO LSN50v2 LoRaWAN Temperature Sensor



Contents

- 1 Introduction
 - 1.1 Specifications
- 2 How to use LSN50v2-D20?
- 3 Battery & how to replace
- 4 Use AT Command
- 5 FAQ
- 6 Order Info
- 7 Packing Info
- 8 Support
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Introduction

What is LSN50V2-D2x LoRaWAN Temperature Sensor


The Dragino LSN50v2-D2x is a LoRaWAN Temperature Sensor for Internet of Things solution. It can be used to measure the temperature of air, liquid or object, and then upload to IoT server via LoRaWAN wireless protocol.

The temperature sensor used in LSN50v2-D2x is DS18B20, which can measure $-55^{\circ}\text{C} \sim 125^{\circ}\text{C}$ with accuracy $\pm 0.5^{\circ}\text{C}$ (max $\pm 2.0^{\circ}\text{C}$).

LSN50v2-D2x supports temperature alarm feature, user can set temperature alarm for instant notice. LSN50v2-D2x has max 3 probes which measure maximum 3 temperature points.

LSN50v2-D2x is powered by 8500mAh Li/SOCI2 Battery, it is designed for long term use up to 10 years. (Actually Battery life depends on the use environment, update period. Please check related Power Analyze report). Each LSN50v2-D2x is pre-load with a set of unique keys for LoRaWAN registration, register these keys to local LoRaWAN server and it will auto connect after power on.

LSN50v2-D20 in a LoRaWAN Network

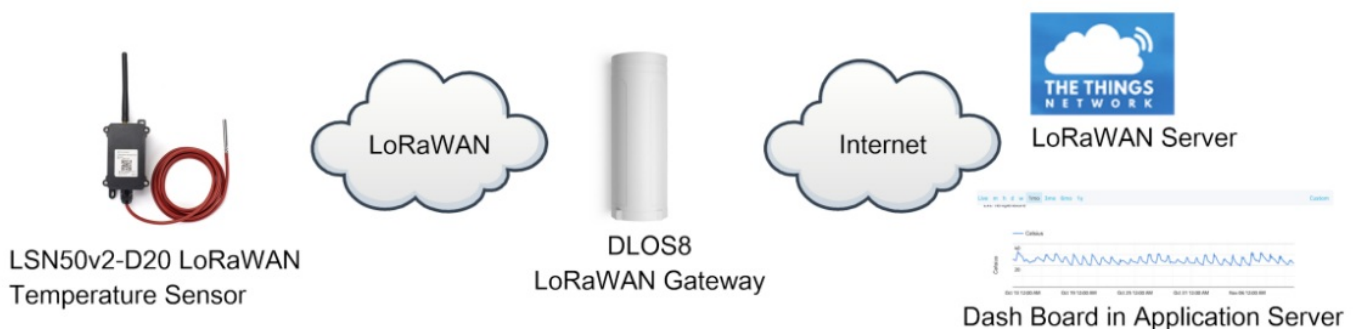

LSN50V2-D2x LoRaWAN Waterproof, Outdoor Temperature Sensor

Specifications

Common DC Characteristics:

- Supply Voltage: built in 8500mAh Li-SOCI2 battery

- Operating Temperature: -40 ~ 85°C

Temperature Sensor:

- Range: -55 to + 125°C
- Accuracy $\pm 0.5^{\circ}\text{C}$ (max $\pm 2.0^{\circ}\text{C}$).

LoRa Spec:

- Frequency Range,
- Band 1 (HF): 862 ~ 1020 Mhz
- 168 dB maximum link budget.
- High sensitivity: down to -148 dBm.
- Bullet-proof front end: IIP3 = -12.5 dBm.
- Excellent blocking immunity.
- Built-in bit synchronizer for clock recovery.
- Preamble detection.
- 127 dB Dynamic Range RSSI.
- Automatic RF Sense and CAD with ultra-fast AFC.
- LoRaWAN 1.0.3 Specification

Power Consumption

- Sleeping Mode: 20uA
- LoRaWAN Transmit Mode: 125mA @ 20dBm 44mA @ 14dBm

Features

- LoRaWAN v1.0.3 Class A
- Ultra-low power consumption
- 1 ~ 3 External DS18B20 Probes
- Measure range -55°C ~ 125°C
- Temperature alarm
- Bands: CN470/EU433/KR920/US915 EU868/AS923/AU915/IN865
- AT Commands to change parameters
- Uplink on periodically or Interrupt
- Downlink to change configure

Applications

- Wireless Alarm and Security Systems
- Home and Building Automation
- Industrial Monitoring and Control
- Long range Irrigation Systems.


Hardware Variant

Model	Photo	Probe Info
LSN50v2 D20		<p>1 x DS28B20 Probe Cable Length : 2 meters</p> <p>sensor cable is made by Silica Gel for higher temperature tolerance.</p>
LSN50v2 D22		<p>2 x DS28B20 Probes</p> <p>Cable lengths total 1.5meters per probe</p> <p>Cable Drawing: See This Link</p>
LSN50v2 D23		<p>3 x DS28B20 Probes</p> <p>Cable lengths total 1.5meters per probe</p> <p>Cable Drawing: See This Link</p>

Pin Definitions and Switch

LSN50 v2

Pin Definition

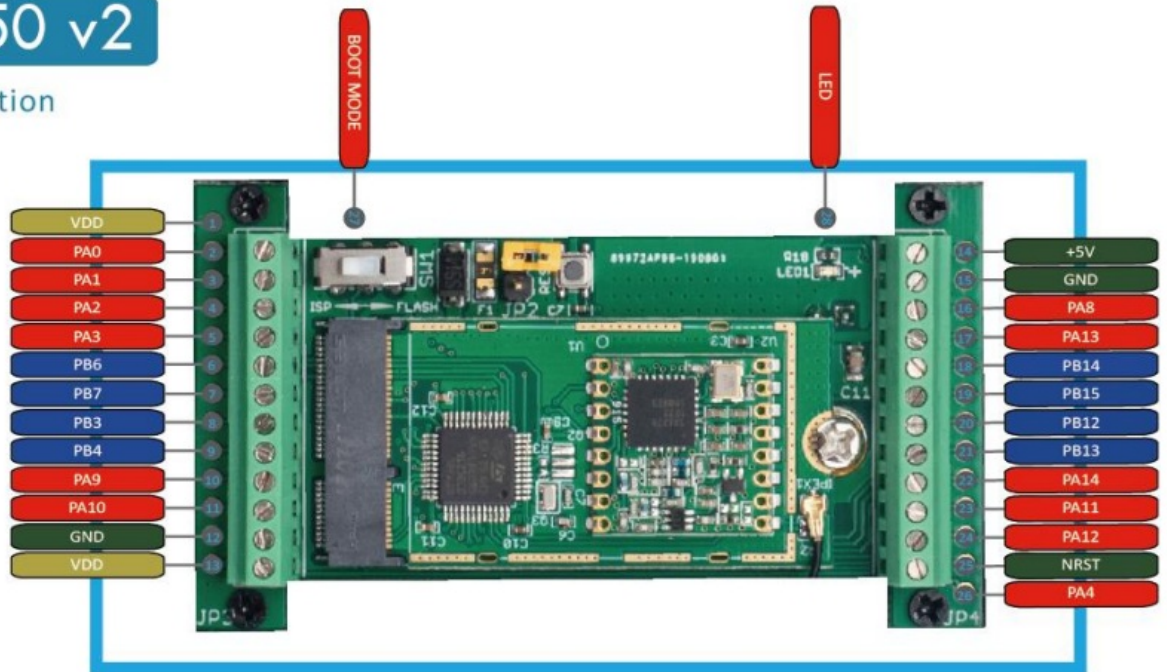

Pin Definition

The device is pre-configured to connect to DS18B20 sensor. The other pins are not used. If user want to know more about other pins, please refer the user manual of LSn50v2 at:

<http://www.dragino.com/downloads/index.php?dir=LSN50-LoRaST/>

Jumper JP2

Power on Device when put this jumper.

BOOT MODE / SW1

1. ISP: upgrade mode, device won't have any signal in this mode. but ready for upgrade firmware.
LED won't work. Firmware won't run.
2. Flash: work mode, device starts to work and send out console output for further debug

Reset Button

Press to reboot the device.

LED

It will flash:

1. When boot the device in flash mode
2. Send an uplink packet

Hardware Change log

LSN50v2-D20 v1.0:

Release.

How to use LSN50v2-D20?


How it works?

The LSN50v2-D20 is working as LoRaWAN OTAA Class A end node. Each LSN50v2-D20 is shipped with a worldwide unique set of OTAA and ABP keys. User needs to input the OTAA or ABP keys in the LoRaWAN network server to register. Open the enclosure and power on the LSN50v2-D20, it will join the LoRaWAN network and start to transmit data. The default period for each uplink is 20 minutes.

Quick guide to connect to LoRaWAN server (OTAA)

Here is an example for how to join the [TTN LoRaWAN Server](#). Below is the network structure, in this demo we use [DLOS8](#) as LoRaWAN gateway.

LSN50v2-D20 in a LoRaWAN Network

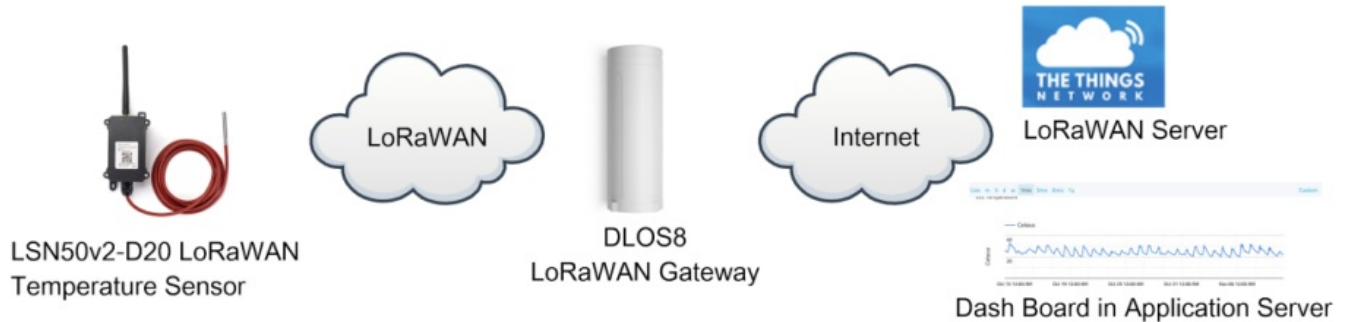

The DLOS8 is already set to connect to [TTN](#) . What the rest we need to is register the LSN50V2-D20 to TTN:

- **Step 1:** Create a device in TTN with the OTAA keys from LSN50V2-D20.

Each LSN50V2-D20 is shipped with a sticker with the default device EUI as below:



Input these keys in their LoRaWAN Server portal. Below is TTN screen shot:

Add APP EUI in the application

THE THINGS NETWORK CONSOLE COMMUNITY EDITION

Applications Gateways Support

Applications > dragino_test_application1

documentation

Application ID dragino_test_application1

Description a test application for Dragino

Created 2 years ago

Handler ttn-handler-eu (current handler)

APPLICATION EUIS manage euis

<>	70 B3 D5 7E F0 00 46 18	
<>	3F 77 AD E3 6B CA AB 65	

Add APP KEY and DEV EUI

THE THINGS NETWORK CONSOLE COMMUNITY EDITION

Applications Gateways Support

Applications > dragino_test_application1 > Devices

bulk import devices

REGISTER DEVICE

Device ID
This is the unique identifier for the device in this app. The device ID will be immutable.

BD

Device EUI
The device EUI is the unique identifier for this device on the network. You can change the EUI later.

A8 40 41 00 01 81 85 48 8 bytes


App Key
The App Key will be used to secure the communication between you device and the network.

57 4E 37 E6 8A EC FC CD B3 B9 3D 87 A9 3B 4B 2C 16 bytes

App EUI

3F 77 AD E3 6B CA AB 65

- **Step 2:** Power on LSN50V2-D20

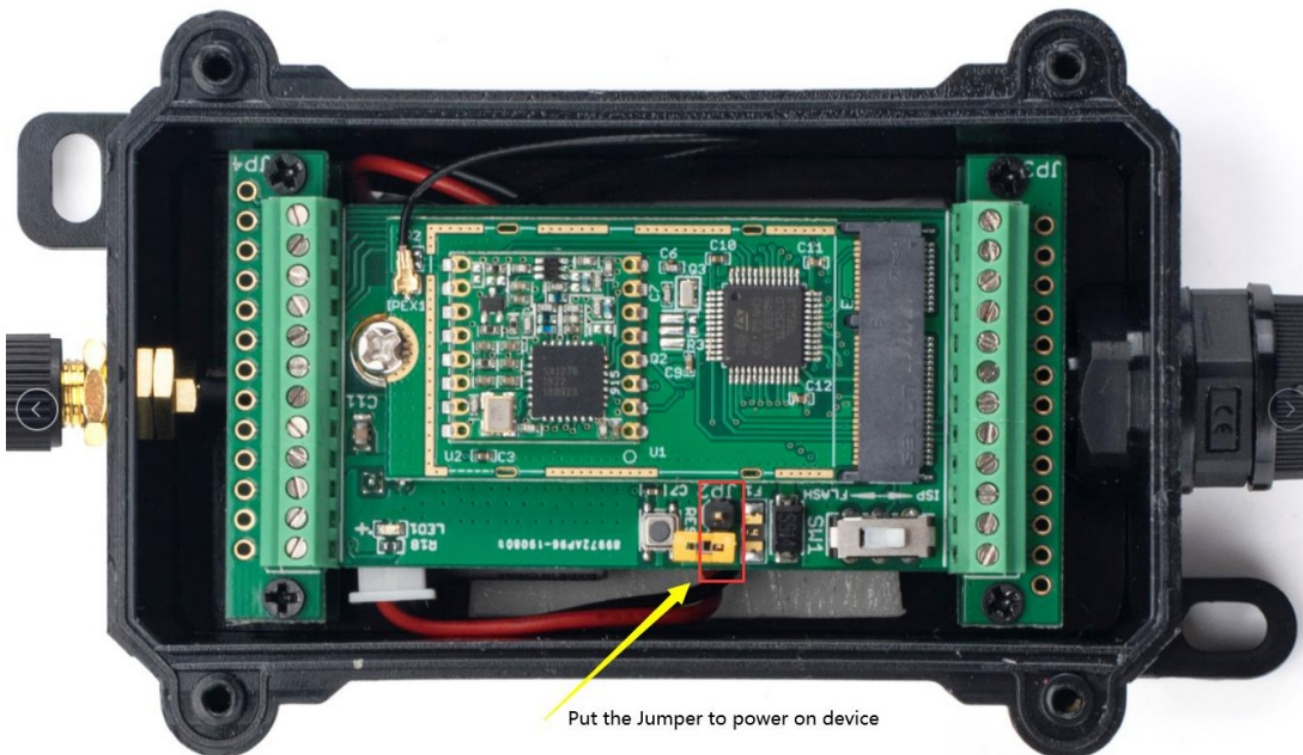

- **Step 3:** LSN50V2-D20 will auto join to TTN network via the LoRaWAN coverage by DLOS8. After join success, LSN50V2-D20 will start to uplink temperature value to server.

Uplink Payload

Payload Analyze

Normal Upload Payload:

LSN50v2-D2x use the same payload as LSn50v2 mod1, as below.

Size(bytes)	2	2	2	1	2	2
Value	Battery	Temp_Red	Ignore	Alarm Flag	Temp_White	Temp_Black

当对应端口的 DS18B20 没接或者读数出错时,会显示数据为空.下图是只接 Temp_Red 传感器.

```

↑ 15:09:52 Forward uplink data message Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: "NULL", Temp_Red: 25.6, Temp_White: "NULL", Work_mode: "DS18B20" }
↑ 15:08:54 Forward uplink data message Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 26, Temp_Red: 25.6, Temp_White: 25.7, Work_mode: "DS18B20" }
↑ 15:07:54 Forward uplink data message Payload: { ALARM_status: "FALSE", BatV: 3.378, Temp_Black: 26.1, Temp_Red: 25.6, Temp_White: 25.8, Work_mode: "DS18B20" }

```



Last seen 54 seconds ago ↑ 4 ↓ 1

Created 17 minutes ago

Overview **Live data** Messaging Location Payload formatters Claiming General settings

Time	Type	Data preview	Verbose stream	Pause	Clear
↑ 14:48:10	Forward uplink data message	Payload: { ALARM_status: "TRUE", BatV: 3.378, Temp_Black: 25.8, Temp_Red: 33.8, Temp_White: 25.8, Work_mode: "DS18B20" }	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="button" value="Clear"/>
↑ 14:47:10	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.378, Temp_Black: 25.7, Temp_Red: 33.6, Temp_White: 25.7, Work_mode: "DS18B20" }	<input type="checkbox"/>	<input type="checkbox"/>	<input type="button" value="Clear"/>
↑ 14:46:10	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 25.5, Temp_Red: 26.1, Temp_White: 25.7, Work_mode: "DS18B20" }	<input type="checkbox"/>	<input type="checkbox"/>	<input type="button" value="Clear"/>
↑ 14:44:11	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.387, Temp_Black: 25.3, Temp_Red: 25.9, Temp_White: 25.7, Work_mode: "DS18B20" }	<input type="checkbox"/>	<input type="checkbox"/>	<input type="button" value="Clear"/>
14:44:10	Console: Events cleared	The events list has been cleared			
14:44:02	Accept join-request				

Battery:

Check the battery voltage.

Ex1: 0x0D3B = 3387mV

Ex2: 0x0D35 = 3381mV

Temperature_RED:

This point to the RED probe in LSN50 v2-D22/D23 or the probe of LSN50v2-D20

Example:

If payload is: 0103H: (0103 & FC00 == 0), temp = 0103H /10 = 25.9 degree

If payload is: FF3FH : (FF3F & FC00 == 1) , temp = (FF3FH – 65536)/10 = -19.3 degrees.

Temperature_White:

This point to the WHITE probe in LSN50 v2-D22/D23

Example:

If payload is: 0101H: (0101 & FC00 == 0), temp = 0101H /10 = 25.7 degree

If payload is: FF3FH : (FF3F & FC00 == 1) , temp = (FF3FH – 65536)/10 = -19.3 degrees.

Temperature_Black:

This point to the BLACK probe in LSN50 v2-D23

Example:

If payload is: 00FDH: (00FD & FC00 == 0), temp = 00FD H /10 = 25.3 degree

If payload is: FF3FH : (FF3F & FC00 == 1) , temp = (FF3FH – 65536)/10 = -19.3 degrees.

Alarm Flag & MOD:

Example:

If payload & 0x01 = 0x01 → This is an Alarm Message

↑ 14:48:54	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 25.9, Temp_Red: 32.6, Temp_White: 25.7, Work_mode: "DS18820" }	00 35
↑ 14:48:10	Forward uplink data message	Payload: { ALARM_status: "TRUE", BatV: 3.378, Temp_Black: 25.8, Temp_Red: 33.8, Temp_White: 25.8, Work_mode: "DS18820" }	00 32 0

If payload & 0x01 = 0x00 → This is a normal uplink message, no alarm

↑ 14:56:54	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.378, Temp_Black: 26, Temp_Red: 26.1, Temp_White: 25.7, Work_mode: "DS18820" }	00 32
↑ 14:55:53	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 26, Temp_Red: 26.6, Temp_White: 25.8, Work_mode: "DS18820" }	00 35

If payload >> 2 = 0x03 → means MOD=4, This is a sampling uplink message

↑ 14:58:54	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 26, Temp_Red: 25.8, Temp_White: 25.8, Work_mode: "DS18820" }	00 35
↑ 14:57:54	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 26, Temp_Red: 25.9, Temp_White: 25.8, Work_mode: "DS18820" }	00 35

If payload >> 2 = 0x31 → means MOD=31, this message is a reply message for polling, this message contains the alarm settings. see [this link](#) for detail.

↑ 15:01:01	Forward uplink data message	Temp_Black_MAX: 28, Temp_Black_MIN: 0, Temp_Red_MAX: 33, Temp_Red_MIN: 0, Temp_White_MAX: 30, Temp_White_MIN: 0, Work_mode: "ALARM"	
↑ 15:00:54	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.378, Temp_Black: 26, Temp_Red: 25.7, Temp_White: 25.8, Work_mode: "DS18820" }	00 32 01
↓ 15:00:39	Forward downlink data message	FPort: 2 Payload: 0E 01	

Payload Decoder file

In TTN, use can add a custom payload so it shows friendly.

In the page Applications → Payload Formats → Custom → decoder to add the decoder from:

http://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/LSN50v2-D20/Decoder/

```
function Decoder(bytes, port){
var mode=(bytes[6] & 0x7C)>>2;
var decode = {};
if((mode=='0')|| (mode=='3'))
{
```

```


decode.Work_mode="DS18B20";
decode.BatV=(bytes[0]<<8 | bytes[1])/1000;
decode.ALARM_status=(bytes[6] & 0x01)? "TRUE":"FALSE";

if((bytes[2]==0xff)&& (bytes[3]==0xff))
{
decode.Temp_Red="NULL";
}
else
{
decode.Temp_Red= parseFloat(((bytes[2]<<24>>16 | bytes[3])/10).toFixed(1));
}
if((bytes[7]==0xff)&& (bytes[8]==0xff))
{
decode.Temp_White="NULL";
}
else
{
decode.Temp_White=parseFloat(((bytes[7]<<24>>16 | bytes[8])/10).toFixed(1));
}
if((bytes[9]==0xff)&& (bytes[10]==0xff))
{
decode.Temp_Black="NULL"; } else
{
decode.Temp_Black=parseFloat(((bytes[9]<<8 | bytes[10])/10) .toFixed(1));
}
}
else if(mode=='31')
{
decode.Work_mode="ALARM";
decode.Temp_Red_MIN= bytes[4]<<24>>24;
decode.Temp_Red_MAX= bytes[5]<<24>>24;
decode.Temp_White_MIN= bytes[7]<<24>>24;
decode.Temp_White_MAX= bytes[8]<<24>>24;
decode.Temp_Black_MIN= bytes[9]<<24>>24;
decode.Temp_Black_MAX= bytes[10]<<24>>24;
}
if(bytes.length==11)
{
return decode;
}

```

Temperature Alarm Feature

LSN50V2-D20 work flow with Alarm feature.

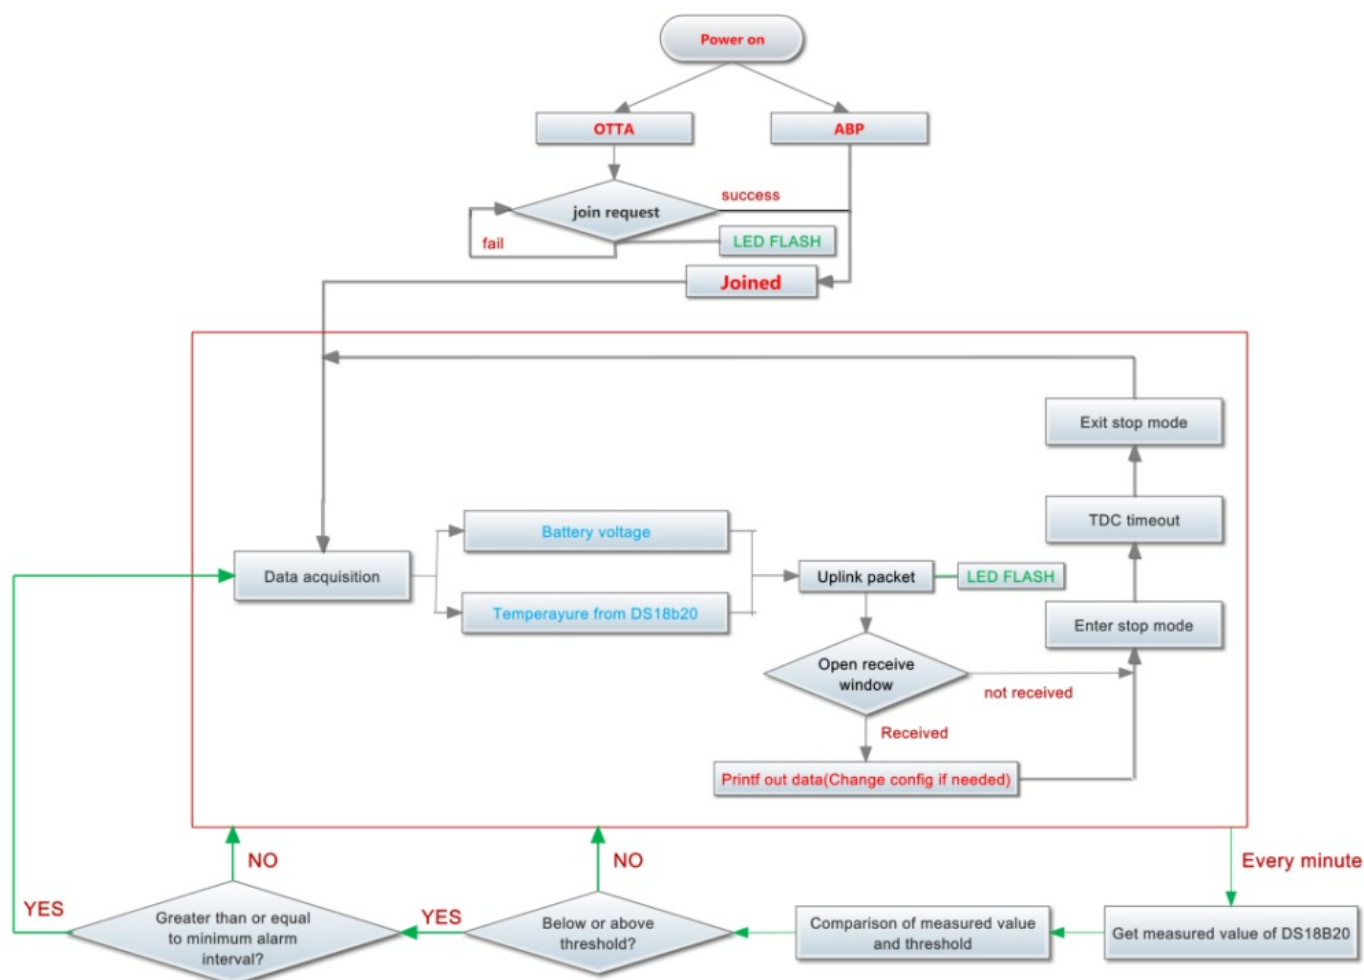

User can use AT+18ALARM command to set the alarm low limit or high limit. Device will check the temperature every minute, if the temperature lower than low limit or greater than high limit. LSN50v2-D2x will send an Alarm packet base on Confirmed Uplink Mode to server.

Below is an example of the Alarm Packet.

↑ 14:48:54 Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.381, Temp_Black: 25.9, Temp_Red: 32.6, Temp_White: 25.7, Work_mode: "DS18B20" } }	0D 35
↑ 14:48:10 Forward uplink data message	Payload: { ALARM_status: "TRUE", BatV: 3.378, Temp_Black: 25.8, Temp_Red: 33.8, Temp_White: 25.8, Work_mode: "DS18B20" } }	0D 32 0

Configure LSN50v2-D2x

LSN50V2-D20 supports configuration via LoRaWAN downlink command or AT Commands.

- Downlink command instructions for different platform:
http://wiki.dragino.com/index.php?title=Main_Page#Use_Note_for_Server
- AT Command Access Instructions: [LINK](#)

There are two parts of commands: General one and Special for this model.

General Configure Commands

These commands are to configure:

- General system settings like: uplink interval.

- LoRaWAN protocol & radio related command.

These commands can be found on the wiki:

http://wiki.dragino.com/index.php?title=End_Device_AT_Commands_and_Downlink_Commands

Sensor related commands:

Set Alarm Threshold:

- AT Command:

Set All Probes:

AT+18ALARM=min,max

- When min=0, and max≠0, Alarm trigger when higher than max
- When min≠0, and max=0, Alarm trigger when lower than min
- When min≠0 and max≠0, Alarm trigger when higher than max or lower than min

Example:

AT+18ALARM=-10,30 // Alarm when < -10 or higher than 30.

- Downlink Payload:

0x(0B F6 1E) // Same as AT+18ALARM=-10,30

(note: 0x1E= 30, 0xF6 means: 0xF6-0x100 = -10)

Set Separate Probe:

AT+18ALARM=min,max,index

Index:

- 1: Temperature_Red
- 2: Temperature_White
- 3: Temperature_Black

Example:

AT+18ALARM=-10,30,1 // Alarm when temperature_red < -10 or higher than 30.

- Downlink Payload:

0x(0B F6 1E 01) // Same as AT+18ALARM=-10,30,1

(note: 0x1E= 30, 0xF6 means: 0xF6-0x100 = -10)

Set Alarm Interval:

The shortest time of two Alarm packet. (unit: min)

- AT Command:

AT+ATDC=30 // The shortest interval of two Alarm packets is 30 minutes, Means is there is an alarm packet uplink, there won't be another one in the next 30 minutes.

- Downlink Payload:

0x(0D 00 1E) —> Set AT+ATDC=0x 00 1E = 30 minutes

Poll the Alarm settings:

Send a LoRaWAN downlink to ask device send Alarm settings.

- Downlink Payload: 0x0E 01

Example:

Explain:

- Alarm & MOD bit is 0x7C, $0x7C \gg 2 = 0x31$: Means this message is the Alarm settings message.

AT+18ALARM=?
0,33,1; 0,30,2; 0,28,3

OK

相当于:

↑ 15:01:01	Forward uplink data message	Temp_Black_MAX: 28, Temp_Black_MIN: 0, Temp_Red_MAX: 33, Temp_Red_MIN: 0, Temp_White_MAX: 39, Temp_White_MIN: 0, work_mode: "ALARM"
↑ 15:00:54	Forward uplink data message	Payload: { ALARM_status: "FALSE", BatV: 3.378, Temp_Black: 26, Temp_Red: 25.7, Temp_White: 25.8, work_mode: "DS18B29" } 0D 32 01
↓ 15:00:39	Forward downlink data message	FPort: 2 Payload: 0E 01

LED Status

LSN50-v2-D2x has an internal LED, it will active in below situation:

- LED will fast blink 5 times when boot, this means the temperature sensor is detected.
- After the fast blinks on boot, the LED will flash once which means device is trying to send Join Packet to the network.
- If device successful join LoRaWAN network, the LED will be solid on for 5 seconds.

Button Function

Internal RESET button:

Press this button will reboot the device. Device will process OTAA Join to network again.

Firmware Change Log

[See this link.](#)


Battery & how to replace

Battery Type

LSN50V2-D2X is equipped with a [8500mAH ER26500 Li-SOCI2 battery](#). The battery is un-rechargeable battery with low discharge rate targeting for 8~10 years use. This type of battery is commonly used in IoT target for long-term running, such as water meter.

The discharge curve is not linear so can't simply use percentage to show the battery level. Below is the battery performance.

TYPICAL DISCHARGE PROFILE AT +20°C (TYPICAL VALUE)

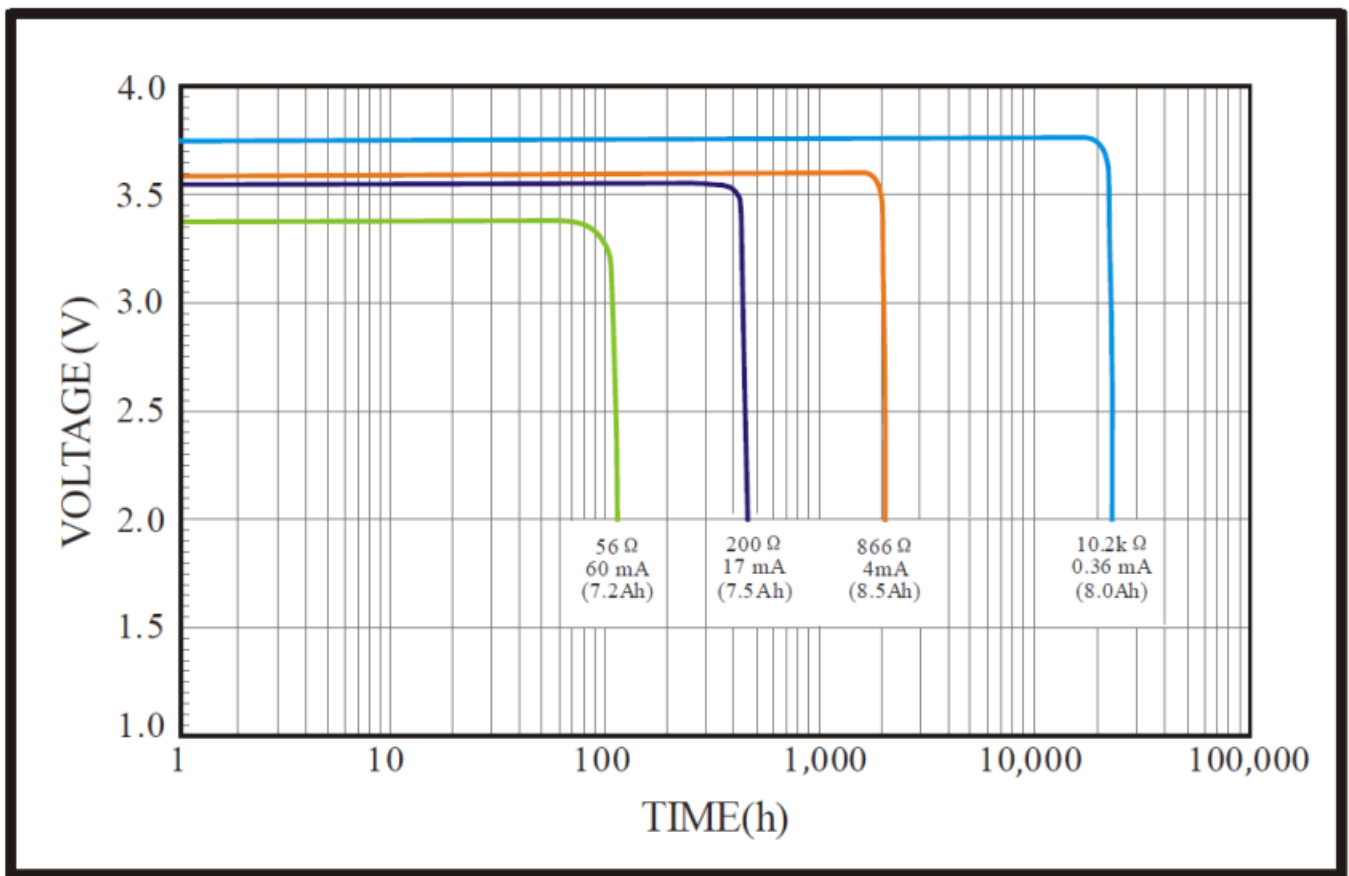

Minimum Working Voltage for the LSN50V2-D2X:
LSN50V2-D2X: 2.45v ~ 3.6v

Replace Battery

Any battery with range 2.45 ~ 3.6v can be a replacement. We recommend to use Li-SOCl₂ Battery. And make sure the positive and negative pins match.


Power Consumption Analyze

Dragino Battery powered product are all runs in Low Power mode. We have an update battery calculator which base on the measurement of the real device. User can use this calculator to check the battery life and calculate the battery life if want to use different transmit interval.

Instruction to use as below:

- Step 1: Downlink the up-to-date DRAGINO_Battery_Life_Prediction_Table.xlsx from:
https://www.dragino.com/downloads/index.php?dir=LoRa_End_Node/Battery_Analyze/
- Step 2: Open it and choose
 - Product Model
 - Uplink Interval
 - Working Mode

And the Life expectation in difference case will be shown on the right.

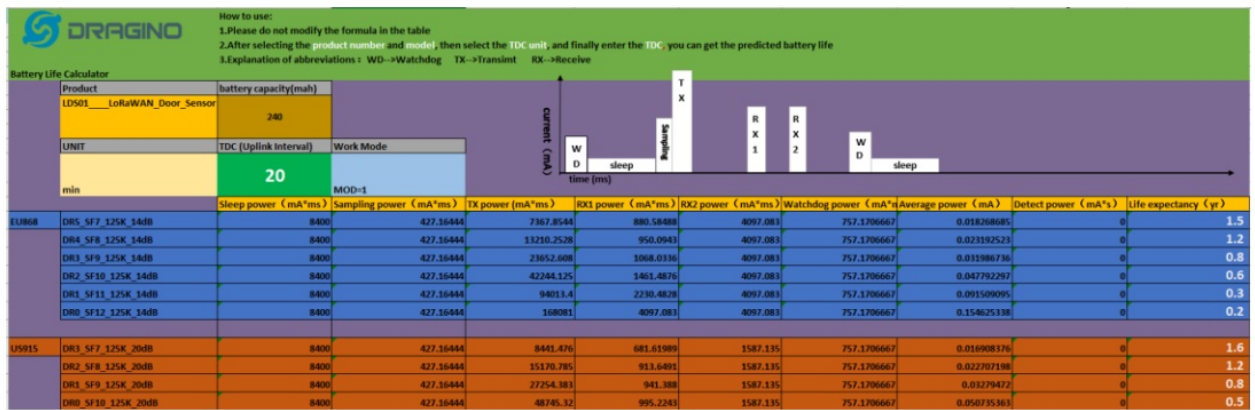

The battery related documents as below:

- [Battery Dimension](#),
- [Lithium-Thionyl Chloride Battery datasheet](#), [Tech Spec](#)
- [Lithium-ion Battery-Capacitor datasheet](#), [Tech Spec](#)



Battery Note

The Li-SICO battery is designed for small current / long period application. It is not good to use a high current, short period transmit method. The recommended minimum period for use of this battery is 5 minutes. If you use a shorter period time to transmit LoRa, then the battery life may be decreased.

Replace the battery




You can change the battery in the LSN50V2-D2X. The type of battery is not limited as long as the output is between 3v to 3.6v. On the main board, there is a diode (D1) between the battery and the main circuit. If you need to use a battery with less than 3.3v, please remove the D1 and shortcut the two pads of it so there won't be voltage drop between battery and main board.

The default battery pack of LSN50V2-D2X includes a ER26500 plus super capacitor. If user can't find this pack locally, they can find ER26500 or equivalence, which will also work in most case. The SPC can enlarge the battery life for high frequency use (update period below 5 minutes)

Use AT Command

Access AT Command

User can use a USB to TTL adapter to connect to LSN50V2-D20 to use AT command to configure the device. Example is as below:

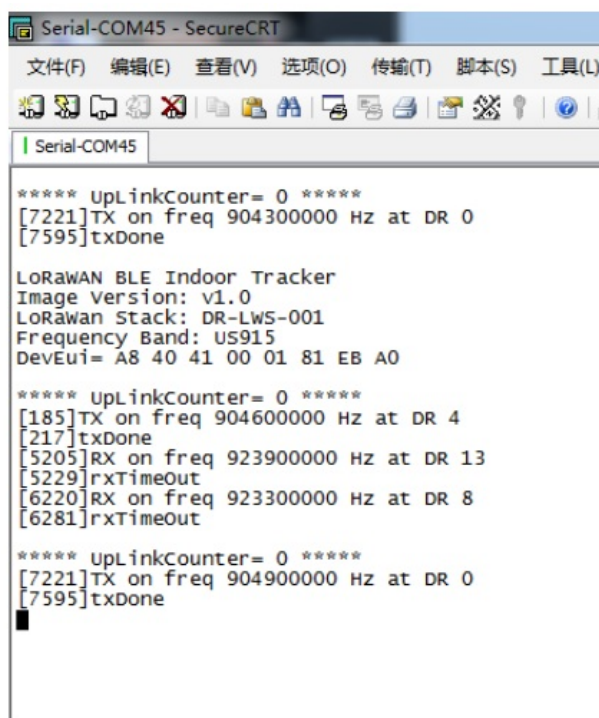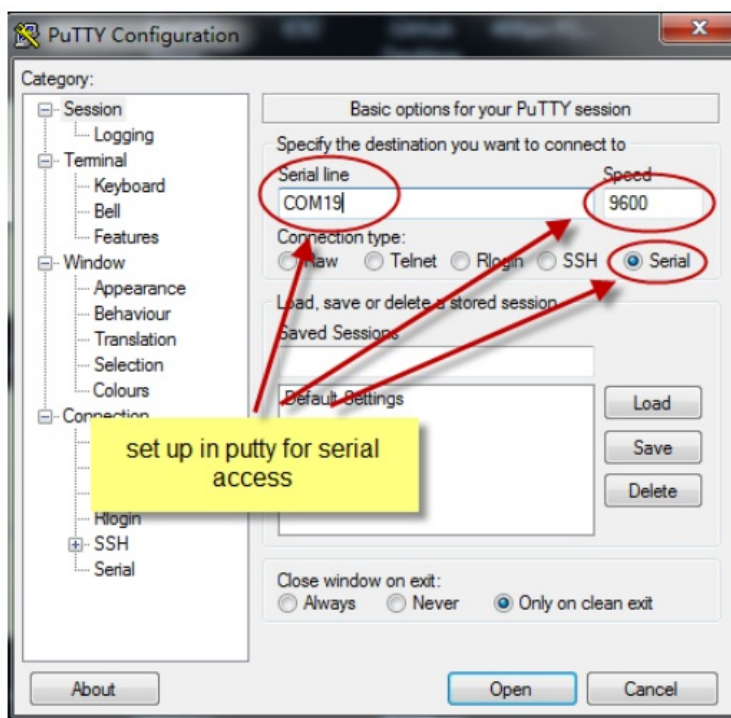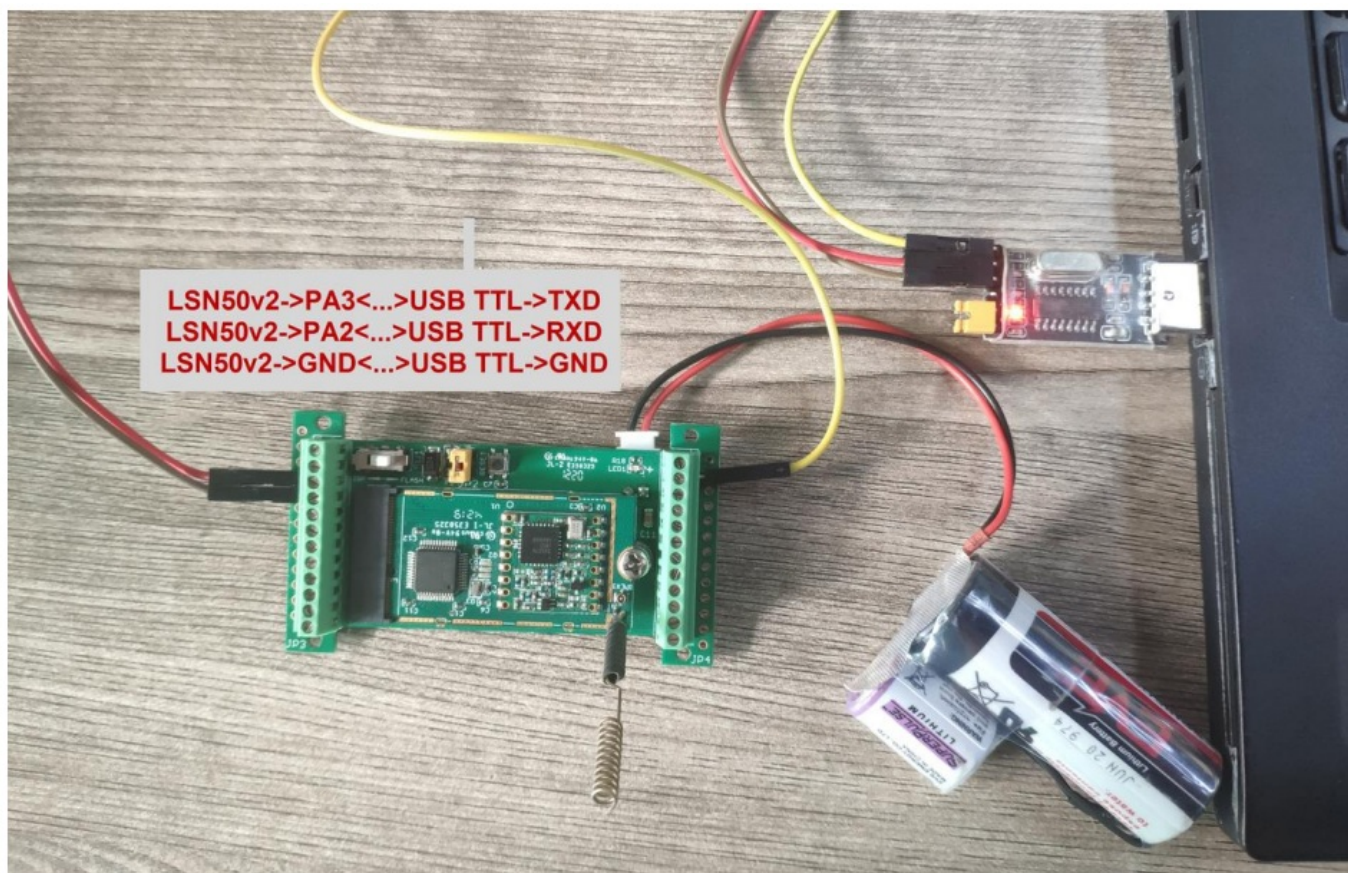

FAQ

What is the frequency range of LSN50v2-D20?

Different LSN50V2-D20 version supports different frequency range, below is the table for the working frequency and recommend bands for each model:

Version	LoRa IC	Working Frequency	Best Tune Frequency	Recommend Bands
433	SX1278	Band2(LF): 410 ~525 Mhz	433Mhz	CN470/EU433
868	SX1276	Band1(HF):862~1020 Mhz	868Mhz	EU868/IN865/RU864
915	SX1276	Band1(HF):862 ~1020 Mhz	915Mhz	AS923/AU915/ KR920/US915

What is the Frequency Plan?

Please refer Dragino End Node Frequency Plan:

http://wiki.dragino.com/index.php?title=End_Device_Frequency_Band

How to update the firmware?

User can upgrade the firmware for 1) bug fix, 2) new feature release or 3) change frequency plan.

Please see this link for how to upgrade:

http://wiki.dragino.com/index.php?title=Firmware_Upgrade_Instruction_for_STM32_base_products#Hardware_Upgrade_Method_Support_List

Order Info

Part Number: LSN50V2-D20-XXX (Signal Probe)

Or LSN50V2-D22-XXX (Dual Probe)

Or LSN50V2-D23-XXX (Triple Probe)

XXX: The default frequency band

- AS923: LoRaWAN AS923 band
- AU915: LoRaWAN AU915 band
- EU433: LoRaWAN EU433 band
- EU868: LoRaWAN EU868 band
- KR920: LoRaWAN KR920 band
- US915: LoRaWAN US915 band
- IN865: LoRaWAN IN865 band
- CN470: LoRaWAN CN470 band

Packing Info

Package Includes:

- LSN50v2-D2x LoRaWAN Temperature Sensor x 1

Dimension and weight:

- Device Size:
- Device Weight:
- Package Size:

- Package Weight:

Support

- Support is provided Monday to Friday, from 09:00 to 18:00 GMT+8. Due to different timezones we cannot offer live support. However, your questions will be answered as soon as possible in the before-mentioned schedule.
- Provide as much information as possible regarding your enquiry (product models, accurately describe your problem and steps to replicate it etc) and send a mail to support@dragino.com



Documents / Resources

	<p>DRAGINO LSN50v2 LoRaWAN Temperature Sensor [pdf] User Manual</p> <p>LSN50v2 LoRaWAN Temperature Sensor, LSN50v2, LoRaWAN Temperature Sensor, Temperature Sensor, Sensor</p>
--	---

References

- [Dragino :: Open Source WiFi, Linux Appliance](#)
- [Dragino Download Server ./downloads/LoRa_End_Node/LSN50v2-D20/Decoder/](#)
- [Dragino Download Server ./downloads/LSN50-LoRaST/](#)
- [DLOS8 Outdoor LoRaWAN Gateway](#)
- [The Things Network](#)
- [Dragino Download Server ./downloads/datasheet/Battery/ER26500/](#)
- [Dragino Download Server ./downloads/LoRa_End_Node/Battery_Analyze/](#)
- [The Things Network](#)