



## DRAPER 19392 12V Oscillating Multi Tool Instruction Manual

[Home](#) » [DRAPER](#) » DRAPER 19392 12V Oscillating Multi Tool Instruction Manual 



19392 12V Oscillating Multi Tool  
Instruction Manual



UK  
CA CE

## Contents

- 1 Preface
- 2 Warranty
- 3 Product Introduction
- 4 Health and Safety Information
- 5 Identification and Unpacking
- 6 Preparing the Multi-tool
- 7 Operating Instructions
- 8 Maintenance and Troubleshooting
- 9 Disposal
- 10 Explanation of Symbols
- 11 Documents / Resources
  - 11.1 References
- 12 Related Posts

## Preface

These are the original product instructions. This document is part of the product; retain it for the life of the product, passing it on to subsequent holders. Read this manual in full before attempting to assemble, operate, or maintain this product.

This Draper Tools manual describes the purpose of the product and contains all the necessary information to ensure its correct and safe use. Following all the instructions and guidance in this manual will ensure the safety of both the product and the operator and increase the lifespan of the product.

All photographs and drawings within this manual are supplied by Draper Tools to help illustrate correct operation of the product.

Every effort has been made to ensure the information contained in this manual is accurate. However, Draper Tools reserves the right to amend this document without prior warning. Always use the latest version of the product manual.

### 1.1 Product Reference

**User Manual for:** 12V Oscillating Multi-tool

**Stock No:** 19392

**Part No:** OMT-33-12D

### 1.2 Revisions

**Version 1:** April 2022

First release

As our manuals are continually updated, always ensure that the latest version is used.

Download the latest version from: [drapertools.com/manuals](https://www.drapertools.com/manuals)

### 1.3 Understanding the Safety Content

**WARNING!** – Situations or actions that may result in personal injury or death.

**CAUTION!** – Situations or actions that may result in damage to the product or surroundings.

**Important:** – Information or instructions of particular importance.

### 1.4 Copyright © Notice

Copyright © Draper Tools Limited.

Permission is granted to reproduce this manual for personal and educational use ONLY. Commercial copying, redistribution, hiring, or lending is strictly prohibited.

No part of this manual may be stored in a retrieval system or transmitted in any other form or means without written permission from Draper Tools Limited.

In all cases, this copyright notice must remain intact.

## Warranty

Draper Tools products are carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, return the complete tool to your nearest distributor or contact Draper Tools directly. Contact information can be found at the back of this manual.

Proof of purchase must be provided.

If, upon inspection, it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This warranty period covers parts and labour for 24 months from the date of purchase. Where tools have been hired out, the warranty period covers 90 days from the date of purchase.

This warranty does not apply to any consumable parts, batteries or normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper Tools repair agent.

In all cases, to make a claim for faulty workmanship or materials within the standard warranty period, please contact or return the product to the place of purchase. Proof of purchase may be required.

If the place of purchase is no longer trading or if you experience any difficulties with your warranty, please contact Customer Services with the product details and your proof of purchase. Contact details can be found at the back of this manual.

If the tool is not covered by the terms of this warranty, repairs and carriage charges will be quoted and charged accordingly.

This warranty supersedes any other guarantees expressed or implied and variations of its terms are not authorised.

Your Draper Tools guarantee is not effective until you can produce, upon request, a dated receipt or invoice to verify your purchase within the guarantee period.

Please note that this warranty is an additional benefit and does not affect your statutory rights.

**Draper Tools Limited**

## **Product Introduction**

### **4.1 Scope**

This product is designed for sawing and cutting various unhardened materials, including wood, plastic, gypsum, non-ferrous metals and fastening elements, such as unhardened nails and staples, and is particularly suited to flush cutting. It may also be used for working soft wall tiles and for dry sanding and scraping small surfaces. This tool is suitable for enthusiasts and tradespersons alike.

Any other application beyond the conditions established for use will be considered misuse. Draper Tools accepts no responsibility for improper use of this product.

**WARNING!** This product is not a toy and must be respected.

Read this manual in full before attempting to assemble, operate or maintain the product, and retain it for later use.

### **4.2 Specification**

Stock No.	19392
Part No.	OMT-33-12D
Voltage	12V
Speed (no load)	5,000–16,000rpm
Speed settings	6
Oscillation	3°
Pad Size	90× 95mm
<b>Noise emissions:</b>	
Sound pressure level:	81.7dB(A)
Uncertainty:	3dB(A)
Sound power level:	7.2dB(A)
Uncertainty:	3dB(A)
<b>Vibration emissions:</b>	
Vibration level:	8.5m/s <sup>2</sup>
Uncertainty:	1.5m/s <sup>2</sup>
Weight (bare tool)	0.96kg

#### **Battery pack:**

Stock No.	70308
Part No.	CB12VDLI1.5
Type	Li-ion
Rated Voltage	12V
Rating	1.5Ah

#### **Charger:**

Stock No	70326
Part No	C12VDLI
Rated Voltage	100–240V AC
Rated Frequency	50–60Hz
Rated output	35W
Rated D.C. output voltage	12V
Rated D.C. output current	2.0A
Rated DC output current	2A
Construction	Class II

Important: The declared vibration total values and noise emissions values have been measured in accordance with a standard test method and may be used for comparing one tool with another. These values may also be used in a preliminary assessment of exposure.

**WARNING!** The vibration and noise emissions during actual use of the product can differ from the declared values depending on the way in which it is used and the workpiece it is used upon. Before each use, estimate the likely exposure resulting from the actual conditions of use. Take into account all parts of the operation cycle in order to identify any safety measures required to protect the operator.

## Health and Safety Information

### 5.1 General Power Tool Safety Warnings

**WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

#### Work area safety

- Keep work area clean and well lit.
  - Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.
  - Power tools create sparks, which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool.
  - Distractions can cause you to lose control.

#### Electrical safety

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.
  - Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.
  - There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions.

- Water entering a power tool will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep the cord away from heat, oil, sharp edges or moving parts.
  - Damaged or entangled cords increase the risk of electric shock.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use.
  - Use of a cord suitable for outdoor use reduces the risk of electric shock.
- If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.
  - Use of an RCD reduces the risk of electric shock.

## **Personal safety**

- Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.
  - A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection.
  - Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection use for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to a power source and/or battery pack, picking up or carrying the tool.
  - Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on.
  - A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times.
  - This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.
  - Loose clothes, jewellery or long hair can be caught in moving parts.
- If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.
  - Use of dust collection can reduce dust-related hazards.
- Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.
  - A careless action can cause severe injury within a fraction of a second.

## **Power tool use and care**

- Do not force the power tool. Use the correct power tool for your application.
  - The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off.
  - Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories or storing power tools.

- Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.
  - Power tools are dangerous in the hands of untrained users.
- Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.
  - Many accidents are caused by poorly maintained power tools.
- Keep cutting tools sharp and clean.
  - Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.
- Use the power tool, accessories and tool bits, etc., in accordance with these instructions, taking into account the working conditions and the work to be performed.
  - Use of the power tool for operations different from those intended could result in a hazardous situation.
- Keep handles and grasping surfaces dry, clean and free from oil and grease.
  - Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.

## Service

- Have your power tool serviced by a qualified repair person using only identical replacement parts.
- This will ensure that the safety of the power tool is maintained.

## 5.2 Additional Health and Safety Warnings for this Multi-Tool

- Keep your hands and face away from the accessory when the tool is switched on.
  - Keep your hands visible at all times during the operation.
  - DO NOT reach underneath the workpiece.
- The accessory may get hot during use; allow it to cool after use before attempting to remove it from the multi-tool.
- Ensure that the accessory is securely fastened in place before use.
- ALWAYS select the tool speed before switching on the tool.
- Secure the workpiece; DO NOT hold the workpiece by hand.
- Check for hidden pipes and cabling within and around the workpiece before use.
- Some of the accessories for this tool are very sharp; exercise caution when handling the accessories.
- NEVER start the tool if the accessory is already in contact with the workpiece.

## 5.3 Safety Information for Mains-Powered Chargers and Battery Packs

**Important:** Use ONLY the Draper Tools 12V range battery pack and charger supplied with this product. DO NOT charge any other batteries with this charger.

**WARNING!** DO NOT use or charge the battery if leakage is evident. If battery fluid comes into contact with your skin, rinse immediately with water. For contact with eyes, flush with plenty of water and seek medical advice.

## Chargers

- **WARNING!** NEVER charge non-rechargeable or damaged batteries.

- The supplied charger is for indoor use ONLY.
- Before connecting the charger to the power supply, check that the plug, cable and charger casing are in good condition and have any damaged parts immediately replaced by a suitably qualified person.
- ONLY connect the supplied charger to a rated mains outlet.
  - DO NOT plug the charger into site generators, engine generators or DC power sources.
- ALWAYS disconnect the charger from the power supply before removing the battery.
- Charge the battery in a dry and well-ventilated environment in ambient temperatures between 5 and 40°C, ensuring that the ventilation slots on the charger casing are not obstructed.
- DO NOT short-circuit the battery by connecting the positive and negative terminals while outside of the product.
  - Keep the battery away from metallic objects that may inadvertently allow connection of the terminals.

## Batteries

- DO NOT open, crush or burn the battery as this may release potentially harmful chemicals.
- DO NOT expose the battery to temperatures greater than 50°C. DO NOT attempt to charge batteries with a temperature that is not between 5 and 30°C.
  - Allow batteries that are too hot or too cold to normalise before charging.
- DO NOT expose the battery pack to rain or other wet conditions.
- ALWAYS remove the battery from the tool before recycling and dispose of it in accordance with local regulations.
- If a fire occurs, use a CO2 or dry chemical extinguisher.

**WARNING!** The electrolyte in this battery pack is corrosive. Avoid contact with skin. If contact occurs, flush the area with clean water and pat it dry. Seek medical attention at the earliest opportunity and inform the responder that the contaminant is a “high-alkaline corrosive liquid”. If contact with eyes occurs, flush immediately with plenty of water ONLY and seek medical advice at the earliest opportunity.

### 5.4 Connection to the Power Supply (Charger)

**CAUTION!** Risk of electric shock. Do not open.


Always ensure that the power supply on the machine's rating plate is compatible with the power supply to which you intend to connect it.

The rechargeable battery pack is supplied with a UK standard three-pin plug and is intended for connection to a domestic power supply rated at 230V AC. An in-car power adaptor is also supplied and is intended for connection to a 12V DC socket found in vehicle interiors.

This is a Class II† appliance and is designed for connection to a power supply matching that detailed on the rating label and compatible with the plug fitted.

**CAUTION!** Use ONLY the power supply provided.

Important: If using an extension lead, follow the instructions that came with your lead regarding maximum load while the cable is wound. If in doubt, ensure that the entire cable is unwound. Using a coiled extension lead will generate heat which could melt the lead and cause a fire.

† **Double insulated**  : This product requires no earth connection as supplementary insulation is applied to the basic insulation to protect against electric shock in the event of failure of the basic insulation.

## Identification and Unpacking

### 6.1 Product Overview






- (1) Tool flange
- (2) Lock lever
- (3) LED lamp
- (4) On/off switch
- (5) Variable speed dial

- (6) Battery level indicators
- (7) Soft grip handle
- (8) Battery release buttons
- (9) 12V battery pack

## 6.2 What's in The Box?

Carefully remove the product from the packaging and examine it for any signs of damage that may have occurred during shipment.

Before assembling the product, lay the contents out and check them against the parts shown below. If any part is damaged or missing, do not attempt to use the product. Please contact the Draper Helpline; contact details can be found at the back of this manual.

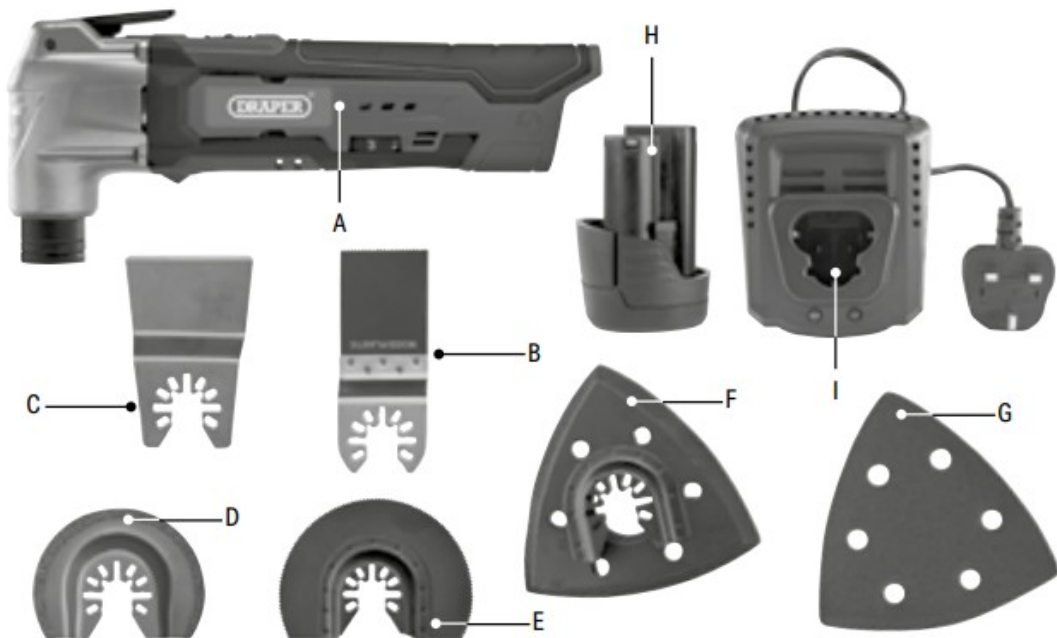

- A. 1 x Oscillating multi-tool
- B. 1 x Plunge saw blade
- C. 1 x Scraper
- D. 1 x Alloy grinding plate
- E. 1 x Segment wood and plastic saw blade

- F. 1 x Sanding pad
- G. 4 x Sanding papers (60, 80, 120, 240 grit)
- H. 1 x 12V 1.5Ah battery pack
- I. 1 x 12V fast charger

### 6.3 Packaging

Keep the product packaging for the duration of the warranty period for reference should the product need to be returned for repair.

**WARNING!** Keep packaging materials out of reach of children. Dispose of packaging correctly and responsibly and in accordance with local regulations.

Please visit [drapertools.com](http://drapertools.com) for our full range of accessories and consumables.

### Preparing the Multi-tool

**WARNING!** ALWAYS ensure that the on/off switch is in the off (O) position and the battery pack is removed before preparing or making any adjustments to the tool.

#### 7.1 Installing and Removing the Battery Pack

**Important:** ONLY use this tool with battery packs and chargers from the Draper Tools 12V range. Read all of the safety and operation instructions provided with these parts before use.

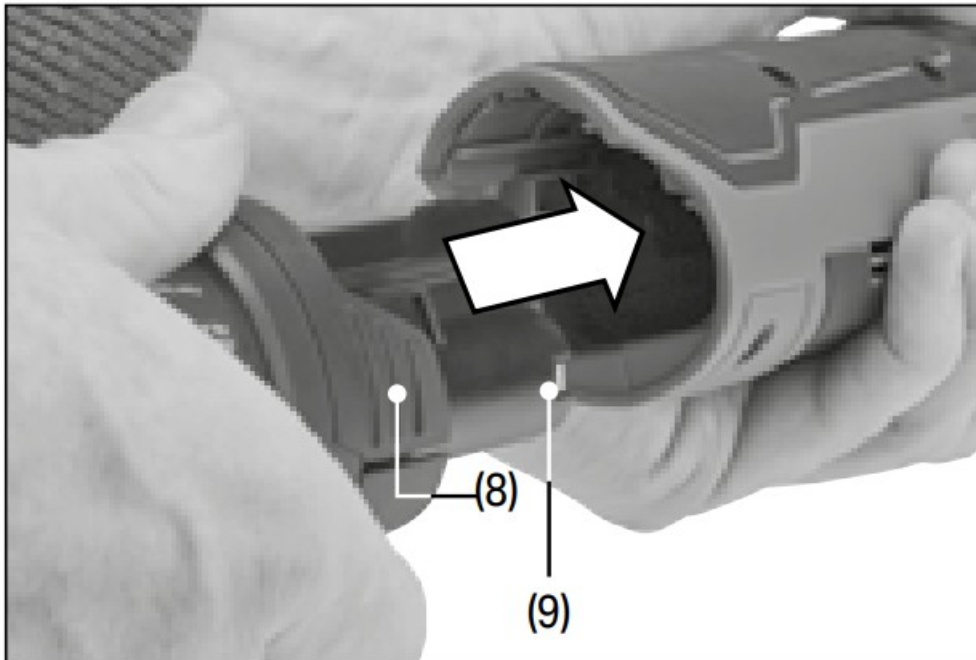


Fig. 1

- To install a battery pack (9), insert it into the socket at the base of the multi-tool until it clicks into place.  
**Important:** Do not force the battery, and ensure it is firmly secure before use.
- To remove a battery pack, press and hold the battery release buttons (8) on either side of the battery pack and slide the battery away from the tool.

**Important:** The tool will automatically power down if the battery voltage drops too low or overheats. DO NOT use the tool until the battery pack has been charged or cooled as appropriate.

## 7.2 Charging the Battery

**Important:** ALWAYS ensure that the voltage of the power source is the same as the voltage specified on the rating plate of the charger before connecting the charger to the power supply.

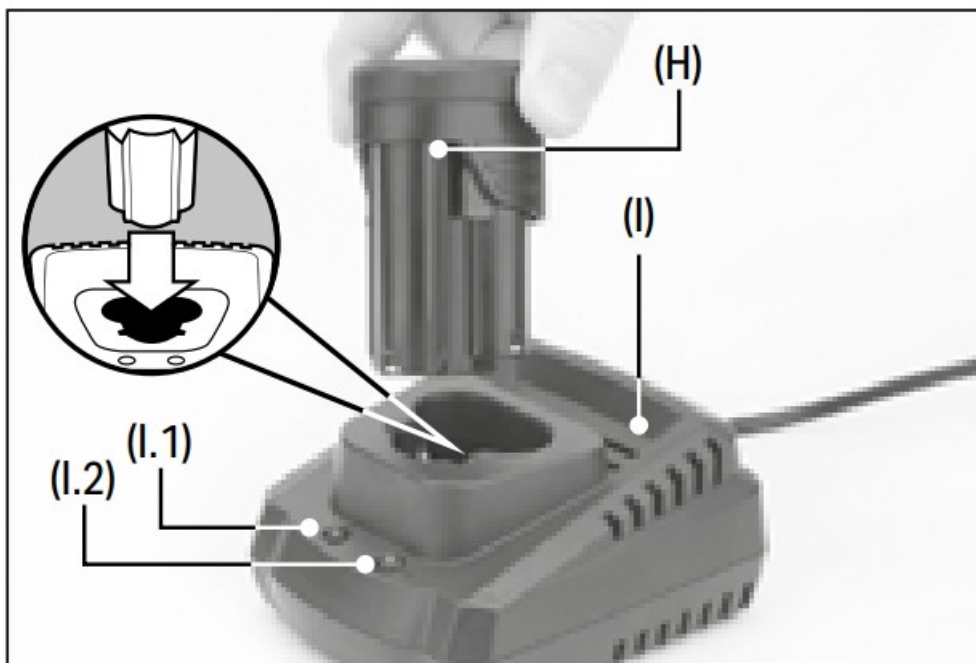


Fig. 2

1. Connect the charger (I) to a mains power supply; the green LED (I.2) will flash to indicated standby mode.
2. Insert the battery pack into the charger socket (H); the red LED (I.1) will illuminate to indicate charging.

3. When the battery is charged, the red LED will go out and the green LED will illuminate.
4. Unplug the charger from the power supply and remove the battery from the charger.


**Important:** For a longer battery lifespan, charge the battery pack in ambient temperatures of 18–24°C. DO NOT charge the battery in temperatures greater than 40°C or less than 5°C. If the battery pack is not at an acceptable temperature when inserted into the charger, both LEDs will flash alternately and the battery will not charge until it has reached the required temperature.

The charger LEDs illuminate in the following modes:

- Green flashing: The charger is in standby mode.
- Solid green: Charging is complete.
- Red flashing: The battery pack is faulty or damaged and cannot be charged.
- Solid red: The battery is charging.
- Green and red flashing alternately: The battery pack is either too hot or too cold; charging will begin when an acceptable temperature is reached.


### 7.3 Fitting Accessories to the Tool Flange

**Important:** ONLY use accessories intended for this tool as supplied by Draper Tools. Other accessories may not fit correctly and may damage the tool or cause injury.

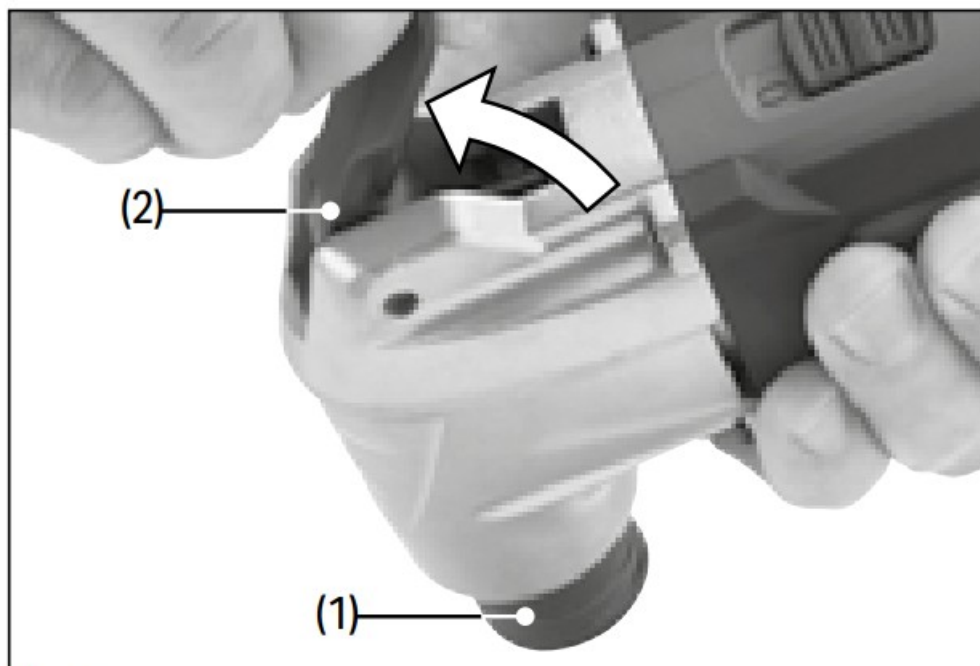

**Fig. 3**

1. Lift the lock lever (2) fully to open the tool flange (1).

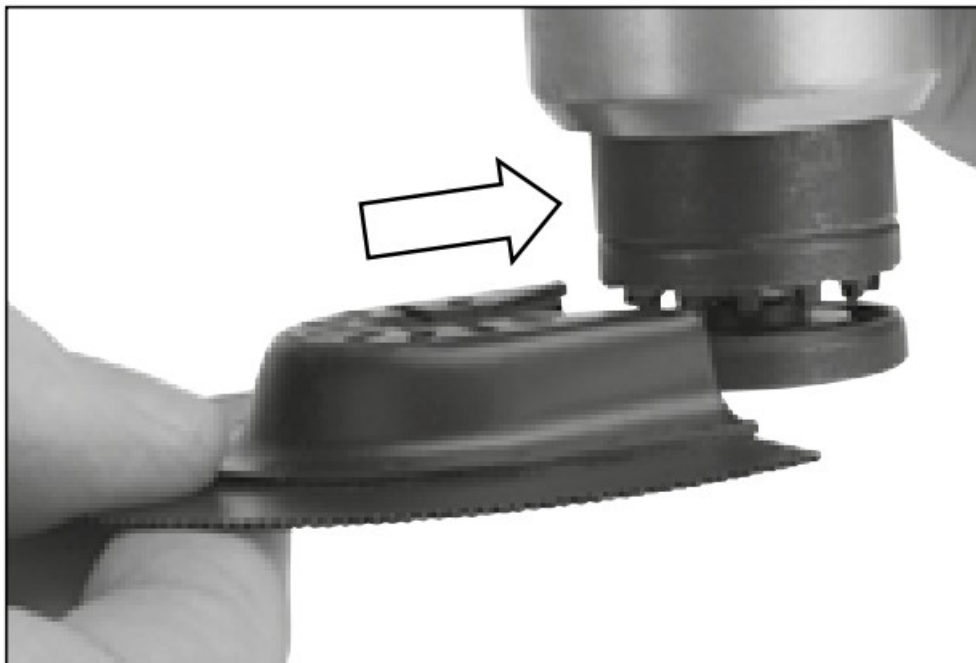

**Fig. 4**


2. Slide the required accessory into the opening in the tool flange, ensuring that the flange pins sit comfortably in the accessory frame.

**Important:** If used for a sanding operation, the sanding pad (F) must be installed and a sanding paper sheet attached using the hook and loop fixing, ensuring that the shape of each piece and the dust extraction holes are correctly aligned.

3. Press the lock lever down fully to secure the accessory in place.

#### **7.4 The LED Lamp**


**WARNING!** DO NOT look directly into the lamp or direct it towards others.

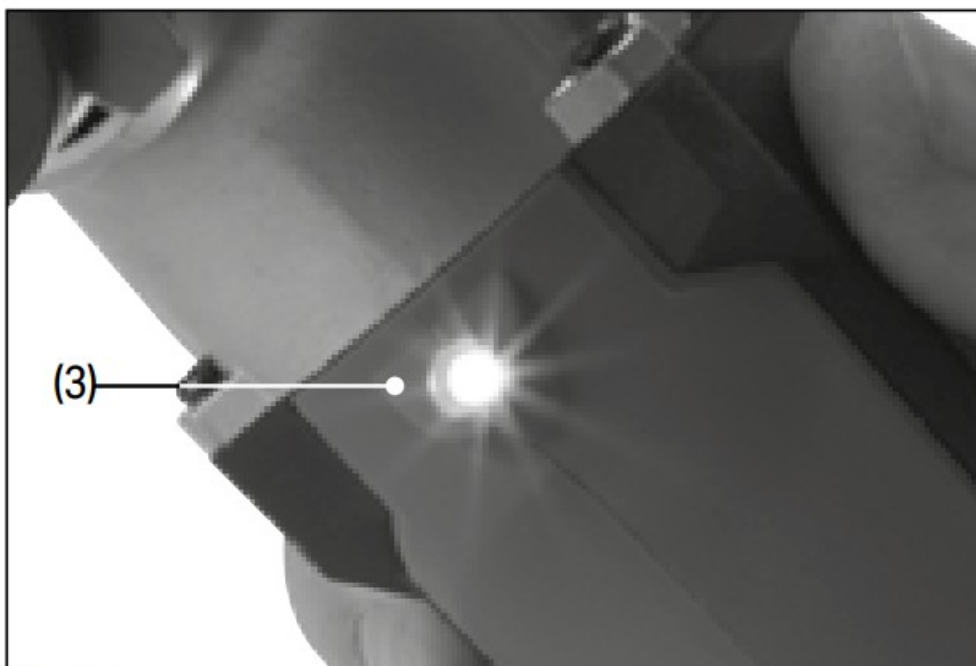

**Fig. 5**

The LED lamp (3) illuminates automatically when the tool is switched on and goes out when the tool is switched off. If the tool overheats, the lamp will flash for approximately 10 seconds and the drill will stop automatically. When this occurs, release the trigger and allow the drill to cool.

#### **7.5 The Battery Level Indicators**

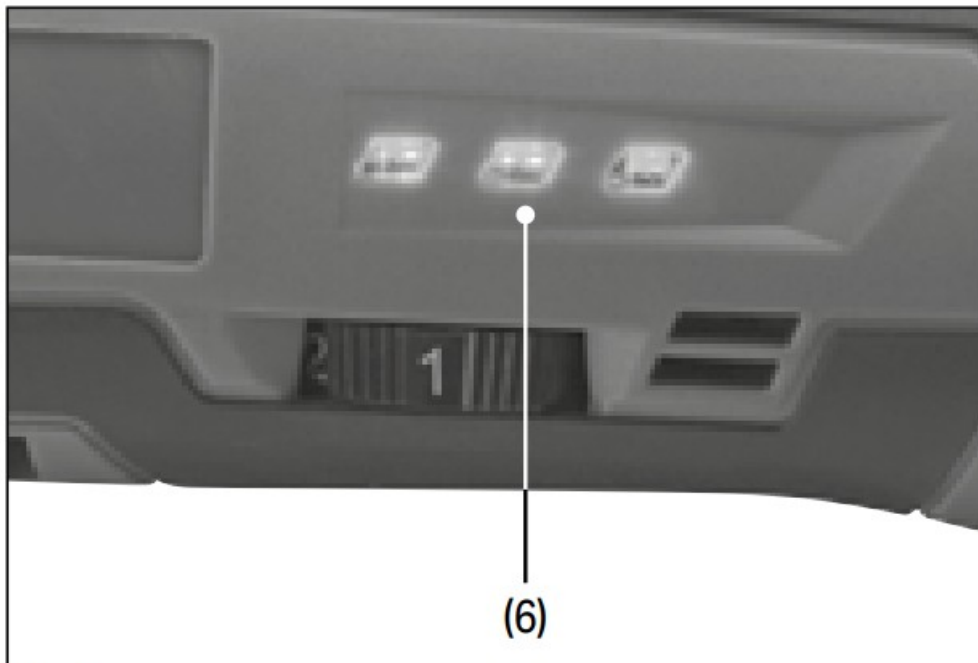

**Fig. 6**

The battery level indicators (6) illuminate automatically for approximately five seconds when the tool is switched on and may show the following:


- Three lights on: The battery is fully charged.
- Two lights on: The battery is less than 60% charged.
- One light on: The battery is less than 30% charged.
- No lights on: The battery is less than 10% charged and the tool cannot be used.

**Important:** Battery levels shown by the indicators are an approximation only and may vary subject to environmental conditions.

## **Operating Instructions**

**Important:** Before use, read and understand all the safety instructions listed in this manual. Ensure that all attachments are securely fixed before use. Secure any loose workpieces before operating.

### **8.1 The Variable Speed Dial**

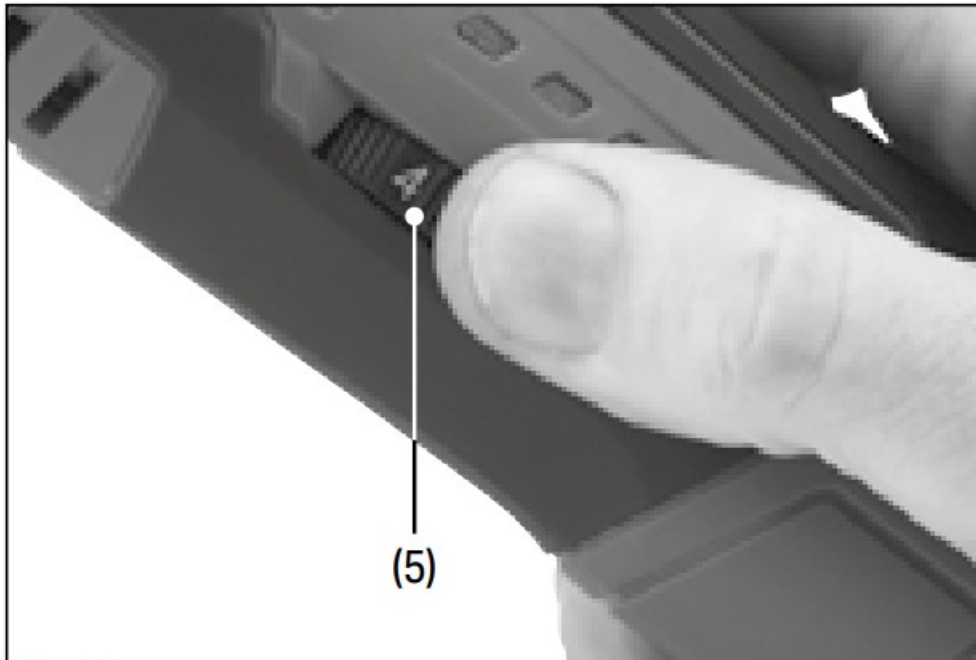

**Fig. 7**


The speed of the tool's oscillation can be controlled using the variable speed dial (5) on the side of the tool housing. The higher the number selected, the quicker the stroke rate of the tool.

**Important:** ALWAYS pre-set the tool speed before use.

**CAUTION!** The variable speed dial is not continuous and cannot be rotated directly between values 6 and 1 and vice versa. DO NOT force the dial as this may damage the tool.

### **8.2 The On/Off Switch**

**Important:** Before switching on the tool, ensure that the tool speed is appropriately set.

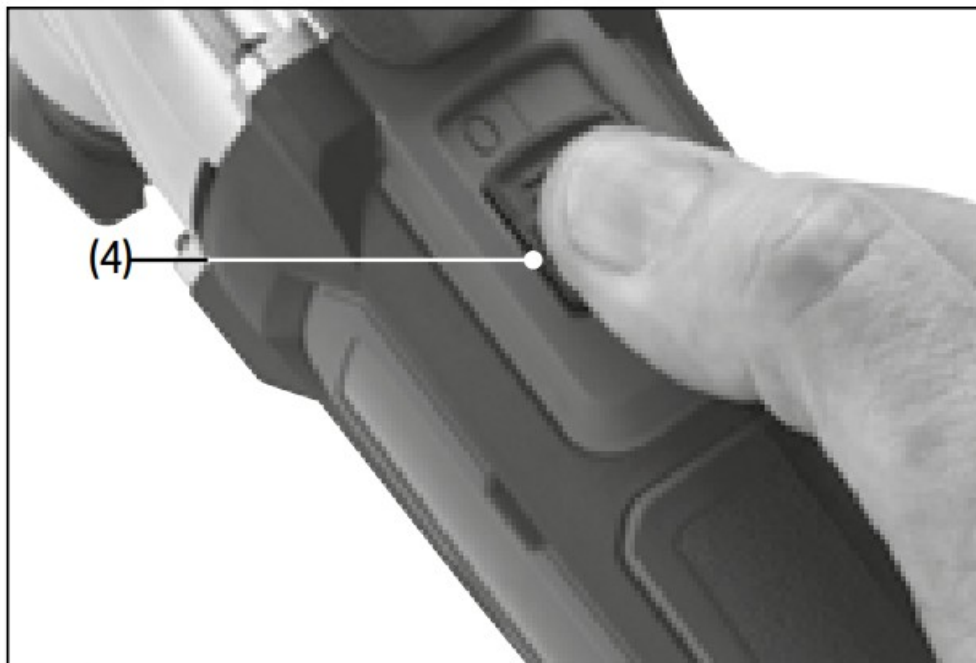

**Fig. 8**

Power is controlled by the sliding on/off switch (4).

- To switch the tool on, slide the on/off switch upwards into the on (I) position.
- To switch the tool off, slide the on/off switch downwards into the off (O) position.

### **8.3 Notes on Cutting, Sawing and Scraping Operations**

- Allow the tool to reach full speed before applying it to the workpiece.

- Holding the tool firmly, place the accessory against the workpiece and move the tool smoothly forward so that the motion does not slow down.
- DO NOT force the tool in the direction of the accessory's non-cutting edge.
- DO NOT exert excessive pressure on the tool.
- For cutting operations, Draper Tools recommends speeds 3–5.

## 8.4 Notes on Sanding Operations

- Allow the tool to reach full speed before applying it to the workpiece.
- Holding the tool firmly, apply the sandpaper gently against the workpiece; DO NOT use excessive force.
- DO NOT use worn sandpaper or paper without grit.
- DO NOT use sandpaper for wood sanding if it has previously been used to sand metal.
- Use a scrap piece of similar material to test the correct tool speed before operating on the workpiece.
- DO NOT change the grit of the sandpaper accessory until the whole area of the workpiece has been completed.

## Maintenance and Troubleshooting

**Important:** Maintenance and repairs should be carried out ONLY by authorised and suitably qualified personnel.  
**WARNING!** ALWAYS ensure that the on/off switch (4) is in the off (O) position and that the battery pack has been removed before performing any maintenance on this product.

### 9.1 General Maintenance

**Important:** Only the accessories included with this product are replaceable by the user. Any other repair or servicing should be carried out by an authorised Draper Tools repair agent.

- Use only spare parts supplied by Draper Tools.
- Use this product ONLY with the recommended 12V range battery pack and charger supplied by Draper Tools.
  - ALWAYS check the ratings plate for compatibility before use.
- DO NOT expose the tool to rain or wet conditions.
- Keep the tool flange clean and free from obstructions.
- Keep all ventilation points on the tool clean and free from dust and obstructions.
- Clean the product regularly using a dry cloth.

**CAUTION!** NEVER use aggressive chemicals to clean the product as these may damage plastic or insulated parts.

- ALWAYS remove the battery pack from the tool when not in use.

### 9.2 Storing the Multi-tool

- Store the product in a clean and dry location, out of reach of children.
  - CAUTION!** Prolonged exposure to moisture can cause the tool to rust and render it unsafe.
- Remove any accessories and close the tool flange before storage.
- ALWAYS remove the battery before storage.
- When stored for extended periods, charge the battery periodically to maintain its health.

### 9.3 Troubleshooting



Problem	Possible Cause	Remedy
The tool does not start when switched on, runs slowly or loses power during operation.	The battery pack has not been installed or has a low charge.	Recharge and install the battery pack.
	There is a fault with the battery pack.	Contact Draper Tools to discuss replacement options.
The tool flange does not close or grip the accessory correctly.	Dust, chippings or other obstructions are present in the tool flange.	Remove any obstructions from the tool flange and wipe it clean.
	The pins on the tool flange are damaged.	Contact Draper Tools to discuss replacement options.
	The fuse in the charger plug has blown.	Replace the fuse.
The battery pack doesn't charge, or the charger LED does not illuminate.	There is a fault with the charger.	Contact Draper Tools to discuss replacement options.
The tool does not perform efficiently.	The tool speed has not been set correctly.	Test the tool speed on a scrap piece of material similar to the workpiece and adjust the speed as appropriate.

## Disposal

At the end of its working life, or when it can no longer be repaired, dispose of the product according to local regulations.

Contact your local authority for details of collection schemes in your area.

### In all circumstances:


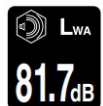


- DO NOT dispose of power tools with domestic waste.
- DO NOT incinerate.
- DO NOT abandon in the environment.
- Dispose of the battery pack in accordance with local regulations or return to your warranty agent or stockist for recycling.
  - Remove the battery from the tool and allow it to discharge before disposal.
  - DO NOT burn or mutilate batteries as this may release toxic or corrosive materials.



## Explanation of Symbols

	Read the instruction manual
--	-----------------------------

	Warning!
	Risk of electric shock, do not open
	Wear suitable eye and protection and a dust mask
	Wear protective gloves
	Do not incinerate or throw onto fire
	Do not abandon in the environment
	Keep out of the reach of children
	Rated voltage
	Class II construction (Double insulated)
	Accessory attachment pattern
	Min/Max. revolutions per minute
	Direction of rotation
	Oscillation range
	Product weight (bare)
	For indoor use only Do not expose to rain

	WEEE – Waste Electrical & Electronic Equipment Do not dispose of Waste Electrical & Electronic Equipment with domestic waste
	Continuous A-weighted sound pressure level
	UK Conformity Assessed
	European conformity

## Contact Details

<b>Draper Tools</b> Draper Tools Limited Hursley Road Chandler's Ford Eastleigh Hampshire SO53 1YF UK	<b>Delta International</b> Delta International BV Oude Graaf 8 6002 NL Weert Netherlands
--	---

**Website:** [drapertools.com](http://drapertools.com)

**Email:** [sales@drapertools.com](mailto:sales@drapertools.com)

**Product Helpline:** +44 (0) 23 8049 4344

**Telephone Sales Desk:** +44 (0) 23 8049 4333

**General Enquiries:** +44 (0) 23 8026 6355

**General Fax:** +44 (0) 23 8026 0784


### Service / Warranty Repair Agents

For aftersales servicing or warranty repairs, please contact the Draper Tools Product Helpline for details of an agent in your area.



© Published by Draper Tools Limited

## Documents / Resources

	<a href="#">DRAPER 19392 12V Oscillating Multi Tool</a> [pdf] Instruction Manual 19392 12V Oscillating Multi Tool, 19392, 12V Oscillating Multi Tool, Oscillating Multi Tool, Multi Tool
---	---

## References

-  [Draper Tools Official Website | Hand Tools, Power Tools and Accessories](#)
-  [Manuals | Draper Tools](#)

Manuals+.