




# DrayTek 2620 Series LTE Router User Guide

[Home](#) » [DrayTek](#) » DrayTek 2620 Series LTE Router User Guide 

## Contents

- [1 DrayTek 2620 Series LTE Router](#)
- [2 Warranty](#)
- [3 Package](#)
- [4 Hardware Installation](#)
- [5 Software Configuration](#)
- [6 INSTRUCTION](#)
- [7 Customer Service](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

**DrayTek**

## DrayTek 2620 Series LTE Router



## Trademarks

The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows, 8, 10, and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS are registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

## **Safety Instructions and Approval**

### **Safety Instructions**

- Read the installation guide thoroughly before you set up the router.
- The router is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the router yourself.
- Do not place the router in a damp or humid place, e.g. a bathroom.
- Do not stack the routers.
- The router should be used in a sheltered area, within a temperature range of +5 to + 40 Celsius.
- Do not expose the router to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoors to prevent electronic shock hazards.
- Keep the package out of reach of children.
- When you want to dispose of the router, please follow local regulations on the conservation of the environment.

### **Warranty**

We warrant to the original end-user (purchaser) that the router will be free from any defects in workmanship or materials for two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects that do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revisions or changes.

### **Declaration of Conformity**

Hereby, DrayTek Corporation declares that the radio equipment type Vigor2620 complies with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet address:

<https://fw.draytek.com.tw/Vigor2620/Document/CE/>

- **Manufacturer:** DrayTek Corp.
- **Address:** No. 26, Flushing Rd, Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan
- **Product:** Vigor2620 Series Frequency Information for Europe area:

2.4G WLAN	2412MHz – 2472 MHz, max. TX power: 19.98dBm *1
LTE	B1[1920-1980 MHz (TX); 2110-2170 MHz (RX)]; B3[1710-1785 MHz (TX); 1805-1880 MHz (RX)]; B7[2500-2570 MHz (TX); 2620-2690 MHz (RX)]; B8[880-915 MHz (TX); 925-960 MHz (RX)]; B20[832-862 MHz (TX); 791-821 MHz (RX)]; *2
3G	B1[1920-1980 MHz (TX); 2110-2170 MHz (RX)]; B8[880-915 MHz (TX); 925-960 MHz (RX)]; *2

(\*1: for 2.4G WLAN model; \*2: for LTE model)

This product is designed for LTE, DSL, and 2.4GHz WLAN networks throughout the EC region.

## Declaration of Conformity

- Hereby, DrayTek Corporation declares that the radio equipment type Vigor2620 complies with Directive 2014/53/EU.
- **Manufacturer:** DrayTek Corp.
- **Address:** No. 26, Flushing Rd, Hukou, Hsinchu Industrial Park, Hsinchu 303, Taiwan
- **Product:** Vigor2620 Series
- **Importer:** CMS Distribution Ltd: Bohola Road, Kiltimagh, Co Mayo, Ireland Frequency Information for UK area:

2.4G WLAN	2412MHz – 2472 MHz, max. TX power: 19.98dBm *1
LTE	B1[1920-1980 MHz (TX); 2110-2170 MHz (RX)]; B3[1710-1785 MHz (TX); 1805-1880 MHz (RX)]; B7[2500-2570 MHz (TX); 2620-2690 MHz (RX)]; B8[880-915 MHz (TX); 925-960 MHz (RX)]; B20[832-862 MHz (TX); 791-821 MHz (RX)]; *2
3G	B1[1920-1980 MHz (TX); 2110-2170 MHz (RX)]; B8[880-915 MHz (TX); 925-960 MHz (RX)]; *2

## Regulatory Information

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, according to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device may accept any interference received, including interference that may cause undesired operation.

USA Local Representative	Company name	ABP International Inc.			
	Address	13988 Diplomat Drive Suite 180 Dallas TX 75234			
	ZIP Code	75234	E-mail	<a href="mailto:rmesser@abptech.com">rmesser@abptech.com</a>	
	Contact Person	Mr. Robert Messer	Tel.	19728311600	

**Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The antenna/transmitter should be kept at least 20 cm away from the human body. DrayTek Vigor2620 series VDSL2/ADSL2+ routers are compliant with 47 C.F.R. Part 68. The external power supply used for each product will be model-dependent

		1	2	3	4	5	6	7	8	9
A	Manufacturer	CWT	CWT	CWT	CWT	CWT	APD	APD	APD	APD
B	Address	No. 222 , Sec.  2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unty 33 8,  Taiwan	No. 222 , Sec.  2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unty 33 8,  Taiwan	No. 222 , Sec.  2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unty 33 8,  Taiwan	No. 222 , Sec.  2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unty 33 8,  Taiwan	No. 222 , Sec.  2, Nank an Rd., Lujhu T ownshi p, Taoy uan Co unty 33 8,  Taiwan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan	No.5, L ane 83, Lung-S ou St., Taoyua n City 3 30, Tai wan
C	Model identifier	2ABB0 12F UK	2ABB0 18F UK	2ABL02 4F UK	2ABL03 0F UK	2ABN0 36F UK	WA-12 M12FG	WB-18 D12FG	WA-24 Q12FG	WA-36 A12FG
		2ABB0 12F EU	2ABB0 18F EU	2ABL02 4F EU	2ABL03 0F EU	2ABN0 36F EU	WA-12 M12FK	WB-18 D12FK	WA-24 Q12FK	WA-36 A12FK
D	Input voltage	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V	100~24 0V
E	Input AC freq uency	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z	50/60H z
	Output voltag e DC	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V	12.0V
F	Output curren t	1.0A	1.5A	2.0A	2.5A	3.0A	1.0A	1.5A	2.0A	3.0A
G	Output power	12.0W	18.0W	24.0W	30.0W	36.0W	12.0W	18.0W	24.0W	36.0W
H	Average activ e efficiency	84.9%	86.2%	87.6%	87.8%	89.8%	83.7%	85.4%	88.6%	88.2%
I	Efficiency at l ow load 10%	73.6%	78.0%	81.3%	83.3%	83.7%	74.5%	80.5%	86.4%	85.4%
J	No-load powe r consumption	0.07W	0.07W	0.07W	0.07W	0.07W	0.07W	0.10W	0.07W	0.10W

External power supply (Power Adapter) information. For more updates, please visit: [www.draytek.com](http://www.draytek.com)


## Package

### Package Content

Take a look at the package content. If there is anything missed or damaged, please contact DrayTek or the dealer immediately



**Vigor Router**

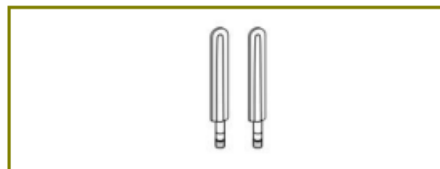

**LTE Antenna**



**RJ-45 to RJ-45 Cable  
(Annex B)**



**RJ-11 to RJ-45 Cable (Annex B)  
RJ-11 to RJ-11 Cable (Annex A)**




**Quick Start Guide**




**RJ-45 Cable (Ethernet)**


The type of the power adapter depends on the country that the router will be installed.

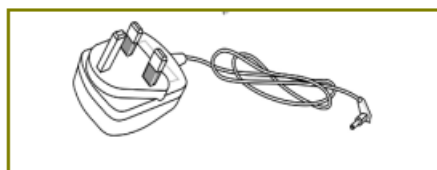


**UK-type Power Adapter**

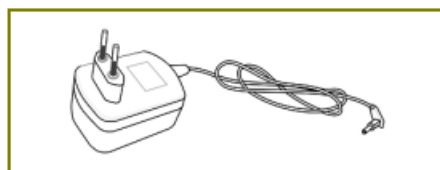

**EU-type Power Adapter**

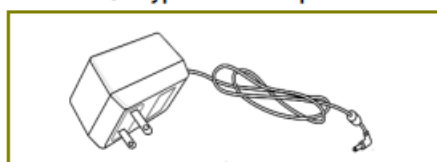

**USA/Taiwan-type Power Adapter**

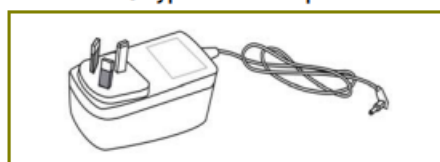











**AU/NZ-type Power Adapter**

**Important:** Remove the protective film before use to ensure ventilation.

### Panel Explanation


Vigor2620L / Vigor2620Ln




LED	Status	Explanation
	Off	The router is powered off.
	Blinking	The router is powered on and running normally.
	On	The router is ready to access Internet.
	Off	The router is not ready to access Internet.
	Blinking	Slowly: The DSL connection is ready. Quickly: The DSL connection is establishing.
	On	Physical line has been connected.
	Blinking	The connection is training.
  (for Vigor2620L)	On	The LAN port is connected.
	Blinking	The data is transmitting through the LAN port.
  (for Vigor2620Ln)	On	The LAN port is connected.
	Blinking	The data is transmitting through the LAN port.
	On	LTE device is connected and ready for use.
	Off	LTE device is not detected, or has serious problem (e.g., no SIM card, SIM pin error, SIM deactivated, and etc.).
	Blinking	Vigor device performs initial access procedure.
	On	SIM card is inserted into the slot and detected by Vigor device.
	Blinking	No SIM card in detected.
	On	Vigor device is ready for sending wireless signal.
	Off	No wireless signal is sent out.
	Blinking	The data is transmitting via wireless connection.

Vigor2620L,

Vigor2620L,

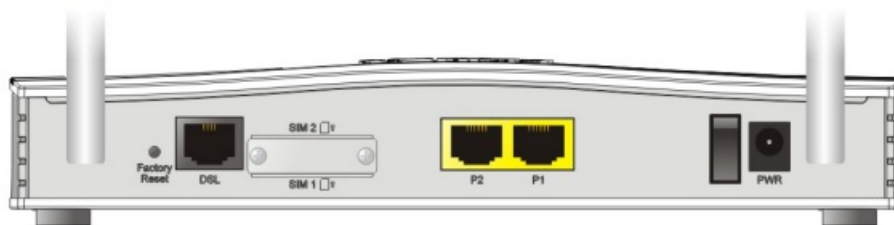

Vigor2620Ln,

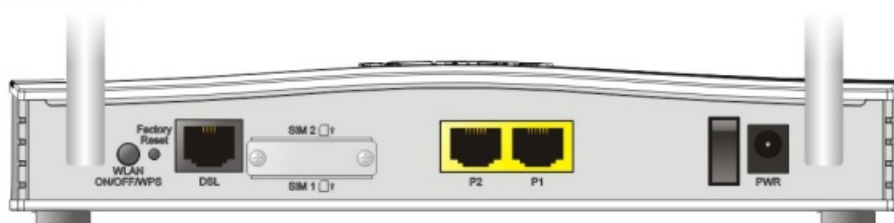

Interface	Description
Wireless LAN ON/OFF/WPS (Vigor2620Ln)	<ul style="list-style-type: none"> <li>● Press the button and release it within 2 seconds. When the wireless function is ready, the green LED will be on.</li> <li>● Press the button and release it within 2 seconds to turn off the WLAN function. When the wireless function is not ready, the LED will be off.</li> <li>● When WPS function is enabled by web user interface, press this button for more than 2 seconds to wait for client's device making network connection through WPS.</li> </ul>
Factory Reset	Restore the default settings. Usage: Turn on the router (ACT LED is blinking). Press the hole and keep for more than 5 seconds. When you see the ACT LED begins to blink rapidly than usual, release the button. Then the router will restart with the factory default configuration.
DSL	Connector for accessing the Internet.
SIM2/SIM1	SIM card slot(s).
P2-P1	Connectors for local network devices.
ON/OFF	Power Switch.
PWR	Connector for a power adapter.

## Hardware Installation

This section will guide you to install the router through hardware connection and configure the router's settings through web browser.

Before starting to configure the router, you have to connect your devices correctly.


### Network Connection via LTE

1. Install the SIM card into the card slot. The back plate of the SIM card slot must be removed first and the direction of card notch must be on the left side.




After installing the SIM card, fasten the back plate again.

2. Connect to your computer with a RJ-45 cable.
3. Connect one end of the power cord to the power port of this device. Connect the other end to the wall outlet of electricity.
4. Power on the router.
5. Check the power, LTE and LAN LEDs to assure network connections.

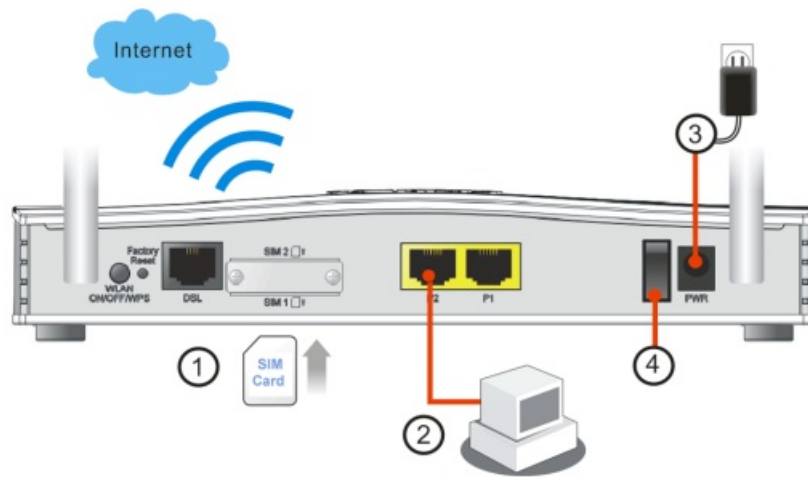

## Network Connection via DSL

1. Connect the DSL interface to the external ADSL splitter with an ADSL line cable.
2. Connect to your computer with a RJ-45 cable.
3. Connect one end of the power cord to the power port of this device. Connect the other end to the wall outlet of electricity.
4. Power on the router.
5. Check the power and DSL, LAN LEDs to assure network connections.

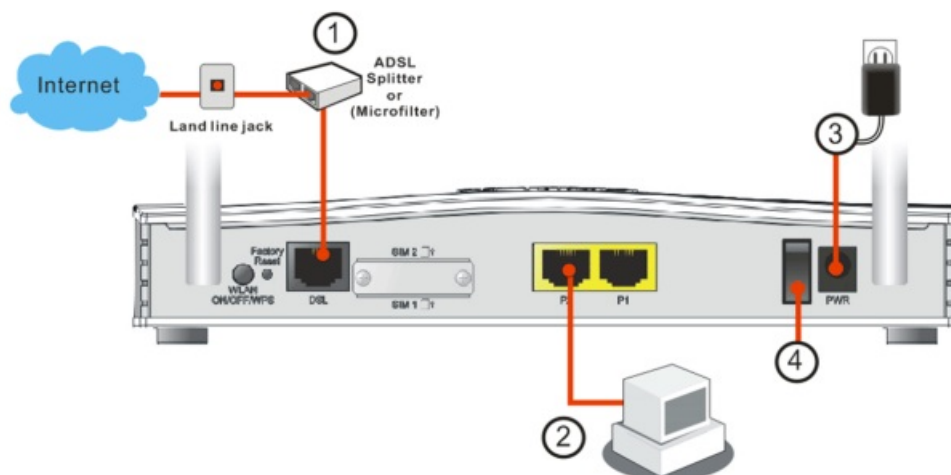


## Wall-Mounted Installation

Vigor router has keyhole-type mounting slots on the underside.

1. A template is provided on the Vigor router packaging box to enable you to space the screws correctly on the wall.
2. Place the template on the wall and drill the holes according to the recommended instructions.
3. Fit screws into the wall using the appropriate type of wall plug.



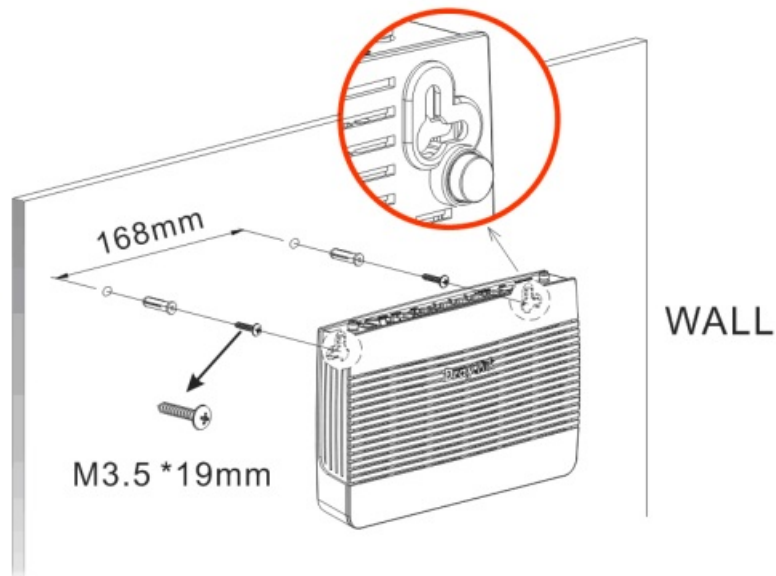

**Note:** The recommended drill diameter shall be 6.5mm (1/4").

4. When you finished about procedure, the router has been mounted on the wall firmly.

## Software Configuration


To access the Internet, please finish the basic configuration after completing the hardware installation. The Quick Start Wizard is designed for you to easily set up your router for Internet access. You can directly access the Quick Start Wizard via Web User Interface. Make sure your PC connects to the router correctly.

**Note:** You may either simply set up your computer to get IP dynamically from the router or set up the IP address of the computer to be the same subnet as the default IP address of Vigor router 192.168.1.1. For detailed information, please refer to – Trouble Shooting of the user's guide.

Open a web browser on your PC and type <http://192.168.1.1>. A pop-up window will open to ask for a username and password. Please type "admin/admin" as the Username/Password and click Login.

**Note:** If you fail to access the web configuration, please go to "Trouble Shooting" on the User's Guide for detecting and solving your problem.

Now, the Main Screen will pop up. Click Wizards>>Quick Start Wizard.

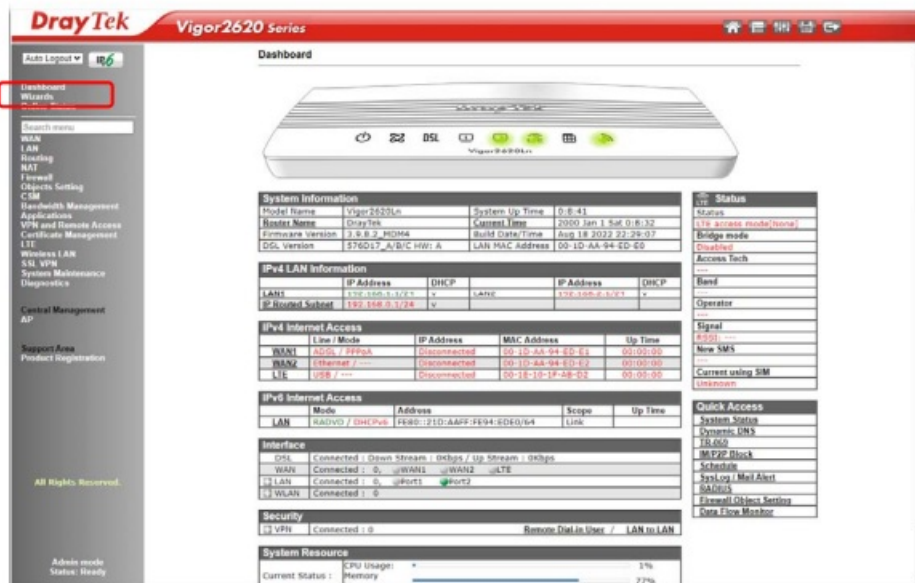

**Note:** The home page will change slightly per the router you have.

## INSTRUCTION

1. If your router can be under an environment with high-speed NAT, the configuration provided here can help you to deploy and use the router quickly. The first screen of Quick Start Wizard is entering login password. After typing the password, please click Next.

Please enter an alpha-numeric string as your Password.

Old Password

New Password

Confirm Password

Hint: If you want to keep the password unchanged, leave the password blank and press "Next" button to skip this process.

2. On the next page, please select the WAN interface that you use. If a DSL interface is used, please choose WAN1; if a USB interface is used, please choose LTE. Then click Next for next step. WAN1 and LTE will bring up different configuration pages. Here, we take LTE as an example.

WAN Interface:

Display Name:

Physical Mode: USB

3. Click Next to go to the following page.

LTE

Internet Access : 3G/4G LTE Modem(DHCP mode) ▼

3G/4G LTE Modem(DHCP mode)

SIM PIN code

Network Mode 4G/3G ▼ (Default:4G/3G)

APN Name

< Back

Next >

Finish

Cancel

- Manually enter the SIM PIN code and SPM Name provided by your ISP. Then click Next to view a summary of such a connection.

WAN Interface: LTE

Physical Mode: USB

Internet Access: DHCP

Click **Back** to modify changes if necessary. Otherwise, click **Finish** to save the current settings and restart the Vigor router.

< Back

Next >

Finish

Cancel

- Click Finish. A page of Quick Start Wizard Setup is OK!!! will appear. Then, the system status of this protocol will be shown.
- Now, you can enjoy surfing on the Internet.

## Customer Service

sealer or turner her rightly. or anyone sins, ports, pled to see to your e-mail to [support@draytek.com](mailto:support@draytek.com).

### Be a Registered Owner

Web registration is preferred. You can register your Vigor modem via <https://myvigor.draytek.com>.

### Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all devices will be regularly upgraded. Please consult the DrayTek website for more information on the newest firmware, tools, and documents.

<https://www.draytek.com>

## FAQ

- **Q: Can I use the router with a DSL connection?**
- A: Yes, the router is designed to work with DSL connections.
- **Q: How do I update the router's firmware?**
- A: To update the router's firmware, visit the DrayTek website and download the latest firmware version for your specific model. Follow the instructions provided by DrayTek to perform the firmware update.
- **Q: Can I use the router's LTE functionality in all regions?**

- A: The LTE functionality of the router is designed for specific regions. Please refer to the frequency information section in the user manual to ensure compatibility with your region.


## Intellectual Property Rights (IPR) Information

### Copyrights

© All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders

- **Version:** 1.5
  - **Firmware Version:** V3.9.8.2
  - (For future updates, please visit the DrayTek website)
  - **Date:** January 12, 2023
- 

## Documents / Resources

 <p>DrayTek Vigor2620 LTE Series LTE Router</p> <p>QUICK START GUIDE (en/zh/pt) V1.5</p>	<p><a href="#">DrayTek 2620 Series LTE Router</a> [pdf] User Guide 2620 Series LTE Router, 2620 Series, LTE Router, Router</p>
---	--

## References

- [Home | DrayTek](#)
- [Index of /Vigor2620/Document/CE](#)
- [Home | DrayTek](#)
- [User Manual](#)