

DS18 H-KO10 Competition SPL Monoblock Class D Subwoofer **Amplifier Owner's Manual**

Home » DS18 » DS18 H-KO10 Competition SPL Monoblock Class D Subwoofer Amplifier Owner's Manual

Contents

- 1 DS18 H-KO10 Competition SPL Monoblock Class D Subwoofer **Amplifier**
- **2 FEATURES**
- **3 SPECIFICATION**
- **4 INTRODUCTION**
- **5 INPUT SECTION**
- **6 CROSSOVER CONTROLS**
- **7 BASS BOOST**
- **8 SPEAKER OUTPUTS**
- 9 INSTALLATION INSTRUCTIONS
- 10 WIRING CONFIGURATION EXAMPLES
- 11 DIMENSIONS
- 12 WARRANTY
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**



DS18 H-KO10 Competition SPL Monoblock Class D Subwoofer Amplifier



FEATURES

- Competition SPL Monoblock Class-D Subwoofer Amplifier
- Protection Circuit: Thermal, Over-Load, DC, Short Circuit, Voltage and Clipping
- LED indicates working status: Power/Protection/Clipping
- Protection Circuit: Thermal, Over-Load, DC, Short Circuit, Voltage and Clipping
- LED Digital Voltmeter
- Tiffany RCA Connectors
- · Cooling Fan
- Strap Mode Connection
- · Remote Bass Knob with Power and Clip LED Indicator included
- · Latest SMC and MOSFET Technology
- · Heavy Duty Printed Circuit Board

SPECIFICATION

	H-K02	H-K03	H-K05	H-K08	H-K010
CLASS / CLASE	CLASS-D / DIGITAL				
RMS POWER @ 4 OHM / PODER CONTINUO @ 4 OHM	950W	1500W	2200W	2500W	3500W
RMS POWER @ 2 OHM / PODER CONTINUO @ 2 OHM	1500W	2500W	3500W	4800W	5800W
RMS POWER @ 1 OHM / PODER CONTINUO @ 1 OHM	2000W	3000W	5000W	8000W	10000W
RMS POWER @ 0.5 OHM / PODER CONTINUO @ 0.5 OHM	3600W (BURST)	6200W (BURST)	9200W (BURST)	15000W (BURST)	0.670HM* 1800OW (BURST ONLY) *MIN LOAD ADMISSIBLE
FREQUENCY RESPONSE / RESPUESTA DE FRECUENCIA	13HZ-300HZ	13HZ-300HZ	13HZ-300HZ	13HZ-300HZ	13HZ-250HZ
SIGNAL/NOISE RATIO / PROPORCIÓN DE RUIDO/SEÑAL	>80 dB	>97 dB	>96 dB	>95 dB	>88 dB
EFFICIENCY @ 40HM / EFICIENCIA @ 40HM	95%	94%	96%	94%	95%
DAMPING FACTOR / FACTOR DE AMORTIGUAMIENTO	400	400	400	500	400
THD % / DISTORCION ARMONICA TOTAL (THD)%	<0.2%	<0.2%	<0.2%	<0.2%	<0.2%
LOW LEVEL INPUT RANGE / RANGO DE ENTRADA DE BAJO NIVEL	0_2-6V	0.2-6V	0.2-6V	0.2-6V	0.2-6V
SELECTABLE X-OVER / CROSSOVER SELECCIONABLE	FIXED LPF				
X-OVER FILTER RANGE / RANGO DE FILTRO DE X-OVER	35HZ-250HZ	35HZ-250HZ	35HZ-250HZ	35HZ-250HZ	35HZ-250HZ
BASS BOOST RANGE / RANGO DE REFUERZO DE GRAVES	0-9dB	0-9dB	0-9dB	0-9dB	0-9dB
BASS BOOST FREQUENCY / FREQ DEL REFUERZO DE GRAVES	45 HZ				
INFRASONIC FILTER / FILTRO INFRASÓNICO	10-50HZ	10 - 50HZ	10-50HZ	10-50HZ	10-50HZ
PHASE SELECTOR / SELECTOR DE FASE	0 - 180 DEGREES				
POWER INPUT SIZE / CALIBRE DE CABLE DE ENTRADA	OGA X 1	OGA X 2	OGA X 2	OGA X 2	OGA X 3
FUSE SIZE / TAMAÑO DE FUSIBLES	180A	300A	420A	720A	830A

DS18 H-KO AMPS

Thank you for choosing DS18 HOOLIGAN KO amps!

To Take full advantage of the DS18 HOOLIGAN KO amps you have just purchased, please read and follow the instructions in this manual. As with all of our products, professional installation by an authorized DS18 dealer is highly recommended!

INTRODUCTION

The D518 HOOLIGAN KO Car amplifiers offer high-quality audio reproduction for the audiophile and the everyday listener alike. All models feature fully variable crossovers with 12dB per octave slopes, allowing you the ability to tailor the sound to best fit the speakers and your listening preferences.

Platinum Finish Connections

Ensures solid electrical connections that resist corrosion.

Fully Variable Crossovers

- Fully variable crossovers promote installation ease and save the cost of outboard crossovers.
- Additionally, they may be used in conjunction with outboard passive or active crossovers, depending on the
 complexity required by the system. The 12 dB per octave slope offers steep roll-off above or below the
 selected frequency.

Protection Circuitry

Against Overload, Short Circuit, Thermal, and Reverse Polarity. These protection features are designed to protect the amplifier from misuse, as well as from common causes of amplifier failure.

INSTALLATION


- Professional installation by an authorized D518 H-KO amps dealer is highly recommended! Otherwise, the
 performance of your new gear may not be satisfactory. If you decide to do your installation, please read and
 follow this manual very carefully. Failure to do so may compromise the integrity of this product, and your
 automobile, and possibly void the product warranty.
- Amplifiers are generally mounted in the hatch/ trunk area of a car or SUV, and under or behind the seat of most
 pick-up trucks. Select a location that will provide adequate ventilation for the amplifier. Avoid mounting the
 amplifier with the fins down. The fins should be facing up either vertically or horizontally. Secure the amplifier
 with the screws provided.
- Before securing the amplifier, inspect the mounting location carefully to ensure that you do not drill into or damage any electrical, hydraulic, fluid, or fuel lines.

INPUT SECTION

Because of the wide range of head unit output configurations, all D518 H-KO amps have an adjustable input sensitivity of "Gain". The gain is not a volume or a power-limiting control like a throttle. It makes the amp more sensitive to input from the stereo; with the gain up, the amp will reach full output at a lower volume setting on the deck. At higher gain settings the amp also becomes more and more sensitive to noise from the car's electrical system. Try to run the gain at the lowest setting possible for your system.


There is no correct gain setting because speakers require different power demands to reach the same output, the

gains most often need to be used to compensate for these differences. If you tried to set all the gains at the halfway you would probably find the system didn't sound very good. Using good judgment and listening carefully to each speaker is still the best way to tune a system.

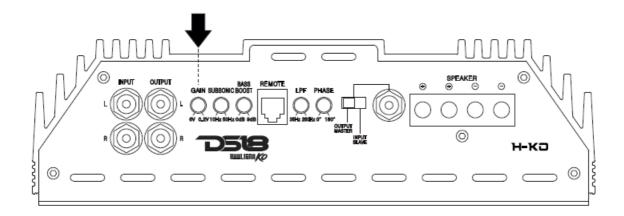


CROSSOVER CONTROLS

A crossover is a device that removes unwanted frequencies from a speaker or amplifier. A tweeter can easily be destroyed by bass notes if they are not filtered out. Likewise, a subwoofer will not sound natural if it is playing midrange notes. A crossover removes these sounds from the speaker. As you might guess, a careful adjustment is needed to ensure that all the speakers are playing the right sounds and that you are left with no "holes" or low spots in the frequency response.

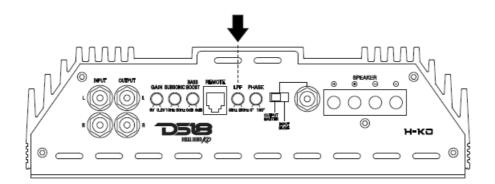


BASS BOOST

- D518 H-KO amplifiers have an adjustable bass boost. Begin your adjustments at low volume. If you do not hear any improvement then the woofer does not need any bass boost.
- Use Bass Boost carefully. The demands on power output are tremendous. Try to minimize the use by changing the woofer position or the enclosure size.

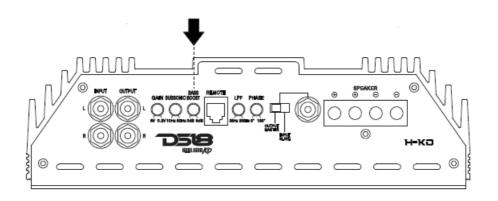

SPEAKER OUTPUTS

This amplifier is equipped with a large block-style terminal for speaker connection. Make this connection carefully and neatly. Strip your wire back and twist the exposed leads and insert them into the block terminal while being careful that there are no loose or frayed strands of wire tighten the Allen head screw down on the terminal till the wire is tightly secured in place. If the wires ever come in contact with each other the amplifier will go into protection.

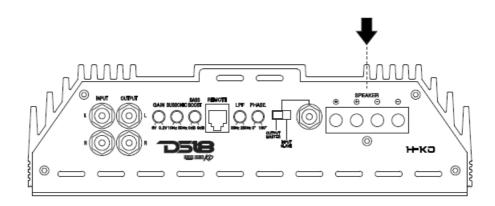

INSTALLATION INSTRUCTIONS

- 1. Before you start, disconnect the negative cable from the car battery. Tape up the end so it is isolated from the battery.
- 2. Run an appropriate gauge wire from the battery to the amplifier. Plan this part of the installation carefully. This cable will carry a very high current, if it should short to the body and it is not properly fused it could catch fire.
- 3. Connect the power wire to the battery using a fuse capable of the total current load of all amplifiers connected. Don't install the fuse yet. Wait until the end. Locate the fuse as close as possible to the battery. If the fuse is further than 18 inches (wire length) from the battery you should reevaluate the wire and fuse placement.
- 4. Find the closest clear metal area to the amp for a ground. Sand, grind, or scrape all paint and undercoating from the body and screw the ground securely in place.
 - It is advisable to test the ground with an ohmmeter between the ground cable and the negative battery cable to ensure a good low-resistance connection. Some panels used in modern cars do not offer the best ground. If you believe this is the case first consult with the vehicle manufacturer.
- 5. Run the speaker wire to the speakers. It is advised that you leave some extra wire at this point. You can fix it later.
- 6. If you haven't done so already, mount the amp now.
- 7. Connect the power and ground to the amplifier.


ONLY AFTER THIS STEP - SHOULD YOU INSTALL THE FUSE AT THE BATTERY.

- Connect the remote wire from the head unit to the amplifier.
 Now is a good time to turn on the amp for the first time. Make sure it turns on properly and does not go into
- 9. Connect the speaker wires to the amp and speakers (make sure the amp is off first). Make sure the polarity(+) and(-) are correct.
- 10. Connect the RCAs to the amp.


protection mode.

- 11. Double-check the amplifier controls at this time. Make sure everything is set correctly for your system.
- 12. Now you're ready to play it for the first time. It is best to leave the gain all the way down at first. Start with the head unit volume low and work your way up.

- 13. Now you can tune the amp. Take your time and make only one adjustment at a time. It may take some time to get the system fully adjusted. During this time the amp is drawing current from the battery. You should check the battery voltage from time to time and recharge it if it gets low. That's it. You're done. Now have fun.
 - H-K02
 - H-KO3
 - H-K05
 - H-K08
 - H-K010

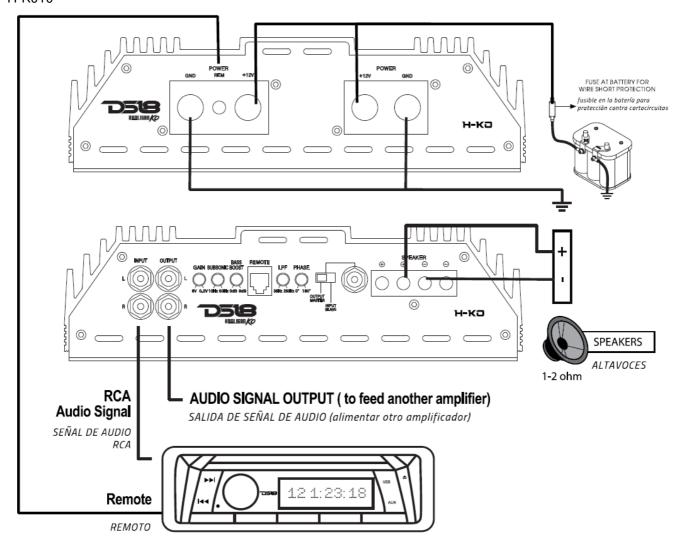


WIRING CONFIGURATION EXAMPLES

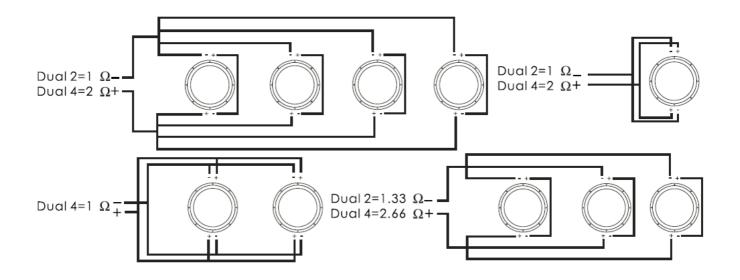


DIMENSIONS

- H-K02: 2.85/ H-K03: 2.85 / H-K05: 2.85 / H-K08: 2.85/ H-KO10: 2.85 (inches)
- H-K02: 72.5/ H-K03: 72.5 / H-K05: 72.5/ H-K08: 72.5 / H-K010: 72.5 (mm)

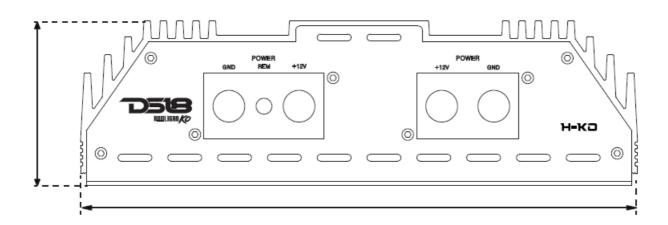

- H-K02: 9.68 H-K03: 9.68 /H-KOS: 9.68 ;H-KOB: 9.68/H-K01D: 9.68(inches)
- H-K02: 246/ H-K03: 246 / H-K05: 246 / H-KOB: 246/ H-K010: 246 (mm)
- H-K02: I0.62;H-K03: I2.2 ;H-K05: 15.35/H-KOB: I8.89;H-K010: 23.22 (inches)
- H-K02: 270/ H-K03: 310 / H-K05: 390 / H-KOB: 480/ H-K01D: 590 (mm)

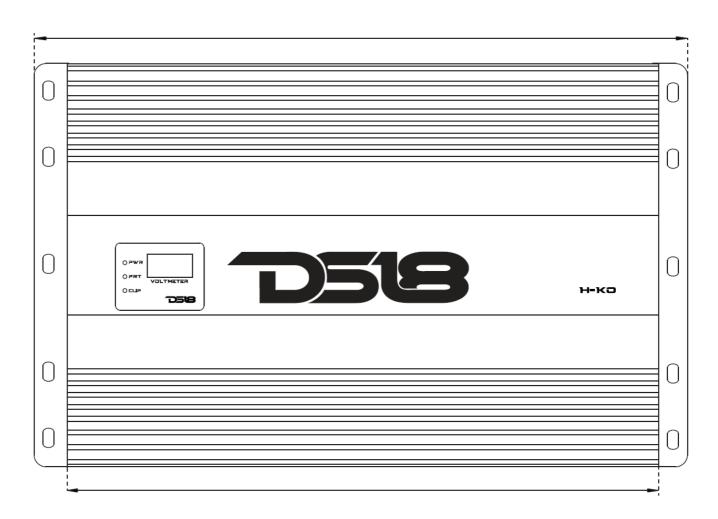


WARRANTY

Should your amplifier require service: Please consult with the dealer from which it was purchased, or contact OS 18 CAR AUDIO Local Dealer. Do not attempt to return your amplifier directly to us without first calling for a Return Authorization Number. Units received without any accompanying Return Authorization Number will be processed more slowly. Additionally, you must include a copy of your purchase receipt from an authorized dealer for consideration of in-warranty service (The warranty is not transferable and will not apply to products purchased from unauthorized dealers).

This warranty does not cover the cost of removal and reinstallation of any kind. Additionally, shipping to 0518 is covered by the purchaser. This warranty is void and inapplicable if 0518 deems that the product was abused or misused; including but not limited to products that have been improperly powered, causing thermal coil failure and/or mechanical failure, damage caused by accident, mishandling, improper installation, negligence, normal wear and tear, excessive water or heat damage, and freight damage. (The warranty is not transferable and will not apply to products purchased from unauthorized dealers.) 0518 is not responsible for any damages to a consumer's vehicle or person from a product failure. The warranty is void if 0518 deems the product was installed or used improperly. 0518 shall not be responsible for any incidental or consequential damages.



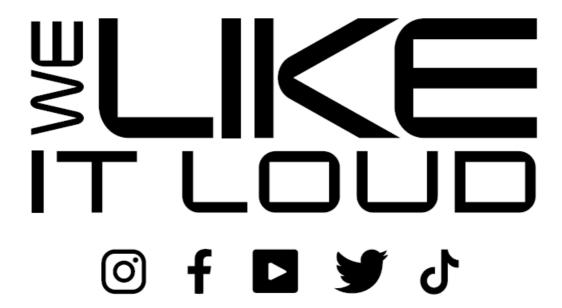



FOR MORE INFORMATION

• PLEASE VISIT **DS18.COM**.

Documents / Resources



DS18 DS18 H-KO10 Competition SPL Monoblock Class D Subwoofer Amplifier [pdf] Owne r's Manual

DS18 H-KO10 Competition SPL Monoblock Class D Subwoofer Amplifier, DS18 H-KO10, Competition SPL Monoblock Class D Subwoofer Amplifier, SPL Monoblock Class D Subwoofer Amplifier, Monoblock Class D Subwoofer Amplifier, Class D Subwoofer Amplifier, Subwoofer Amplifier, Amplifier

User Manual

Manuals+, Privacy Policy