




Dynojet PV3-17-02 Power Vision Installation Guide

[Home](#) » [Dynojet](#) » Dynojet PV3-17-02 Power Vision Installation Guide 



Installation Guide for: PV3-17-02

Model Coverage:

2019-2020Kawasaki ZX-10R



Contents

- 1 PARTS LIST
- 2 INTRODUCTION
- 3 INSTALLING THE POWER VISION
- 4 GETTING STARTED
- 5 FLASHING YOUR VEHICLE
- 6 VIEWING THE VEHICLE INFORMATION
- 7 VIEWING THE DIAGNOSTIC CODES
- 8 READING THE ECU
- 9 RESTORING THE ECU
- 10 CONFIGURING GAUGES
- 11 LOGGING DATA
- 12 DELETING DATA LOGS
- 13 VIEWING THE DEVICE INFORMATION
- 14 REFORMATTING THE DISK
- 15 CHANGING THE SETTINGS
- 16 UPDATING THE DEVICE
- 17 DIAGNOSTIC ENABLE
- 18 USB MODE
- 19 USING THE POWER VISION UPDATE CLIENT
- 20 INSTALLING THE POWER CORE SOFTWARE
- 21 Documents / Resources
 - 21.1 References

PARTS LIST


- 1 POWER VISION
- 1 REFLASH HARNESS
- 1 USB CABLE
- 2 VELCRO
- 2 DYNOJET DECAL

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION


IPV3-17-02.01

INTRODUCTION

POWER VISION OVERVIEW—FRONT VIEW

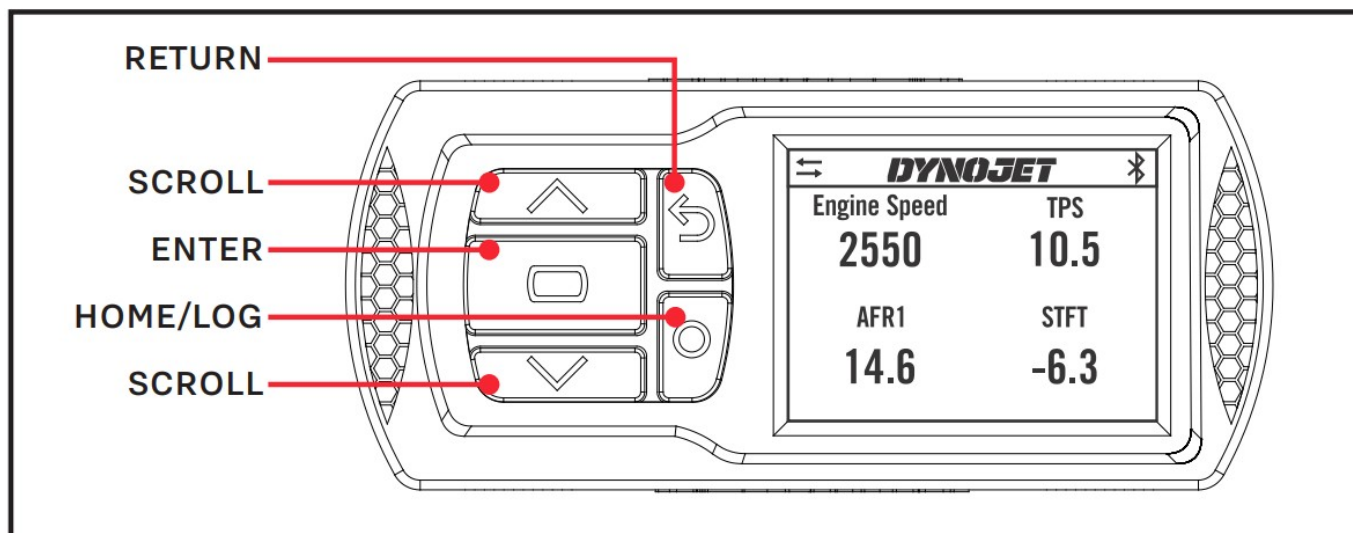

POWER VISION OVERVIEW—SIDE VIEW

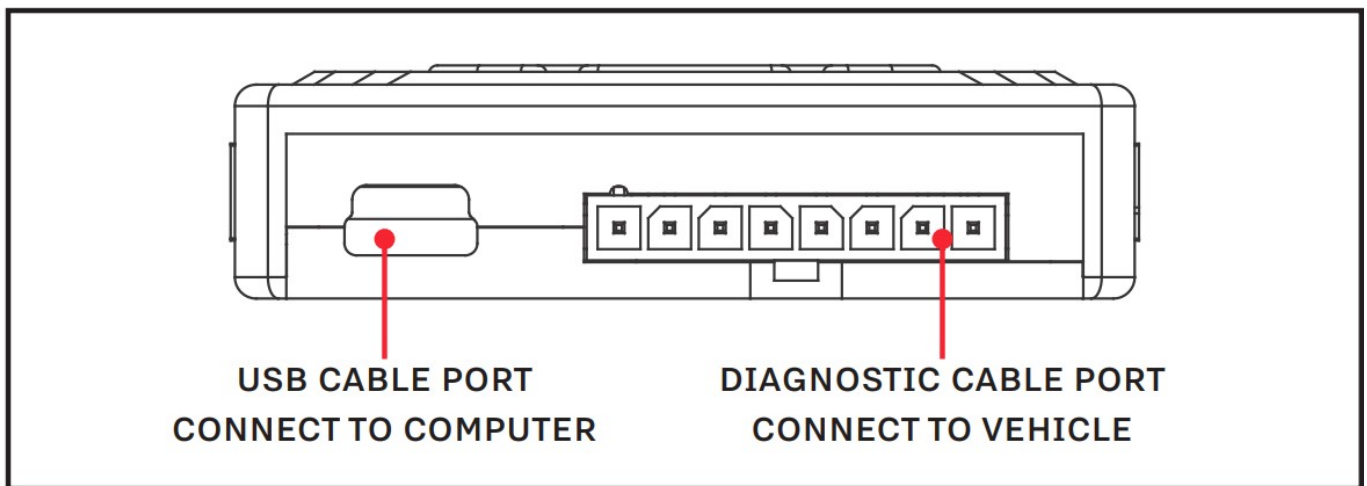

Thank you for purchasing the Power Vision from Dynojet Research. At Dynojet, our mission is to make every ride the ultimate ride. The Power Vision allows you to tune your stock ECU to achieve optimal performance from your vehicle.

The Power Vision is the device to interface between your computer and the vehicle ECU. Use the buttons to navigate the device menus, make selections, cycle through the four full-color available gauge screens, and log data. Connect to the diagnostic port to flash a tune; use the USB connection to interface between the Power Vision and your computer.

Make your Power Vision device yours; display the channels you want to see with four user-customizable full-color gauge screens. Make the Power Vision your window into your vehicle; secure the Power Vision to your dashboard or handlebars to monitor any desired set of gauges such as Throttle Position, Engine Speed, and more. Wideband Air:Fuel Ratio can be added as a channel to the PV3's monitors by adding the accessory available at www.dynojet.com.

For state of the art technical support, please visit www.dynojet.zendesk.com.

INSTALLING THE POWER VISION


1. Secure the Power Vision to the vehicle using the supplied Velcro. Make sure the Power Vision will not interfere with the operation and steering of the vehicle.

Visit www.dynojet.com for an array of mounting solutions for your Power Vision.

Note: The Power Vision does not need to be mounted to the vehicle, however, the Power Vision provides a window into your vehicle if needed.

2. Attach the diagnostic cable to the diagnostic port on the Power Vision and to the diagnostic port on the vehicle.
ZX10 Models: located under the rear set.

Note: Leave the 4-pin CAN connector disconnected unless you are using the Wideband module.

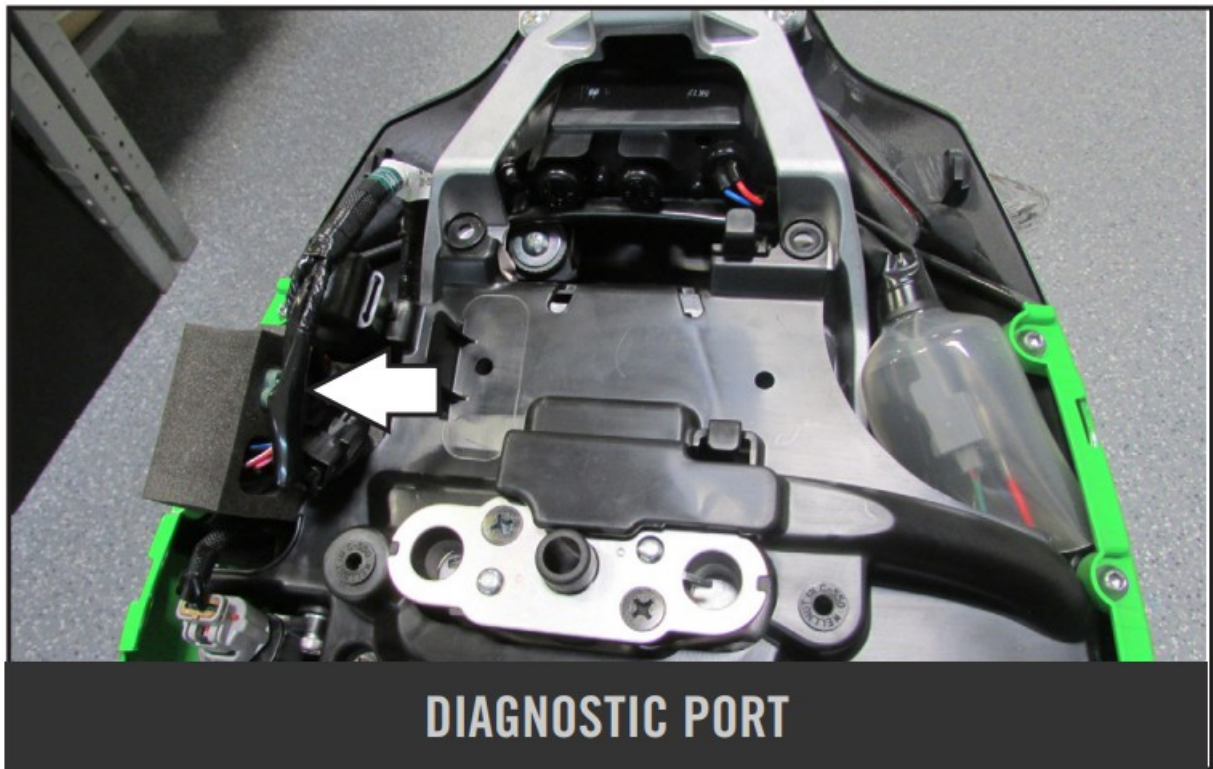

GETTING STARTED

Use the Tune File Wizard to prepare your Power Vision device with the stock (stk) and tune (djt) files needed to flash your vehicle.

1. Connect the Power Vision to the vehicle.
2. Turn the key on. The Power Vision will scan for files.

There are three possible file states:


File State 1: No compatible tune or stock files.

File State 2: No compatible tune files.

File State 3: All required files found.


3. Gauges are displayed.

Connect the Power Vision to the vehicle diagnostic port to collect ECU information. Turn the key on.

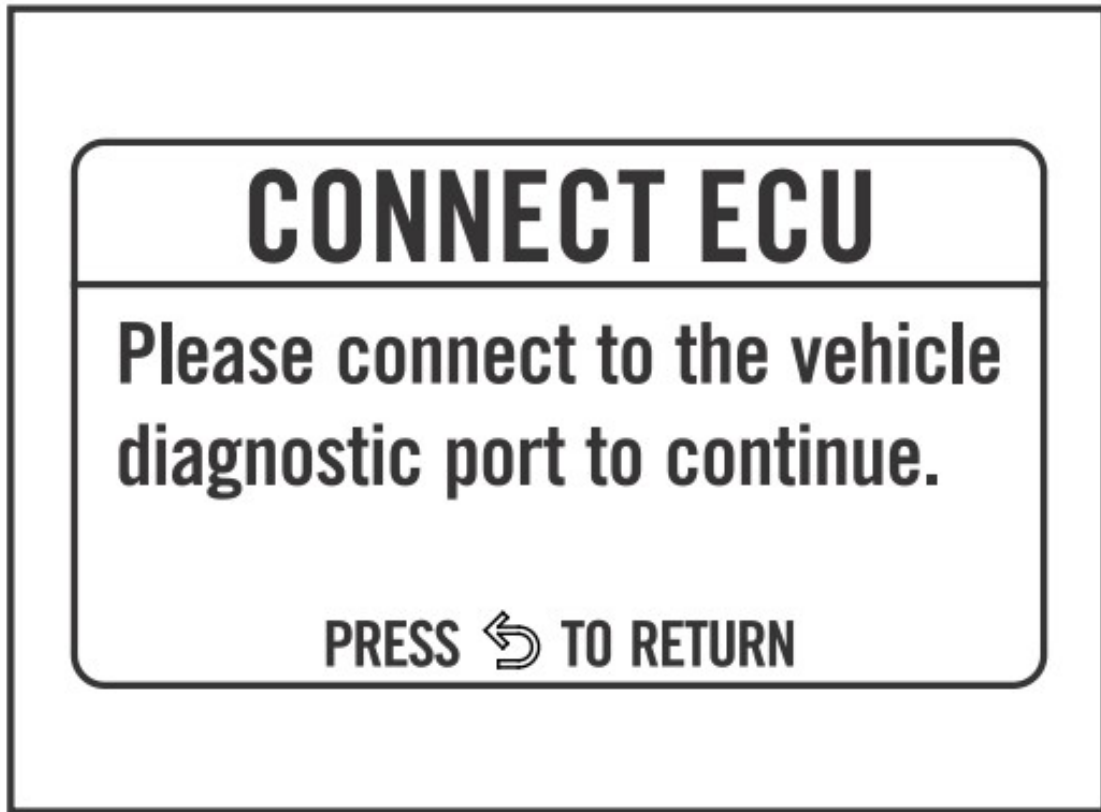

File State 1:

Press the Enter button for ECU read to begin the tuning process. This process takes about fifteen minutes.

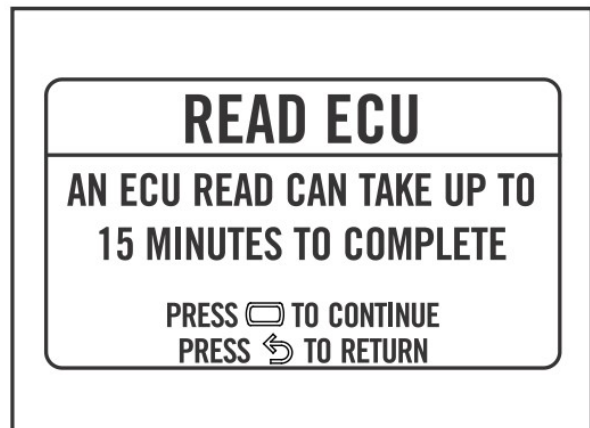

File State 2:

Go to tunes.dynojet.com/ to download tune files.

GETTING STARTED

NO COMPATIBLE TUNE FILES

To download tunes, visit:

TUNES.DYNOJET.COM/

PRESS  TO SEARCH AGAIN

File State 3:

All required files found. The Power

Vision is ready to flash a tune to the connected vehicle.

READY TO FLASH

ALL REQUIRED FILES FOUND

PRESS  TO READ ECU

PRESS  TO EXIT WIZARD


FLASHING YOUR VEHICLE

The Power Vision must be paired to the connected vehicle ECU to function properly.

Note: Once paired to the vehicle ECU, the Power Vision will not work on another vehicle without purchasing a tune license.

1. From the Main Menu, select Flash Tune.
2. Select the tune file (.djt) and press Enter to view the Tune Info.

Note: The Dynojet tune file (.djt) is a tune file which is different (better than stock performance or the necessary file when bolting on an exhaust, for example); the stock file (.stk) is the direct duplicate of what the OEM shipped.

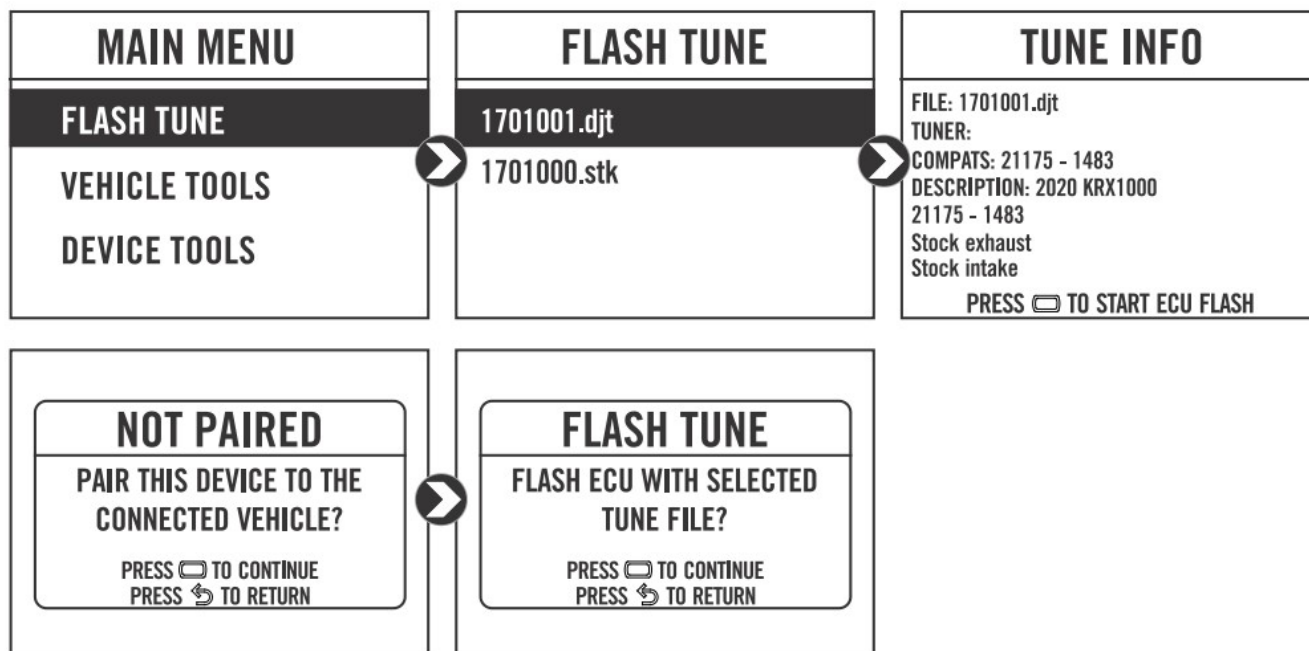

3. Press Enter to accept the tune, or restore the ECU to original stock (.stk) file, and pair the Power Vision to the vehicle.


Note: Pair to vehicle will only happen on the first flash.

4. Press Enter to pair and lock the Power Vision to the ECU and to begin the flash. Do not turn off the key switch or disconnect the Power Vision during the flash.
5. After the flash is complete, turn the key off and wait 45 seconds before turning the key back on to start.

VIEWING THE VEHICLE INFORMATION


This menu allows you to view the device status (paired/not paired), VIN #, Model ID, ECU serial number, tune compat, and checksum compat.

Select Vehicle Tools>Vehicle Information.

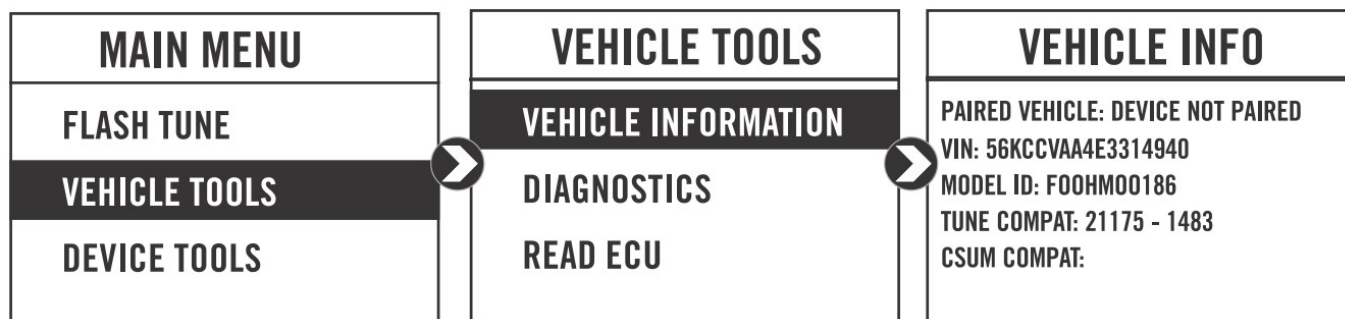

VIEWING THE DIAGNOSTIC CODES


This menu allows you to read and clear diagnostic trouble codes.

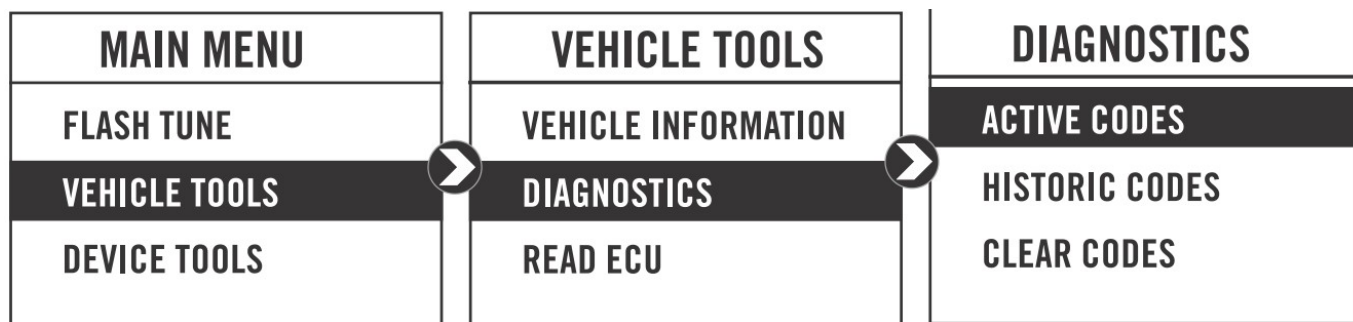

1. To read codes, select Vehicle Tools>Diagnostics>Active Codes.
2. To clear codes, select Vehicle Tools>Diagnostics>Clear Codes.


READING THE ECU

This menu allows you to read the ECU. This process takes about fifteen minutes. Select Vehicle Tools>Read ECU.

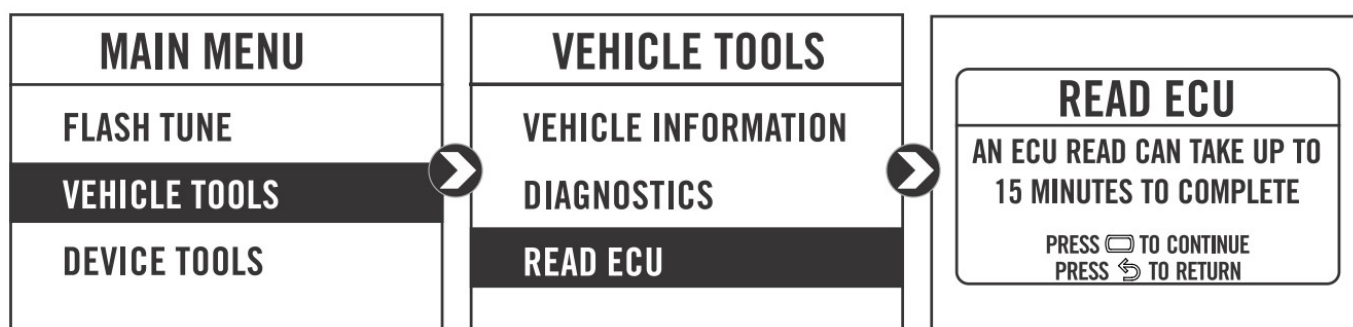


RESTORING THE ECU

This menu allows you to restore the ECU. Use Restore ECU if the device does not complete the flash or if your vehicle will not start. Select Vehicle Tools>Restore ECU.

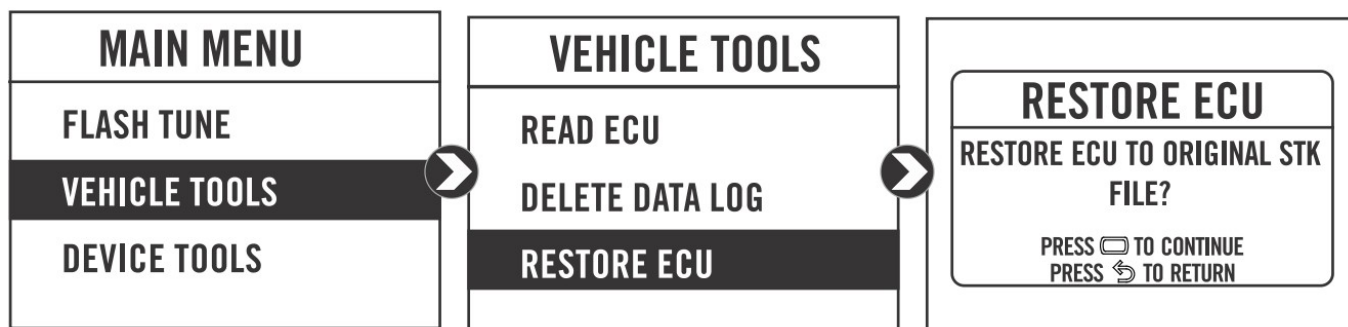

CONFIGURING GAUGES

Make your Power Vision device yours; display the channels you want to see with four user-customizable full-color gauge screens. Each gauge screen has one, two, or four configurable channels. Monitor channels such as Wideband, AFR, and Boost. Sample gauges shown here; for a complete list of monitors available, open the tune file in Power Core or scroll through the gauges on the device when configuring or selecting channels for the list of options.

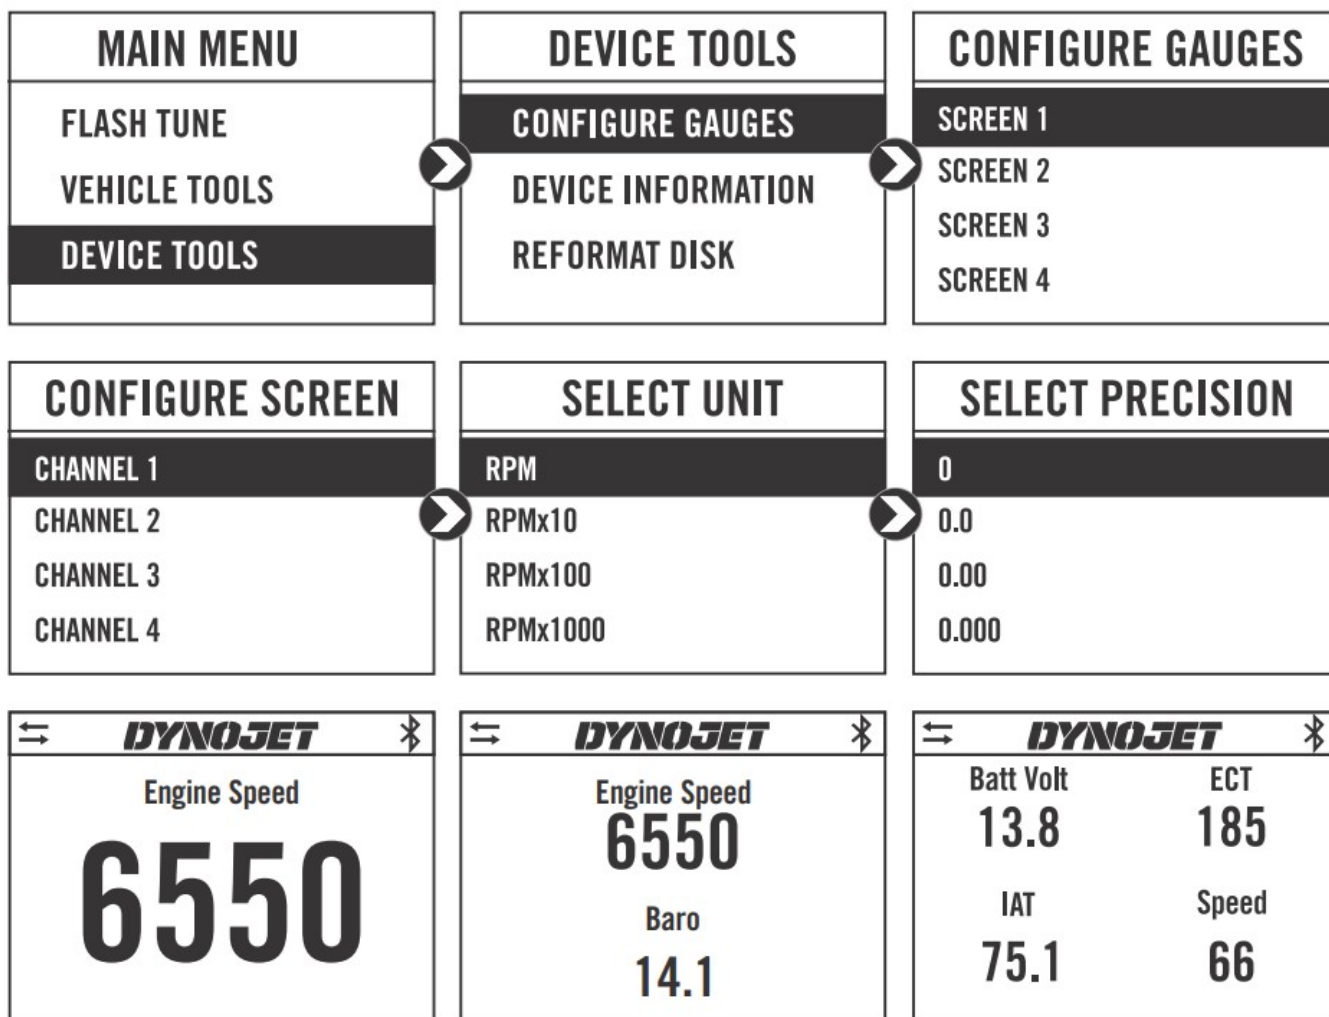


1. From the Main Menu, select Device Tools>Configure Gauges.
2. Select a gauge screen and press Enter.
3. Select a channel and press Enter.
4. Select a channel from the list and press Enter.
5. Select the precision or units for that channel and press Enter.
6. Continue setting up the remaining channels as desired.
7. Continue configuring the remaining gauge screens as desired.




4 KAWASAKI INSTALLATION GUIDE

LOGGING DATA

The Power Vision is a powerful logging tool to diagnose running issues.

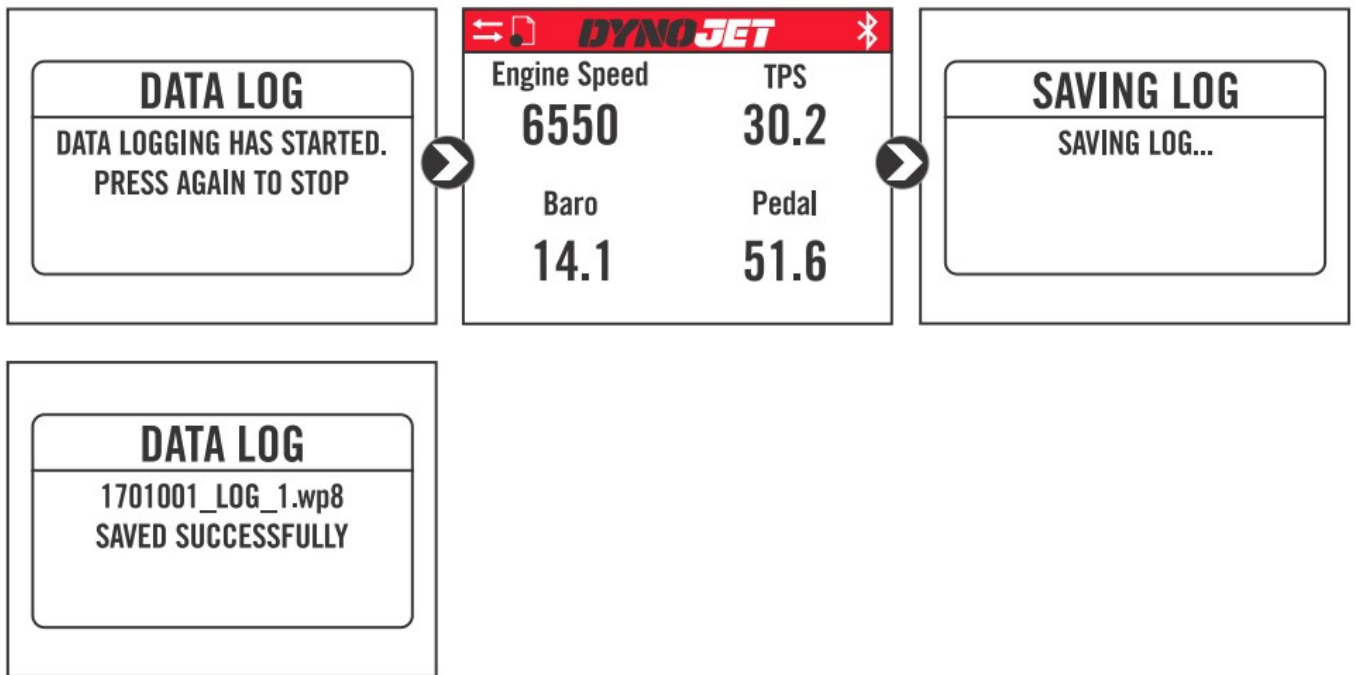Use the Power Vision to log all vehicle operating data and review the data in the Power Core software. Troubleshoot an issue such as knock, speed/RPM limitation, throttle blade closure and more by keeping the Power Vision mounted to view and record channels.




1. Press the Log  button to begin logging. The Power Vision screen will illuminate a bright red banner across the top when logging.
2. Press the Log  button again to stop logging.
3. Use the Power Core software to view log  files.

Snapshot Log: Press and hold the Log button for two seconds to record the previous two minutes of operating time.

DELETING DATA LOGS


This menu allows you to delete data logs.

1. Select Vehicle Tools>Delete Data Log.
2. Select a specific log to delete or select *Delete All Logs*.

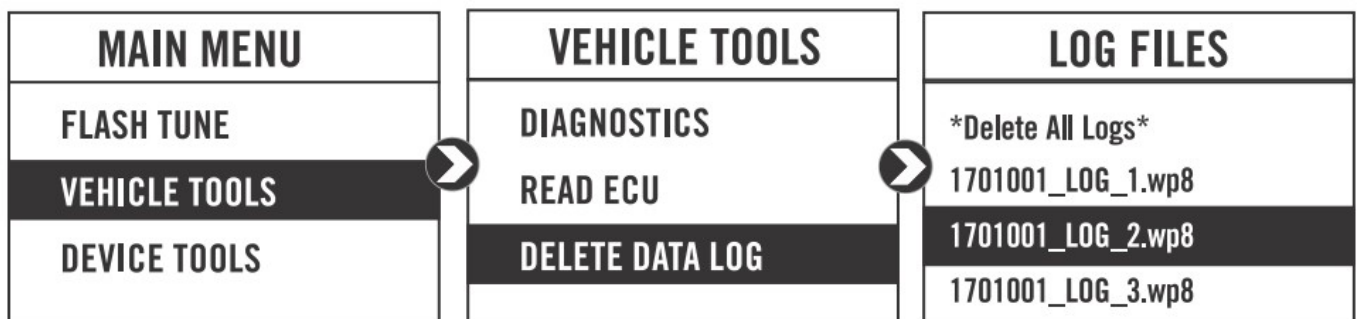


VIEWING THE DEVICE INFORMATION

This menu allows you to view the device firmware version, serial number, and stock code. Select Device Tools>Device Information.

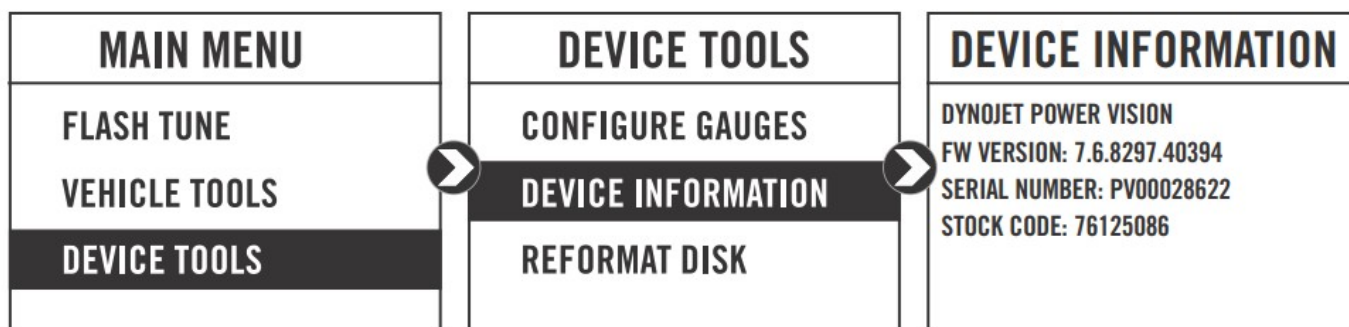


REFORMATTING THE DISK

This menu allows you to reformat the disk and erase all data.
Select Device Tools>Reformat Disk.

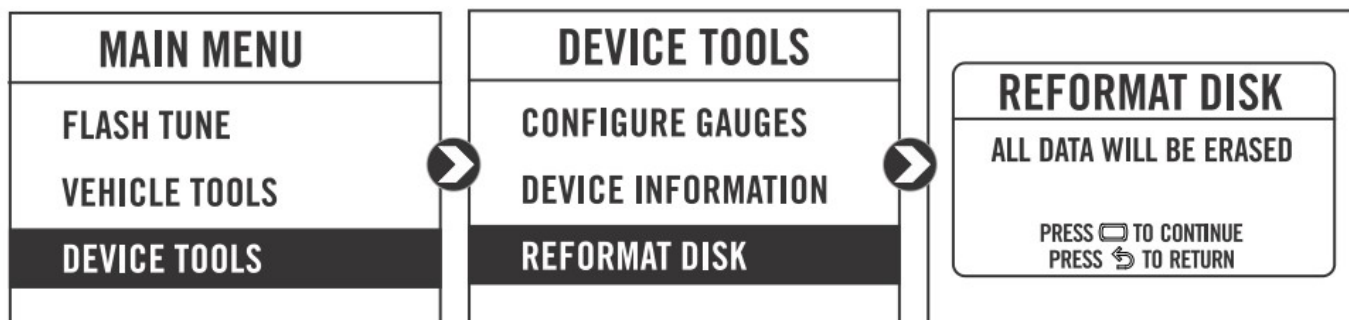

CHANGING THE SETTINGS


This menu allows you to rotate the screen allowing you to change the orientation of the Power Vision device along with adjusting the screen brightness. Turn the brightness up and make your screen pop!

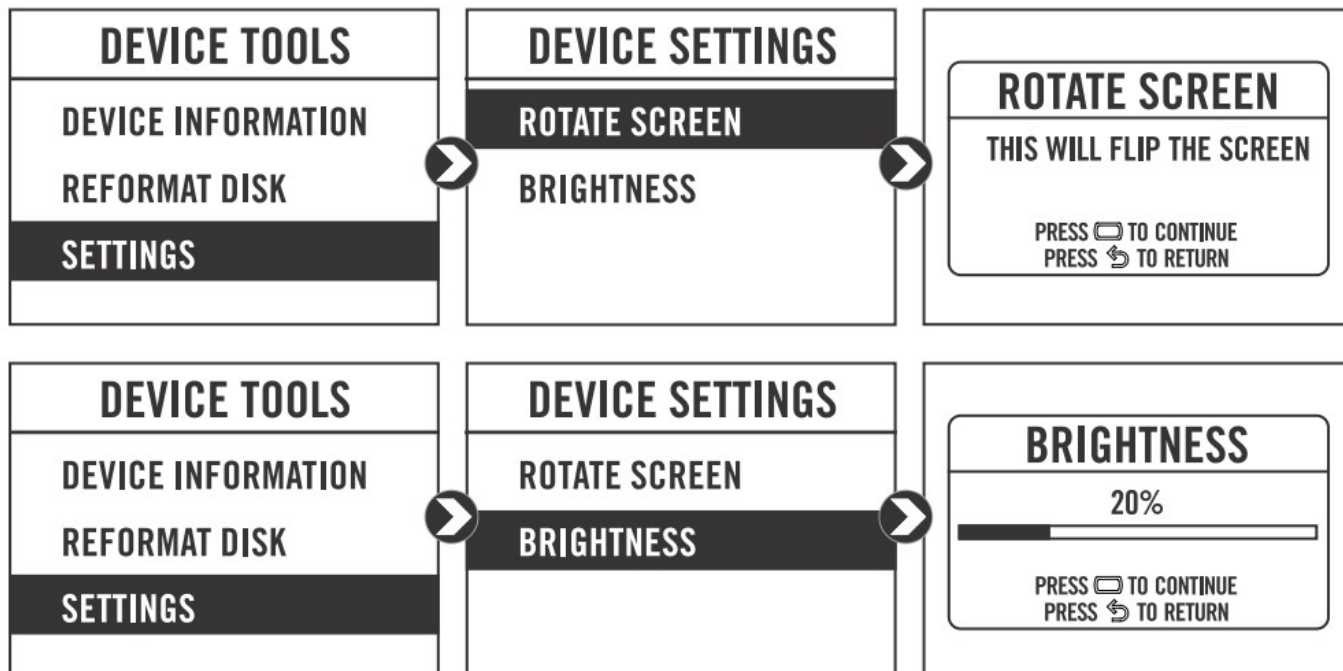

Select Device Tools>Settings>Rotate Screen to flip the screen.
Select Device Tools>Settings>Brightness to change the screen brightness.

UPDATING THE DEVICE


This menu allows you to update the device with the latest firmware.

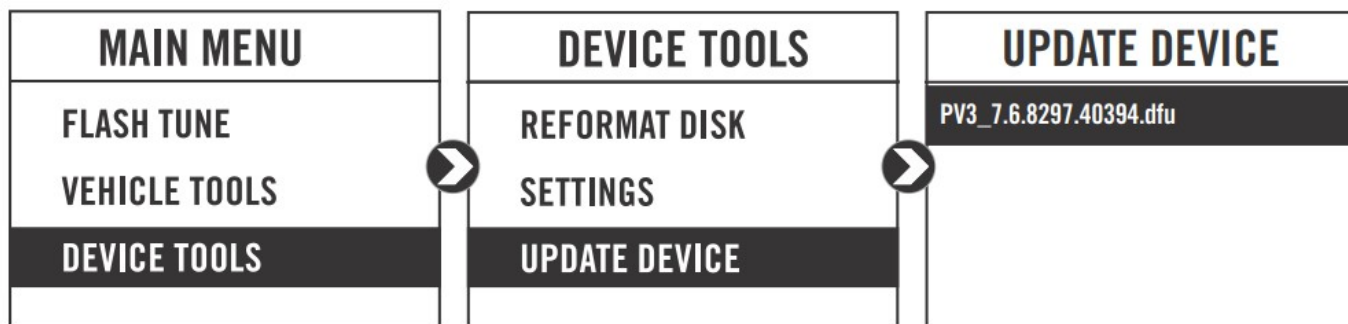

1. Go to www.dynojet.com.
2. From the top navigation menu, select Support>Downloads.
3. Click Power Vision 3.
4. Click the Firmware drop-down and download the Power Vision 3 Firmware for Kawasaki.
5. Save the file to your device.
6. Select Device Tools>Update Device.

DIAGNOSTIC ENABLE

This menu allows you to create a file containing device diagnostic information used by Dynojet Tech Support.

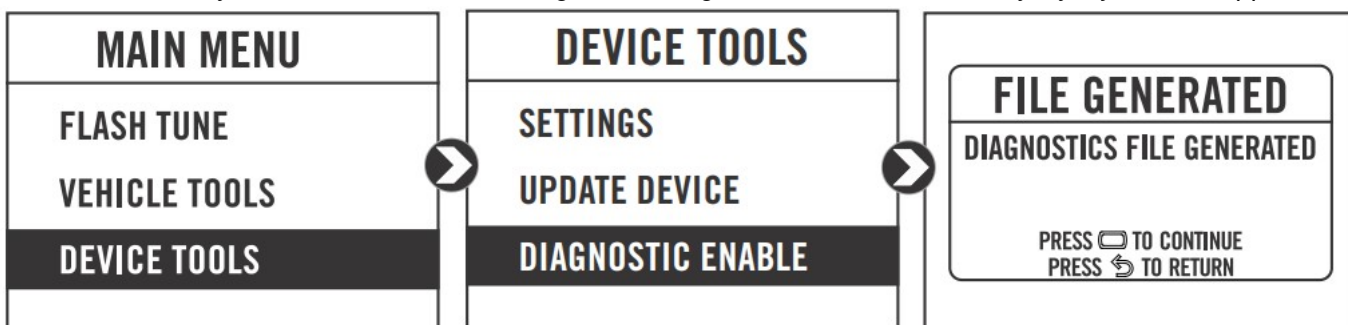

1. From the Main Menu, select Device Tools>Diagnostic Enable.
This will turn on diagnostic logging. Logging will continue until the device is restarted.
2. If requested by Dynojet Tech Support, connect your Power Vision to a computer and email the diagnostic file to PV3tech@dynojet.com. Diagnostic log files are placed in the log files directory.

USB MODE


This menu allows you to connect your Power Vision to your computer and enables sending and receiving files.

1. Connect the Power Vision to your computer using the included USB cable. The Power Vision will automatically enter USB Mode.

OR

From the Main Menu, select USB Mode.

2. Transfer the desired files to your computer or to the Power Vision.

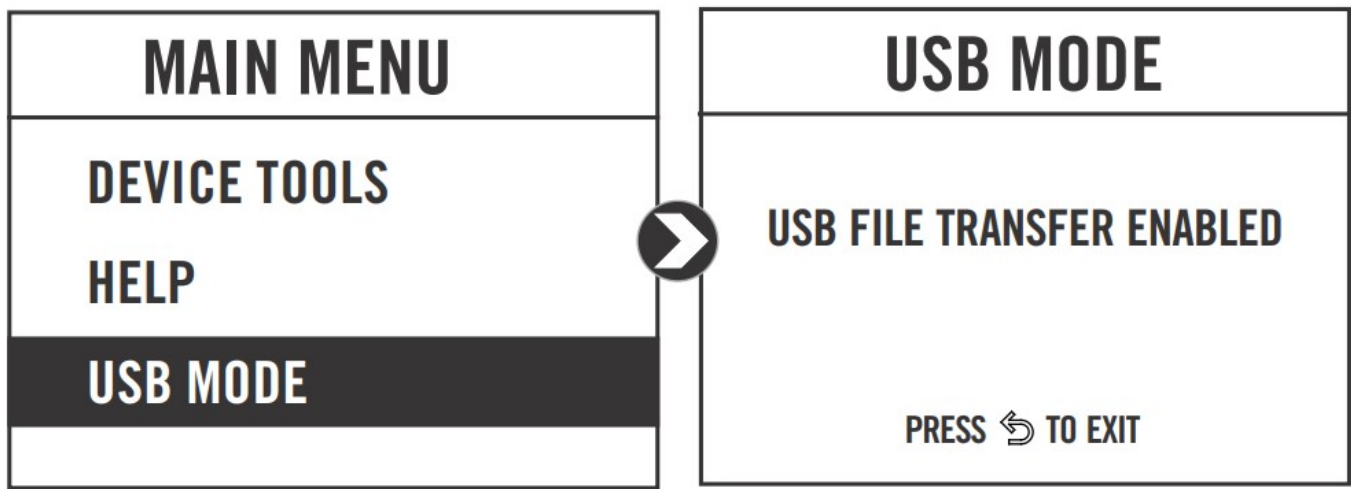

USING THE POWER VISION UPDATE CLIENT

This stand alone application will launch the Update Client allowing you to update your Power Vision with the latest firmware, retrieve additional tunes, or restore the Power Vision to the original Dynojet factory settings.



1. Connect the Power Vision to your computer using the included USB cable.
2. Navigate to the POWERVISION drive attached to your computer and run the Update.exe file.
3. Click Update to load the current firmware. If the Update button is grayed out, your Power Vision already has the latest firmware.
4. Click Restore to reload all original Dynojet tune and stock files.
5. Click Get Tunes to open the Dynojet Tune Finder. Follow the instructions to Upload your PV_Info.txt file and retrieve new tunes.
6. Click Manual Firmware Update to navigate to and load a version of firmware already saved on your computer.


INSTALLING THE POWER CORE SOFTWARE

Download the Power Core software and take tuning to a whole new level.

Note: Downloading the Power Core software is optional and not necessary to use the Power Vision.

1. Go to www.dynojet.com.

2. From the top navigation menu, select Support>Downloads.
3. Click Power Vision 3.
4. Click the Software drop-down and download the Dynojet Power Core software.
5. Double-click the saved file to begin installation. Follow the on-screen prompts. Refer to the Power Core Help for more information.

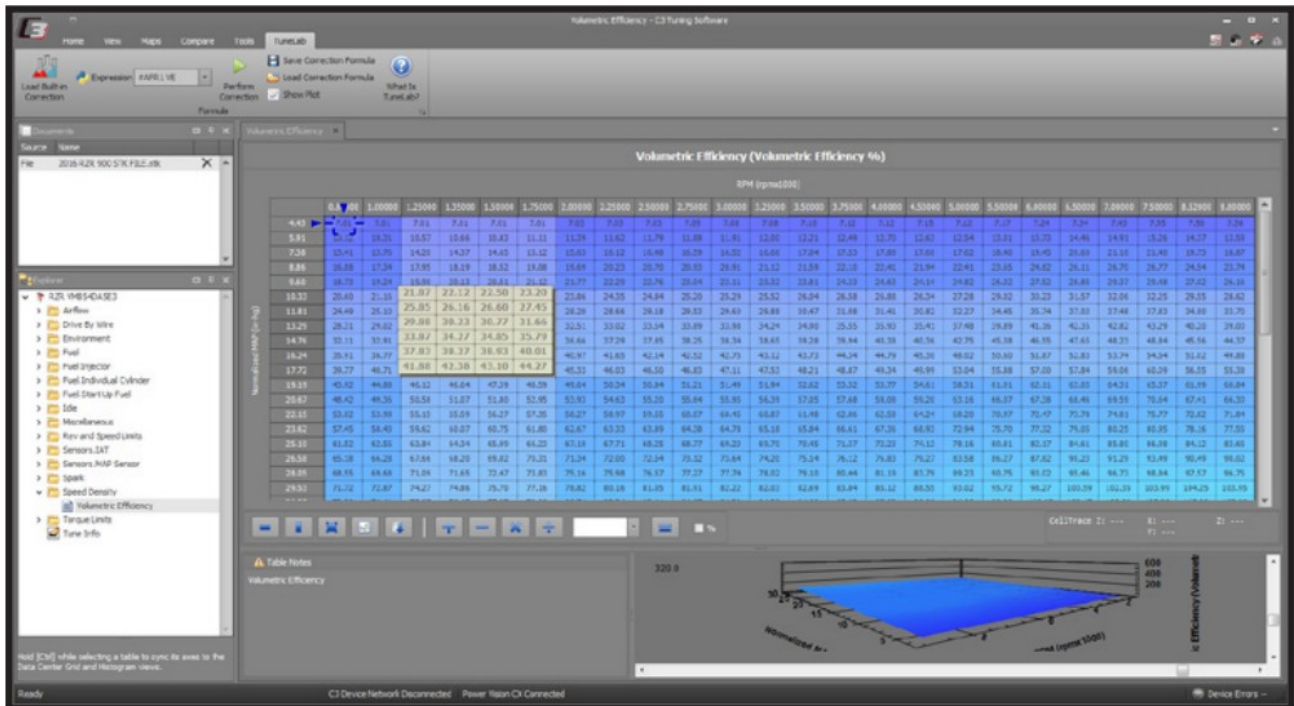

TRUTH IN PERFORMANCE

DYNOJET

2191 MENDENHALL DRIVE, NORTH LAS VEGAS,
NV 89081 – 800-992-4993

– DYNOJET.COM

© 2020-2023 DYNOJET RESEARCH

ALL RIGHTS RESERVED

Documents / Resources



[Dynojet PV3-17-02 Power Vision](#) [pdf] Installation Guide
PV3-17-02, 2019-2020 Kawasaki ZX-10R, PV3-17-02 Power Vision, Power Vision, Vision

References

- [D Powersports Vehicle Parts | Performance Ignition & Fuel Parts | Dynojet](#)
- [Customer Login | Dynojet](#)
- [D Powersports Vehicle Parts | Performance Ignition & Fuel Parts | Dynojet](#)

