

Edge-core  
Networks AS4630-54NPE  
Ethernet Switch



# Edgecore Networks AS4630-54NPE Ethernet Switch User Guide

[Home](#) » [Edgecore NETWORKS](#) » Edgecore Networks AS4630-54NPE Ethernet Switch User Guide 

### Contents

- 1 Edgecore Networks AS4630-54NPE Ethernet Switch
- 2 Specifications
- 3 Package Contents
- 4 Overview
- 5 FRU Replacement
- 6 Installation
- 7 Make Network Connections
- 8 Hardware Specifications
- 9 FAQ
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts

## Edge-core

### Edgecore Networks AS4630-54NPE Ethernet Switch



### Specifications

- **Model:** AS4630-54NPE | AS4630-54NPEM

- **Ports:**

- 36 x RJ45 2.5G PoE ports
- 12 x RJ45 10G PoE Ports
- 4 x SFP28 25G ports

- **Management Ports:** 1 x USB port, 1 x Management port, 1 x Serial console port

- **System Buttons/LEDs:** STK M/S button, Reset button, System LED, PRI LED, PSU LEDs, STK LEDs, FAN LED, PoE LED

## Package Contents

1. AS4630-54NPE or AS4630-54NPEM Ethernet Switch
2. Rack mounting kit—2 front-post brackets, 2 rear-post brackets, and screw kit
3. 2 x Power cord
4. Console cable—RJ-45 to D-Sub
5. Documentation—Quick Start Guide (this document) and Safety



①



②



③





④




⑤

## Overview

1. 1x USB port
2. 1 x Management port
3. 1 x Serial console port
4. System buttons/LEDs
5. 36 x RJ45 2.5G PoE ports
6. 12 x RJ45 10G PoE Ports
7. 4 x SFP28 25G ports
8. 2 x QSFP28 40G/100G uplink or stacking ports
9. 3 x Fan trays
10. 2 x AC PSUs

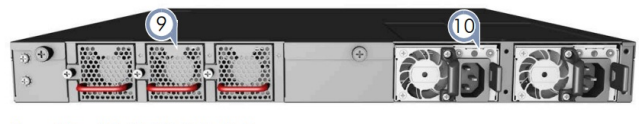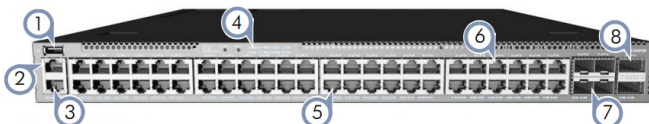


## System Buttons/LEDs

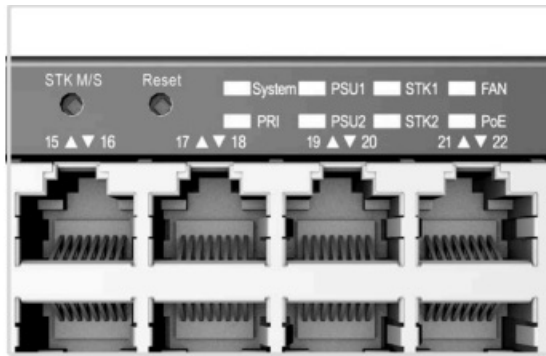


## STK M/S button

- **Reset button**
  - **System LED:** Green (OK), Amber (fault)
  - **PRI LED:** Green (primary unit), Amber (secondary unit) PSU LEDs: Green (OK), Amber (fault)
  - **STK LEDs:** Green (stacking ports active)
  - **FAN LED:** Green (OK), Amber (fault)
  - **PoE LED:** Green (OK), Amber (High PoE load)

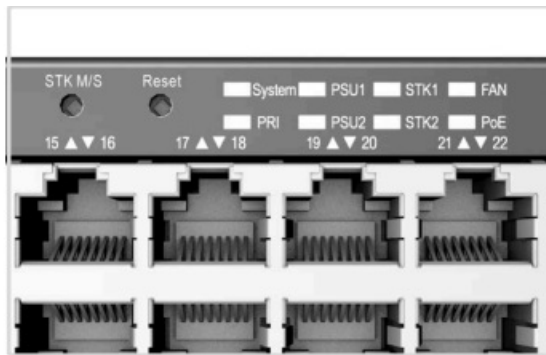


## Port/FRU LEDs

- **RJ-45 Port LEDs:** Green (link), Amber (link with PoE), Blinking (activity)
- **SFP28 Port LEDs:** White (25G), Green (10G), Blinking (activity)
- **QSFP28 Port LEDs:** White (100G), Green (40G link), Blinking (activity)
- **PSU Status LED:** Green (OK), Red (fault or fan failure)
- **Fan Tray Status LED:** Green (OK), Red (fault)

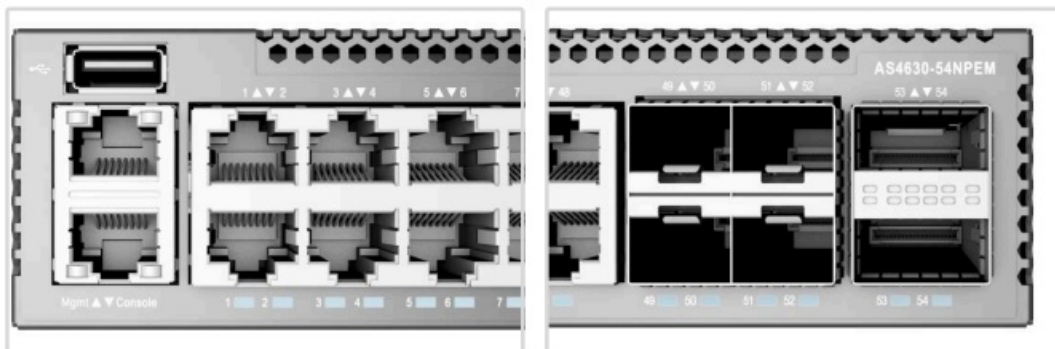

## FRU Replacement

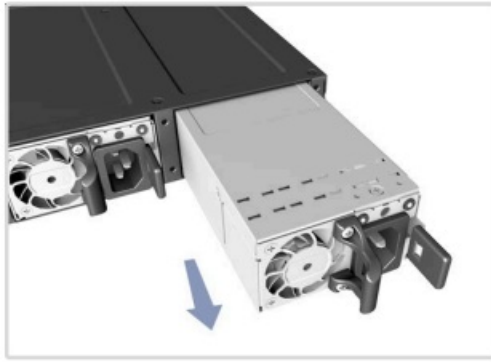


## PSU Replacement

1. Remove the power cord.
2. Press the release latch and remove the PSU.
3. Install replacement PSU with matching airflow direction.

## Fan Tray Replacement

1. Loosen the fan tray screw.
2. Remove fan tray from the chassis.
3. Install replacement fan with matching airflow direction.

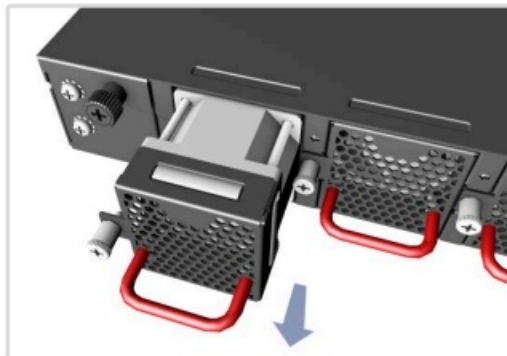


## Installation

- **Warning:** For a safe and reliable installation, use only the accessories and screws provided with the device. Use of other accessories and screws could result in damage to the unit. Any damages incurred by using unapproved accessories are not covered by the warranty.
- **Avertissement:** Pour une installation sûre et fiable, utilisez uniquement les accessoires et les vis fournies avec l'appareil. L'utilisation d'autres accessoires et vis pourrait endommager l'appareil. Les dommages causés par l'utilisation d'accessoires non approuvés ne sont pas couverts par la garantie.
- **Caution:** The device includes plug-in power supply (PSU) and fan tray modules that are installed into its chassis. Make sure all installed modules have a matching airflow direction (front-to-back).
- **Attention:** Le appareil comprend des modules d'alimentation et de modules de ventilation installés dans son châssis. Assurez-vous que tous les modules installés ont une direction d'air adaptée (avant-arrière).
- **Note:** The device has the Open Network Install Environment (ONIE) software installer preloaded on the switch, but no switch software image. Information about compatible switch software can be found at [www.edge-core.com](http://www.edge-core.com).

- **Note:** Model name and approval markings are indicated on the product label located on the bottom of the device.

## Mount the Switch

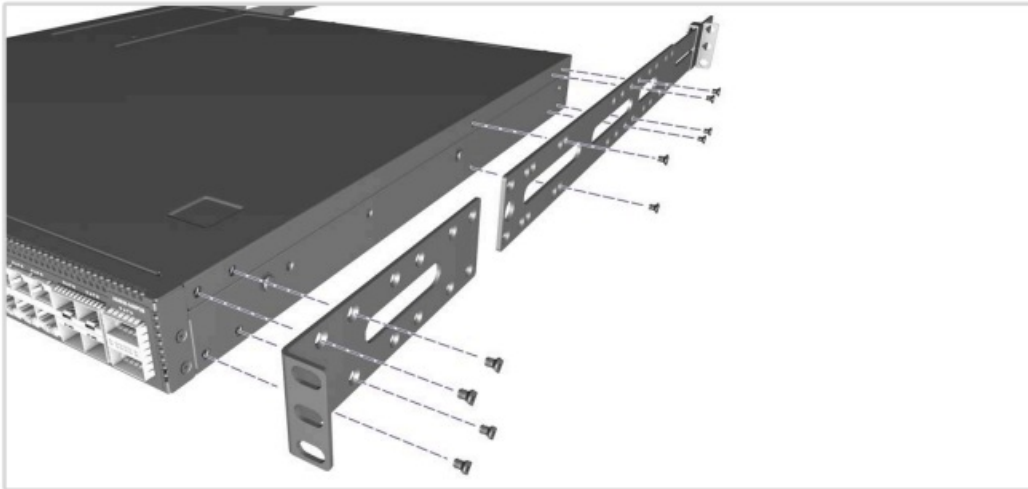

## Attach the Brackets

Use the included screws to attach the front- and rear-post brackets.



## Mount the Switch

Mount the switch in the rack and secure it with rack screws.




### Lock the Rear-Post Brackets

Use the included screws to lock the position of the rear-post brackets.

### Optional Slide-Rail Installation

An optional slide-rail kit is available for rack installation. Follow the installation procedure provided with the kit.

### Connect Power

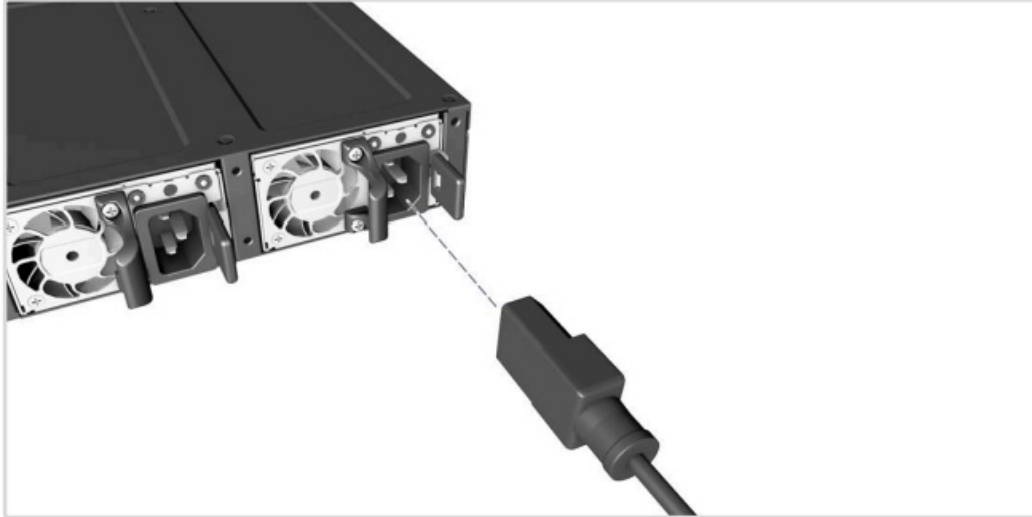

### AC Power

Install two AC PSUs and connect them to an AC power source.

### Verify Switch Power

### Check the PSU LEDs

The PSU1/PSU2 LEDs should be on green when operating normally.

### Perform Initial System Boot

#### 1. ONIE Installer Software


If the network operating system (NOS) installer is located on a network server, first connect the RJ-45 Management (Mgmt) port to the network using 100-ohm Category 5, 5e or better twisted-pair cable. (Not required if the NOS installer is located on attached storage.)

#### 2. Boot the Switch

Wait for the ONIE software to locate and execute the NOS installer, and then wait for the installer to load the NOS software image. Subsequent switch boots will bypass ONIE and directly run the NOS software.

**Note:** For switches with ONIE software pre-loaded, refer to the network operating system (NOS) installer and NOS documentation for details on software options and set up for ONIE.

### Make Network Connections

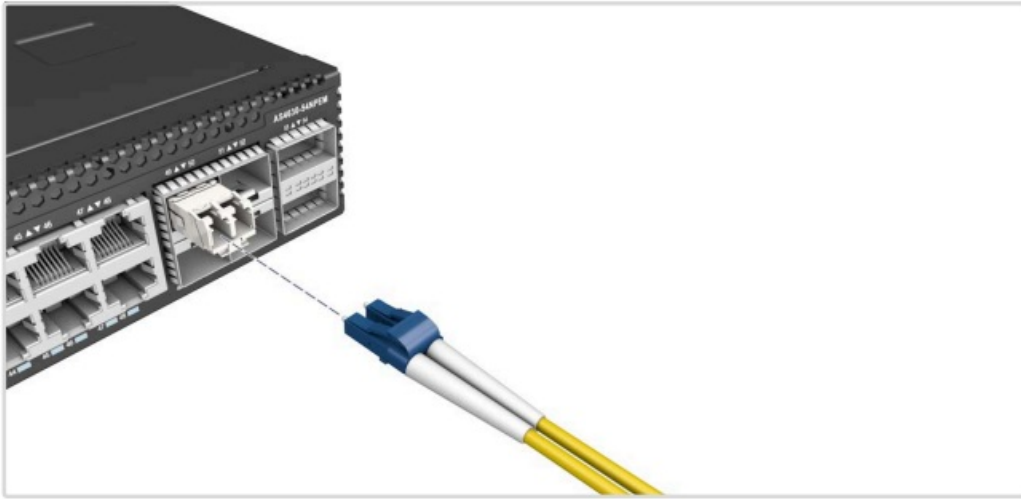

### 1. RJ-45 2.5G ports

Connect 100-ohm Category 5e, 6a or 7 twisted-pair cable. Ports can support PoE connections up to 90 W.


### 2. RJ-45 10G ports

Connect 100-ohm Category 6, 6a or 7 twisted-pair cable. Ports can support PoE connections up to 90 W.

### 3. SFP+/SFP28 slots

First install SFP+/SFP28 transceivers and then connect fiber optic cabling to the transceiver ports.

## (Optional) Make Stack Connections

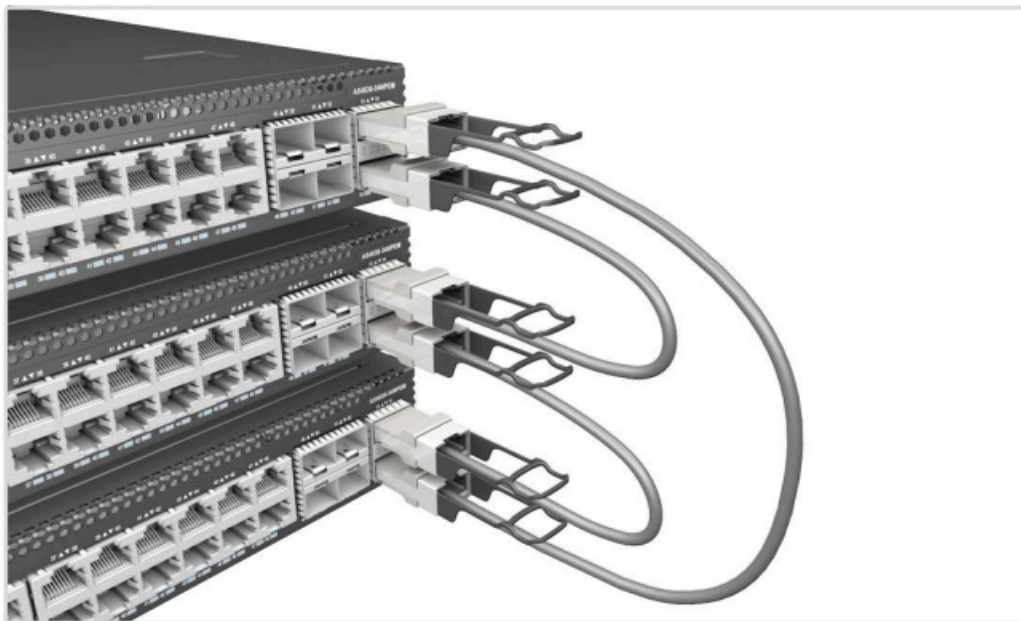

### 1. Connect the top device

Plug one end of a DAC cable in the bottom QSFP28 port of the top unit.

### 2. Connect the next device

Plug the other end of the DAC cable into the top QSFP28 port of the next unit.

### 3. Repeat

Repeat for each unit in the stack.

### 4. (Optional) Connect the top and bottom devices

Plug one end of a DAC cable into the bottom QSFP28 port on the bottom unit and the other end into the top



QSFP28 port on the top unit.

## 5. Reboot

Reboot each switch in the stack to start the stack operations.

**Note:** Stacking support is dependent on the switch software. For stacking support information, refer to the NOS software documentation.

## Hardware Specifications


Switch Chassis	
Size (WxDxH)	438 x 474 x 44 mm (17.24 x 18.66 x 1.73 in)
Weight	8.5 kg (18.74 lb), with two installed PSUs
Temperature	Operating: 0° C to 45° C (32° F to 113° F) Storage: -40° C to 70° C (-40° F to 158° F)
Humidity	Operating: 5% to 90% (non-condensing)
1 x 920 W Power Supply	
AC Input	100–120 Vac, 50-60 Hz, 12 A (Not for China) 200–240 Vac, 50-60 Hz, 6 A
Power Consumption	920 W max.
PoE Power Budget	620 W
2 x 920 W Power Supplies	
AC Input	100–120 Vac, 50-60 Hz, 12 A (Not for China) 200–240 Vac, 50-60 Hz, 6 A
Power Consumption	1840 W max.
PoE Power Budget	1540 W
1 x 1200 W Power Supply	
AC Input	100–120 Vac, 50-60 Hz, 12 A (Not for China) 200–240 Vac, 50-60 Hz, 8 A
Power Consumption	1000 W max. (100–120 Vac PSU) 1200 W max. (200–240 Vac PSU)
PoE Power Budget	700 W (100–120 Vac PSU) 900 W (200–240 Vac PSU)
2 x 1200 W Power Supplies	
AC Input	100–120 Vac, 50-60 Hz, 12 A (Not for China) 200–240 Vac, 50-60 Hz, 8 A
Power Consumption	2000 W max. (100–120 Vac PSUs) 2400 W max. (200–240 Vac PSUs)
PoE Power Budget	1700 W (100–120 Vac PSUs) 2100 W (200–240 Vac PSUs)
Regulatory Compliances	
Emissions	EN 55032 Class A EN 61000-3-2: Class A EN 61000-3-3 FCC Class A VCCI Class A BSMI CNS 15936
Immunity	IEC 61000-4-2/3/4/5/6/8/11 EN 55032
Safety	UL (UL 62368-1 & CSA C22.2 No. 62368-1) CB (IEC/EN 62368-1) BSMI CNS 15598-1
Taiwan RoHS	CNS 15663




## FAQ

- **Q: Where can I find compatible switch software?**
  - A: Information about compatible switch software can be found at [www.edge-core.com](http://www.edge-core.com).
- **Q: How do I know if the switch is operating normally?**
  - A: Check that the PSU LEDs are green and refer to the LED indicators for different ports and components as outlined in the manual.

## Documents / Resources

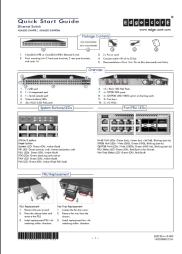	<p><a href="#">Edgecore Networks AS4630-54NPE Ethernet Switch</a> [pdf] User Guide AS4630-54NPE, AS4630-54NPEM, AS4630-54NPE Ethernet Switch, AS4630-54NPE, Ethernet Switch, Switch</p>
---	---

## References

-  [Edgecore Networks – Edgecore Networks, a leading provider of traditional and open network solutions, delivers wired and wireless networking products and solutions through channel partners and system integrators worldwide for data center, service provider,](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.