

Eltako ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP



Eltako ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP User Guide

[Home](#) » [Eltako](#) » Eltako ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP User Guide 

Contents

- [1 Eltako ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP](#)
- [2 Controls](#)
- [3 Technical data](#)
- [4 Typical connection](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Eltako ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP



Only skilled electricians may install this electrical equipment otherwise there is a risk of fire or electric shock!

- Temperature at mounting location: -20°C up to +50°C.
- Storage temperature: -25°C up to +70°C.
- Relative humidity: annual average value <75%.

ZGW16WL-IP

- Modular device for DIN-EN 60715 TH35 rail mounting.
- 2 modules = 36 mm wide, 58 mm deep.
- IP interface either via WLAN or LAN.
- The WLAN connection uses the 2.4 GHz frequency band.
- The LAN connection is via RJ45 connector with 10/100Base-T
- Only 0.9-watt standby loss.

ZGW16NI-IP

- Modular device for DIN-EN 60715 TH35 rail mounting.
- 2 modules = 36 mm wide, 58 mm deep.
- IP-Schnittstelle über WLAN.
- Die WLAN-Verbindung nutzt das 2.4 GHz Frequenzband. Only 0.8 watt standby loss.

- ZGW16WL-IP and ZGW16NI-IP hereinafter called 'ZGW16-IP'.
- Gateway with IP interface for ELTAKO Modbus electricity meters.
- The IP connection is via LAN or WLAN. The gateway transmits data from any ELTAKO Modbus electricity meter via the MQTT protocol and REST API.
- The data is transferred from the ZGW16-IP to any external MQTT broker.
- For more details about MQTT see www.mqtt.org.
- The current meter values and history can be viewed via the ELTAKO Connect app and web interface.
- Initial commissioning and configuration are possible via the ELTAKO Connect app and web interface.
- Firmware updates are done via the web interface. A REST API is available via the device's online product page.

Controls

The ZGW16-IP has a rotary switch with positions 1-10 and an integrated LED (green/red). When delivered, the LED flashes green, although the rotary switch must not be in position 1 or 10. Once the initial commissioning is complete, the LED goes out.

Factory reset

If the rotary switch is set to position 1 or 10, the LED lights up green continuously. If the rotary switch is turned back and forth from position 1 5 times within 10 seconds, the ZGW16-IP is reset to factory settings and the delivery status is restored.

Error indication

If data transfer to the MQTT broker is not possible (e.g. MQTT not configured or data connection interrupted), the LED lights up permanently red. The next time data is transferred successfully, the LED goes out.

Initial commissioning via the ELTAKO Connect app

- After the power supply to the ZGW16-IP has been established, a WLAN access point is provided.
- SSID: Eltako-ZGW16-IP
- Password: zgw16-ip

After connecting to the WLAN access point, the ELTAKO Connect app can be started. The ZGW16-IP is automatically searched for and displayed in the ELTAKO Connect app. When delivered, an access password must first be assigned. The current meter values and history can now be accessed under the menu item 'meters'. You can find an explanation of the other configuration options later in the operating instructions. Initial commissioning and device configuration via web interface

Via WLAN: After the power supply to the ZGW16-IP has been established, a WLAN access point is provided.

- SSID: Eltako-ZGW16-IP
- Password: zgw16-ip

The IP address of the device is 192.168.4.1 (WLAN) or 192.168.5.1 (LAN) Via LAN (ZGW16WL-IP only): when delivered, the LAN port has the IP address 192.168.5.1 To do this, enter <http://192.168.5.1> (LAN) or <http://192.168.4.1> (WLAN) in the address. In the delivery state, an access password must be assigned first.

Welcome to FGW14-IP

Please set a new password.

Password

Confirm Password

Set Password

- Connection to the WLAN access point
- SSID: Eltako-ZGW16-IP
- Password: zgw16-ip



After logging in, further configuration can be performed using the menus:

- system
- network
- MQTT
- devices
- Modbus


If there is no access to the website for 4 hours, the user is automatically logged out.

System

Here the ZGW16-IP can be assigned a suitable name with up to 16 characters. It is also possible to carry out a FW update, change the access password and reset the device to the delivery status.

Device-Settings

Device-Name
ZGW16NI-IP

 Save

Type
ZGW16NI-IP

Serial number
5C54F8C2-D361-4015-9752-4BA4C88A8F44

Version
0.0.0

The system time can be set via NTP (only with an existing Internet connection) or manually.


Time-Settings

Date/Time
24.04.2024 21:37

Retrieve time from NTP-Server ☒ (NTP active)

pool.ntp.org

*If the time is obtained from an NTP server, the changes will only become active after a short time.
A reload of the page is then necessary to make the changes visible.*

 Save

network

The LAN configuration is only possible with the model ZGW16WL-IP. If WLAN is to be used, a connection to an existing WLAN (Station-Mode) can be configured. This deactivates the access point of the ZGW16.

Interface **LAN**Disable LAN interface ☐

Ensure that not all interfaces are disabled.
The last activated interface has priority.

DHCP

active ☐

IP-Address

192.168.5.1

Subnet-Mask

255.255.255.0

Standard-Gateway

192.168.5.254

DNS-Server

192.168.5.254

Alternative DNS-Server

192.168.5.254

 SaveInterface **WLAN**Disable WiFi interface ☐

Ensure that not all interfaces are disabled.
The last activated interface has priority.

SSID

Home



Password

DHCP

active ☒

IP-Address

192.168.178.188

Subnet-Mask

255.255.255.0

Standard-Gateway

192.168.178.1

DNS-Server

192.168.178.1

Alternative DNS-Server

0.0.0.0

 Save

MQTT

Under 'MQTT', a specific MQTT broker can be defined as the target address for the electricity meter data. [mqtt://](#) or [mqtts://](#) can be used. The port can be freely selected in the range 1 – 65535. If provided by the broker, a certificate can optionally be stored. The name for the MQTT topic (Default ZGW16-IP) can also be adjusted.

MQTT-Broker-Settings

Broker URI

mqtt://

my-mqtt-broker

MQTT connection established

Port

1883

Client-ID

32028FDE-2988-44B2-9FCC-394892F38BA3

User

Password

Certificate

unconfigured

Topic

ZGW16-IP


Save

The maximum data rate depends on the network quality and the response time of the broker.

Devices

Under 'Devices' the detected ELTAKO Modbus electricity meter is displayed on the RS485 bus with the bus address and the meter type.


Devices				
Bus-Address	Forward to MQTT	Name	Device Type	
1		Solar-System		DSZ1502MOD

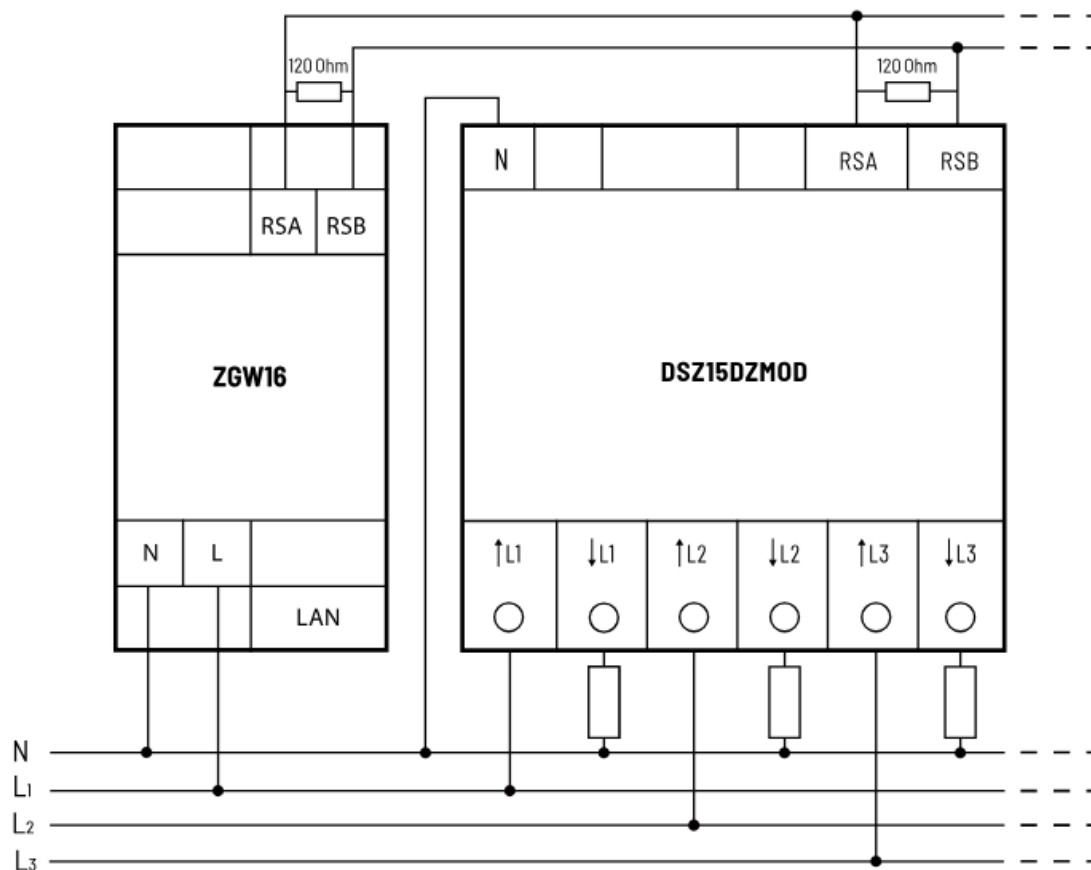

Manuals and documents in further languages



https://eltako.com/redirect/FGW14WL-IP_FGW14W-IP

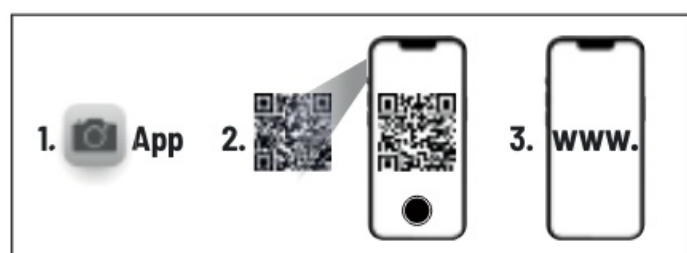

Hereby, ELTAKO GmbH declares that the radio equipment type ZGW16WL-IP / ZGW16NI-IP complies with Directive 2014/53/EU. The full text of the EU Declaration of Conformity can be accessed via the QR code or the internet address under 'Documents'.

Must be kept for later use!
We recommend the housing for operating instructions GBA14.
Eltako GmbH
D-70736 Fellbach


Technical Support English

+49 711 94350025


technical-support@eltako.de

eltako.com 15/2024 Subject to change without notice

Documents / Resources

	<p>Eltako ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP [pdf] User Guide ZGW16WL-IP, ZGW16WL-IP Modbus Meter MQ TT Gateway Over IP, Modbus Meter MQ TT Gateway Over IP, Meter MQ TT Gateway Over IP, Gateway Over IP, Over IP</p>
---	---

References

-  [MQTT - The Standard for IoT Messaging](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.