ELTEC Capsule Sensor V3



P

ELTEC Capsule Sensor V3 User Manual

Home » ELTEC » ELTEC Capsule Sensor V3 User Manual

Contents

- 1 ELTEC Capsule Sensor V3
- **2 Product Specifications**
- **3 Product Usage Instructions**
- **4 Frequently Asked**
- Questions
- **5 Copyright Notice**
- 6 Disclaimer
- 7 Description
- 8 Specifications
- **9 Physical Dimensions**
- 10 Resource
- 11 FCC Warning
- 12 Documents / Resources
 - 12.1 References
- **13 Related Posts**



ELTEC Capsule Sensor V3



Product Specifications

• Product Name: Capsule Sensor V3

• Type: Tiny fun IoT Device

• Manufacturer: Chengdu Heltec Automation Technology Co., Ltd.

• Website: https://heltec.org

• Device Dimensions: Small, portable design

• Technology: LoRa/LoRaWAN, ESP32-S3, SX1262

• Battery: 250mA rechargeable battery

· Features: Waterproof, WirelessBoot technology

Product Usage Instructions

Overview:

The Capsule Sensor V3 is a tiny portable LoRa/LoRaWAN device that is based on ESP32-S3 and SX1262. Its modular design allows it to adapt to different sensors, enabling users to easily build applications without requiring expertise in IoT.

Features

- Small and stylish design
- Waterproof
- 250mA rechargeable battery
- Suitable for complex environments
- Compatible with open-source programs like Meshtastic

Product Variants:

The Capsule Sensor V3 is available in two product variants:

No.	Model	Description
1	Capsule Sensor – 433	For 433MHz LoRa frequency
2	Capsule Sensor – 470to510	For 470~510MHz working LoRa frequency, used for China mainland (CN470) LPW band. For EU868, IN865 and other LPW networks.

Frequently Asked Questions

Q: Can the Capsule Sensor V3 be used with third-party sensors?

A: Yes, the modular design of the Capsule Sensor V3 allows it to adapt to different sensors, making it compatible with third-party sensors.

Q: Is the Capsule Sensor V3 suitable for outdoor use?

A: Yes, the Capsule Sensor V3 is waterproof and has a rechargeable battery, making it suitable for outdoor use in various environments.

Q: How can I charge the battery of the Capsule Sensor V3?

A: To charge the battery of the Capsule Sensor V3, connect it to a power source using the provided charging cable.

Document version

Version	Time	Description	Remark
V1.0	2024-01-16	Documents creating	Richard

Copyright Notice

All contents in the files are protected by copyright law, and all copyrights are reserved by Chengdu Heltec Automation Technology Co., Ltd. (hereinafter referred to as Heltec). Without written permission, all commercial use of the files from Heltec are forbidden, such as copy, distributing, reproducing the files, etc., but for non-commercial purposes, downloaded or printed by individuals are welcome.

Disclaimer

Chengdu Heltec Automation Technology Co., Ltd. reserves the right to change, modify or improve the document and product described herein. Its contents are subject to change without notice. These instructions are intended for you use.

Description

Overview

• Capsule Sensor V3 is a tiny portable LoRa/LoRaWAN device based on ESP32-S3 and SX1262. Modular

design allows it to adapt to different sensors, so you can easily build applications without being an expert in IoT.

- Thanks to WirelessBoot1 technology, Capsule Sensor V3 is small, stylish, waterproof, and has a 250mA rechargeable battery, making it perfect for complex environments.
- Whether you want to build your applications or run open-source programs like
- Meshtastic2, Capsule Sensor V3 is a great choice.
- Capsule Sensor are available in two product variants:

Table 1.1: Product model list

No.	Model	Description	
1	Capsule Sensor – 433	For 433MHz LoRa frequency	
		For 470~510MHz working LoRa frequency, used for	
2	Capsule Sensor – 470to510	China mainland (CN470) LPW band.	
		For EU868, IN865 and other LPW networks with	
3	Capsule Sensor – 863to870	operating frequencies between 863~870MHz.	
		For US915, AU915, AS923, KR920 and other LPW	
4	Capsule Sensor – 902to928	networks with operating frequencies between 902~92 8MHz	

Product features

- ESP32-S3 + SX1262.
- Wireless communication method include Wi-Fi, Bluetooth and LoRa.
- Modular design, with a BTB interface reserved at the bottom, capable of connecting and replacing different sensors.
- Built in 250mAh rechargeable battery, magnetic suction charging port.
- Built in LoRa and Wi-Fi/BLE antennas, stylish appearance, compact and light.
- High strength plastic, IP65 waterproof.
- Support Heltec Wireless Boot system, download firmware, exchange information, and print logs through Wi-Fi.
- · Meshtastic compatible.
- Secondary development can be done through Arduino, Platform.io, etc.

Application scenarios

CapSule's application is mainly realized by replacing the sensor module, and here are just some typical application scenarios.

- · Environmental monitoring;
- · Data converter;
- · Asset/pet/person tracking;
- Children education;

- Meshtastic;
- As a common Arduino development board.

Specifications

General specifications

Parameters	Description
MCU	ESP32-S3FN8
LoRa Chip	SX-1262
Memory	384KB ROM; 512KB SRAM; 16KB RTC SRAM; 8MB SiP
Frequency	433MHz, 470~510MHz, 863~870MHz, 902~928MHz
Max TX Power	21 ± 1dBm
Receiving sensitivity	-135dBm
Wi-Fi	802.11 b/g/n
Bluetooth	Bluetooth LE: Bluetooth 5, Bluetooth mesh
Charging	5V, Magnetic 2P-2.54mm
Battery	250mAh
Protection grade	IP65
Operating temperature	-20 ~ 60°C
Dimensions	47mm * 26mmφ

Flash Partitions

Name	Туре	SubType	Offset	Size
nvs	data	nvs	0x009000	0x005000
otadata	data	ota	0x00e000	0x002000

арр	арр	ota_0	0x010000	0x250000
flash app	арр	ota_1	0x260000	0x0A0000
spiffs	data	spiffs	0x300000	0x100000
factory	арр	factory	0x400000	0x100000
second app	арр	ota_2	0x500000	0x2D0000

Electrical Characteristics

Parameter		Typical	Unit
	Charging	5	V
Power Supply	Battery	3.0~4.1	V
	LoRa Sending	230	mA
	LoRa Receiving	90	mA
Consumption	Sleep	25	uA

LoRa RF Characteristics

Transmit Power

Operating frequency band	Maximum power value/[dBm]
470~510	21 ± 1
867~870	21 ± 1
902~928	21 ± 1

Receiving Sensitivity

The following table gives typically sensitivity level of the Capsule Sensor.


Signal Bandwidth/[KHz]	Spreading Factor	Sensitivity/[dBm]
125	SF12	-135
125	SF10	-130
125	SF7	-124

Operation Frequencies

Capsule supports LoRaWAN frequency channels and models corresponding table.

Region	Frequency (MHz)	
EU433	433.175~434.665	
CN470	470~510	
IN868	865~867	
EU868	863~870	
US915	902~928	
AU915	915~928	
KR920	920~923	
AS923	920~925	

Physical Dimensions

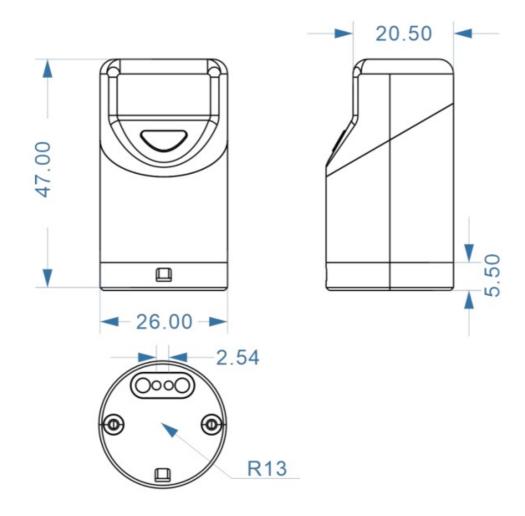

Resource

Relevant Resource

- Heltec ESP32 framework (Already included Heltec ESP32 LoRaWAN library)
- Heltec LoRaWAN test server based on TTS V3
- User Manual Document
- Wireless Boot instructions

Contact Information

Heltec Automation Technology Co., Ltd Chengdu, Sichuan, China

Email: support@heltec.cn
Phone: +86-028-62374838

https://heltec.org

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmfulinterference e to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 0cm between the radiator and your body.

Documents / Resources



ELTEC Capsule Sensor V3 [pdf] User Manual
HRI-3641, 2A2GJ-HRI-3641, 2A2GJHRI3641, Capsule Sensor V3, Capsule Sensor, Sensor

References

- Real-Time Bidding Platform | SSP, DSP Solutions Platform.IO
- # Heltec Automation –
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.