



Home » EMS » EMS FCX Series FireCell Combined Sounder Detector Visual Indicator Installation Guide ₹

Contents [hide] 1 EMS FCX Series FireCell Combined Sounder Detector Visual Indicator 2 Combined Sounder/Detector/Visual Indicator 3 1. Pre installation 4 2. Components 5 3. Fix mounting plate 6 4. Power device 7 5. Device locking 8 6. Important 9 7. Configuration 10 8. Switches 10.1 Device power/volume/flash only (set on wireless module) 10.2 Sounder tone (set on wireless module) 11 Specification 12 Regulatory information 13 Specifications: 14 QUICK Usage Instructions: 14.1 1. Pre-Installation: 14.2 2. Components: 14.3 3. Fix Mounting Plate: 14.4 4. Power Device: 14.5 5. Device Locking: 14.6 6. Important! 14.7 7. Configuration: 14.8 8. Switches: 15 Frequently Asked Questions (FAQ): 15.1 Q: Can I use rechargeable batteries with this device? 15.2 Q: How do I change the sounder tone? 16 Documents / Resources 16.1 References 17 Related Posts


EMS FCX Series FireCell Combined Sounder Detector Visual Indicator



INSTALLATION GUIDE

Combined Sounder/Detector/Visual Indicator

Example shown:

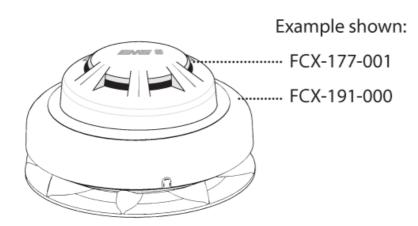

Part no	Description
FCX-174-001	Multisensor Smoke Detector Only
FCX-175-001	Heat A1R Detector Only
FCX-176-001	Heat CS Detector Only
FCX-177-001	Optical Smoke Detector Only

FCX-191-000	Sounder/Detector Base Only
FCX-191-200	Sounder/Detector/Red Visual Indicator Base Only


See the Specification section for compliance information.

1. Pre installation

Installation must conform to applicable local installation codes and should only be installed by a fully trained competent person.

- Ensure that the device is installed as per the site survey.
- The use of a non-metallic spacer should be considered if mounting the device on to a metal surface.
- Do NOT press the log on button on a pre-programmed device, as this will cause communication with the control panel to be lost. Should this happen, delete the device from the system and add it back on.
- This device contains electronics that may be susceptible to damage from Electrostatic Discharge (ESD). Take appropriate precautions when handling electronic boards.
- For pre-2024 versions of this device with a 4-way power/sounder configuration switch,
 refer to the legacy version of this manual.

2. Components

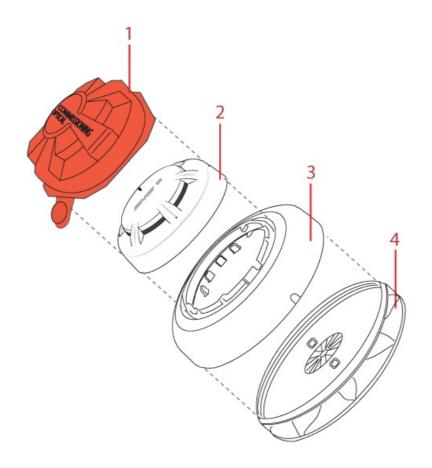


- 1. Dust cover,
- 2. Detector,
- 3. Wireless module,
- 4. Mounting plate


3. Fix mounting plate

Remove the mounting plate by turning the device ANTICLOCKWISE, to release it from the mounting plate.

- Use both fixing positions to ensure a firm fixing.
- Use suitable fasteners and fixings

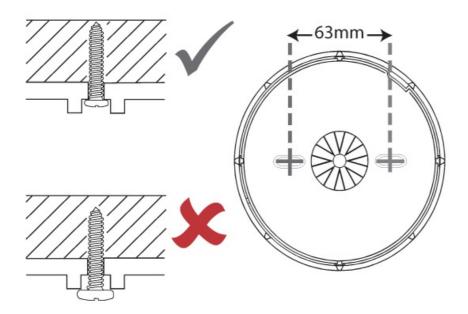


4. Power device

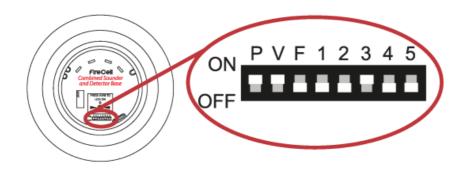

- When fitting / replacing batteries; observe correct polarity, using only specified batteries.
- Set the P (POWER) switch to the ON position to power the device. See the 'Switches' section for other available switch settings.
- Once powered, reassemble the device.

5. Device locking

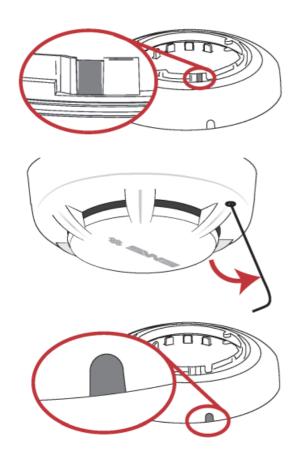

- To lock the detector into the wireless module, remove the cut out (shaded) section as shown.
- To unlock the detector, insert a 1.5 mm allen key and lever the allen key towards the outside of the device and turn the detector anticlockwise to release.
- The wireless module can also be locked into the mounting plate by removing the shaded section shown and fitting a 5/16 Phillips pan head screw.


6. Important

- Remove dust cover before use.
- The device should be tested upon installation and in accordance with local requirements.
- Testing should only be carried out by a fully trained competent person.
- The manufacturer recommends regular functional testing of at least once per annum or in accordance with local codes of practice.
- Cleaning and repairs must be undertaken by the manufacturers authorised representative.
- Do not open the case to clean inside the detector.
- When activated, the device will sound for a maximum of 30 minutes before switching

off to conserve battery life.

7. Configuration

This device is intended to form part of a wireless fire alarm system. The device's loop address is configured within the user interface's menu structure.

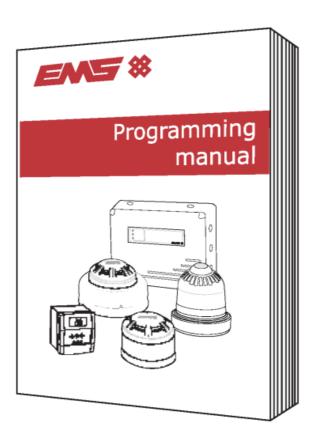

Refer to the programming manual for full programming details.

FireCell = MK98

Fusion = TSD062

WZM = TSD143

Free to download from www.emsgroup.co.uk

8. Switches

Device power/volume/flash only (set on wireless module)



The PVF switches control the device's power supply, adjust the sounder volume and, if necessary, initiate flash only mode (sounder off).


SWITCHES	POWER (P)	VOLUME (V)	FLASH ONLY (F)	
ON OFF	O FF	■ (+ HIGH	≟ ■)	
ON OFF	ON O	■ (+ HIGH	*	
ON OFF	ON O	■■ LOW	≟ ■)	
ON OFF	ON O	■■ LOW	- <u>`</u> ■ X *	
ON OFF	ON O	■ (+ HIGH	- <u>``</u> • ■ X *	

- = Default setting.
- * Flash only mode is applicable to the FCX-191-200 model only. If selected, this is not within the scope of EN54-3.

Sounder tone (set on wireless module)

Switches 1 to 5 select the sounder tone.

= Default setting.

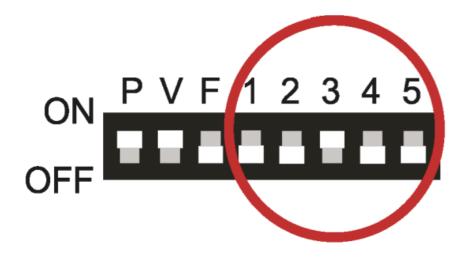

Note: Tones 1, 2, 3, 5, 6, 7, 10, 13, 21 are EN54-3 approved tones. Secondary tones and low volume settings are not approved.

SWITCHES	PRIMARY TONE	TONE TYPE	TONE DESCRIPTION / APPLICATION	SECONDARY TONE
1 2 3 4 5 ON OFF	1		970Hz	18
ON OFF	2		800Hz/970Hz at 2Hz	1
ON OFF	3	1111	800Hz - 970Hz at 1Hz	1
ON OFF	4		970Hz 1s OFF / 1s ON	1
ON OFF	5		970Hz, 0.5s / 630Hz, 0.5s	4
ON OFF	6		554Hz, 0.1s / 440Hz, 0.4s (AFNOR NF S 32 001)	1
ON OFF	7	111	500 - 1200Hz, 3.5s / 0.5s OFF (NEN 2575:2000)	1
ON OFF	8		420Hz 0.625s ON / 0.625s OFF (Australia AS1670 Alert tone)	9
ON OFF	9	111	500 - 1200Hz, 0.5s / 0.5s OFF x 3 / 1.5s OFF (AS1670 Evacuation)	1
ON OFF	10		550Hz / 440Hz at 0.5Hz	19
ON OFF	11		970Hz, 0.5 ON / 0.5s OFF x 3 / 1.5s OFF (ISO 8201)	1
ON OFF	12		2850Hz, 0.5s ON / 0.5s OFF x 3 / 1.5s OFF (ISO 8201)	1
ON OFF	13	7	1200Hz - 500Hz at 1Hz (DIN 33 404)	1
ON OFF	14		400Hz	18
ON OFF	15		550Hz, 0.7s / 1000Hz, 0.33s	1
ON OFF	16	1111	1500Hz - 2700Hz at 3Hz	1
ON OFF	17		750Hz	1
ON OFF	18		2400Hz	1
ON OFF	19		660Hz	18
ON OFF	20		660Hz 1.8s ON / 1.8s OFF	19
ON OFF	21		660Hz 0.15s ON / 0.15s OFF	19
ON OFF	22		510Hz, 0.25s / 610Hz, 0.25s	1
ON OFF	23		800 / 100Hz 0.5s each (1Hz)	1
ON OFF	24	111	250Hz - 1200Hz at 12Hz	1
ON OFF	25	\\	500Hz - 1200Hz at 0.33Hz	1
ON OFF	26	<i>M</i>	2400Hz - 2900Hz at 9Hz	18
ON OFF	27	N	2400Hz - 2900Hz at 3Hz	18
ON OFF	28	<i>M</i>	800Hz - 970Hz at 100Hz	8
ON OFF	29	1111	800Hz - 970Hz at 9Hz	1
ON OFF	30	<i>M</i>	800Hz - 970Hz at 3Hz	1
ON OFF	31		800Hz, 0.25s ON / 1s OFF	1
ON OFF	32	111	500Hz - 1200Hz, 3.75s / 0.25s OFF (AS2220)	8

Specification

Operating temperature -10 to +55 °C Storage temperature 5 to 30 °C

Humidity 0 to 95% non-condensing

3 x AA alkaline (Panasonic LR6AD Powerline / Varta 4006 Industrial) & 3 x C alkaline (Panasonic LR14AD Powerline / Varta 4014 Industrial) Supply

CAUTION!

Fitting of an incorrect battery type invalidates the product certification and may result in poor performance.

IP rating IP21

Operating voltage 3.3 to 4.5 VDC

Current consumption 120 µA

Up to 5 years (based on weekly 30 second test) **Battery life**

Operating frequency 868 MHz

Output transmitter power Auto adjusting 0 to 14 dBm (0 to 25 mW)

Signalling protocol Χ

Sounder output Up to 99.5 dB(A) at 1 m (as dispatched). Low setting typically reduces volume by 10 dB.

Refer to the sounder data document (MK187) for full details. Free to download from www.emsgroup.co.uk

Dimensions (Ø x D)

146 x 53 mm (without detector) | 146 x 89 mm (with smoke detector) | 146 x 94 mm (with heat detector) | 146 x 100 mm (with multisensor detector)

Weight 0.70 kg (with detector) Location Type A: For indoor use

Intended use Fire safety for fire detection and fire alarm systems with components using RF links.

Regulatory information

Manufacturing location Carrier Manufacturing Poland Sp. z o.o. Ul. Kolejowa 24. 39-100 Ropczyce, Poland

Placed on the market by EMS Ltd. Technology House, Sea Street, Herne Bay, Kent, CT6 8JZ

Year of manufacture See devices serial number label

Certification

0905 [1] 0905 [2][3] 2821 [4] 0359[1][2][3] 0843 [4]

CPR DoP

See part listing for associated products: [1]0905-CPR-202126, [2]0359-CPR-0015, [3]0359-CPR-0017 & [4]DoP0012

Approved to See part listing for associated products:

EN54-5:2017+A1:2018. Incorporating Amendment No. 1. Fire detection and fire alarm systems. Part 5: Heat detectors - Point Detectors. [2]

EN54-7:2018. Incorporating Amendment No. 1. Fire detection and fire alarm systems. Part 7: Smoke detectors - Point detectors using scattered light, transmitted light or ionization. [1][3]

EN54-25:2008. Incorporating corrigenda September 2010 and March 2012. Fire detection and fire alarm systems. Part 25: Components using radio links. [4]

European Union Directives EMS declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.emsgroup.co.uk

2012/19/EU (WEEE directive). For more information see www.recyclethis.info Dispose of your batteries in an environmentally friendly manner according to your local

regulations.

Additional approvals





ULeu Certified to EN 54-3:2014+A1:2019. This is an accredited certification scheme run by UL Solutions and is in addition to EU regulatory requirements [4]

BOSEC Certification to EN 54-13:2017 system Certification. This component is approved by ANPi for the BOSEC mark when used with FireCell Fusion, HUB and RCC combinations.

Specifications:

Operating temperature: 0°C to 50°C

• Storage temperature: -20°C to 60°C

Humidity: 0 to 95% non-condensing

Power Supply: 3 x AA alkaline batteries (Panasonic LR6AD

Powerline / Varta 4006 Industrial)

QUICK Usage Instructions:

1. Pre-Installation:

Ensure that the installation complies with local installation codes and is carried out by a trained individual.

2. Components:

The package includes a dust cover, detector, wireless module, and mounting plate.

3. Fix Mounting Plate:

To fix the mounting plate, turn the device ANTICLOCKWISE to release it from the mounting plate.

4. Power Device:

Insert 3 x AA alkaline batteries into the designated compartment to power the device.

5. Device Locking:

Ensure the device is securely locked in place after installation.

6. Important!

This device is part of a wireless fire alarm system and should be configured within the user interface's menu structure.

7. Configuration:

The loop address of the device can be configured using the user interface menu.

8. Switches:

The switches control power/volume/flash settings. Refer to the user manual for detailed switch settings based on the model.

Frequently Asked Questions (FAQ):

Q: Can I use rechargeable batteries with this device?

A: It is recommended to use AA alkaline batteries for optimal performance. Rechargeable batteries may not provide the same level of reliability.

Q: How do I change the sounder tone?

A: The sounder tone can be changed using the switches on the wireless module. Refer to the provided tone chart in the user manual for approved tones and their descriptions.

Documents / Resources



EMS FCX Series FireCell Combined Sounder Detector Visual Indicator [p df] Installation Guide

FCX-174-001, FCX-175-001, FCX-176-001, FCX-177-001, FCX-191-000, FCX-191-200, FCX Series FireCell Combined Sounder Detector Visual Indicator, FireCell Combined Sounder Detector Visual Indicator, Sounder Detector Visual Indicator, Detector Visual Indicator

References

User Manual

Related Posts

firecell FCX-191 Combined Sounder Detector Visual Indicator User Manual



Combined Sounder Detector Visual Indicator Pre-installation Installation must conform to applicable local installation codes and should...







EMS SC-33-0230-0001-99 Information White Sounder and Ceiling Visual Indicator Owner's Manual

EMS SC-33-0230-0001-99 Information White Sounder and Ceiling Visual Indicator Product Usage Instructions

Installation The SmartCell Information Sounder and...





EMS SC-22-0200-0001-99 Dual Smoke Heat Detector and Combined Sounder Owner's Manual

EMS SC-22-0200-0001-99 Dual Smoke Heat Detector and Combined Sounder Specifications Product:

SmartCell Dual Smoke/Heat Detector and Combined Sounder...



EXTECH ET20 Dual Indicator Voltage Detector User

Manual

EXTECH ET20 Dual Indicator Voltage Detector Model ET20 Dual Indicator Voltage Detector 2-Way AC/DC

Voltage Tester (100-250V) OPERATION...

- **■** EMS
- ▶ Detector Visual Indicator, EMS, FCX Series FireCell Combined Sounder Detector Visual Indicator, FCX-174-001, FCX-175-001, FCX-176-001, FCX-177-001, FCX-191-000, FCX-191-200, FireCell Combined Sounder Detector Visual Indicator, Visual Indicator

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.