





Enaex 2AUQC-EDGEBM High Quality IP Input Edge QAM Modulator User Manual

Home » Enaex » Enaex 2AUQC-EDGEBM High Quality IP Input Edge QAM Modulator User Manual



Contents

- 1 Enaex 2AUQC-EDGEBM High Quality IP Input Edge QAM **Modulator**
- 2 System Safety
- 3 Blasting Machine
- 4 Regulations
- 5 Documents / Resources
 - **5.1 References**
- **6 Related Posts**



Enaex 2AUQC-EDGEBM High Quality IP Input Edge QAM Modulator



System Safety

Radio interferences

The functionality of DEDDs is not affected by electric fields with an intensity of up to 30 Volts per meter. Fields at this level are rarely encountered, as they are considerably higher than the fields emitted by standard transmission devices (telephones, cellular phones, CB, radio, etc.), or even by HV power lines. Higher intensity electromagnetic fields may affect communication between detonators and the PUs, Blasting Machine or DBD, and may even damage the electronic circuit, but in no way can electromagnetic fields initiate the detonators.

• Electrostatic discharge

DEDDs can resist a potential of 30 kV / 3500 pF pin to pin and pin to case charge. A discharge of this strength may destroy the electronic circuit, but it will not initiate the detonators. Discharges of this type are very unlikely in the conditions in which the detonators are used.

Lightning

Even though the DEDDs has high resistance to initiation from extraneous currents, all types of explosives and detonators are susceptible to detonate when hit by lightning. Follow all applicable regional and mine specific laws and regulations regarding the approach and progress of electrical storms.

WARNING: As a precaution, it is recommended that all loading operations should be suspended if a thunderstorm is approaching, in accordance with local laws, regulations, acts.

Misfires

The DEDDs normally discharges its firing energy in less than one second. However, in the event of any malfunction in the circuit, a safety circuit discharges the energy in 5 minutes. This means that the maximum time after which the energy will be completely discharged is 5 minutes.

WARNING: If a misfire is suspected, it should be handled always adhering and following all applicable local laws, regulations, acts and procedures.

Impact

The DEDD has the same impact resistance as conventional detonators, both electric and non-electric. The same precautions must be taken when handling DEDDs.

§ 4.5.4.4.5 ; § 4.5.4.4.3

General precautions

WARNING:

- Always use approved devices and hardware when using DEDDs.
- Never connect DEDDs to any energy supply other than the Blasting Machine, DBD or PU. Batteries and 110/220V circuits are strictly forbidden.
- Never connect conventional electric detonators and DEDDs to the same circuit.
- Never connect electronic detonators from different manufacturers to the Blasting Machine, DBD or PU.
- Never use the DaveyTronic® Edge system unless you have been properly trained, certificated and approved for its use as per the required regional laws and regulations.

Equipment

Temperature range

	Operating T°	Storage T°	Charge T°
Blasting Machine	-20°C / +50°C	-20°C / +70°C	0°C / 50°C
DBD	-20°C / +60°C	-20°C / +70°C	0°C / 45°C
Programming Unit	-20°C / +60°C	-20°C / +70°C	
Module	-20°C / +60°C	-20°C / +60°C	

Note: the operating and storage temperatures for the module are limited to 5 hours at -40°C.

Electronic label

The electronic version of the label is accessible without any codes other than those related to normal protection to unlock the screen, login, or the overall access to the product. This label can only be edited by the product administrator. Of course, a matching physical version of the label is always available on the units as well.

ΡU

To access the electronic label:

1. Press X on the PU to access the menu.




2. Use the Up A and Down Down buttons to navigate the menu and reach Certificates.



3. Use the **and Down** Up and Down buttons to read all the electronic Label.



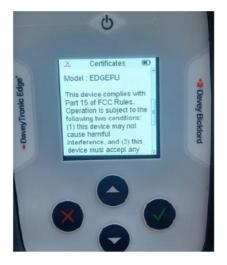




Blasting Machine

To access the electronic label:

1. Go to Settings =



2. Tap Certificates

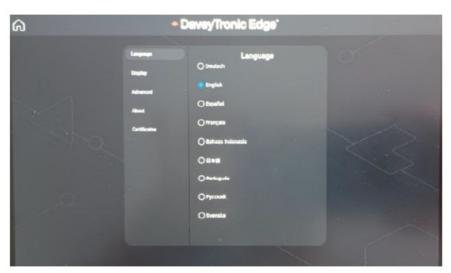

3. The electronic Label.



Battery management

Only use the appropriate charger to charge the batteries of the equipment (Blasting Machine, DBD and PU). Recharge all equipment at least once a month. The user must not remove the batteries.

When the equipment is under charge, the mains plug of the device acts as a circuit breaker and must therefore remain easily accessible.

Blasting Machine

Battery information

• Type: Lithium-ion rechargeable battery pack – Cell: 2S2P / 7.40v / 4200mAh (32 Wh)

• Reference: BP2S2P2100S


• Manufacturer: GETAC Technology (KUNSHAN) CO. LTD

Nominal voltage: 7.40 VoltsNominal capacity: 4200 mAh

• Nominal energy: 32 Wh

Charger information





Reference: FSP065-RBBN3 Manufacturer: FSP



DBD

Battery information

• Type: Lithium-ion rechargeable battery pack – 1 Cell 3.65v 6800 mAh

Reference: MP 176065
Manufacturer: SAFT-SA
Nominal voltage: 3.65 Volts
Nominal capacity: 6800 mAh

• Nominal energy: 24.8 Wh

Charger information

· For indoor use only

• Reference: 60284

• Manufacturer: Mean Well Enterprises Co Ltd

• Input: 100-240 VAC, 50/60 HZ, 1.3 A

• Output: 12 V, 6.67A, 80W max

Edge Module

• a) Battery information

• Type: LR6 Battery pack - 1.5Vdc

• Manufacturer: Akku Tronics New Energy Technology

• Voltage: 1.8 - 3 Volts

· Power: 0.3W

Nominal current: 0.1A

Programming Unit

Battery Information

• Type: Lithium-ion rechargeable battery pack – 3.7v / 2600mAh

• Reference: RS PRO 3.7V Lithium-Ion

Manufacturer: RS PRONominal voltage: 3.7V

· Nominal capacity: 2600 mAh



Charger Information

For indoor use only Type: USB A / USB C 1m

Manufacturer: AnsmannNotes:

- Do not store the battery fully charged at high temperature (over 25/30°C) this will reduce the battery life.
- Ideal storage temperature is between 5 and 15°C.
- Unutilized equipment should not be stored fully charged for more than one month, but between 20 and 60% of charge.
- Avoid charging at high temperature (room temperature over 30/35°C) as this is shortening battery life, and may stop the charge cycle before fully charging, resulting in reduced capacity.
- Charging below 0°C is not possible (the hardware does not allow the charging, but the software will show the

animation)

- Charge should be checked every 6 months, for unutilized equipment.
- Capacity is reduced when operated below 0°C.



WARNING

- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- The level of safety of this equipment is only guaranteed for usage that conforms to the intended use, as described in the manual.
- Equipment must be connected to electrical installations respecting the regulations of the country in which they are used. They must include protections against voltage and current surge, and earth defects.
- Risk of explosion is high if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- Do not install the equipment close to a heat source or close to a humidity source.
- For your own safety, it is imperative that before any maintenance operation, the equipment is switched off.
- Do not replace a battery with an incorrect type which may remove protection (for example, in the case of certain types of lithium battery).
- Do not disposal of a battery in a fire or hot oven, or mechanical crushing or cutting of a battery, which could cause an explosion.
- Do not keep a battery in a very high-temperature environment, which could cause an explosion or leakage of flammable liquid or gas.
- Do not subject a Battery to extremely low air pressure, which could cause an explosion or leakage of flammable liquid or gas.
- Maintenance of the equipment can only be performed by trained and authorized personnel.
 The user of the equipment must not access the inside of the units. Contact your Enaex representative in case of issues or suspected malfunctions.

Regulations

For users in the USA

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference,
- This device must accept any interference received, including interference that may cause undesired operation.

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance

could void the user's authority to operate the equipment.

- Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
- This portable equipment with its antenna complies with FCC's radiation exposure limits set forth for an uncontrolled environment. This equipment has shown compliance with FCC's Specific Absorption Rate SAR) limits. To maintain compliance, follow the instructions below:
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This
 equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your
 body.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For users in the Canada

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- · This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.
- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- To comply with RSS 102 RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all person.

© Davey Bickford 2023

Information contained in this document is the sole property of Davey Bickford Enaex and cannot be reproduced without its written consent. Indications and recommendations described herein are based on current knowledge by the manufacturer. The manufacturer cannot foresee all possible applications for its products. Consequently, the products described in this manual are sold under the sole warranty that they conform with the specifications indicated in this manual.

DAVEYTRONIC® is a registered trademark of Davey Bickford Enaex.

www.daveybickford.com

Mining Quarrying Construction
Seismic Exploration
Customer Support

<u>customersupport@daveybickfordenaex.com</u> T +33 (0)3 86 47 30 00

CONTACT US

https://www.enaex.com/ and click contact us



Enaex 2AUQC-EDGEBM High Quality IP Input Edge QAM Modulator [pdf] User Manual 2AUQC-EDGEPU, 2AUQC-EDGEBM, 2AUQC-EDGEBM High Quality IP Input Edge QAM Modulator, 2AUQC-EDGEBM, High Quality IP Input Edge QAM Modulator, IP Input Edge QAM Modulator, Edge QAM Modulator, QAM Modulator

References

- O ENAEX Líder en servicios de explosivos y voladuras
- O ENAEX Líder en servicios de explosivos y voladuras
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.