



[Home](#) » [ENFORCER](#) » **ENFORCER SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons Instruction Manual** 



Contents [[hide](#)]

- 1 [ENFORCER SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons Instruction Manual](#)
- 2 [Specifications:](#)
- 3 [Parts List:](#)
- 4 [Overview:](#)
- 5 [Installation:](#)
- 6 [Wiring the Manual Override:](#)
- 7 [Configuring the Pushbutton:](#)
- 8 [Sample Installation:](#)
- 9 [Documents / Resources](#)
 - 9.1 [References](#)

ENFORCER SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons Instruction Manual



SD-6176-SSVQ*	Slimline plate, manual override
SD-6276-SSVQ*	Single-gang plate, manual override
SD-6176-SS1Q	Slimline plate, "EXIT/SALIDA"
SD-6276-SS1Q	Single-gang plate, "EXIT/SALIDA"
SD-6176-SSQ*†	Slimline plate, "TOUCH/EXIT"
SD-6276-SSQ*†	Single-gang plate, "TOUCH/EXIT"

† Special order item. Please contact SECO-LARM.

Specifications:

Operating voltage		12~24 VDC
Current drain		40mA@12VDC
Contact rating		2.5A@24 VAC/VDC
Ring LED Colors reversible via switch	Standby	Red
	Active	Green
Output time		1~30 s, Toggle
Destructive attack level		Level I
Line security		Level I
Endurance level		Level I
Standby power		Level I
IP rating		IP65 Weatherproof*
Operating temperature		32°~158° F (0°~70° C)
Plate material		Stainless steel
Weight	Single-Gang	3.5-oz (99g)
	Single-Gang w/Manual Override	4-oz (113g)
	Slimline	2.6-oz (74g)
	Slimline w/Manual Override	3.1-oz (88g)

*When properly installed


†SD-6176-SSVQ and SD-6276-SSVQ only

Parts List:

- 1x Piezoelectric pushbutton
- 2x Mounting screws
- 2x Override wires†
- 1x Manual

Overview:

SD-6176-SSVQ and SD-6276-SSVQ with Manual Override button shown, other models similar.

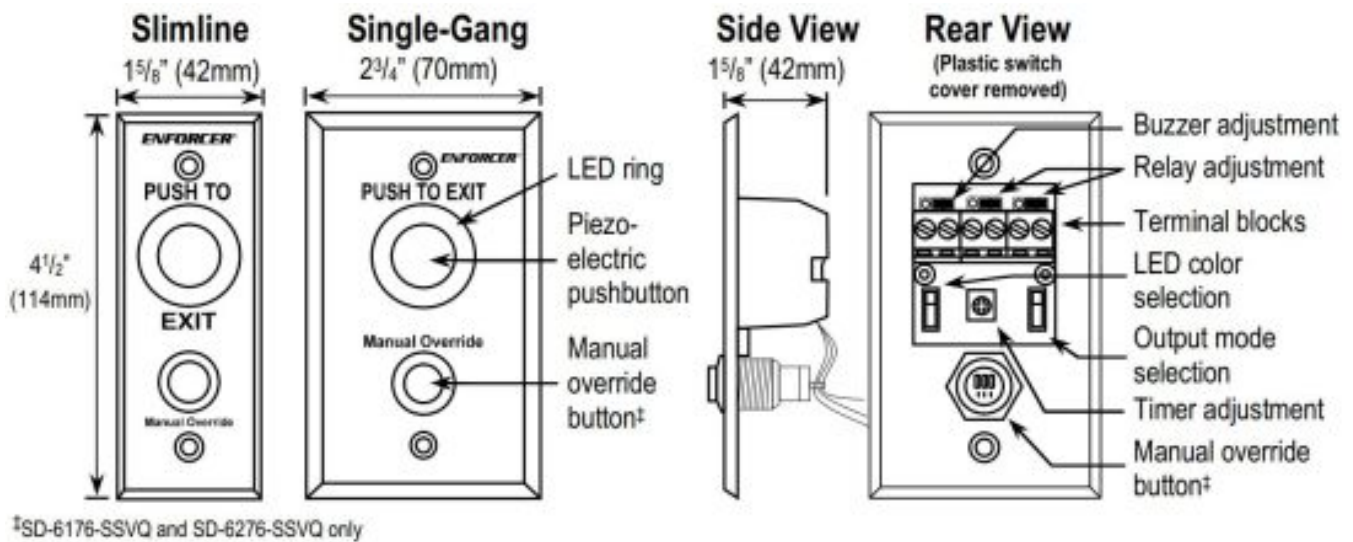


Installation:

1. Prepare wiring to provide 12~24 VDC power and connect devices to the relay outputs. Use only lowvoltage, power-limited/Class 2 power supply and low-voltage field wiring not to exceed 98.5ft (30m).

NOTE: The device includes one relay with two outputs. Outputs trigger simultaneously or independently.

To set the output modes, see “Configuring the Pushbutton: Relay Output Modes” on pg. 3.

2. Remove the plastic cover from the rear of the switch and carefully pierce the rubber grommet.
3. SD-6176-SSVQ and SD-6276-SSVQ: Wire the manual override button. See pg. 3.
4. Wire the switch according to the diagram on the right.
Connect (-) and (+) to a 12~24 VDC power source.
Connect other devices to Outputs 1 or 2.
5. Replace the plastic switch cover.
6. For weatherproof installation, use a waterproof backbox and apply a bead of silicone sealant (not included) around the rim of the backbox and faceplate edge. Apply a small amount of sealant below each screw head.
7. Screw the plate into the back-box, taking care not to crimp the wires and ensuring a good seal.

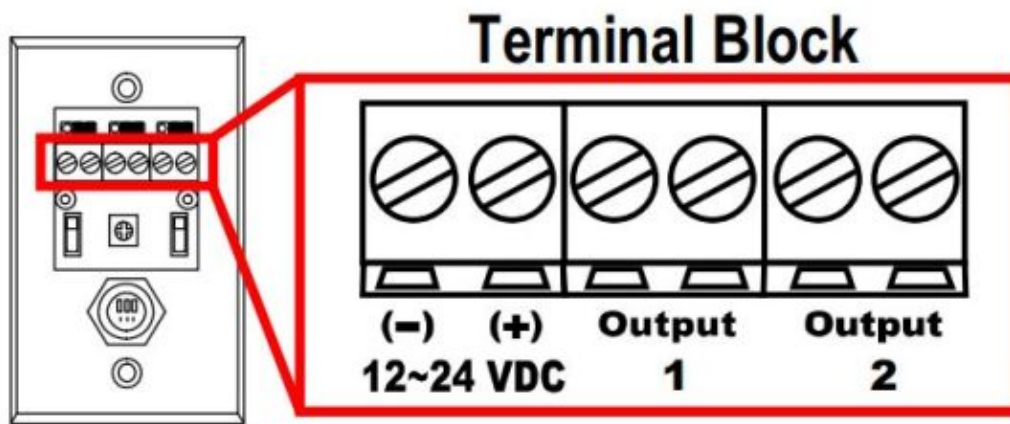


Wiring the Manual Override:

SD-6176-SSVQ and SD-6276-SSVQ Only

Connect the manual override button with the included wires.


Wiring For N.O.:

Connect the two wires between the NO and COM terminals of the override button and the Output 1 or 2 terminals on the switch.

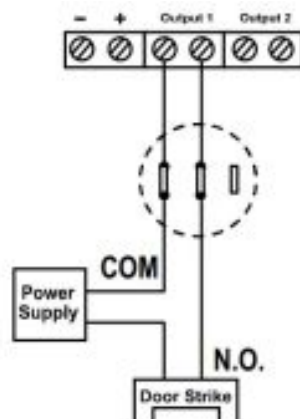

Wiring For N.C.:

Connect the two wires between the NC and COM terminals of the override button and the Output 1 or 2 terminals on the switch.

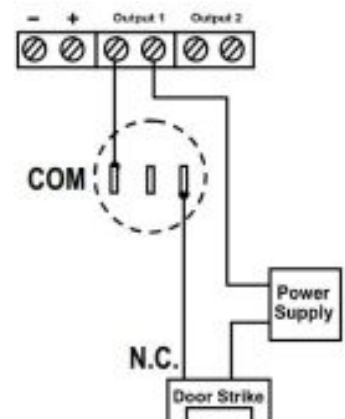

NOTES

- Remove the thin panel on the bottom of the plastic cover to allow wiring to pass through.
- There is only one relay, wiring the button to either output will allow the other output to trigger simultaneously.
- Do not connect the manual override button to more than one output.
- When wiring for either N.O. or N.C., be sure to also set the Relay Output Mode to N.O., as described below. If Relay Output Mode and override button wiring do not match, the product may not function as expected.



Configuring the Pushbutton:

1. Buzzer Output

DEFAULT: ON



Use the buzzer output jumper JP3 to program the buzzer output. Placing the jumper on the left turns the buzzer output ON. Placing the jumper on the right turns the buzzer output OFF.

2. Relay Output Mode

DEFAULT: N.O.



Outputs 1 and 2 can be set independently using jumpers JP1 and JP2. Note: Both outputs trigger simultaneously. Place the jumper on the right for N.O. operation and on the left for N.C. operation.

3. LED Ring Colors

DEFAULT: OFF



ON: LED is green while in standby and turns red when triggered.
OFF: LED is red while in standby and turns green when triggered.

4. Switch Output Type

DEFAULT: Timer



TIMER: When set to TIMER, pressing the switch will trigger the relay for the set duration. Set the time using the trimpot as described below.
TOGGLE: When set to TOGGLE, pressing the switch will cause the relay to trigger until the switch is pressed again.

5. Output Duration Adjustment


DEFAULT: 1s



Output duration is adjustable 1~30 seconds. (Must be set to 'Timer' in step 4)
Gently rotate the trimpot using a Philips head screwdriver.
Counterclockwise decreases the output time.
Clockwise increases the output time.

Sample Installation:

Electromagnetic Lock (Fail-Safe) with Strobe Light

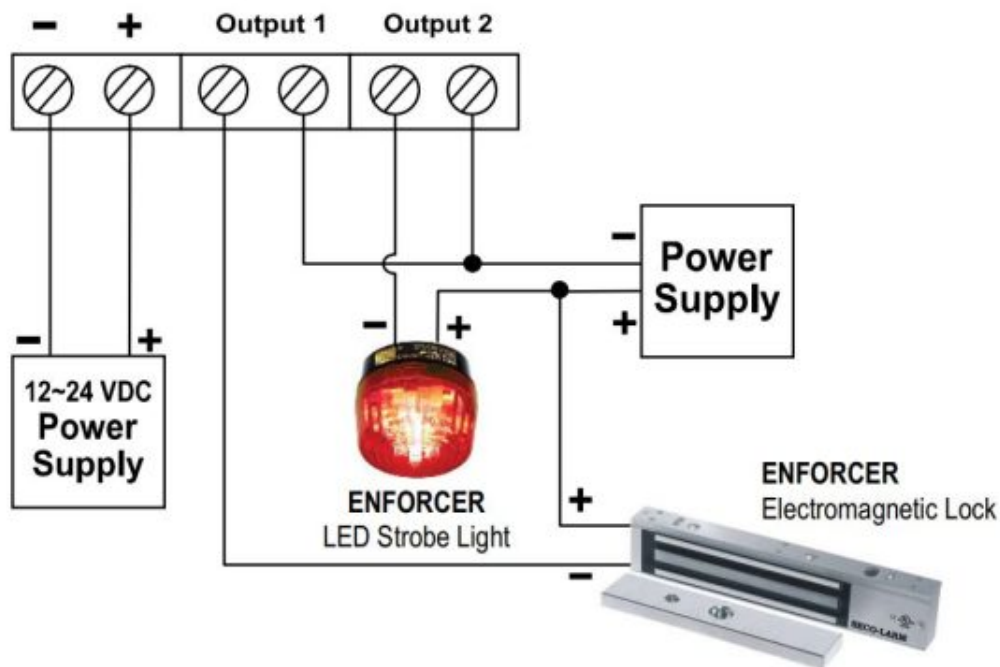

NOTE: No wiring may exceed 98 ft (30m) in length.

California Proposition 65 Warning: These products may contain chemicals which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

IMPORTANT WARNING: For a weatherproof installation, ensure the unit is installed in a waterproof backbox, and that the faceplate and faceplate screws are properly sealed. Incorrect mounting may lead to exposure to rain or moisture in the enclosure which could cause a dangerous electric shock, damage the device, and void the warranty. Users and installers of this product are responsible for ensuring this product is properly installed and sealed.

IMPORTANT: Users and installers of this product are responsible for ensuring that the installation and configuration of this product complies with all national, state, and local laws and codes. SECO-LARM will not be held responsible for the use of this product in violation of any current laws or codes.

WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for one (1) year from the date of sale to the original customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This

Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM and the purchaser's exclusive remedy, shall be limited to the replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damage of any kind to the purchaser or anyone else.

NOTICE: The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints.

Copyright © 2023 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM ® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606

Tel: [800-662-0800](tel:800-662-0800) / [949-261-2999](tel:949-261-2999) Fax: [949-261-7326](tel:949-261-7326)

Website: www.seco-larm.com

E-mail: sales@seco-larm.com

Read More About This Manual & Download PDF:

Documents / Resources

ENFORCER

Outdoor Piezoelectric
Request Exit Pushbuttons

Manual



SD-6176-SSVQ
SD-6276-SSVQ
SD-6176-SS1Q
SD-6276-SS1Q
SD-6176-SSQ
SD-6276-SSQ

ENFORCER SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons, SD-6176-SSVQ, Outdoor Piezoelectric Request Exit Push Buttons, Piezoelectric Request Exit Push Buttons, Request Exit Push Buttons, Exit Push Buttons, Push Buttons

[ENFORCER SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons \[pdf\] Instruction Manual](#)

SD-6176-SSVQ, SD-6276-SSVQ, SD-6176-SS1Q, SD-6276-SS1Q, SD-6176-SSQ, SD-6276-SSQ, SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons, SD-6176-SSVQ, Outdoor Piezoelectric Request Exit Push Buttons, Piezoelectric Request Exit Push Buttons, Request Exit Push Buttons, Exit Push Buttons, Push Buttons

References

- [Armería de Madrid](#)
- [P65Warnings.ca.gov](#)
- [User Manual](#)

ENFORCER

ENFORCER, Exit Push Buttons, Outdoor Piezoelectric Request Exit Push Buttons, Piezoelectric Request Exit Push Buttons, Push Buttons, Request Exit Push Buttons, SD-6176-SS1Q, SD-6176-SSQ, SD-6176-SSVQ, SD-6176-SSVQ Outdoor Piezoelectric Request Exit Push Buttons, SD-6276-SS1Q, SD-6276-SSQ, SD-6276-SSVQ

—Previous Post

[ENFORCER E-931-S35RRQ Retro Reflective Photoelectric Beam Sensor Installation Guide](#)

Next Post—

[ENFORCER SD-9773-KNEVQ Surface Mount Wave to Open Sensor Instruction Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.