




**E10-MBUSW  
Wi-Fi  
Modbus  
Thermostat**



# ENGO CONTROLS E10-MBUSW Wi-Fi Modbus Thermostat User Guide

[Home](#) » [ENGO CONTROLS](#) » ENGO CONTROLS E10-MBUSW Wi-Fi Modbus Thermostat User Guide 

## Contents

- 1 ENGO CONTROLS E10-MBUSW Wi-Fi Modbus Thermostat
- 2 Product Usage Instructions
- 3 Frequently Asked Questions
- 4 SAFETY INFORMATION
- 5 Connection description
- 6 Introduction
- 7 Technical data
- 8 LCD icon description + Button description
- 9 Installation
- 10 General information about MODBUS RTU
- 11 RS-485 communication settings
- 12 Documents / Resources
  - 12.1 References



**ENGO CONTROLS E10-MBUSW Wi-Fi Modbus Thermostat**



### Specifications:

- **Product:** MODBUS Wi-Fi Thermostat
- **Model:** E10-MBUSW / E10-MBUSB
- **Soft Version:** Main module v2.0.2, MCU v0.4.1
- **Works with:** Powered By
- **Producer:** Engo Controls sp. z o.o. sp. k.
- **Compliance:** EU Directives 2014/30/EU, 2014/35/EU, 2014/53/EU,2011/65/EU

### Product Usage Instructions

#### Safety Information:

Use the thermostat in accordance with national and EU regulations. Keep the device dry and for indoor use only. Read the entire manual before installation or use.

#### Installation:

Installation must be done by a qualified person with appropriate electrical qualifications following the standards and regulations of the country and EU.

#### Connection Description:

- Connection diagram for heating source
- Connection diagram to the control box
- Connection diagram for pump/actuator

#### Introduction:

The MODBUS Wi-Fi Thermostat features Modbus RS-485 communication compatibility with the ENGO Smart application, Wi-Fi 2.4 GHz communication standard, TPI algorithm ideal for underfloor heating, and more.

#### Technical Data:

- Power Supply: 230V AC 50 Hz
- Max Current: 3(1)A
- Setpoint Temp. Range
- Display Temp. Accuracy

- Control Algorithm
- Communication: Modbus RS-485
- Input A+/B- Output Control
- Protection Class: IP30
- Dimensions: 86 x 86 x 39 mm (14 after mounting in a box with a diameter of 60)

#### **Button Description:**

- 1. DOWN button – Change parameter value down
- 2. UP button – Change parameter value up
- 3. RESTART button – Restart thermostat

#### **Ambient Backlight:**

Ambient Backlight is a subtle LCD backlight helpful in darkened rooms, providing room temperature reading in nighttime conditions.

### **Frequently Asked Questions**

#### **Q: Can the thermostat be used outdoors?**

**A:** No, the thermostat is for indoor use only.

#### **Q: How do I reset the thermostat to factory settings?**

**A:** Hold the restart button until “FA” message appears for factory reset.

#### **Q: What is the voltage range supported by the thermostat?**

**A:** The thermostat supports a power supply of 230V AC 50 Hz.

#### **Product Compliance**

This product complies with the following EU Directives:  
2014/30/EU, 2014/35/EU, 2014/53/EU, 2011/65/EU.

### **SAFETY INFORMATION**

Use in accordance with national and EU regulations. Use the device only as intended, keeping it in a dry condition. The product is for indoor use only. Please read the entire manual, before installation or use.

#### **Installation:**


Installation must be performed by a qualified person with appropriate electrical qualifications, in accordance with the standards and regulations in force in a given country and in the EU. The manufacturer is not responsible for non-compliance with the instructions.

#### **WARNING:**


For the entire installation, there may be additional protection requirements, which the installer is responsible for.

### **Connection description**


- Connection diagram for heating source

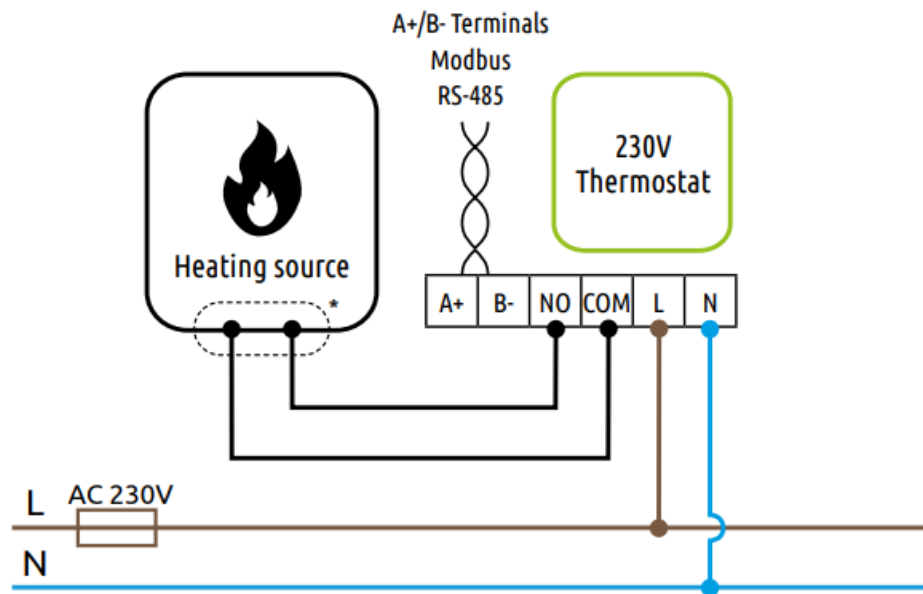

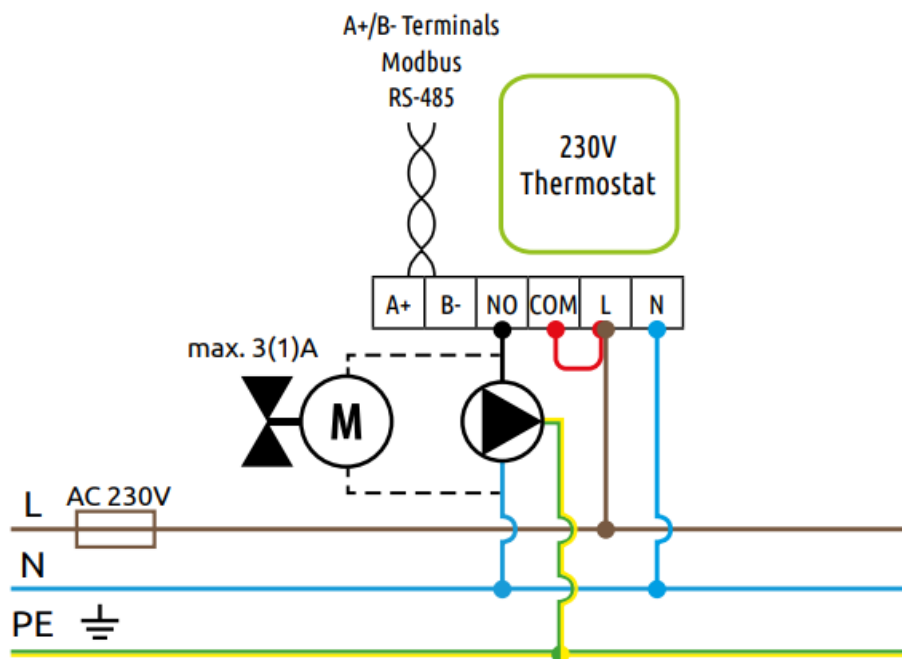



- Connection diagram for pump / actuator

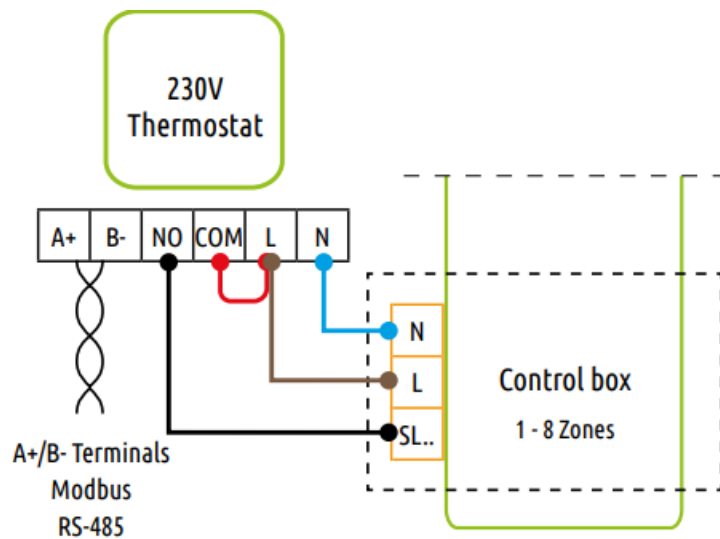

- Connection diagram to the control box











**Legend:**

	<b>Heating source - Boiler connection*</b> Boiler's contacts for ON/OFF thermostat (according to the boiler's instructions)
	Pump
	Valve
<b>L, N</b>	Power supply
<b>COM, NO</b>	Voltage-free output
<b>A+, B-</b>	Modbus RS-485 terminals
<b>SL..</b>	230V control input in the control box
	Fuse

## Introduction

An internet, flush-mounted temperature controller that enables energy-efficient control of heating (any type) and cooling. Designed to be controlled wirelessly over a Wi-Fi Internet network or by wires over RS-485 Modbus communication protocol. Can operate according to user settings stored in the ENGO Smart mobile app, which allows control of device parameters from anywhere in the world (e.g. selection of min. and max. set temperature, key lock). Without connection to the app, it works as a non programmable thermostat.


## Products features

	Modbus RS-485 communication
	compatibility with the ENGO Smart application (in Tuya Cloud technology)
	Wi-Fi 2.4 GHz communication standard
	TPI algorithm ideal for underfloor heating
	voltage-free output
	possibility to set the minimum and maximum setpoint temperature range
	cooling mode
	control of underfloor heating or heat source

## Technical data

Power supply	230V AC 50 Hz
Max current	3(1)A
Setpoint temp.range	5,0°C to 45,0°C
Display temp. accuracy	0,1°C
Control algorithm	TPI or Histeresis ( $\pm 0,1^{\circ}\text{C}$ to $\pm 2^{\circ}\text{C}$ )
Communication	Wi-Fi 2,4GHz
Input A+/B-	Modbus RS-485
Output control	COM / NO (voltage-free)
Protection class	IP30
Dimmension [mm]	86 x 86 x 39 mm (14 after mounting in a box with a diameter of 60)

## LCD icon description + Button description

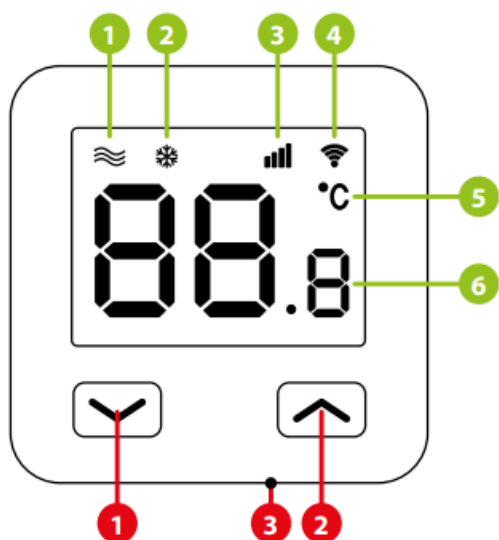

1. Heating mode
2. Cooling or frost protection mode
3. Connection with Internet
4. Connection with Wi-Fi
5. Temperature unit
6. Current / setpoint room temperature

1. "DOWN" button
2. "UP" button
3. "RESTART" button

⤴	Change the parameter value up
⤵	Change the parameter value down
⤴ + ⤵	Enter the pairing mode - hold until the PA message appears
	Factory reset - hold until the FA message appears.
	Intensity of the night LCD backlight (Ambient Backlight) - hold until Ab message appears, then release the keys and choose the intensity in the range of 0 - 10
• RESTART	Pressing this key will restart the thermostat (the button should be clicked with a pin)

## Ambient backlight

Ambient Backlight is a subtle LCD backlight very helpful in darkened rooms. The subtle glow provides a room temperature reading in nighttime conditions.


## Installation

### Installation of the Wi-Fi thermostat in the app


Make sure your router is within range of your smartphone. Make sure you are connected to the Internet. This will reduce the pairing time of the device.

### STEP 1 – DOWNLOAD ENGO SMART APP

Download the ENGO Smart app from Google Play or Apple App Store and install it on your smartphone.

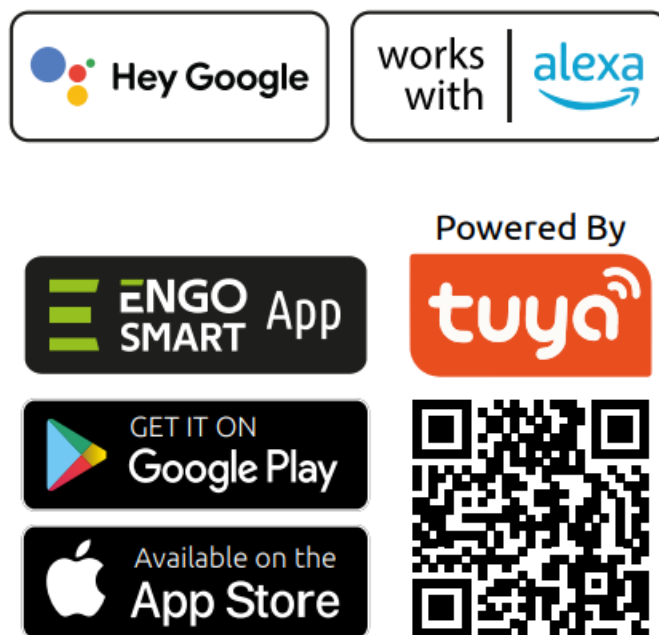


### STEP 2 – REGISTER THE NEW ACCOUNT

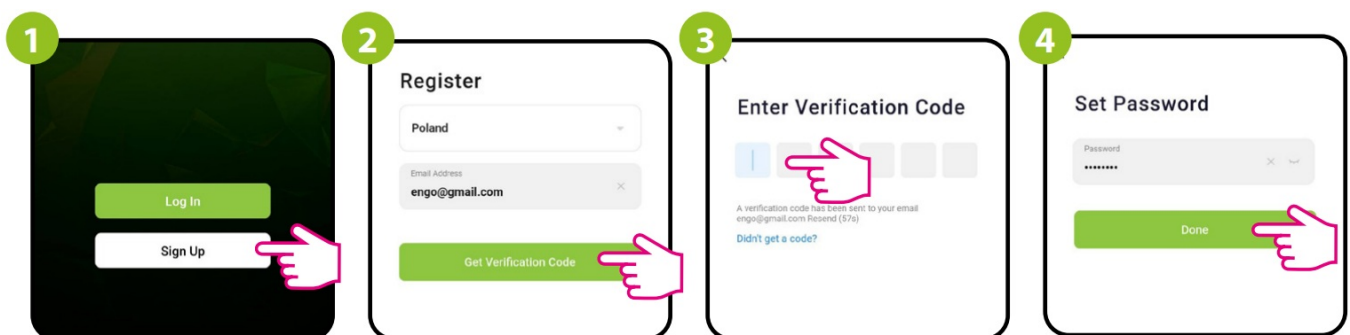


1. Click „Sign Up” to create new account.
2. Enter your e-mail address to which the verification code will be sent.
3. Enter the verification code received in the email. Remember that you only have 60 seconds to enter the code!
4. Then set the login password.

### STEP 3 – CONNECT THE THERMOSTAT TO WI-FI

After installing the app and creating an account:

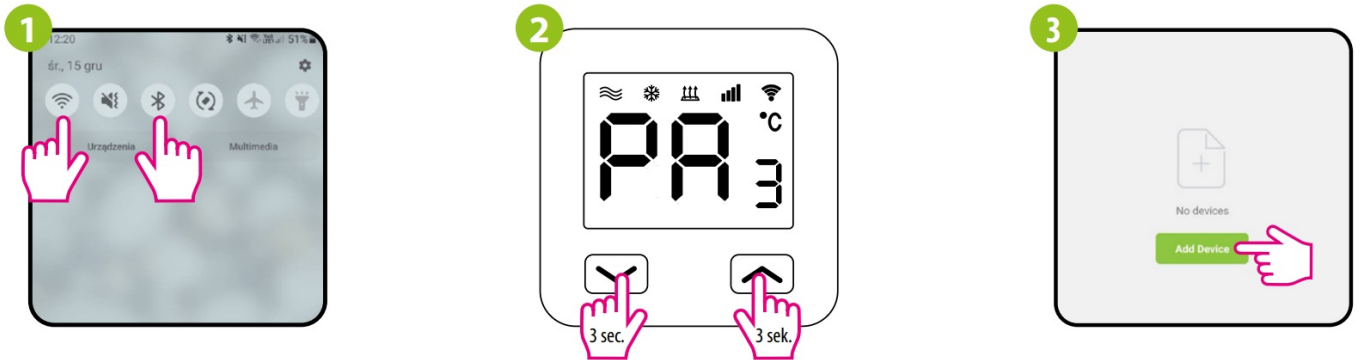

1. On your mobile device, make sure the ENGO Smart has access to permissions (Location, Bluetooth, Nearby devices). Then turn on Bluetooth and Location. Connect to 2.4GHz Wi-Fi network to which you want to assign the device.
2. Make sure the thermostat is powered on. Then press and hold the buttons on the thermostat for approx. 3 seconds until the display shows „PA”. Then release the keys. The pairing mode will be started up.
3. In the app, select: „Add Device”.

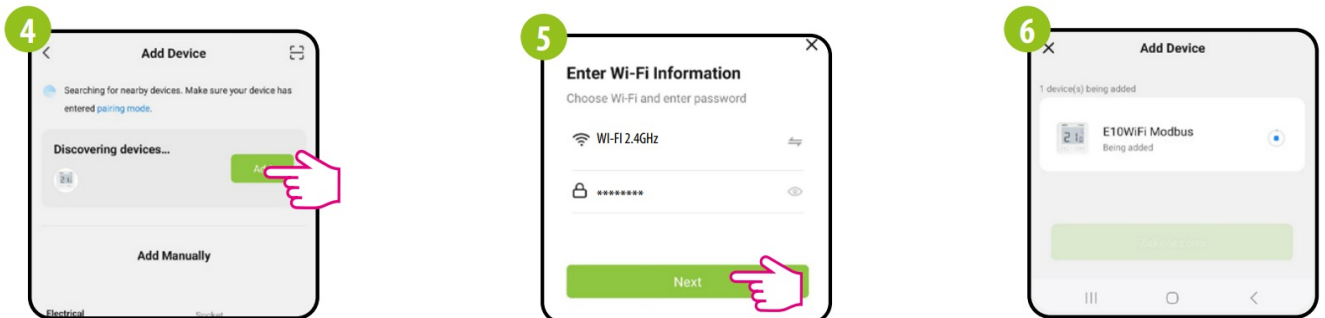

4. After finding the thermostat, go „Add”.
5. Select the Wi-Fi network in which the thermostat will operate and enter the password of this network.
6. Wait for the app to configure the thermostat with the selected Wi-Fi network



7. Go „DONE”
8. The thermostat has been installed and displays the main interface.


## General information about MODBUS RTU

The MODBUS RTU structure uses a master-slave system to exchange messages. It allows a maximum of 247 slaves to be connected, but only one master. The master controls the operation of the network and only it sends the request. The slaves do not undertake the transmission themselves. Each communication starts with the master making a request to the Slave, which responds to the master with what has been asked of it. The master (computer) communicates with the slaves thermostats in two-wire RS-485 mode. This uses data lines A+ and B- for data exchange, which MUST be one twisted pair





No more than two cables can be connected to each terminal, ensuring that a 'Daisy Chain' (in series) or 'straight line' (direct) configuration is used. Star or network (open) connection is not recommended as reflections within the cable can cause data corruption.

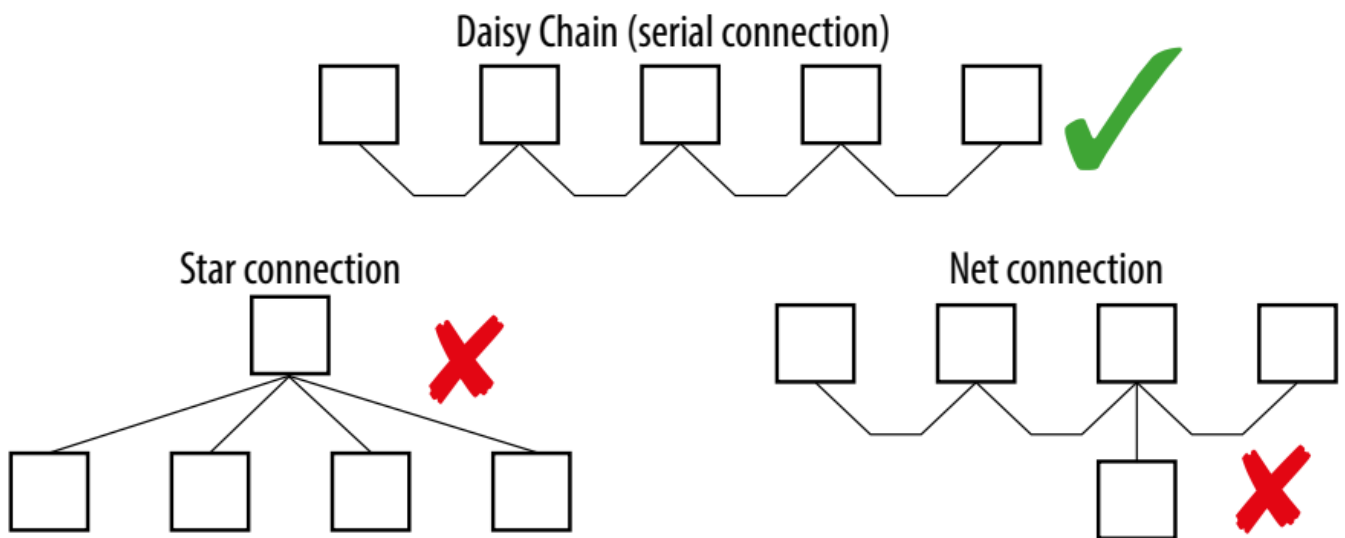

#### MODBUS RTU network operation – Slave mode

The Engo MODBUS controller has the following characteristics when operating as a slave device in a MODBUS RTU network:

- Network connection via RS485 serial interface.
- Address, communication speed and byte format defined by hardware configuration.
- Allows access to all tags and data used in the controller ladder program.
- 8-bit slave address
- 32-bit data size (1 address = 32-bit data return)
- each MODBUS data register has a size of 2 bytes.

#### ATTENTION:

Before the controller is connected to the RS-485 network, it must first be properly configured. The controller's communication parameters can be set in two ways:


- through configuration from the ENGO Smart application
- or by connecting it to a MASTER computer (e.g. via a USB/RS-485 converter)

#### ATTENTION:

Connecting unconfigured controllers to the RS-485 network results in their incorrect operation.

## RS-485 communication settings of the controller in the app

To access Modbus settings in the controller, follow these steps:

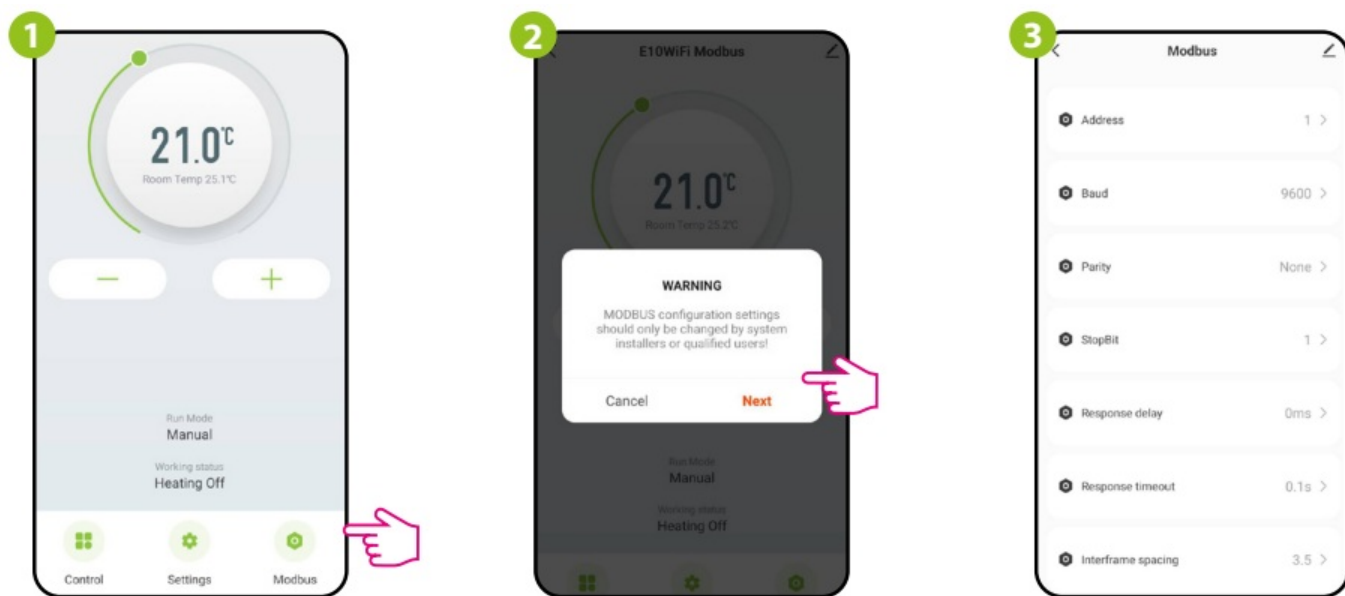

1. In the application select: „Modbus”.
2. Confirm with „Next”.
3. In Modbus settings you can edit the parameters.

## RS-485 communication settings

Parameter	Description	Value	Default value
Adress	MODBUS Slave device address (ID).	1-247	1
Baud	Baud	1 = 4800 2 = 9600 3 = 19200 4 = 38400	2
Data	Data bites	8 bits	8
Parity	Parity bit - sets data parity for error detection	0 = lack 1 = even 2 = odd	0
StopBit	Stop bits	1 = 1 stop bit 2 = 2 stop bit	1
Response delay	The minimum time from when a slave receives a request until it returns a response. This makes it possible to send data to free masters without overloading the recipient.	0-255 ms.	0
Response timeout	The maximum time to wait to receive a response from the slave device.	0,1-25,5 seconds	10
Interframe spacing	At least 3.5 characters (28 bits) of silence between frames.	3,5-25 signs	3.5

**E10 MODBUS supports the following function codes:**

- #03 – reading n registers (Holding Registers)
- #04 – reading n registers (Input Registers)
- #06 – write 1 register (Holding Register)

**INPUT registers – read only**



Adress		Access	Description	Value range	Means	Default
1	0x0001	R (#03)	Firmware Version	0x0001-0x9999	0x1110=1.1.10 (BCD code)	
2	0x0002	R (#03)	Working state		0b00000000=Idle, switch OFF 0b10000001=Heating 0b10000010=Heating & Frost protection 0b10001000=Cooling 0b00001000=Idle, sensor error	0xff
3	0x0003	R (#03)	Value of the Integrated temperature sensor, °C	50 - 450	N-> temp=N/10 °C	
12	0x000C	R (#03)	Fault information	0,1,2	0 - No alarm 1 - No connection to the cloud 2 - No connection to Wi-Fi network	0
13	0x000D	R (#03)	Alert message - problems with the internal temperature sensor	0,1,2,3,4	0 - No alarm 1 - Temperature measured below 5C (LO) 2 - Temperature measured above 45C (HI) 3 - Short circuit in the internal temperature sensor circuit 4 - break in the internal temperature sensor circuit	0


**HOLDING registers – for reading and writing**

Adress		Access	Description	Value range	Means	Default
0	0x0000	R/W (#04)	Engo MODBUS - online ID number	1-247	ID	1
257	0x0101	R/W (#06)	Power on/off	0,1	0=OFF 1=ON	1
258	0x0102	R/W (#06)	Operation mode	0,1,2,3	0=Manual mode 1=Program mode 2=Holiday mode 3=Frost mode	0
262	0x0106	R/W (#06)	Child lock	0,1	0=Unlocked 1=Locked	0
263	0x0107	R/W (#06)	Backlight brightness	0-100	N-> Brightness=N%	60
264	0x0108	R/W (#06)	Ambient Backlight Level	0-10	N-> Bridgness=N%	0
265	0x0109	R/W (#06)	Control type	0-10	0 = TPI UFH, 1 = TPI RAD, 2 = TPI ELE, 3 = Histeresis 0.2 (+/-1C).... ... 10 = Histeresis 4.0 (+/-2C)	0
268	0x010C	R/W (#06)	Clock minutes	0-59	Minutes	0
269	0x010D	R/W (#06)	Clock hours	0-23	Hours	0

270	0x010E	R/W (#06)	Clock Week Day (1=Monday)	1~7	Week day	3
273	0x0111	R/W (#06)	Setpoint temp in program mode	50-450	N-> temp=N/10 °C	210
274	0x0112	R/W (#06)	Setpoint temp in manual mode	50-450	N-> temp=N/10 °C	210
275	0x0113	R/W (#06)	Frost protection setpoint	50	N->temp=N/10 °C	50
279	0x0117	R/W (#06)	Max setpoint temp	50-450	N-> temp=N/10 °C	350
280	0x0118	R/W (#06)	Min setpoint temp	50-450	N-> temp=N/10 °C	50
285	0x011D	R/W (#06)	Offset temperature	-3.5...3.5°C	in steps of 0,5C	0
287	0x011F	R/W (#06)	Relay type	0,1	0 = NO 1 = NC	0
288	0x0120	R/W (#06)	Heating/Cooling Selection	0,1	0 = Heating 1 = Cooling	0

### Factory reset

To RESET Thermostat to factory settings, hold down the  &  buttons until the FA message appears. Then release the keys. Thermostat will restart, restore default factory settings and displays the home screen. The device will be also removed from app. Factory reset can be done within 5 minutes after power supply connection. If thermostat is connected longer – factory reset cannot be performed.

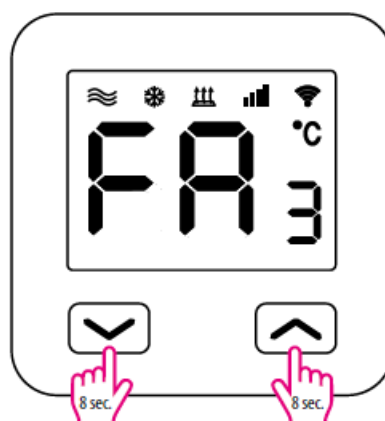


Producer:  
 Engo Controls sp. z o.o. sp. k.  
 Rolna 4 St.  
 43-262 Kobielice  
 Poland



[www.engocontrols.com](http://www.engocontrols.com)

## Documents / Resources

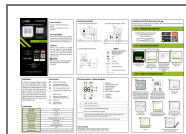

**[ENGO CONTROLS E10-MBUSW Wi-Fi Modbus Thermostat](#)** [pdf] User Guide  
E10-MBUSW, E10-MBUSW Wi-Fi Modbus Thermostat, Wi-Fi Modbus Thermostat, Modbus  
Thermostat, Thermostat

## References

- [ENGO Controls - Sterowanie ogrzewaniem](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.