

EROAD DP C030.CA bcd Display For Maximum Fun User Manual

Home » EROAD » EROAD DP C030.CA bcd Display For Maximum Fun User Manual



Contents

- 1 EROAD DP C030.CA bcd Display For Maximum
- 2 Specifications
- 3 FAQs
- **4 IMPORTANT INFORMATION**
- **5 INTRODUCTION OF DISPLAY**
- **6 PRODUCT DESCRIPTION**
- **7 DISPLAY OVERVIEW**
- **8 CONTROL BUTTONS**
- **9 NORMAL OPERATION**
- 10 Bluetooth Function
- 11 SETTINGS
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts



EROAD DP C030.CA bcd Display For Maximum Fun



Specifications

• Model: DP C030.CA (EROAD)

• Bluetooth: Bluetooth 5.0 BLE

• Ant+ Function: Supports LEV, Speed&Cadence, Bike Power profiles

FAQs

Q: How do I reset the trip on the display?

A: To reset the trip, navigate to the settings menu and select the "Reset Trip" option.

Q: Can I change the display from Imperial to Metric units?

A: Yes, you can change the units by accessing the settings menu and selecting the "Imperial/Metric" option.

IMPORTANT INFORMATION

NOTICE

- If the error information from the display cannot be corrected according to the instructions, please contact your retailer.
- The product is designed to be waterproof. It is highly recommended to avoid submerging the display underwater.
- Do not clean the display with a steam jet, high-pressure cleaner or water hose.
- Please use this product with care.
- Do not use thinners or other solvents to clean the display. Such substances can damage the surfaces.

- Warranty is not included due to wear normal use and aging.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the
 user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be de-termined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.(4) Consult the dealer or an experienced radio/TV technician for help.

INTRODUCTION OF DISPLAY

- Model: DP C030.CA
- The housing is made of PC/silicone and the LCD screen is made of aluminosilicate glass.
- The label marking is as follows:
- DPC030CF80101.0
- PD051405



PRODUCT DESCRIPTION

Specification

• LCD screen

• Power supply: 36/43/18Vdc

• Operating temperature: -20°C~45°C

• Storage temperature: -20°C~60°C

• Waterproof: IPX6


• Storage Humidity: 30%-70% RH

Functional Overview

- CAN communication protocol; Easy and user-friendly operation with three buttons.
- Speed indication: including real-time speed, maximum speed "MAX" and average speed "AVG".
- Metric/imperial switch: The mileage unit can be set according to the user's habit.
- Smart power indication: Provides stable battery percentage alerts through optimized algorithms.
- · Automatic control of light-sensing headlight
- · Backlight brightness 4-level adjustment
- Power-assisted modes: 6 modes in total
- Mileage indication: The maximum mileage can be displayed up to 99999. Single mileage can be shown as Trip; accumulated mileage can be shown as ODO.
- Smart indication: remaining mileage can be shown as RANGE, and energy consumed can be shown as Cal (calories).
- · Error code indication.
- · Walk assistance.
- · Maintenance prompt.
- ANT+
- 6 languages: English, German, Dutch, French, Italian, Czech.

DISPLAY OVERVIEW

- 1. Headlight
- 2. Bluetooth
- 3. Maintenance
- 4. Battery
- 5. Real-time speed
- 6. Power-assisted mode 7 Power curve
- 7. Data switch

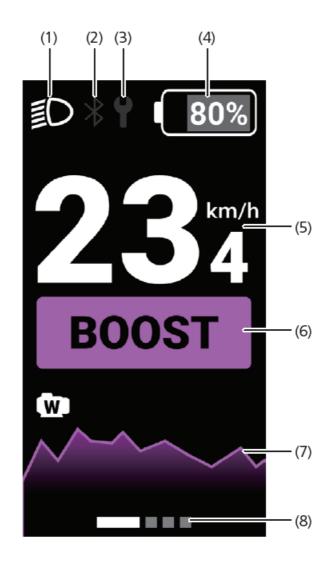

CONTROL BUTTONS



(1)	""	Down/Walk Assistance	Press "+"/"—" to select your desired item o	
(2)	"+ "	Up/Headlight	the menu.	
(3)	" ტ "	On/Off/Confirm	Power on/off the HMI.Confirm your selection	


NORMAL OPERATION

Power ON/OFF

- Power ON: Press and hold " (≥ 2s) when the HMI is OFF.
- Power OFF: Press and hold "O " (≥ 2s) when the HMI is ON to power OFF the HMI.

Select the Power-Assisted Mode


Press" or " — " to switch the power-assisted mode and change the power of the motor. The lowest gear is ECO, and the highest gear is BOOST (user stable). The default mode is ECO; OFF means the e-bike is in a neutral position.

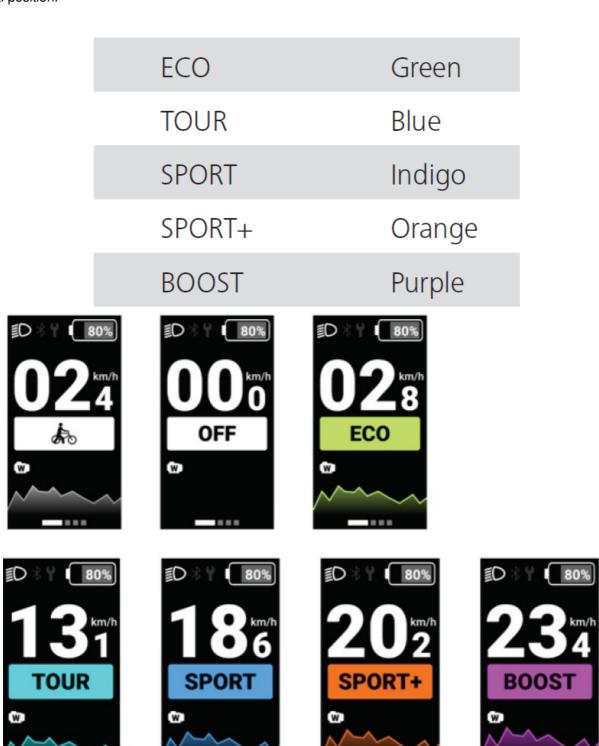

View the Data

• In the main interface, press the "f U " to enter the interface. Press the "f U " to switch data displays.



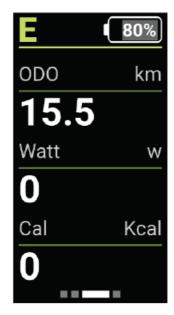



Adjust the Headlight/backlight

- Press and hold (≥2s) " + " to turn on the headlight, the backlight luminance (4 levels, user-seta-ble) of the HMI will decrease, and the light icon appears.
- Press and hold the " + " again to turn off the headlight, the HMI backlight luminance will increase, and the light icon will disappear.




Walk Assistance

When the system is not in operation, press the " — to switch the mode to OFF, and then press the " — "

again, and the symbol "will appear and be normally on. Press and hold the " and the symbol " will flash (frequency 500ms), and the e-bike will go into walk assistance mode (If no speed signal is detected, the

" will stop flashing and be will normally on. If no operation within 5s, the mode will be automatically switched to OFF mode.

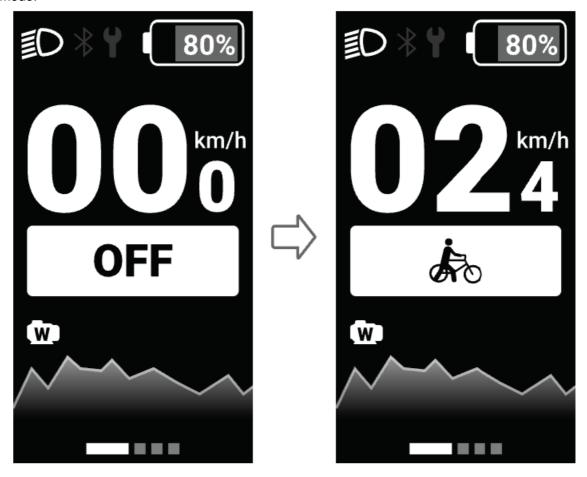

Bluetooth Function

The HMI is equipped with Bluetooth 5.0 BLE module, and can be connected with BAFANG GO+. For detailed functions, see the corresponding App operation instruction. Download, install and connect BAFANG GO+: Android: Go to Google Store and search for BAFANG GO+ to download and install. iOS: Go to the Apple Store and search for BAFANG GO+ to download and install. Scan the QR code shown below with your mobile phone to download and install BAFANG GO+.

- Android Download Address
- iOS Download Address




ANT+ Function

The HMI ANT+ function supports 3 profiles, LEV (Light Electric Vehicle), Speed&Cadence, and Bike Power. When you use the function, the HMI will broadcast the system information outwardly as a sensor periodically. To view the corresponding real-time riding data, the user can connect the equipment supporting ANT+, including cycle computers and watches, to the HMI.


SETTINGS


Press and hold the " + " and " = " at the same time to enter "Setting". Press " + " or " = " to select "HMI Setting", "Information", "Language" or "EXIT," and press " to enter.

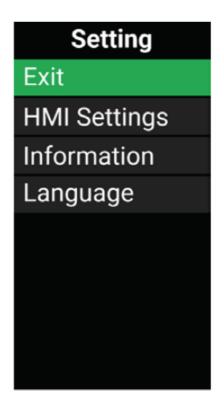

"Imperial" / "Metric"

Go to the "Setting" menu, press " + " or " — " to select "Unit". Press " U " to enter the setting, press " + "or " — " to select "Metric"/"Imperial", and press " U " to save and return to "Unit." To save and return to the main interface, press and hold " + " and " — " at the same time.

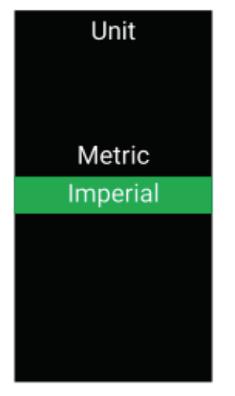

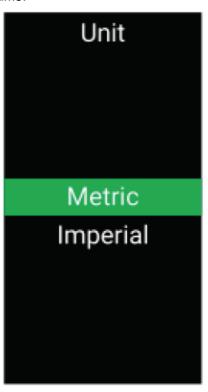

Set the Auto Off Time


Go to the "Setting" menu, and press " + " or " ==== " to select "Auto Off". Press " to enter the setting,

press " +" or " — " to select "OFF" / "1 Min" / "2 Min" / "3 Min" / "4 Min" / "5 Min" / "6 Min" / "7 Min" / "8 Min" / "9 Min" / "10 Min", and press the " " to save and return to "Auto Off". To save and return to the main interface, press and hold " + " and " — " at the same time. "OFF" means to cancel the automatic shutdown function.

Set the Backlight

Go to the "Setting" menu, press "+ " or " -" to select "Brightness". Press " 0" to enter the setting, " +" or " -" to


select "100%"/"75%"/"50%"/"25%", and press " o save and return to "Brightness". To save and return to the main interface, press and hold " +" and " -" at the same time.

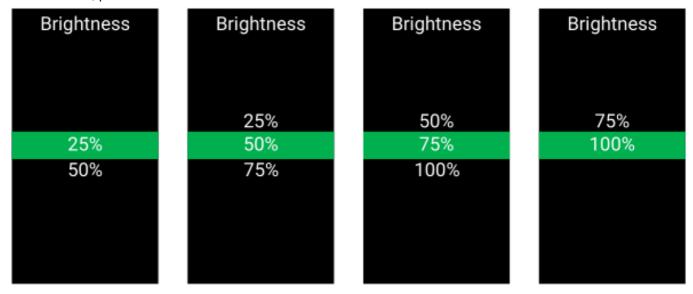

Set the Light Sensitivity

Go to the "Setting" menu, and press "+" or "-" to select "AL sensitivity". Press " "to enter the setting, press "+" or "-" to adjust the light sensitivity, "OFF"/"1"/"2"/"3"/"4"/"5". "OFF" means to turn off the function. The numbers 1


through 5 correspond to different levels of light sensitivity, from weak to strong. Press "O" to save and return to "AL sensitivity". To save and return to the main interface, press and hold "+" and "- at the same time.

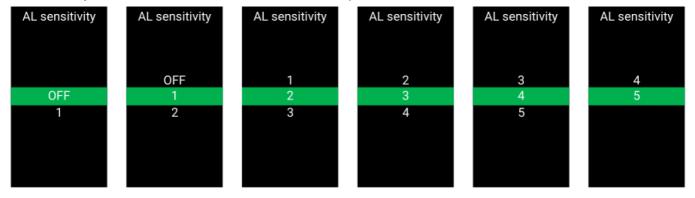

Reset the Trip

Go to the "Setting" menu, and press "+" or "-" to select "Trip reset". Press the "Power button" to enter the setting, press "+" or "-" to select "NO"/"YES" ("YES" means to clear, "NO" means not to clear), an press "b" to save


and return to "Trip reset". To save and return to the main interface, press and hold"+" and "-" at the same time. Note: TIME data will be clear with Trip data reset.

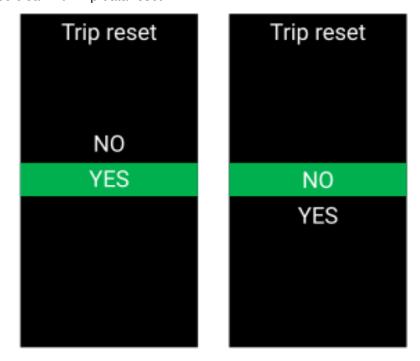

Service tips

Go to the "Setting" menu, and press "+" or "-" to select "Service tips". Press " or " to enter the setting, and press "+" or "-" to select "OFF"/"ON" ("OFF" means to turn off the function; "ON" means to turn on the function).

Press "O" " to save and return to "Service". To save and return to the main interface, press and hold "+" and "-" at the same time. Note: The maintenance prompt function is turned off by default. When it is turned on and the ODO of the e-bike exceeds 5,000 km, "" will appear on the HMI.

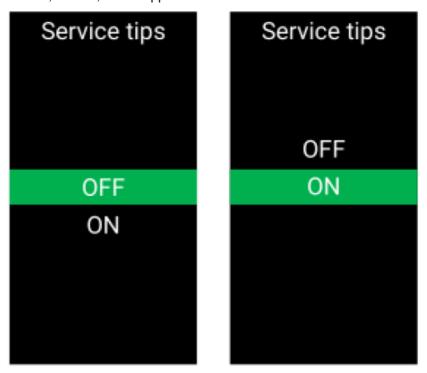


Go to the "Information" menu, and press "+" or "-" to select "Battery Info". Press " U" to enter. Press " U" to

view the battery information. Select "Back", and press " to return to "Battery Info". To save and return to the main interface, press and hold " +" and " -" at the same time. Or press the power button to return to "Information".

Battery Info Back
HW: BT C01.450.UC
SW: BT C01.450.UC
Temp °C

Battery Info
Dack
Temp °C
Totalvolt mV
Current mA
Res Cap AH

Battery Info		
Back		
Full Cap AH		
RelChargeState%		
AbsChargeState %		
Cycle Times		

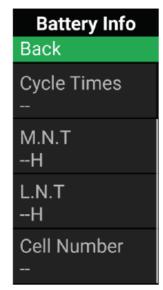

View the HMI Info


Go to the "Information" menu, press "+" or "-" to select "HMI Info". Press " " to enter. Press " " to return to "HMI Info". To return to the main interface, press and hold "+" and "-" at the same time, or press "BACK" → "EXIT".



View the Controller Info


Go to the "Information" menu, and press "- " or "+" to select "Controller Info". Press " \bullet " to enter and Press " +" or "-" to view SW, HW, Wheel Size, and Speed Limit. To return to the main interface, press and hold " +" and "-" at the same time, or press "BACK" \rightarrow "EXIT".



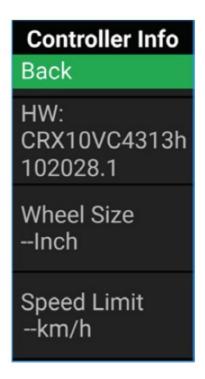

View the Sensor Info

Go to the "Information" menu, press "+ " or "- " to select "Sensor Info". Press " or " to enter. To return to the main interface, press and hold "+ " and "- " at the same time, or press "BACK" → "EXIT".

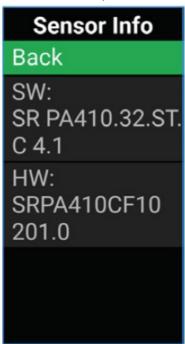

View Historical Error Codes

Go to the "Information" menu, press "+ " or "- " to select "Error Code". Press " " to enter and pre "+ " to view the last 10 error messages, "E-Code1" to "E-Code10". To return to the main interface, press and hold " +" and "- " at the same time, or press "BACK" → "EXIT". Note: For detailed information, see the error code list.

Error Code		
Back		
E-Code1:	30	
E-Code2:	00	
E-Code3:	00	
E-Code4:	00	
E-Code5:	00	
E-Code6:	00	
E-Code7:	00	
E-Code8:	00	

Error Code		
Back		
E-Code3:	00	
E-Code4:	00	
E-Code5:	00	
E-Code6:	00	
E-Code7:	00	
E-Code8:	00	
E-Code9:	00	
E-Code10:	00	



View Historical Warn Codes

Go to the "Information" menu, press "+" or "-" to select "Warn Code". Press " or "to enter and press"+" to view the last 10 warn messages, "W-Code1" to "W-Code10". To return to the main interface, press and hold "+" and "-" at the same time, or press "BACK" → "EXIT". Note: For detailed information, see the error code list.

Warn Code	
Back	
W-Code1:	30
W-Code2:	00
W-Code3:	00
W-Code4:	00
W-Code5:	00
W-Code6:	00
W-Code7:	00
W-Code8:	00

Warn Code		
Back		
W-Code3:	00	
W-Code4:	00	
W-Code5:	00	
W-Code6:	00	
W-Code7:	00	
W-Code8:	00	
W-Code9:	00	
W-Code10:	00	



ERROR CODE DEFINITION

- The HMI can show the faults of Pedelec. When a fault is detected, one of the following error codes will be indicated too.
- **Note**: Please read carefully the description of the error code. When the error code appears, please first restart the system. If the problem is not eliminated, please contact your dealer or technical personnel.
- See Appendix B for the detailed error code list.

Documents / Resources



EROAD DP C030.CA bcd Display For Maximum Fun [pdf] User Manual

DP C030.CA bcd Display For Maximum Fun, DP C030.CA, bcd Display For Maximum Fun, Display For Maximum Fun, Maximum Fun, Fun

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.