



Home » ESPHome » ESPHome ESP8266 Physically Connecting to your Device User Guide 12

Contents [hide]

- 1 ESPHome ESP8266 Physically Connecting to your Device
- 2 Specifications
- 3 Overview
- 4 System Requirements
- 5 Features
- 6 Compatibility
- 7 Supported ESPHome Entities
- 8 Installer Setup
- 9 Driver Installation
- 10 Driver Setup
- 11 Device Settings
- 12 ratgdo Configuration Guide
- 13 Example: Creating a Still Open Alert
- 14 FAQ
- 15 Documents / Resources
 - 15.1 References



ESPHome ESP8266 Physically Connecting to your Device



Specifications

• System requirements: Control4 OS 3.3+

Overview

Integrate ESPHome-based devices into Control4. ESPHome is an open-source system that transforms common microcontrollers, like ESP8266 and ESP32, into smart home devices through simple YAML configuration. ESPHome devices can be set up, monitored, and controlled using a web browser, Home Assistant, or other compatible platforms. This driver enables seamless monitoring and control of ESPHome devices directly from your Control4 system.

System Requirements

Control4 OS 3.3+

Features

- Local network communication requiring no cloud services
- Real-time updates from all supported entities exposed by the device
- Supports encrypted connections using the device encryption key
- Variable Programming Support

Compatibility

Verified Devices

This driver will generically work with any ESPHome device, but we have tested extensively with the following devices:

• ratgdo - Configuration Guide

If you try this driver on a product listed above, and it works, let us know!

Supported ESPHome Entities



Installer Setup

Only a single driver instance is required per ESPHome device. Multiple instances of this driver connected to the same device will have unexpected behavior. However, you can have multiple instances of this driver connected to different ESPHome devices.

DriverCentral Cloud Setup

If you already have the <u>DriverCentral Cloud driver</u> installed in your project you can continue to Driver Installation.

This driver relies on the DriverCentral Cloud driver to manage licensing and automatic updates. If you are new to using DriverCentral you can refer to their <u>Cloud Driver</u> <u>documentation</u> for setting it up.

Driver Installation

Driver installation and setup are similar to most other IP-based drivers. Below is an outline of the basic steps for your convenience.


- 1. Download the latest control4-esphome.zip from <u>DriverCentral</u>.
- 2. Extract and install the esphome.c4z, esphome light.c4z, and esphome lock.c4z drivers.
- 3. Use the "Search" tab to find the "ESPHome" driver and add it to your project.



4. Select the newly added driver in the "System Design" tab. You will notice that the Cloud Status reflects the license state. If you have purchased a license it will show

"License Activated", otherwise "Trial Running" and remaining trial duration.

5. You can refresh license status by selecting the "DriverCentral Cloud" driver in the "System Design" tab and perform the "Check Drivers" action.

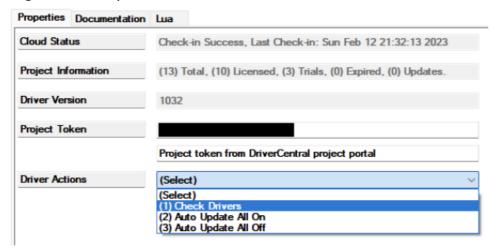

- 6. Configure the <u>Device Settings</u> with the connection information.
- 7. After a few moments the Driver Status will display "Connected". If the driver fails to connect, set the Log Mode property to "Print" and re-set the IP Address field to reconnect. Then check the Lua output window for more information.
- 8. Once connected, the driver will automatically create variables and connections for each supported entity type.
- 9. To control lights and/or locks, use the "Search" tab to find the "ESPHome Light" and/or "ESPHome Lock" driver. Add one driver instance for each exposed light or lock entity in your project. In the "Connections" tab, select the "ESPHome" driver and bind the light or lock entities to the newly added drivers.

Driver Setup

Driver Properties

Cloud Settings

Cloud Status

Displays the DriverCentral cloud license status.

Automatic Updates

Turns on/off the DriverCentral cloud automatic updates.

Driver Settings

Driver Status (read-only)

Displays the current status of the driver.

Driver Version (read-only)

Displays the current version of the driver.

• Log Level [Fatal | Error | Warning | Info | Debug | Trace | Ultra] Sets the logging

level. Default is **Info**.

• Log Mode [Off | Print | Log | Print and Log] Sets the logging mode. Default is Off.

Device Settings

IP Address

Sets the device IP address (e.g. 192.168.1.30). Domain names are allowed as long as they can be resolved to an accessible IP address by the controller. HTTPS is not supported.

Note: If you are using an IP address, you should ensure it will not change by assigning a static IP or creating a DHCP reservation.

Port

Sets the device port. The default port for ESPHome devices is 6053.

Authentication Mode [None | Password | Encryption Key]

Selects the authentication method for connecting to the ESPHome device.

None: No authentication required.

Password: Use a password for authentication (see below).

Encryption Key: Use an encryption key for secure communication (see below).

Password

Shown only if Authentication Mode is set to Password. Sets the device password. This must match the password configured on the ESPHome device.

Encryption Key

Shown only if Authentication Mode is set to Encryption Key. Sets the device encryption key for secure communication. This must match the encryption key configured on the ESPHome device.

Device Info

• Name (read-only)

Displays the name of the connected ESPHome device.

Model (read-only)

Displays the model of the connected ESPHome device.

Manufacturer (read-only)

Displays the manufacturer of the connected ESPHome device.

MAC Address (read-only)

Displays the MAC address of the connected ESPHome device.

• Firmware Version (read-only)

Displays the firmware version of the connected ESPHome device.

Driver Actions

Reset Connections and Variables

Warning: This will reset all connection bindings and delete any programming associated with the variables.

Reset the driver connections and variables. This is useful if you change the connected ESPHome device or there are stale connections or variables.

ratgdo Configuration Guide

This guide provides instructions for configuring the ESPHome driver to work with ratgdo devices for garage door control via relays in Control4 Composer Pro.

Add Relay Controller Driver

Add the desired relay controller driver to your Control4 project in Composer Pro.



Relay Controller Properties

The ratgdo device exposes a "Cover" entity in ESPHome, which maps to the relay controller functionality in Control4.

Number of Relays

The ratgdo device uses a multi-relay configuration to control the garage door. In Composer Pro, you should configure the relay settings as follows:

- Set to 2 Relays (Open/Close) or 3 Relays (Open/Close/Stop)
 - The ratgdo device uses separate commands for opening and closing the garage door
 - If your ratgdo firmware supports the "stop" command, configure for 3 relays to enable the stop functionality. If you are not sure, you can look at the ratgdo connections in Composer Pro to see if the "Stop Door" relay is available.

Relay Configuration

Set to Pulse

 ratgdo uses momentary pulses to trigger the garage door opener, similar to a wall button press

Pulse Time

- Set all relay pulse times to **500** (default)
 - o This is the duration the relay will be activated

Invert Relay

• Set all invert relay properties to **No** (default)

Contact Debounce


- Set all contact debounce times to 250 (default)
 - This helps prevent false flapping of the garage door state sensors

Invert Contact

• Set all invert contact properties to **No** (default)

Example Properties

For reference, here is an example of the relay controller properties in Composer Pro:

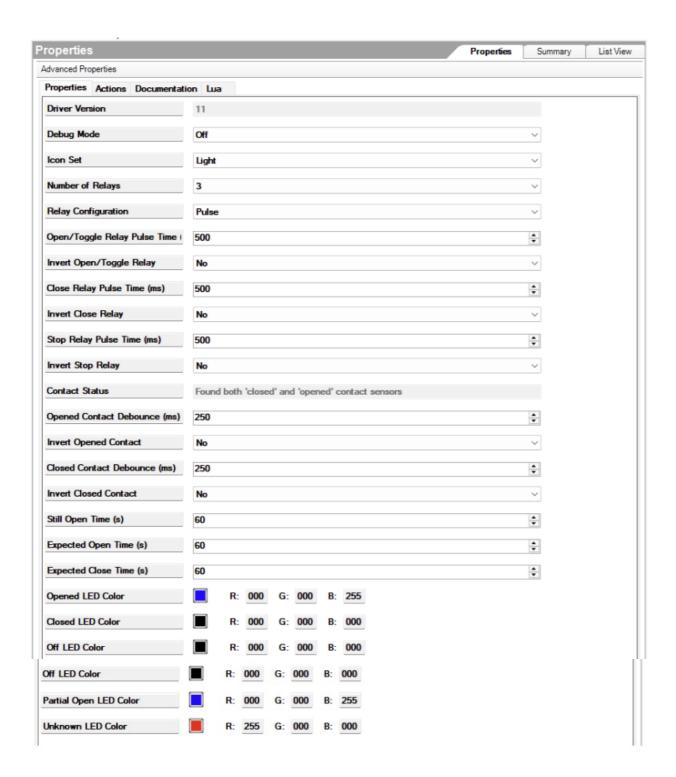

Relay Controller Connections

Relays


- Open: Connect to the ratgdo's "Open Door" relay
- Close: Connect to the ratgdo's "Close Door" relay
- Stop: Connect to the ratgdo's "Stop Door" relay, if available

Contact Sensors

- Closed Contact: Connect to the ratgdo's "Door Closed" contact
- Opened Contact: Connect to the ratgdo's "Door Open" contact

Example Connections

For reference, here is an example of how the connections should look in Composer Pro:

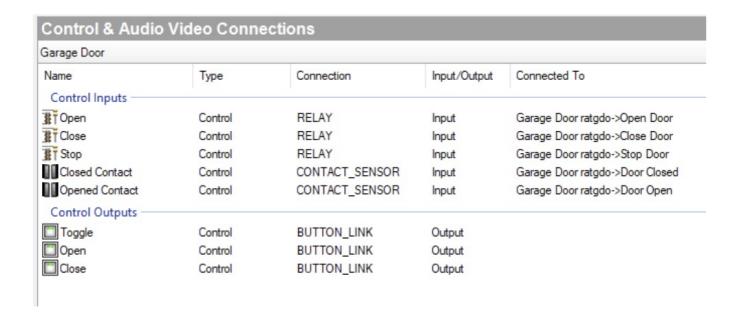

Programming

You can create programming in Control4 to:

- Open/close the garage door based on events
- Monitor the garage door state
- Set up notifications for garage door status changes
- Create custom buttons on touchscreens and remotes

Example: Creating a Still Open Alert

Using the "Still Open Time" property from the relay controller driver:

- 1. Set the "Still Open Time" to your desired duration (e.g., 10 minutes)
- 2. Create a programming rule that triggers when the "Still Open" event fires
- 3. Add actions to send notifications or perform other tasks

Additional Entities

Depending on your ratgdo device, firmware, and its capabilities, there may be additional entities exposed by the ESPHome driver. These can come as additional connections or

driver variables.

Please refer to ratgdo's documentation for more information on specific entities: https://ratgdo.github.io/esphome-ratgdo/webui documentation.html

Developer Information

Copyright © 2025 Finite Labs LLC

All information contained herein is, and remains the property of Finite Labs LLC and its suppliers, if any. The intellectual and technical concepts contained herein are proprietary to

Finite Labs LLC and its suppliers and may be covered by U.S. and Foreign Patents, patents in process, and are protected by trade secret or copyright law. Dissemination of this information or reproduction of this material is strictly forbidden unless prior written permission is obtained from Finite Labs LLC. For the latest information, please visit https://drivercentral.io/platforms/control4-drivers/utility/esphome

Support

If you have any questions or issues integrating this driver with Control4 or ESPHome, you can contact us at driver-support@finitelabs.com or call/text us at +1 949-371-5805.

Changelog

v20250715 - 2025-07-14

• Fixed: Fixed bug causing entities to not be discovered on connect

v20250714 - 2025-07-14

• Added: Added support for encrypted connections using the device encryption

v20250619 - 2025-06-19

• Added : Added ratgdo specific documentation

v20250606 - 2025-06-06

Added :Initial Release

FAQ

What devices are compatible with this driver?

This driver is compatible with any ESPHome device, with extensive testing done on ratgdo devices. If you try it on anyother device and it works, kindly inform us for verification.

Documents / Resources



ESPHome ESP8266 Physically Connecting to your Device [pdf] User Gui de

ESP8266, ESP32, ESP8266 Physically Connecting to your Device, ESP8 266, Physically Connecting to your Device, Connecting to your Device, to your Device, your Device

References

- User Manual
- **■** ESPHome
- Connecting to your Device, ESP32, ESP8266, ESP8266 Physically Connecting to your Device, ESPHome, Physically Connecting to your Device, to your Device, your Device

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.