



# ExcelSecu ESCS-W30 1D 2D Wireless Barcode Scanner User Guide

[Home](#) » [ExcelSecu](#) » ExcelSecu ESCS-W30 1D 2D Wireless Barcode Scanner User Guide 


## Contents

- 1 [ExcelSecu ESCS-W30 1D 2D Wireless Barcode Scanner User Guide](#)
- 2 [1D 2D Wireless Barcode Scanner ESCS-W30 User Guide](#)
- 3 [Packing list](#)
- 4 [Product instruction](#)
- 5 [2.3 Fault handling](#)
- 6 [Configuration code picture\(Please cover](#)
- 7 [3.1. Turn on \ off the prompt voice](#)
- 8 [3.2. Set the code type](#)
- 9 [3.4 Restore factory Setting](#)
- 10 [4 Specification](#)
- 11 [FCC Warning](#)
- 12 [Read More About This Manual & Download PDF:](#)
- 13 [Documents / Resources](#)
  - 13.1 [References](#)
- 14 [Related Posts](#)

**ExcelSecu ESCS-W30 1D 2D Wireless Barcode Scanner User Guide**



**1D 2D Wireless Barcode Scanner ESCS-W30 User Guide**

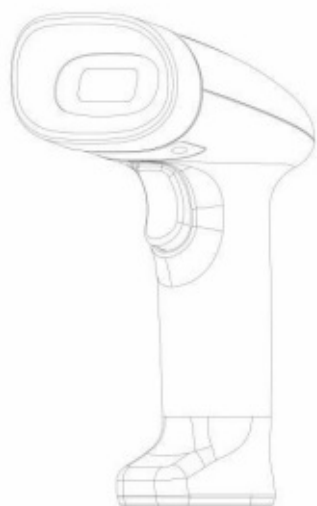

This user guide is for ESCS-W30 1D 2D Wireless Barcode Scanner users only. Please read and save this manual carefully before use for future reference.  
Excelsecu Data Technology Co., Ltd. [www.excelsecu.com](http://www.excelsecu.com)

**1. Packing list**

ESCS-W30	.....	1
ESCS-WD30 2.4G Adapter	.....	1
User Guide	.....	1

**2. Product instruction**

- How to use

- The device is connected with the host through USB. After the USB power supply is turned on, the buzzer will warning tone and the light will flash to indicate that the initialization is successfully, so it enters the code scanning mode.
- It can also be connected to the host via USB 4G Adapter. At this time, press the button, the code scanning gun will start automatically, and the buzzer will ring the Startup prompt tone and the light will flash once to indicate that the initialization is successful and enter the code scanning mode.
- Users can scan the configuration code to configure parameters, and a buzzer will ring after successful (See Chapter 3 of this manual for the configuration code picture)
- The device will shut down automatically after no operation for 1
- When the device is turned on, the device aligns the

barcode or QR code to be scanned (it is recommended to keep the distance above 3cm), and press the button until the code scanned. After the device scans the code successfully, the buzzer sounded, and the green indicator will flash once, indicating that the code scanning is successful.

- Maintenance
- The shell of the device can be wiped with a clean soft cloth. If needed, user can use a small amount

of detergent add to water, and wipe with a soft cloth.

- If the device responds slowly, clean the scanning area. Stains and dust on the scanning area may lower efficiency. When cleaning, the user should use good facial tissue and gently wipe. If

the paper with poor paper quality is used for wiping, the surface is damaged and it will reduce the efficiency.

## 2.3 Fault handling

If the device does not work properly, perform as follow:

- Ensure that the device is connected with the host. Check whether the data cable is correctly connected with the host, which includes whether it is firmly connected and whether the original data cable is used. Don't use the USB extension cable, it will cause the device can not work properly;
- Turn up the brightness of the phone. When scanning the barcode of the mobile phone screen, check whether the brightness of the mobile phone screen is enough. If the screen is too dark, it is difficult to scanning the code.

## 3. Configuration code picture (Please cover

other QR codes when scanning to avoid incorrect QR codes)

- Turn on \ off the prompt voice

### 3.1. Turn on \ off the prompt voice



Turn on the prompt voice

Turn off the prompt voice

3.2. Set the code type



Open the default code type

Open all code type



3.4 Restore factory Setting



The default setting of the current interface is HID-KBW. If you want to set it to HID-POS, contact customer service

4 Specification

Model	ESCS-U30
Dimension	157*95*72.5 mm

Material	PC+ABS
Working Voltage	DC 5V $\pm$ 0.25V
Working Current	<260mA
Connection	USB
Indication	Buzzer & LED
Camera	640*480pixels, COMS, 30fps
Canning Angle	Rotor angle 360 ° , inclination $\pm$ 55°, declination $\pm$ 55°
Depth of Field	EAN13 35~155mm(13mil)
	Code128 60~275mm(20mil)
	Code39 30~95mm(5mil)
	QR Code 20~170mm(15mil)

Decoding Capability	<div>1D Code</div> <div>Code128 Code39 Code93 EAN13 EAN8 UPC_A UPC_E0 UPC_E1</div> <div>ISBN13 Codabar Can set open or</div> <div>not Interleaved2of5 Matrix2of5 Industrial25</div>
---------------------	---

	<p>Code11 RSS-14 RSS Limited RSS Expanded MSI Plessey Standard 25 Plessey ChinaPost25 GS1</p> <p>Composite</p>
	<p>2D Code</p> <p>QR Code PDF417 Data Matrix</p> <p>Can set open or not Han Xin Micro PDF417 Micro QRCode</p> <p>MaxiCode Aztec Code16K</p>
Environmental Parameter	Working Temperature: -10°C~50°C
	Storage Temperature: -20°C~60°C
	Working Humidity: 5%RH~95%RH(Non-condensing)
	Drop Test: 1.5m
Certificate	CE, FCC, RoHS, WEEE

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and  
(2) this device must accept any interference

received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user

- is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

**Read More About This Manual & Download PDF:**

**Documents / Resources**

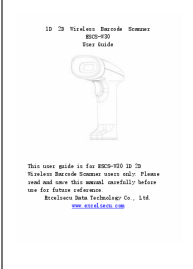	<p><a href="#">ExcelSecu ESCS-W30 1D 2D Wireless Barcode Scanner</a> [pdf] User Guide ESCS-W30, ESCSW30, 2AU3H-ESCS-W30, 2AU3HESCSW30, ESCS-W30 1D 2D Wireless Barcode Scanner, ESCS-W30, 1D 2D Wireless Barcode Scanner, Wireless Barcode Scanner, Barcode Scanner, Scanner</p>
---	--

**References**

-  [Excelsecu Data Technology Co., Ltd.](#)