



## eyc-tech PHD330 Pressure Differential Transmitter Instruction Manual

[Home](#) » [eyc-tech](#) » eyc-tech PHD330 Pressure Differential Transmitter Instruction Manual 

eyc-tech PHD330 Pressure Differential Transmitter Instruction Manual



## Contents

- 1 Security Considerations
- 2 Dimension
- 3 Connection Diagram
- 4 DIP Switch
  - 4.1 Switch 5: Switch measuring range-2
  - 4.2 Switch 6: Linear / Square root, output switching
- 5 Analog Output setting
- 6 Autozero
- 7 RS-485 and Modbus
- 8 Technical Data
- 9 User Software
- 10 Documents / Resources
  - 10.1 References
- 11 Related Posts


## Security Considerations

Please read this Specification carefully, prior to use of this, and keep the manual properly, for timely reference.  
Solemn Statement : This product can not be used for any explosion-proof area. Do not use this product in a situation where human life may be affected. eyc-tech will not bear any responsibility for the results produced by the operators !



### !WARNING

- Installation and wiring must be performed by qualified personnel in accordance with all applicable safety standards.
- This product must be operated under the operating conditions specified in manual to prevent equipment damages.
- Please using the product under the ordinary pressure, or it will influence safe problem.
- This product must be operated under the operating condition specified in this manual to prevent equipment damages.
- This product must be operated under the normally atmospheric condition to prevent equipment damages.
- To prevent products damage, always disconnect the power supply from the product before performing any wiring and installation.
- All wiring must comply with local codes of indoor wiring and electrical installation rules.
- Please use crimp type terminal.
- To prevent personal injury, do not touch the moving part of product in operation.
- It may cause high humidity atmosphere during the product was breakdown. Please take safety strategy.


## Dimension

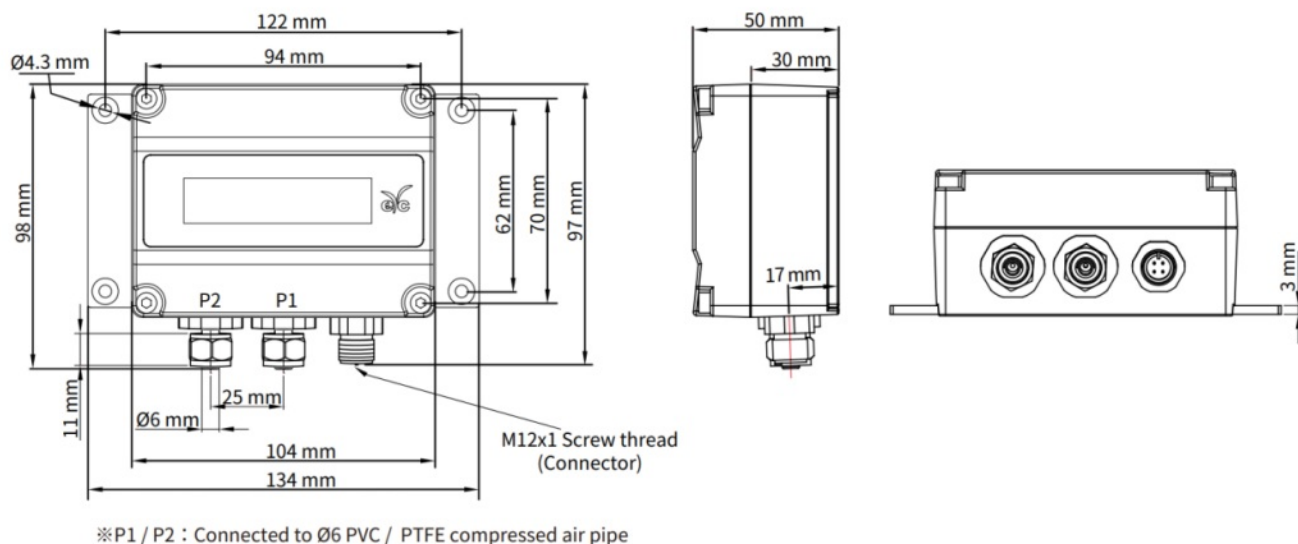

## Connection Diagram

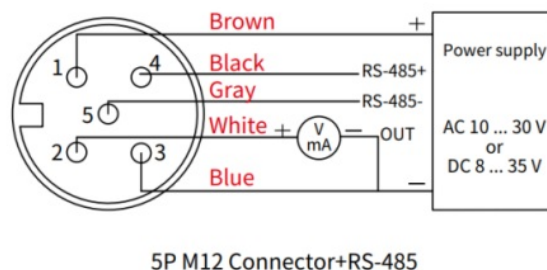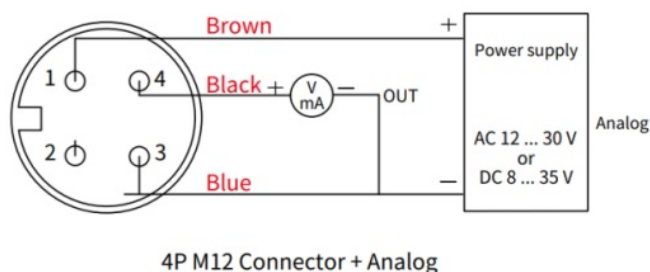

## DIP Switch

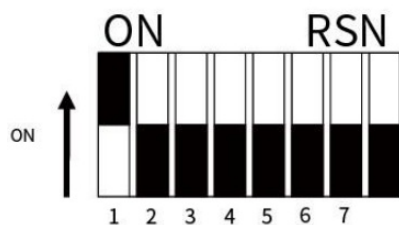

### 【 Function 】

- 1. Activate / deactivate DIP switch
- 3~4. Switch measuring range-1
- 5. Switch measuring range-2
- 6. Linear / Square root, output switching
- 7. Filtering On / Off

### Switch 1: Activate / deactivate DIP switch

The function of DIP switch\_3 ... 7 is only effective while DIP switch\_1 is toggled to “On”.

STATUS	On	Off
DIP SWITCH		

### Switch 3 & 4: Switch measuring range-1

User can switch measuring range by toggling switch\_3&4 according to the table below. Please note that when switch\_3&4 are both toggled to “On”, the measuring range is set as factory default or the range set in user software by user. (unit: Pa)

DIP switch 3	DIP switch 4	Range(20)	Range(30)	Range(40)
		300	1000	5000
		500	1600	7500
			2500	10000
		Upon request		

If user switch measuring range by DIP switch, the accuracy is for reference only.



#### Switch 5: Switch measuring range-2

User can toggle switch\_5 to choose unidirectional or bidirectional of measuring.

Ex: When the maximum measuring value is 300 Pa


Switch\_5 “On”: unidirectional, 0...300 Pa

Switch\_5 “Off”: bidirectional, -300...300 Pa

STATUS	0 ... 100 %	-100 ... 100%
DIP switch 5		

#### Switch 6: Linear / Square root, output switching

Square root output is for air velocity application. With proper instrument, air velocity can be calculated from the square root of differential pressure.

STATUS	$\sqrt{\quad}$	LINEAR
DIP switch 6		

The following formulas are used to convert linear signal to a square root extraction type:



**For 4...20 mA output:**

$$\text{OutputSqRt} = 4\text{mA} + (4 \times \sqrt{(\text{OutputLinear} - 4\text{mA})})$$

$$\text{OutputSqRt} = \sqrt{10 \times \sqrt{\text{OutputLinear}}}$$



**Switch 7: Filtering On/Off**

User can toggle switch\_7 to turn on / off signal filtering function. When turned on, filtering function will follow setting in user software.

STATUS	On	Off
DIP switch 7		

**Analog Output setting**

User can choose 4 ... 20 mA or 0 ... 10 V for analog output by placing jumper to the corresponding places shown in the table below.

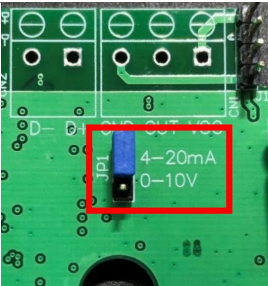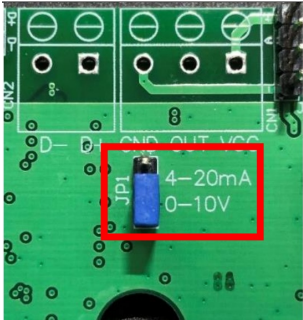	
4 ... 20 mA	0 ... 10 V

**\* User must do a power cycle after changing jumper placement.**

**Autozero**

This button allows user to set the current pressure to zero point. It is required to press the button about 5 seconds, and user can see LED2 will turn on. Then user can release this button and will see the LED2 flashing, and the new zero point has been set.

This button also allows user to restore factory default setting. It is required to press the button about 10 seconds, user will first see LED2 turn on then off. Then user can release this button and will see the LED2 flashing, and the new zero point has been set.



## RS-485 and Modbus

PHD330 integrate a RS-485 interface for digital communication as a option feature. Based on Modbus protocol makes the general convenience on PLC, HMI and PC connection. For Modbus protocol information please attached the file from website to download. Besides the PLC, HMI application, the user software provide the device setting and data logging function, it also can free download from website

## Technical Data


- **Max. network size:** 32 transmitters
- **Communication:** with COM-Port (serial interface) of PC
- **Max. network expansion:** 1200m (3937ft) total length at 9600 baud
- **Transmission rate:** 9600, 19200, 38400, 57600, 115200 Baud
- **Parity:** None, Even, Odd
- **Data length:** 8 bit
- **Stop bit:** 1 or 2 bit
- **Factory default Station address:** 1, Data format= 9600, N81

## User Software

1. Hardware connection: Connect the PHD330 to PC by USB to RS-485 converter.
2. Check the COM port number from Computer Management




3. Open the PHD330 UI, go to function "Interface", click item "Config" and then setting COM port, BAUD rate and data format, pressed "Scan" bottom for scan devices and "Apply" for connection.

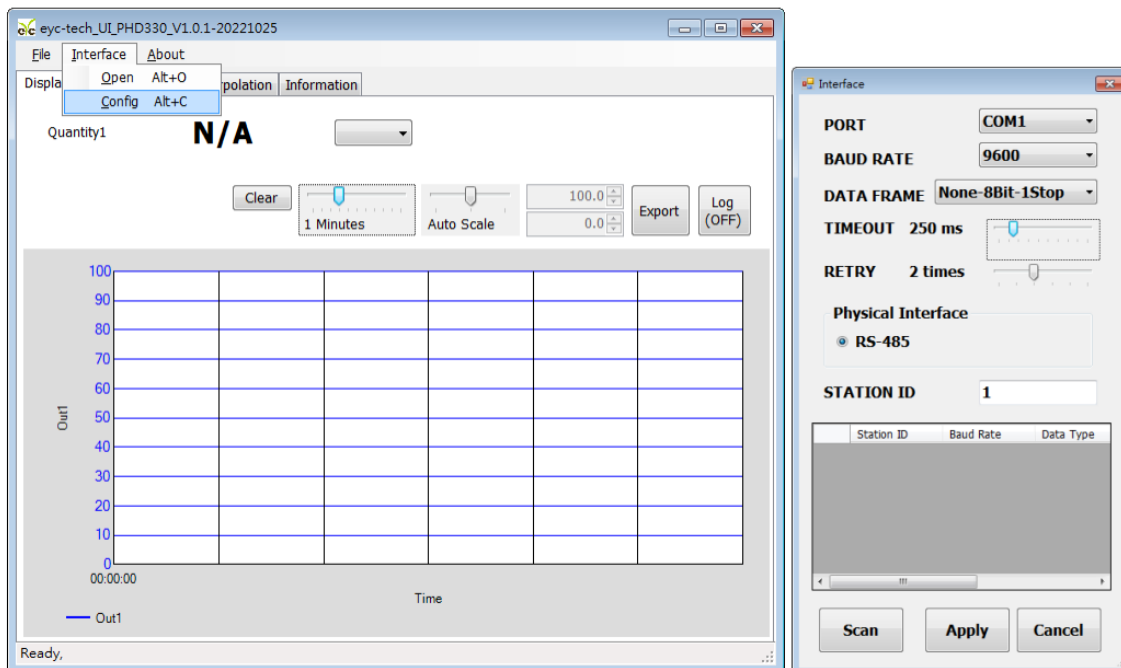

4. Setting on Analog Output
  1. Quantity: Pressure
  2. Filter (sec): 0, 5, 10, 20, 25 seconds
  3. Signal: Linear / Square root extraction
    - LCD shown the  $\sqrt{\quad}$  mark on left-low side and red green of LED2 flash slowly while the square root extracted function has active.
  4. Upper Range, Lower Range: Range for Span of Upper and Lower




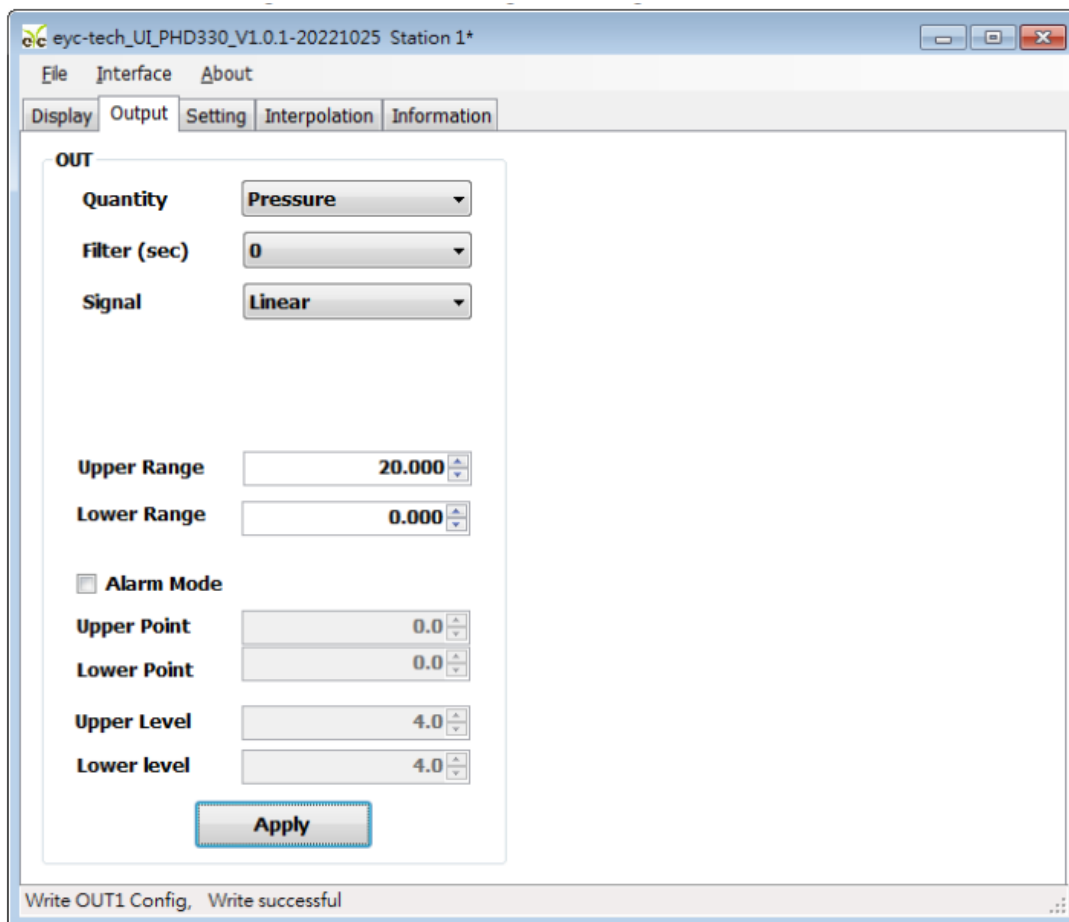

##### 5. Setting on RS-485 and offset adjustment


1. Station ID: 1~247
2. Baud Rate: 9600 / 19200 / 38400 / 57600 / 115200
3. Data Frame: None-8Bit-1Stop / None-8Bit-2Stop / Even-8Bit-1Stop / Even-8Bit-2Stop / Odd-8Bit-1Stop / Odd-8Bit-2Stop /
4. Pressure Offset adjustment, unit available in inH2O only
5. Multiple: The multiple factor of measuring value, from 0.01 to 100
6. Temperature (°C): gas temperature
7. Relative Humidity (%): gas humidity
8. Air Pressure (mBar): gas pressure
9. K Coefficient: Pitot tube flow coefficient
10. Area (m<sup>2</sup>): pipe cross-sectional area
11. Unit of Velocity Rate
12. Unit of Volume Rate if Area mode or display label if Span mode
13. Calculation method of volumetric rate: Selecting Span means the volume flow rate is calculated according to the upper and lower points of the volume range, and selecting Area means the volume flow rate is calculated by multiplying the converted flow velocity by the flow coefficient and the pipe cross-sectional area.
14. Upper Range, Lower Range: Volume Span of Upper and Lower



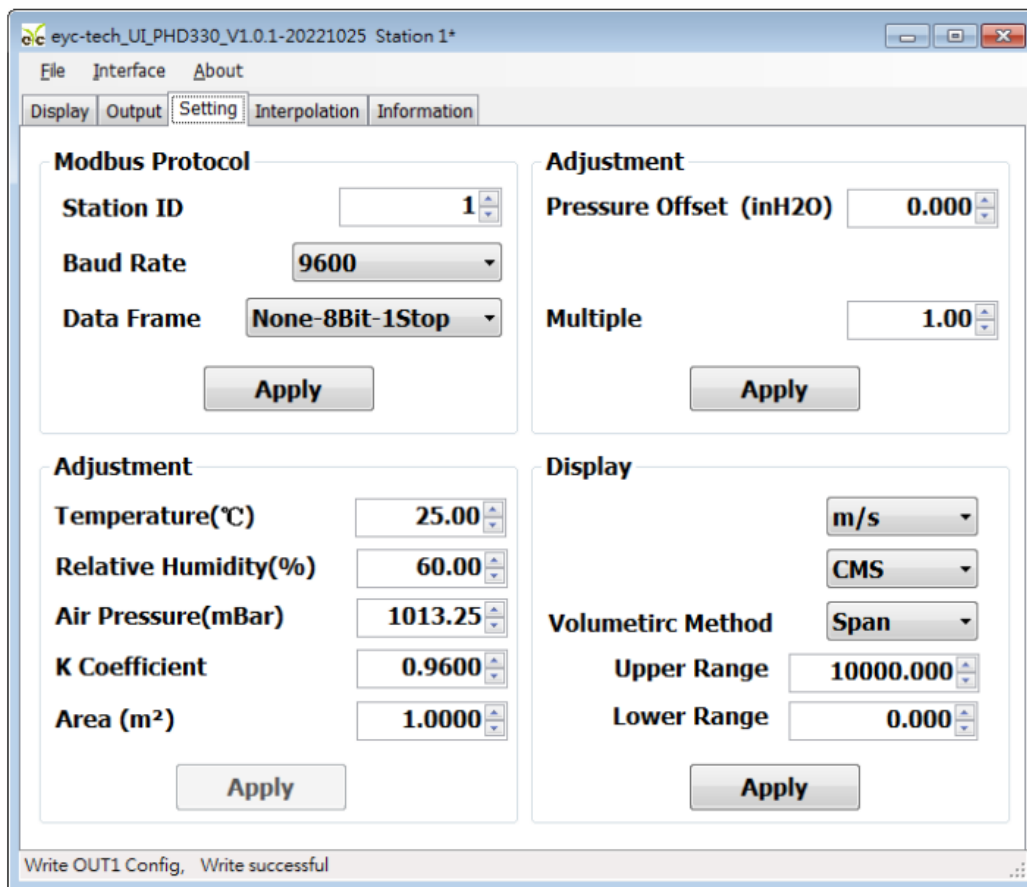

## 6. Unit setting, data display and data logging

1. Pressure unit: mbar, Pa, hPa, kPa, mmH2O, mmWS, inH2O, mmHg
2. Export file: \*.CSV

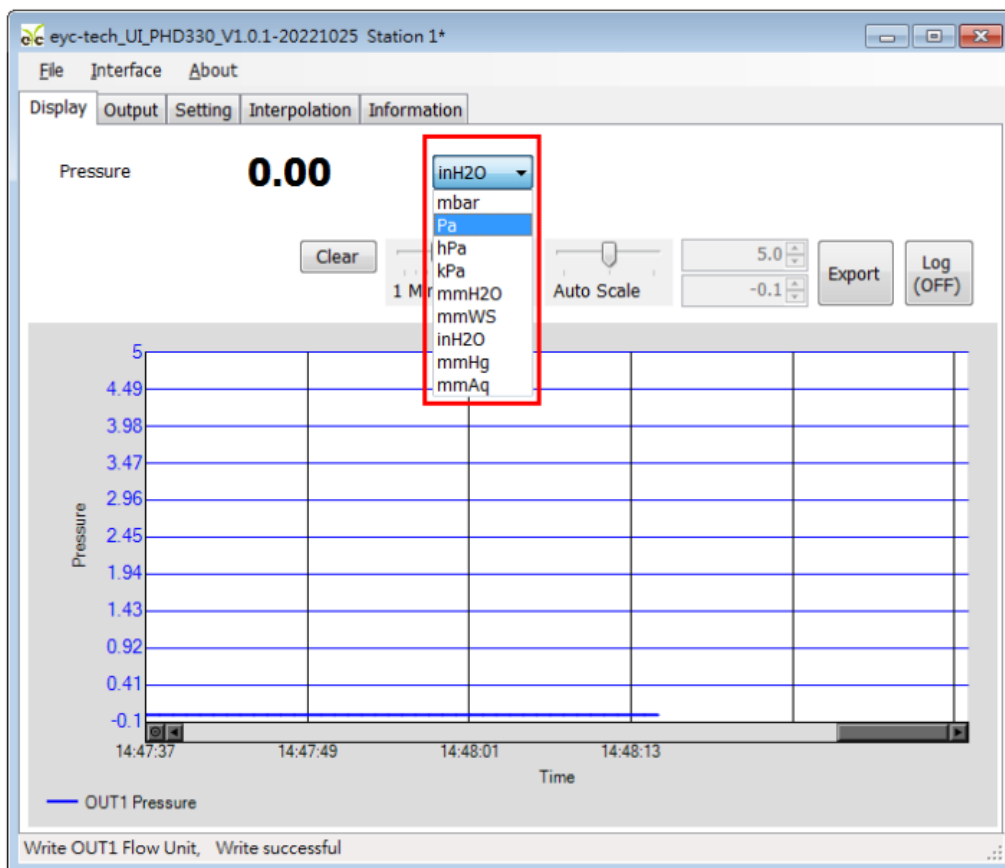

## 7. Transmitter information

eyc-tech\_UI\_PHD330\_V1.0.1-20221025 Station 1\*

File Interface About

Display Output Setting Interpolation Information

<b><u>Product Identification</u></b>		<b><u>Offset Adjustment</u></b>	
Model Name	PHD330	Pressure Offset (inH2O)	0.000
Firmware Version	1.0.8		
Serial Number	20221025001	<b><u>Multiple Adjustment</u></b>	
Firmware Checksum	DB29	Multiple	1.00
Calibration Date	2022-10-25		
<b><u>Calib Data</u></b>	<b><u>Lower Point</u></b>	<b><u>Upper Point</u></b>	
Pressure (inH2O)	-139.00	139.00	

Write OUT1 Config, Read successful

### eyc-tech Measuring Specialist

enhance your capability with sensor technology

Air flow | Humidity | Dew point | Differential pressure | Liquid flow



Temp. | Pressure | Level | Air quality | Signal meter

Tel. 886-2-8221-2958

Web: [www.eyc-tech.com](http://www.eyc-tech.com) e-mail:

[info@eyc-tech.com](mailto:info@eyc-tech.com)

## Documents / Resources

 <p>Operation Manual eyc-tech PHD330 Industrial Differential Pressure Transmitter</p> 	<p><a href="#">eyc-tech PHD330 Pressure Differential Transmitter</a> [pdf] Instruction Manual PHD330 Pressure Differential Transmitter, PHD330, Pressure Differential Transmitter, Differential Transmitter, Transmitter</p>
--	--

## References

- eyc-tech Taiwan measurement specialist, sensor manufacturer