



## Contents [ [hide](#) ]

- [1 FAAC XR2 433 C Two-Channel External Receiver Control Board](#)
- [2 Product Usage Instructions](#)
- [3 DESCRIPTION](#)
- [4 TECHNICAL SPECIFICATIONS](#)
- [5 MEMORIZZAZIONE DEI RADIOCOMANDI](#)
- [6 DELETION OF ALL RADIO CONTROLS](#)
- [7 FUNCTION LOGIC](#)
- [8 CUSTOMER SERVICE](#)
- [9 Frequently Asked Questions](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)



## **FAAC XR2 433 C Two-Channel External Receiver Control Board**



## Specifications

- **Power Supply:** 12/24V AC-DC
- **Reception Frequency:** 433MHz (XR2 433 C) / 868MHz (XR2 868 C)
- **Current Consumption:** 100mA
- **Decoding:** DS-LC-SLH (XR2 433 C) / DS-SLH (XR2 868 C)
- **Memorizable Codes:** 250
- **Number of Channels:** 2
- **Number of Relay Outputs (N.O.):** 2
- **Output Type:** N.O. impulse (CH1), N.O. impulse/fixed (selectable) (CH2)
- **Maximum Load:** 0.5A / 120VA
- **Protection Rating:** IP44
- **Operating Temperature:** -20°C to +55°C

## Product Usage Instructions

### Radio Commands Memory

1. Select the desired combination of the 12 DIP switches on the DS remote control.
2. Press the button on the receiver corresponding to the channel you want to associate the remote control with for 1 second.
3. The corresponding LED on the receiver will start flashing slowly for 5 seconds.
4. Within these 5 seconds, press the desired button on the remote control.

Similar steps can be followed for memorising SLH and LC radio commands as described in the user manual.

### **Cancellation of All Radio Commands**

1. Press and hold the button on the receiver for about 5 seconds until the corresponding LED lights up steadily.

### **Functioning Logic**


The device allows different radio controls to operate different channels. For example, remote control 1 operates channel 1, and remote control 2 operates channel 2.

### **DESCRIPTION**

- The XR2 C control board is a two-channel external receiver, which has an integrated decoding system (DS, SLH, LC), named OMNIDEC.
- When a channel is activated by radio control (DS, SLH, LC), the relevant N.O. relay contact closes by the methods described in Chapter 5.

### **The selectable configurations are:**

- **CH1** = pulsed N.O. relay output
- **CH2** = pulsed/fixed N.O. relay output (selectable by DS1)

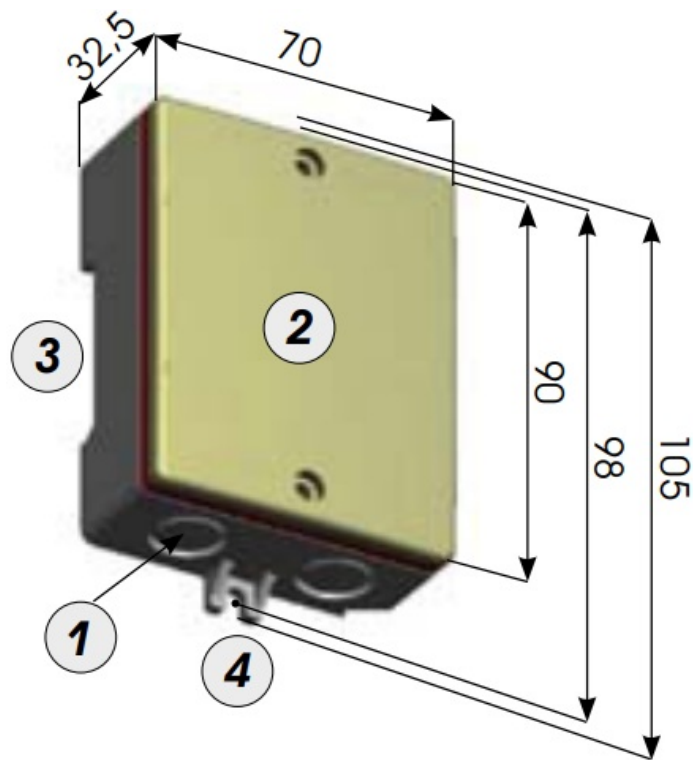

1. Preperforated facility for cable grippers
2. Cover
3. Facility for securing on the DIN guide
4. Fittings for screw securing
5. Terminals for command output (N.O.)
6. Normally open (N.O.) relay contact
7. Signalling LEDs (ON= OUTPUT ACTIVE) DL1=LED CH 1 DL2=LED CH2
8. Radio programming push-buttons SW1=PUSH-BUTTON CH1 SW2=PUSH-BUTTON CH2
9. **DS1**:= Selection dip-switch
10. Power supply terminal
11. Terminal for antenna
12. **DL3**: Mains ON LED ( ON = MAINS PRESENT )

DS1	ON	OFF
DIP SWITCH 1	OUTPUT CHANNEL 2 FIXED	OUTPUT CHANNEL 2 PULSED
DIP SWITCH 2	NOT USED	NOT USED

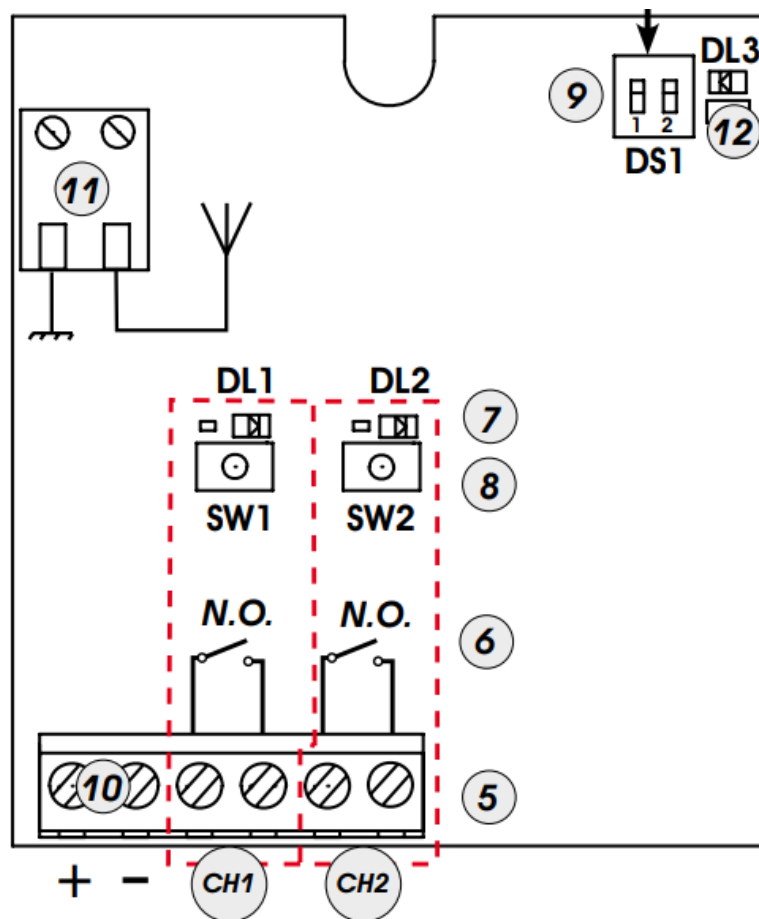


Fig.1

## TECHNICAL SPECIFICATIONS

	XR2 433 C	XR2 868 C
<b>POWER SUPPLY (V)</b>	12/24 ac-dc	12/24 ac-dc
<b>RECEPTION FREQUENCY (MHz)</b>	433.92 $\pm$ 0.1	868.35 $\pm$ 0.2
<b>ABSORBED CURRENT (A)</b>	100 mA	100 mA
<b>DECODING (OMNIDEC SYSTEM)</b>	DS-LC-SLH	DS-SLH
<b>SAVEABLE CODES</b>	250	250
<b>NUMBER OF CHANNELS</b>	2	2

<b>NUMBER OF RELAY OUTPUTS (N.O.)</b>	N 1 pulsed (CH1) N 1 pulsed/fixed (selectable) (CH2)	N 1 pulsed (CH1) N 1 pulsed/fixed (selectable) (CH2)
<b>RELAY CONTACTS CAPACITY</b>	0.5 A / 120 VA	0.5 A / 120 VA
<b>PROTECTION CLASS</b>	IP 44	IP 44
<b>OPERATING AMBIENT TEMPERATURE (°C)</b>	-20 / +55	-20 / +55

## MEMORIZZAZIONE DEI RADIOCOMANDI



- At most, only one type of radio coding can coexist on the XR2 C board.
- (DS, SLH, LC) .
- A maximum of 250 codes, divided between channels 1 and 2, can be stored in the memory.

## MEMORY STORAGE OF DS RADIO CONTROLS

1. On the DS radio control, select the required ON-OFF combination for the 12 dip-switches.
2. Press for 1 second the push-button on the receiver (Fig.1 ref 8) relating to the channel you wish to associate with the radio control.
3. The relevant LED on the receiver (Fig. 1, ref. 7) begins to flash slowly for 5 secs.
4. Within these 5 secs., Press the appropriate push-button on the radio control.
5. The relevant LED (Fig.1 ref. 7) lights up on a steady beam for 1 second and then goes OFF, indicating that storage was executed.
  - The board will send a command to the output associated with the channel.
6. To add other radio controls, set the same ON – OFF combination used in point 1).

## MEMORY STORAGE OF SLH RADIO CONTROLS

1. On the SLH master radio control, simultaneously press and hold down push-buttons P1 and P2.

2. The radio control LED begins to flash (for about 10 secs.).
3. Release both push-buttons.
4. Press, for 1 second, the push-button on the receiver (Fig.1 ref 8) relating to the channel you wish to associate with the radio control.
5. The relevant LED on the receiver (Fig. 1, ref. 7) begins to flash slowly for 5 secs.
6. Within these 5 secs., While the radio control LED is still flashing, press and hold down the required push-button on the radio control (the radio control LED lights up on a steady beam).
7. The LED on the board (Fig.1 ref 7) lights up on a steady beam for 1 second and then goes OFF, indicating that storage was executed.
8. Release the radio control push-button.
9. Quickly press twice in succession the memory stored radio control push-button.
  -  The board will send a command to the output associated with the channel.
10. To add other radio controls, transfer the code of the memory-stored push-button of the radio control to the relevant push-button of the radio controls to be added, observing the following procedure:
  - **a)** On the memory-stored radio control, simultaneously press and hold down push-buttons P1 and P2.
  - **b)** The radio control LED begins to flash.
  - **c)** Release both push-buttons.
  - **d)** Press the memory stored push-button and hold it down (the radio control LED lights up on a steady beam).
  - **e)** Bring the radio controls near, press and hold down the pushbutton of the radio control to be added, releasing it only after the double flash of the radio control LED, which indicates learning was executed.
  - Quickly press twice the push-button of the new memory stored radio control.
  -  The board will send a command to the output associated with the channel.

## MEMORY STORAGE OF LC RADIO CONTROLS

The LC radio coding is available only for certain markets and only for the receiver XR2 433C.

1. Press, for 1 second, the push-button on the receiver (Fig.1 ref 8) relating to the

channel you wish to associate with the radio control.

2. The relevant LED on the receiver (Fig. 1, ref. 7) begins to flash slowly for 5 secs.
3. Within these 5 secs., Press the appropriate push-button on the LC remote control.
4. The LED on the receiver (Fig.1, ref 7) lights up on a steady beam for 1 second, indicating memory storage executed, and then resumes flashing for another 5 secs, during which another radio control can be memory-stored.
5. When the 5 seconds. have elapsed, the LED goes OFF, indicating the end of the procedure.
6. To store other radio controls, repeat the previous procedure.
  - **If you wish to proceed in remote mode, (without opening the receiver container), follow the procedure below:**
  - **a)** Take an already memory-stored radio control.
  - **b)** Press and simultaneously hold down push-buttons P1 and P2 until the flashing light of the LED (Fig.1, ref 7) on the receiver board lights up.
  - **c)** The LED will flash slowly for 5 seconds.
  - **d)** Within 5 secs. Press the push-button of the radio control that had been memory-stored to enable learning on the selected channel.
  - **e)** The LED on the board relating to the channel being learned flashes for 5 seconds., within which time the code of another radio control must be transmitted.
  - **f)** The LED (Fig.1 ref 7) lights up on a steady beam for 2 seconds, indicating memory storage executed, and then resumes flashing for 5 secs, during which point “e” can be repeated, and also the subsequent points, for other remote controls and finally goes OFF.


## **DELETION OF ALL RADIO CONTROLS**

1. To delete ALL the radio control codes associated with channels 1 and 2, hold down push-button SW1 or SW2 (Fig.1 ref 8) for 10 seconds.
2. The LED (Fig.1, ref. 7) relating to the pressed push-button flashes for the first 5 secs, and then flashes more quickly for the next 5 secs.
3. The LED lights up on a steady beam for 2 seconds and then goes OFF.
4. Release the pressed push-button when both the relevant LED lights up on a steady beam.

## **FUNCTION LOGIC**



- You can command the receiver channels from different radio controls. (E.g.: radio control 1 commands channel 1, radio control 2 commands channel 2)

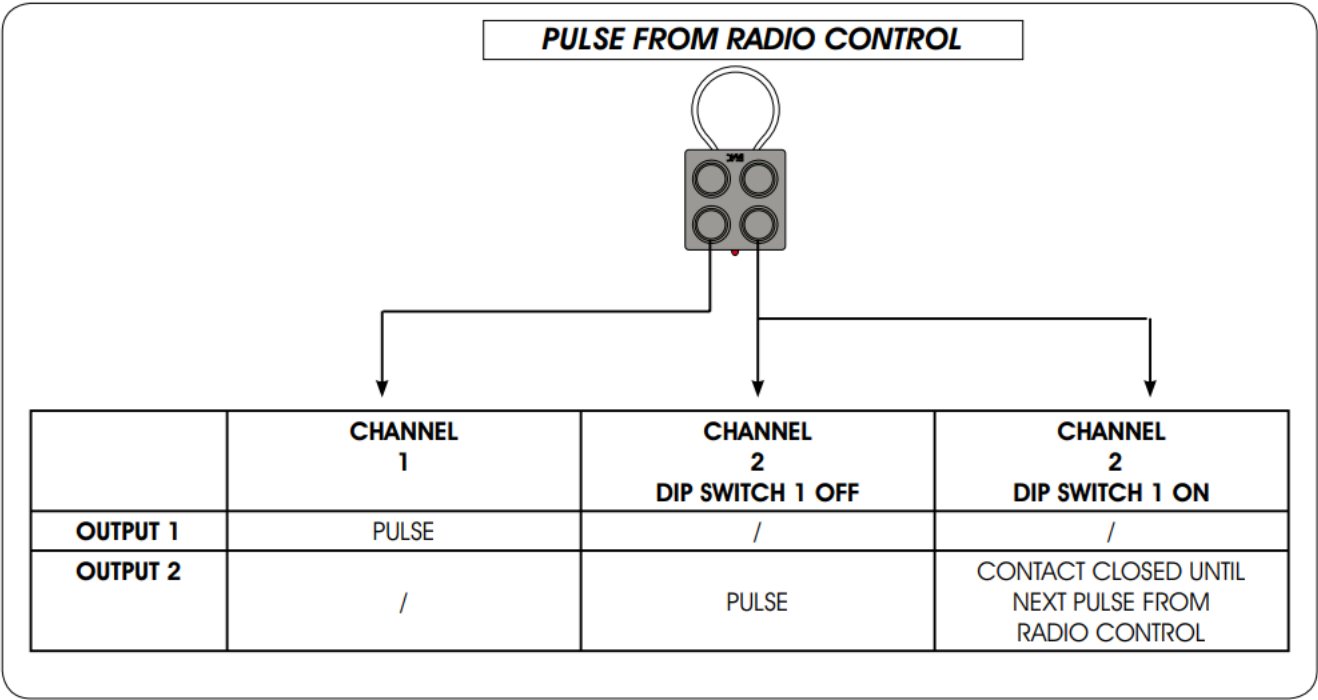

0470

- **Model:** XR2 868C
- **Transmission Frequency:** 868.35MHz ±200KHz
- **Power supply:** 12 ÷ 24 ac/dc
- This product complies with Directive 99/05/EEC.
- **Exclusive use:** gate opener.
- FREE USE IN U.E.

0470

- **Model:** XR2 433C
- **Transmission Frequency:** 433.92MHz ±100KHz
- **Power supply:** 12 ÷ 24 ac/dc
- This product complies with Directive 99/05/EEC.
- **Exclusive use:** gate opener.
- FREE USE IN U.E..

CUSTOMER SERVICE

- FAAC S.p.A.
- Via Calari, 10
- 40069 Zola Predosa (BO) – ITALIA
- Tel. 003905161724
- Fax. 0039051758518
- [www.faac.it](http://www.faac.it)
- [www.faacgroup.com](http://www.faacgroup.com)

## Frequently Asked Questions


How many codes can be memorized on each channel?

You can memorise a maximum of 250 codes divided between channels 1 and 2.

What is the operating temperature range of the product?

The operating temperature ranges from -20°C to +55°C.

## Documents / Resources

	<p><a href="#">FAAC XR2 433 C Two Channel External Receiver Control Board [pdf]</a> Owner's Manual</p> <p>XR2 433 C, XR2 433 C Two Channel External Receiver Control Board, Two Channel External Receiver Control Board, External Receiver Control Board, Receiver Control Board</p>
---	--

## References

- [User Manual](#)

ul>

FAAC

External Receiver Control Board, FAAC, Receiver Control Board, Two Channel External Receiver Control Board, XR2 433 C, XR2 433 C Two Channel External Receiver Control Board

---

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.