
FANIMATION® TRD065F1M DC **Power Ceiling Fan Remote Control**





FANIMATION TRD065F1M DC Power Ceiling Fan Remote Control User Manual

Home » FANIMATION » FANIMATION TRD065F1M DC Power Ceiling Fan Remote Control User Manual

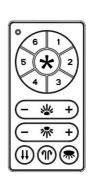


Contents

- 1 FANIMATION TRD065F1M DC Power Ceiling Fan Remote **Control**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 INSTALLATION INSTRUCTIONS**
- **5 FUNCTIONS OF REMOTE CONTROL**
- **6 FCC STATEMENT**
- 7 Documents / Resources
 - 7.1 References

FANIMATION®

FANIMATION TRD065F1M DC Power Ceiling Fan Remote Control

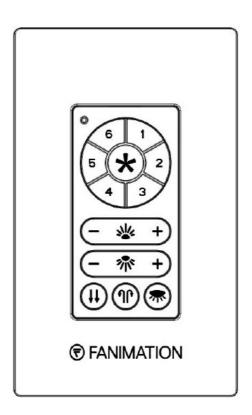

Product Information

Specifications:

• Model: TRD065F1M

• Power Supply: AC120V 60Hz

• Output Power: 1.67A (Max.) for motor or 200W (Max.) for incandescent lamp load

• Remote Control Features: Fan speed control, light dimming control, direction control, color-temperature selection

Product Usage Instructions

Learning Process:

The Hand Held Remote Control is equipped with a learning ID function to prevent interference from other remote units. Follow these steps:

- 1. Ensure the unit is powered off.
- 2. If replacing the transmitter or receiver, redo the learning process.
- 3. The receiver can remember up to 3 transmitters.
- 4. If the fan is not responding, turn off the power to the receiver and repeat steps 1 and 2.

Pairing Transmitters:

To clear pairing transmitters:

- 1. Turn off the ceiling fan and turn it on within 60 seconds.
- 2. Press and hold the LEARN button for over 8 seconds.

Functions of Remote Control:

- Turn off the ceiling fan.
- Adjust fan speed (1~6 speed, 6 for high speed).
- Turn on or off UP lights.
- Brighten or dim lights as desired.
- Turn on or off DOWN lights.
- · Brighten or dim lights as desired.
- Change fan direction counterclockwise for cooling breeze, and clockwise for warm air circulation.
- Select the desired color temperature when the lights are on.

Installing Wall Plate:

Attach the wall plate using the two provided screws.

FCC Compliance:

To assure continued FCC compliance, avoid making any changes or modifications not expressly approved by the grantee of this device.

FCC ID: 2AQZU-18060

FAQ

Q: What should I do if the ceiling fan is not responding to the remote?

A: Turn off the power to the receiver and repeat the learning process as outlined in the manual.

• Q: How many transmitters can the receiver remember?

A: The receiver can remember up to 3 transmitters.

INSTALLATION INSTRUCTIONS


- **NOTE:** This unit is to be used for the control of a DC power ceiling fan and in an AC120V 60Hz power supply only. Output Power: 1.67A(Max.) for motor or 200W (Max.) for incandescent lamp load.
- **Important:** Using a full-range dimmer switch (not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full-range dimmer switch to control fan speed.

LEARNING PROCESS

NOTE:

The Hand Held Remote Control is equipped with a learning ID function which has code combinations to prevent potential interference from other remote units. This unit finished the learning process inside the manufactory, if replace transmitter or receiver, the user needs to redo the learning process before using this unit. The receiver could remember up to 3pcs transmitter.


- 1. **Step: 1.** Switch the power off at the fuse box or circuit breaker before you begin installing the fan. Make wiring connections ok? Within 60 seconds of turning the Receiver AC power ON, press the transmitter LEARN button.
- 2. **Step: 2.** Hold the LEARN button for about 1 second, once the receiver has detected the ID, the DOWN light will blink twice then turn off, the fan running at medium speed, and make the beep sound twice to indicate the pairing process have been completed. Then the transmitter can control the receiver.
 - **Note:** After the AC power is on, do not press any other buttons on the transmitter before learning ok. Because doing so will cause the procedure to fail.

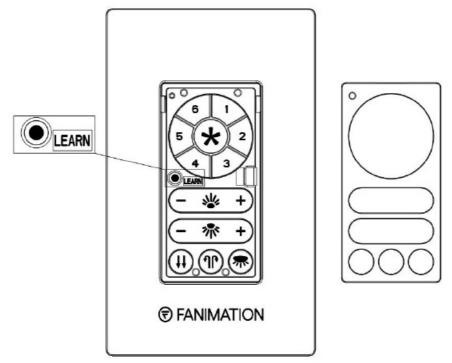


- After completing the steps above, you should be able to operate the ceiling fan and light. If the ceiling fan is not responding to the transmitter, please turn the power off to the receiver and repeat steps 1 and 2.
- Please note that the transmitter can learn in multiple receivers, when doing the learning process please make sure not to learn in another receiver.
- If you want to clear these pairing transmitters, turn off the ceiling fan and turn it on within 60 seconds, and press and hold the LEARN button for 8 seconds. The DOWN lights blink twice then turn off and the fan runs at medium speed. This will indicate the ceiling fan is only controlled by one remote.

*The buzzer setting: you could press and hold for about 5 seconds to turn on or off.

FUNCTIONS OF REMOTE CONTROL

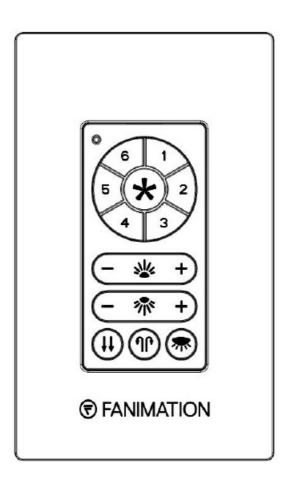

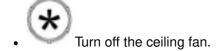



: Press the button to set the fan speed. (1~6 speed, 6 for high speed.)



- *: Turn on or off UP lights.
- Press the button to turn on and brighten lights to the desired level and release. Press the button to turn on and dim lights to the desired level and release.




- Turn on or off DOWN lights.
 - Press the button to turn on and brighten lights to the desired level and release. Press the button to turn on and dim the lights to the desired level and release.
- The fan runs counterclockwise. Airflow will provide a downward cooling breeze.
- The fan runs clockwise. Airflow will force warm air downward without a noticeable breeze.



When lights are on, use this button to select the desired color temperature.

INSTALLING WALL PLATE

Attach the wall plate using the two provided screws.

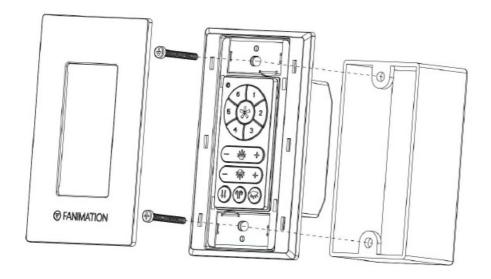

FCC STATEMENT

To assure continued FCC compliance:

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

• FCC ID: 2AQZU-18060

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Documents / Resources



FANIMATION TRD065F1M DC Power Ceiling Fan Remote Control [pdf] User Manual 18060, TRD065F1M DC Power Ceiling Fan Remote Control, TRD065F1M, DC Power Ceiling Fan Remote Control, Power Ceiling Fan Remote Control, Ceiling Fan Remote Control, Fan Remote Control, Remote Control, Control

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.