

FENIX
HL45R Multipurpose
Focusable Induction
Headlamp



FENIX HL45R Multipurpose Focusable Induction Headlamp User Manual

[Home](#) » [FENIX](#) » FENIX HL45R Multipurpose Focusable Induction Headlamp User Manual 

Contents

- [1 FENIX HL45R Multipurpose Focusable Induction Headlamp](#)
- [2 OPERATING INSTRUCTIONS](#)
- [3 TECHNICAL PARAMETERS](#)
- [4 overview](#)
- [5 BATTERY SPECIFICATIONS](#)
- [6 BATTERY REPLACEMENT](#)
- [7 USAGE AND MAINTENANCE](#)
- [8 INCLUDED](#)
- [9 CONTACT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)



FENIX HL45R Multipurpose Focusable Induction Headlamp



FENIX HL45R HEADLAMP

- 010001umens maximum output, 220 meters maximum beam distance.
- Utilizes one Luminus SFT25R cold white LED and one OSRAM GR
- QSSPAI .23 red LED; with a life span of 50,000 hours each.
- Rotary switch and electronic switch combination for lockout function, mode switching, and output selection.
- Rotatable focus ring for switching between spotlight and floodlight.
- Gesture-sensing function – the eadlamp can be turned on or off with a wave of the hand.
- Powered by a 1900mAh battery and compatible with three AAA batteries.
- IJSB Type-C charging. The high-quality aluminum alloy constructed front case is rugged and reliable
- with great thermal performance.
- IP66-rated protection and 1-meter impact resistance.
- Headlamp Includina mount): 3.08" x 1.97" x 1.75"/78.2 x 50 x 44.5 mm.
- Weight: 4.9 oz/138 g (including battery and headband).

OPERATING INSTRUCTIONS

On/off

On:

- With the lamp locked, turn the rotary switch clockwise from "OFF" to any designated mode to unlock and turn on the lamp. With the lamp unlocked, press and hold the electronic switch for 0.5 seconds to turn on the lamp.

Off:

- With the lamp turned on, turn the rotary switch counterclockwise to "OFF" to lock and turn off the lamp or press and hold the electronic switch for 0.5 seconds to turn off the lamp.

Mode Switching

With the lamp turned off, turn the rotary switch clockwise to cycle through Lock mode → White light mode → Red light mode.

Output Selection

White light mode: With the lamp turned on, single click the electronic switch to cycle through Low → Med → High → Turbo.

Red light mode: In Red light mode, single click the electronic switch to cycle through Low → Med → High → Flash.

Gesture-sensing Function

- On: With the lamp turned off, press and hold the electronic switch for 6 seconds, and the lamp will flash twice at the Low output of Red light mode, indicating that the function is enabled.
- Off: With the lamp turned off, press and hold the electronic switch for 6 seconds, and the lamp will flash eight times at the Low output of Red light mode, indicating that the function is disabled.

TECHNICAL PARAMETERS


ANSI/PLATO FL1	WHITE LIGHT MODE				RED LIGHT MODE			
	TURBO	HIGH	MED	LOW	HIGH	MED	LOW	FLASH
OUTPUT	1000 lumens	350 lumens	130 lumens	30 lumens	130 lumens	30 lumens	5 lumens	5 lumens
RUNTIME	3 hours*	4 hours 20 minutes	12 hours 40 minutes	54 hours	4 hours 20 minutes	25 hours 30 minutes	124 hours	240 hours
DISTANCE	220 meters	135 meters	82 meters	39 meters	27 meters	9 meters	4 meters	/
INTENSITY	12067 candela	4533 candela	1660 candela	375 candela	180 candela	22 candela	4 candela	/
IMPACT RESISTANCE					1 meter			
WATERPROOF					IP66			

Note: According to the ANSI/PLATO FLI standard, the above specifications are from the results produced by Fenix through its laboratory testing using one Fenix ARB-LP1900 battery temperature of 21±30C and humidity of 50% % – 80%. The true performance of this product may vary according to different working environments and the actual battery used. *The Turbo output is measured in total of runtime including output at reduced levels due to temperature or protection mechanism in the design.

Gesture-sensing lamp on/off

- With the lamp turned on and the gesture-sensing function enabled, wave your hand within the sensing range in front of the lamp to turn off the lamp temporarily, and wave your hand again to turn on the lamp and recall the last selected output. With the lamp turned on and the gesture-sensing function disabled, it will not respond to any motion operation.
- *When the lamp is turned on and the gesture-sensing function is enabled, press and hold the electronic switch for 0.5 seconds to turn off the lamp. After this action, it will not respond to any motion operation.

overview

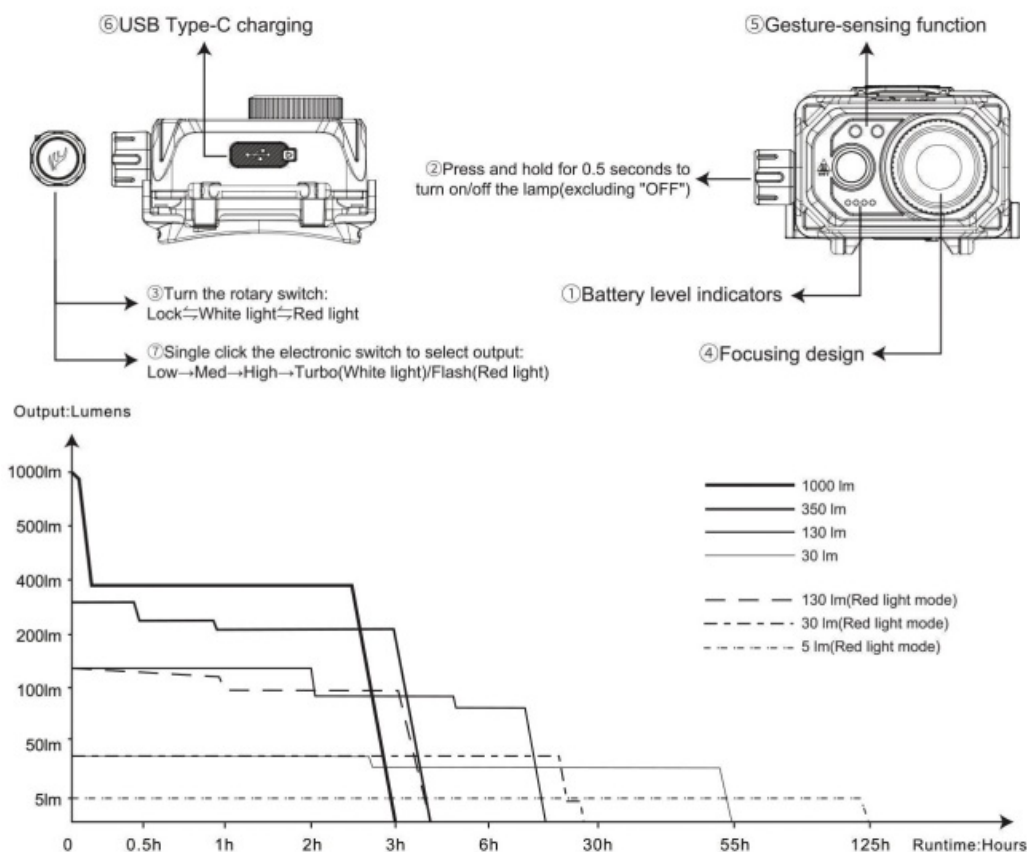

Note:

1. The sensing range is within about 3.94in/10cm in front of the lamp, and endina on the material and color of the sensing object, may vary slightlv de the ambient light, e brightness of the selected output, and the waving speed.
2. The gesture-sensing function is infrared sensing. If any other objects besides your hand pass in front of the lamp within the sensing range, the lamp will also be turned on or off.
3. The gesture-sensing function can only turn the light on and off within the current lighting mode and can neither change the mode nor the output.
4. When the gesture-sensing function is enabled, waving a hand will only turn off the lamp temporarily. At Gis time, the lamp is in a standby state, and power will still be consumed as the lamp actively awaits commands. If the lamp will not be used for an extended period,od turn the rotary switch to “OFF” to save battery power.

Intelligent Memory Circuit

The lamp automatically memorizes the last selected output of each mode when users press and hold the electronic switch to turn on/off. When turned on again, the previously used output of the selected mode will be recalled.

BATTERY SPECIFICATIONS

Type	Dimensions	Nominal Voltage	Usability	
Fenix ARB-LP1900	Dedicated battery	3.8 V	Recommended	√√
Alkaline Battery	AAA	1.5 V	Usable	√
Ni-MH Battery	AAA	1.2 V	Usable	√
Rechargeable Battery (Li-ion)	10440	3.7 V	Banned	×

- Do not mix batteries of different brands, sizes, capacities, or types. Doing so may cause damage to the lamp or to the batteries being used.
- Only use the recommended or usable batteries mentioned in this user manual.
- Using low-quality batteries or mishandled batteries (such as short-circuiting or overheating) could lead to combustion and jeopardize the safety of users and property. Any adverse effects resulting from the use of low-qua ity batteries are not covered by any Fenix warranty or liability. Using quality batteries with circuit protection will reduce the potential for combustion or explosion. It is recommended to use a Fenix ARB-LPI 900 battery.

BATTERY REPLACEMENT

Open the back battery cap to insert the battery following the polarity marks, then close the back battery cap.

CHARGING

1. Uncover the anti-dust cap and plug the USB Type-C side of the charging cable into the charging port of the lamp.
2. When charging, the Indicators will flash from left to right to display the charging status. The four indicators will be constant-on after charging is completed.

3. With the lamp turned off, the normal charging time of using a Fenix ARB-LPI 900 battery is about 3 hours from depleted to fully charged with a 5 V/ 1 A or above charging adapter.

Note:

1. Only Low outputs can be operated while charging.
2. Recharge a stored lamp every four months to maintain the optimum performance of the battery.

BATTERY LEVEL INDICATION

With the lamp turned off, single-click the electronic switch to check the battery status. Single click once again and the indicator(s) will go out, or without any operation the indicator(s) will last for 3 seconds. Each time the light is turned on, the indicator(s) will show the current battery level and will last for 3 seconds.

- Four lights on: 100% – 80%
- Three lights on: 80%, 60%
- Two lights on: 60/0 –
- One light on: 40% – 20%
- One light flashes: 20% – 1%

Note: This feature only works with a Fenix ARB-LP1900 battery.

INTELLIGENT OVERHEAT PROTECTION

- The lamp will accumulate a lot of heat when used at high output levels for extended periods.
- When the lamp reaches a temperature of 55°C/131°F or above, it will automatically step down a few lumens to reduce the temperature.
- When the temperature drops below 55°C/131°F, the lamp will gradually recall the preset output level.

LOW-VOLTAGE WARNING

- When the voltage level drops below the preset level, the headlamp is programmed to downshift to a lower brightness level until Low output is reached.
- When this happens in Low output, one of the battery level indicators blinks to remind you to recharge or replace the battery.

HEADBAND ASSEMBLY

Notice: The headband is factory assembled and ready to use right out of the package. Adjust the headband by sliding the buckle to the required length.

USAGE AND MAINTENANCE

- Disassembling the sealed head can cause damage to the lamp and will void the warranty.
- Fenix recommends using an excellent quality battery.
- If the lamp will not be used for an extended period, remove the battery, or the lamp could be damaged by electrolyte leakage.
- Take out the battery to prevent accidental activation during storage or transportation.

- Periodic cleaning of the battery contacts improves the lamp's performance as dirty contacts may cause the lamp to flicker, shine intermittently or even fail to illuminate for the following reasons:
 - A: Poor battery level. Solution: Recharge or replace the battery.
 - B: The threads, PCB board contact or other contacts are dirty. Solution: Clean the contact points with a cotton swab soaked in rubbing alcohol.


If the above methods don't work, please contact the distributor.

INCLUDED

Fenix HL45R headlamp, Fenix ARB-LP1900 battery, USB Type-C charging cable, User manual, Warranty card


CONTACT

- **Tel:** +86-755-29631163/83193
- **Fax:** +86-755-29631181
- **E-mail:** info@fenixlight.com
- **Web:** www.fenixlight.com
- **Address:** 2F/3F, West of Building A, Xinghong Technology Park, 111 Shuiku Road, Fenghuanggang Community, Xixiang Street, Baotan District, Shenzhen City, Guangdong Province, China

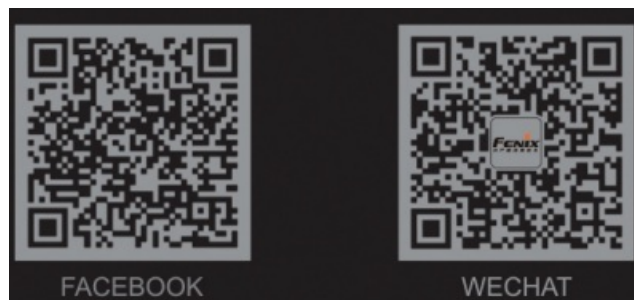

"Follow" us for more information about Fenix.

Documents / Resources

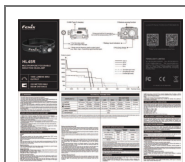

[FENIX HL45R Multipurpose Focusable Induction Headlamp](#) [pdf] User Manual
 HL45R, HL45R Multipurpose Focusable Induction Headlamp, HL45R, Multipurpose Focusable Induction Headlamp, Focusable Induction Headlamp, Induction Headlamp, Headlamp

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.