



FENIX HP25R Rechargeable Work Headlamp with Ultra-Long Runtime Instruction Manual

[Home](#) » [FENIX](#) » FENIX HP25R Rechargeable Work Headlamp with Ultra-Long Runtime Instruction Manual 

Contents

- 1 FENIX HP25R Rechargeable Work Headlamp with Ultra-Long Runtime
- 2 FENIX TK20R V2.0 FLASHLIGHT
- 3 OPERATING INSTRUCTION
- 4 INTELLIGENT OVERHEAT PROTECTION
- 5 TECHNICAL PARAMETERS
- 6 BATTERY SPECIFICATIONS
- 7 BATTERY REPLACEMENT
- 8 CHARGING
- 9 BATTERY LEVEL INDICATION
- 10 LOW-VOLTAGE WARNING
- 11 USAGE AND MAINTENANCE
- 12 INCLUDED
- 13 WARNING
- 14 FENIXLIGHT LIMITED
- 15 Documents / Resources
- 16 Related Posts



FENIX HP25R Rechargeable Work Headlamp with Ultra-Long Runtime



FENIX TK20R V2.0 FLASHLIGHT

- 3000 lumens maximum output; 475 meters maximum beam distance.
- One Luminus SFT70 LED with a lifespan of 50,000 hours.
- Included a Fenix ARB-L21-5000 V2.0 rechargeable Li-ion battery.
- Advanced Pulse-Frequency Transmission System (APF).
- Instant activation and strobe with the dual tactical tail switches.
- Hidden USB Type-C charging port.
- The internal dual-spring structure ensures stable lighting even under severe impact.
- Made of durable A6061-T6 aluminum.
- Premium type III hard-anodized anti-abrasive finish.
- **Size:** 6.02" x 1.34" x 1.00" / 152 x 34 x 25.4 mm.
- **Weight:** 7.20 oz / 204 g (including battery).

OPERATING INSTRUCTION

Switches

The round tail switch is the tactical switch for instant activation. The oval tail switch is the functional switch for output selection and instant strobe.

On/off

Tap the tactical switch to silently and momentarily turn on the light, releasing the light will go out. Fully press, the tactical switch to constantly turn on the light, and press again the light will go out.

Output Selection

With the light switched on, single click the functional switch to cycle through ECo>LOW>Med-High>Turbo.

Strobe

With the light switched on, press and hold the functional switch for 0.5 seconds to enter the strobe, and click the

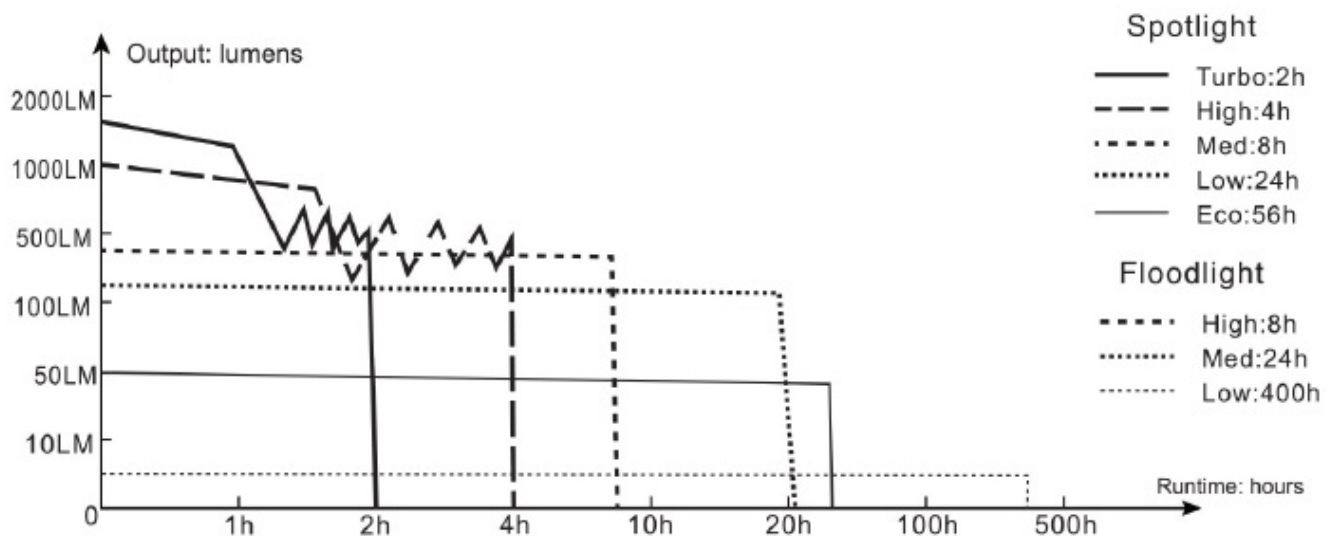
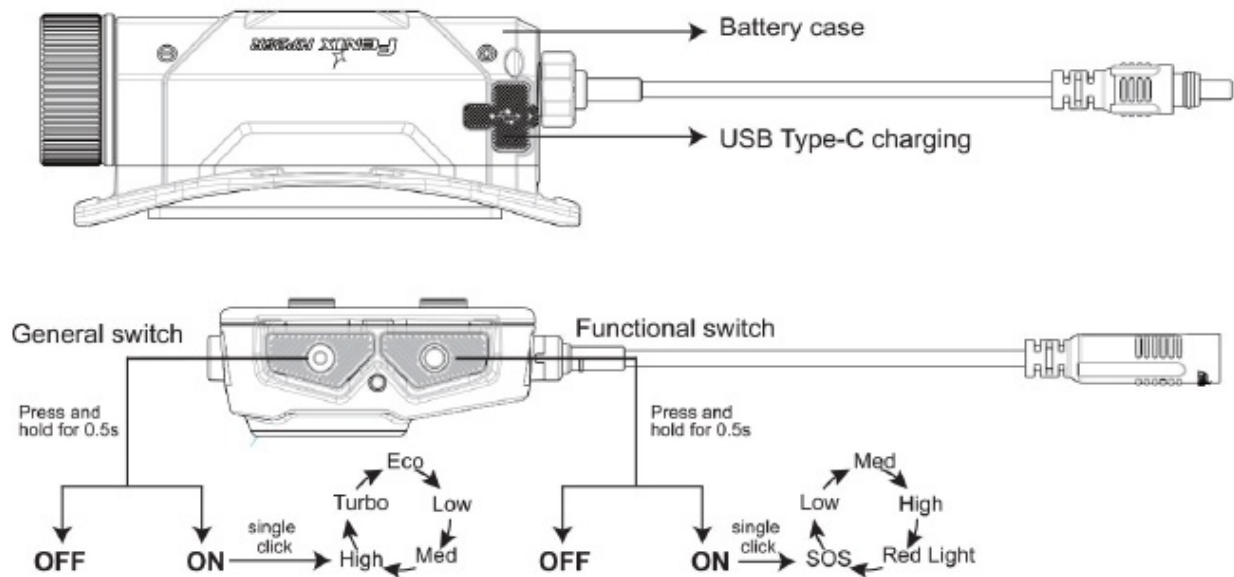
functional switch once again to turn back to the general mode. With the light switched off, press the functional switch to enter the strobe, release the light will go out.

Intelligent Memory Circuit







The light memorizes the last selected output excluding the strobe. When turned on again the previously used output of general mode will be recalled.

INTELLIGENT OVERHEAT PROTECTION

The light will accumulate a lot of heat when used on Turbo output levels for extended periods. When the light reaches a temperature of 60°C or above, the light will automatically step down a few lumens to reduce the temperature. When the temperature drops below 60°C, it will then allow the user to reselection of Turbo mode.



TECHNICAL PARAMETERS

ANSI/ PLATO FL1	GENERAL MODE					FUNCTIONAL MODE				
	SPOTLIGHT					FLOODLIGHT			RED LIGHT	
	Turbo	High	Med	Low	Eco	High	Med	Low	Red	SOS
 OUTPUT	1600 lumens	1000 lumens	400 lumens	150 lumens	50 lumens	400 lumens	150 lumens	5 lumens	5 lumens	5 lumens
 RUNTIME	2 hours*	4 hours	8 hours	24 hours	56 hours	8 hours	24 hours	400 hours	400 hours	800 hours
 DISTANCE	290 meters	228 meters	140 meters	83 meters	59 meters	50 meters	30 meters	8 meters	6 meters	6 meters
 INTENSITY	20849 candela	13028 candela	4888 candela	1732 candela	879 candela	605 candela	220 candela	16 candela	11 candela	11 candela
 IMPACT RESISTANCE						2 meters				
 WATER RESISTANT						IP66				

Note: According to the ANSI/PLATO FL1 standard, the above specifications are from the results used by Fenix through its laboratory testing using the included FenixARB-L21-5000 V2.0 Li-ion battery under the temperature of 21:±3°C and humidity of 50% – 80%. The true performance of this product may vary according to different working environments and the actual battery used. “The Turbo out is measured in 3 total of runtime including output at reduced levels due to temperature or protection mechanism in the design

BATTERY SPECIFICATIONS

Type	Dimension	Nominal Voltage	Usability	
Fenix ARB-L21 Series	21700	3.6V	Recommended	√√
Fenix ARB-L18 Series	18650	3.6V	Usable(with ALF-18 battery holder)	√
Non-rechargeable Battery (Lithium)	CR123A	3V	Banned	×
Rechargeable Battery (Li-ion)	16340	3.6V	Banned	×
Rechargeable Battery (Li-ion)	18650	3.6V	Banned	×

- It is prohibited to use 18650, 16340 or CR123A batteries.
- 21700 Li-ion batteries are powerful cells designed for commercial applications and must be treated with caution and handled with care. Only using quality batteries with circuit protection will reduce the potential for combustion or explosion, but cell damage or short-circuiting are potential risks the user assumes.

BATTERY REPLACEMENT

the anode side (+) Unscrew the light tail and insert the battery, with towards the light head, then screw the light tail back on.

CHARGING

1. Loosen the light head counterclockwise to reveal the USB Type-C charging port and plug the USB A socket of the charging cable into an electrical outlet, then connect the USB Type-C socket of the charging cable to the light.
2. The indicator will display red while charging and will turn green when fully charged.
3. Once charging is completed, be sure to tighten the light head to maintain the dustproof and waterproof ability.

Note:

1. When charging fails or the battery is reversely connected, the battery indicator will flash red to remind the user to check the battery.
2. The normal charging time of the included Fenix ARB-L21-5000 V2.0 is approximately 3.5 hours from depletion to full charging.
3. Recharge a stored light every four months to maintain the optimum performance of the battery.
4. The light is unavailable while charging.

Note: This only works with Fenix ARB-L21 series 21700 rechargeable Li-ion battery.

BATTERY LEVEL INDICATION

Each time the light is turned on, the indicator (unscrew the light head to see) will indicate the battery level and will last for 3 seconds.

- **Green light on:** saturated 100% – 85%
- **Green light flashes:** sufficient 85% – 50%
- **Red light on: poor** 50% – 25%
- **Red light flashes:** critical 25% 1%

Note: This only works with Fenix ARB-L21 series 21700 rechargeable Li-ion battery.

LOW-VOLTAGE WARNING

When the voltage level drops below the preset level, the flashlight is programmed to downshift to a lower brightness level until Eco output is reached. When this happens in Eco output mode, the light blinks 3 times every 5 minutes to remind you to timely recharge or replace the battery.

Note: This only works with Fenix ARB-L21 series 21700 rechargeable Li-ion battery.

USAGE AND MAINTENANCE

- Disassembling the sealed head can cause damage to the light and will void the warranty.
- Fenix recommends using only a high-quality protected battery.
- If the light will not be used for an extended period, remove the battery for proper storage.
- Unscrew the tail cap or remove the battery to prevent accidental activation during storage or transportation.
- Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.
- Periodic cleaning of the battery contacts improves the light's
- performance as dirty contacts may cause the light to flicker, shine intermittently or even fail to illuminate for the following reasons:
 - A: Poor battery level.
- **Solution:** Recharge or replace the battery.
 - B: The contact or contact point of the battery or flashlight is dirty.
- **Solution:** Clean the contact points with a cotton swab soaked in rubbing alcohol.

INCLUDED

Fenix TK20R V2.0 flashlight, ARB-L21-5000 v2.0 Li-ion battery, USB Type-C charging cable, Lanyard, Holster, 2 x Spare O-rings, User manual, Warranty card

WARNING

The flashlight is a high-intensity lighting device capable of causing eye damage to the user or others. Avoid shining the light directly into anyone's eyes. This flashlight will accumulate a lot of heat when used for extended periods, resulting in a high temperature of the flashlight shell. Pay attention to safe use to avoid Scalding. Do not shine an object at close range, to avoid burning the object or causing danger due to high temperature. The LED of this flashlight is not replaceable; so the entire light should be replaced when the LED reaches the end of its life. If any of the information provided in this manual is changed, the new version of the manual shall prevail; if your included user manual is an old one, it acquiesces that we won't send a new manual.

LIGHTING FOR EXTREMES





“Follow” us for more information about Fenix.

FENIXLIGHT LIMITED

- **Tel:** +86-755-29631163/83/93 Fax: +86-755-29631181
- **E-mail:** info@fenixlight.com
- **Web:** www.fenixlight.com
- **Address:** 2F/3F, West of Building A, Xinghong Technology Park, 111 Shuiku Road, Fenghuanggang Community, Xixiang Street, Baoan District, Shenzhen City, Guangdong Province, China

Documents / Resources

	<p>FENIX HP25R Rechargeable Work Headlamp with Ultra-Long Runtime [pdf] Instruction Manual</p> <p>HP25R Rechargeable Work Headlamp with Ultra-Long Runtime, HP25R, Rechargeable Work Headlamp with Ultra-Long Runtime, Rechargeable Work Headlamp, Work Headlamp, Headlamp</p>
	<p>FENIX HP25R Rechargeable Work Headlamp with Ultra Long Runtime [pdf] Instruction Manual</p> <p>HP25R, Rechargeable Work Headlamp with Ultra Long Runtime, HP25R Rechargeable Work Headlamp with Ultra Long Runtime</p>