



Freedom KP-01 Wireless Keypad Password Switch User Manual

[Home](#) » [FREEDOM](#) » Freedom KP-01 Wireless Keypad Password Switch User Manual 

Contents

- [1 Freedom KP-01 Wireless Keypad Password Switch](#)
- [2 Product description](#)
- [3 Installation](#)
- [4 Method of use](#)
- [5 Changing a combination](#)
- [6 Normal use](#)
- [7 Forget combinations & Battery replacement](#)
- [8 FCC Statement](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Freedom KP-01 Wireless Keypad Password Switch



Warnings:

- Note that automatic gate and door systems must be installed exclusively by qualified technical personnel in full compliance with statutory legislation.
- Before starting the installation procedure check that the values given in the "Technical Specifications" chapter are compatible with the application.
- This product has been designed to control door openers, gate openers and similar mechanisms. Any other use of the product will be considered improper.

Product description

This is a dual-channel transmitter that are activated only after having entered a Suitable combination. The units are designed for installation in indoor or outdoor locations. That ensures the utmost security because the transmitted code is changed at each transmission session. The estimated transmission range is 200 m in open space and 35 m indoors. The units are designed to ensure battery life equivalent to an estimated 2 years of operation considering 10 transmissions/day.

Audible signal	Status
1 short beep	Keypad tone
1 long beep	Modification of combination confirmed (or send the signal after enter the correct password)
5 short beeps	Error during combination input or combination edit operation

Installation

Before physically installing the it in their mounting position it is good practice to perform a practical test to assess their functionality and effective range. Consider that range may be up to 25 or 30% less when battery power is low

positioning

Apart from the distance from the receiver, the units should not be positioned in the vicinity of or-worse still-in contact with metal structures, which could otherwise exert a signal shielding effect. Thanks to the enclosure protection rating of IP 54, the digital selectors can be installed. doors if required.

Method of use

The use of the keypad is based on “combinations”, i.e. numbers of from 1 to 9 digits that the user is required to key in by means of the keys. Once the combination has been entered the user then presses confirm key ◀ or ▶ transmits the activation command to respectively.

- transmit channel 1 if the user presses ◀
- transmit channel 2 if the user presses ▶

The command will be transmitted only when a valid combination has been entered – if an incorrect combination has been entered the selector will emit an error warning signal when the confirm key is pressed. If the user inadvertently presses the wrong key when entering a combination, The key ◀ or ▶ should be pressed immediately to generate the error tone , after which the correct combination can be entered starting from the beginning again. While entering the combination no more than 10 seconds can be allowed to elapse between keystrokes, after which interval the combination must be re-entered starting from the beginning.

The units are factory programmed with a standard combination to activate channel one and channel two. The factory set combinations are as follows:

combination to transmit the code associated with the ◀ key. When the unit is used for the first time this combination is 11 combination to transmit the code associated with the ▶ key. When the unit is used for the first time this combination is 22.

Learning to the radio receiver

Press once the learn button on your radio receiver device to allow reception of a new code. While the receiver is in the receive new code mode,transmit one of the keypad default codes.Eg.11< or 22> wait until the receiver exits the reception mode before trying the code again.

Changing a combination

Tab. A changing the combination associated with channel 1 ◀ Example

This function allows you to change the combination associated with channel 1 ◀

1. Press the “0” key and hold it down while pressing and releasing ◀ 0 ◀
2. Release the “0”key .
3. Type in the current (original) combination and press ◀ 11 ◀
4. Type in the new combination {up to 8 digits) and press ◀ 074582 ◀
5. Type in the new combination again and press ◀ 074582 ◀

Tab. B changing the combination associated with channel 2 ▶ Example

This function allows you to change the combination associated with channel 2 ►

1. Press the “0” key and hold it down while pressing and releasing ► 0 ►
2. Release the “0”key .
3. Type in the current (original) combination and press ► 22 ►
4. Type in the new combination {up to 8 digits } and press ► 693528 ►
5. Type in the new combination again and press ► 693528 ►

NOTE 1: If the two combinations you have entered are identical, once you have entered the combination you can press either ◀ or ▶ .

NOTE 2: If combinations are set without entering any number, the security system is Effectively overridden and the command can be transmitted simply by pressing ◀ or ▶ without having to first enter a combination.

Normal use

Tab. C Normal use for activation of channel 1

Type in the combination associated with channel 1 and press ◀

Example

074582 ◀

Tab. D Normal use for activation of channel 2

Type in the combination associated with channel 2 and press ▶

Example

693528 ▶

Forget combinations & Battery replacement

A hidden factory setting button is reserved for you to restore the factory setting combinations “11” & “22”. (Note: In order to ensure the safety of the device, the serial number of this device will be automatically updated after restoring the factory settings, and it needs to be re-registered by the receiver to work).


1. Use a tool to pry open the cover here



2. Remove these two screws



3. Insert the paper clip into the factory setting hole, press and hold the factory setting button for 5 seconds, the buzzer have a long beep, then factory setting is completed. Set new combinations and register the device to the receiver again.

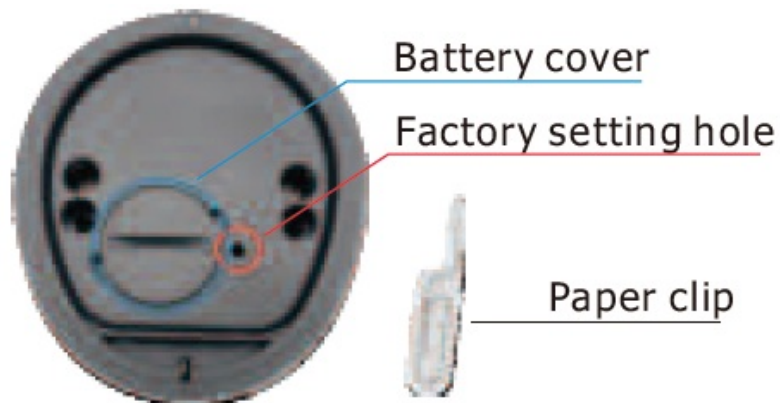

4. Rotate counterclockwise to remove the battery cover to replace the battery.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable

exposure conditions without restriction.

Documents / Resources

[illegible]

References

-  codes.Eg

Manuals+,