



# GAPOSA QCTZ16Y-SY 16 Channels Handheld Display Remote Instruction Manual

[Home](#) » [GAPOSA](#) » GAPOSA QCTZ16Y-SY 16 Channels Handheld Display Remote Instruction Manual 

## Contents

- [1 GAPOSA QCTZ16Y-SY 16 Channels Handheld Display Remote](#)
- [2 SAFETY](#)
- [3 FCC](#)
- [4 TECHNICAL DATA](#)
- [5 GROUPS](#)
- [6 PROGRAMMING TRANSMITTER](#)
- [7 RESET MEMORY](#)
- [8 LIMIT SWITCH SETUP](#)
- [9 TIMER FUNCTIONS](#)
- [10 Documents / Resources](#)



**GAPOSA QCTZ16Y-SY 16 Channels Handheld Display Remote**



## SAFETY

### Safety and responsibility

Please read this guide carefully before installing and using this product. Any use outside the sphere of application defined by GAPOSA is prohibited. This invalidates the warranty and discharges GAPOSA of all liability, as does any failure to comply with the instructions given herein. Never begin installing without first checking the compatibility of this product with the associated equipment and accessories.

### Specific safety instructions

To avoid damaging the product:

- Avoid impacts!
- Do not drop it!
- Do not spray or immerse in liquids.
- Keep out of the reach of children.
- Do not use abrasive products or solvents to clean the product. Its surface can be cleaned with a soft, damp cloth.

**PLEASE NOTE:** do not use motors with remote controls in areas with risks of radio disturbs over the norm (i.e. airports or radio repeaters). These units may also be disturbed by telecommunication and/or transceiver systems working on the same frequency.

## FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.








Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Radiation Exposure Statement:** This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## TECHNICAL DATA

- **Battery:** 3V mod. CR2450
- **Channels:** 16
- **Encoding:** RC Gapsa
- **Battery life (years):** 2
- **Frequency:** 434,15 MHz
- **Radiated power:** 0,150 mW
- **Protection rate:** IP40
- **Coverage (int/ext):** 65 ft / 656 ft
- **Working temperature:** 23°F / 104°F


	UP		
	STOP		
	DOWN		
	Single channel/group control mode		Select channel
	Program the transmitter		Set the limit switch
SYNC		LIMIT	

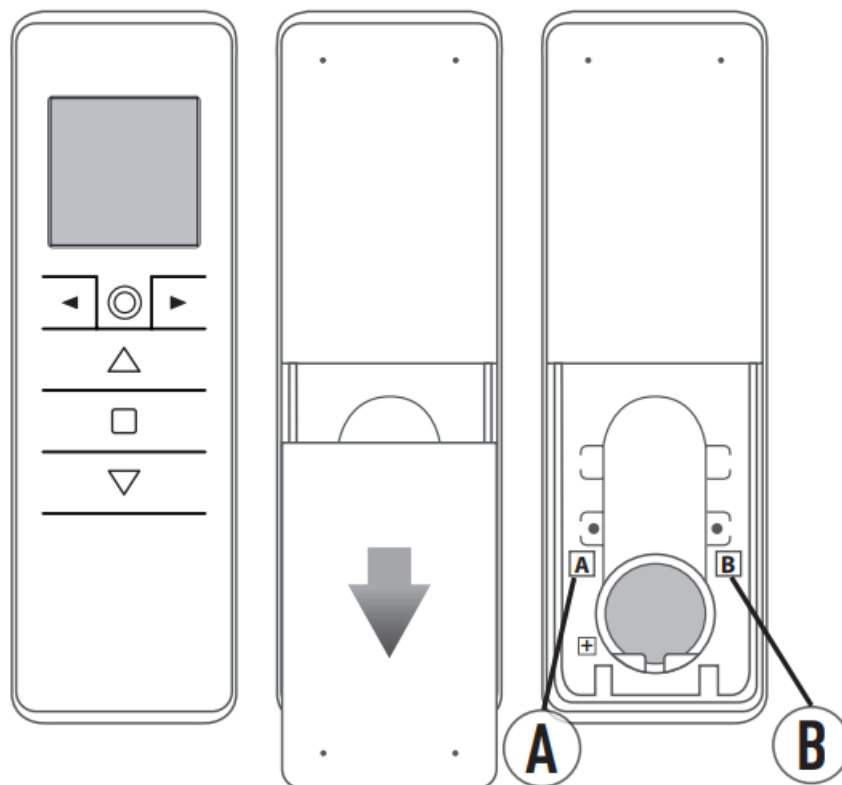


## GROUPS

### SELECTING A CHANNEL/GROUP


1. When pressing the circle button sequentially the modes can be switched from single channel control mode to group control mode.

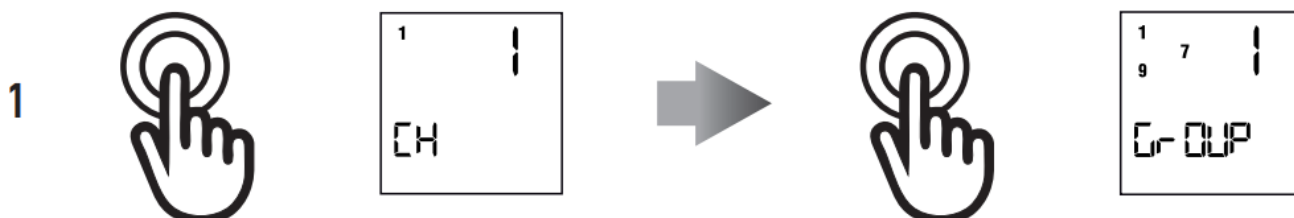

- **A.** Single channel control mode: scroll the channels with the arrow buttons (◀ / ▶). Each channel is identified by a number.

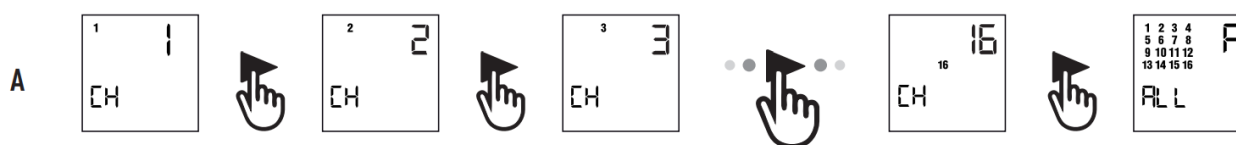


- **B.** Group control mode\*: the first group to appear is the all channels group. Scroll through the pre-made groups with the arrow buttons (◀ / ▶). Each group is identified by a number.

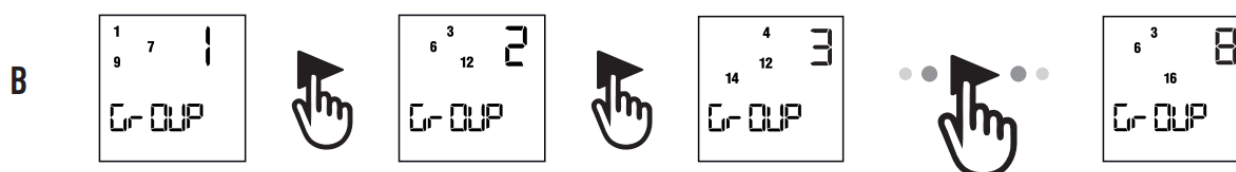

**\*Note:** Only the groups that have been created previously will appear. No groups will appear if groups have not been created previously


## CUSTOMIZATION OF THE GROUPS

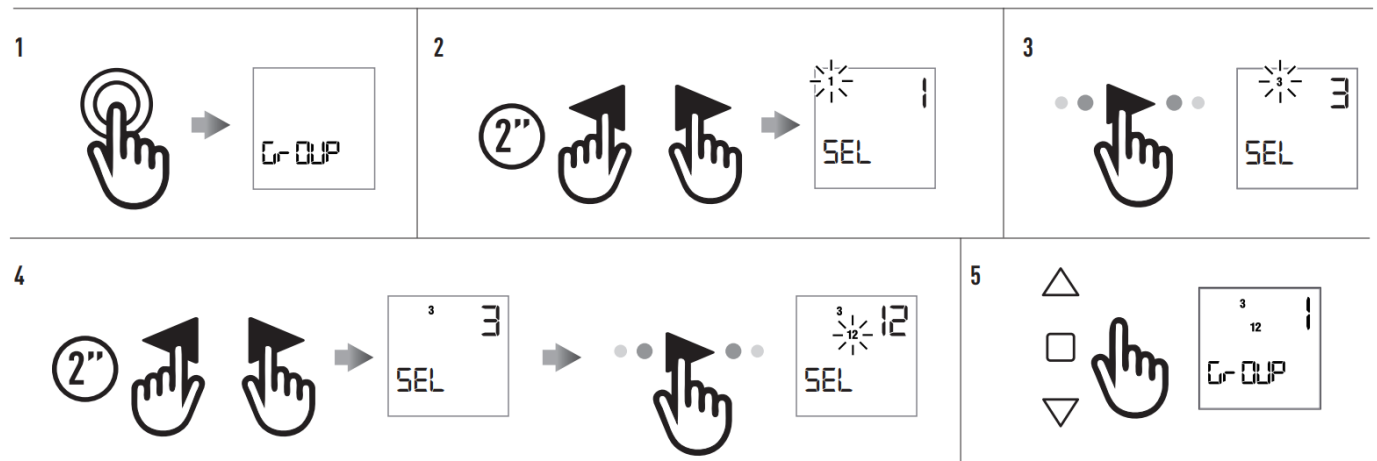

1. Briefly press the circle button to enter in group control mode
2. To create a group press both arrow buttons (◀ + ▶) for 2 seconds. The icon **SEL** appears and channel 1 starts flashing.
3. Using the arrow buttons (◀ / ▶), scroll to the channel to be set into the group
4. Press for 2 seconds both arrow buttons (◀ + ▶) to select the channel. Repeat point 3 and 4 to add other channels in the same fashion.
5. When all the desired channels of the group are set press the UP, STOP or DOWN button to confirm the group. The group is identified by a number. The group you set takes the first number available in progressive fashion from 1 to 8.

**Note:** up to 8 groups can be created.


## DELETING GROUPS

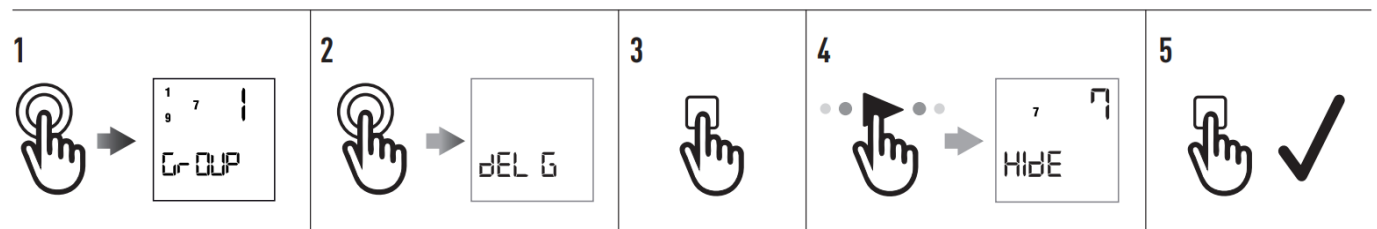

1. Enter the group screen by pressing the circle button.
2. Press and hold the circle button until **DEL G** appears on screen then press the STOP button to enter the delete groups mode.
3. Page through the saved groups using the left and right arrow buttons.
4. Once the group that needs to be deleted is selected
5. Press the STOP button to confirm the deletion.

**Note:** the delete groups mode can be exited at any time by pressing the circle button again.

## HIDING CHANNELS

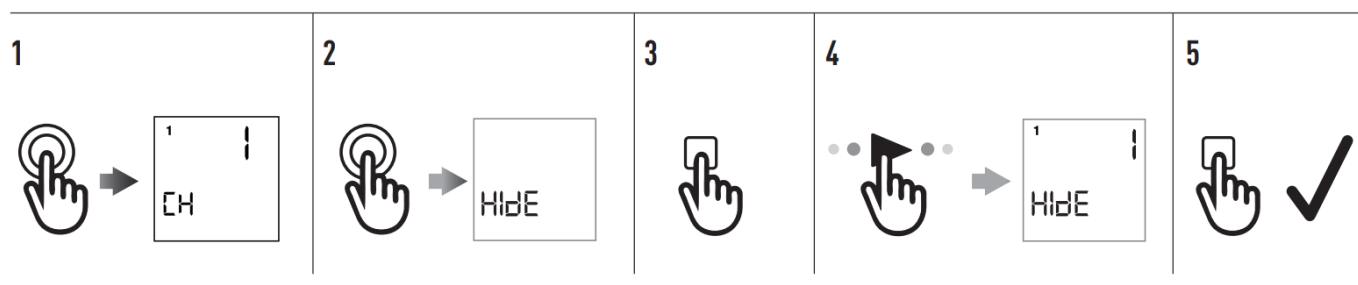


1. Enter the channel screen by pressing the circle button.
2. Press and hold the circle button until **HIDE** appears on screen then press the STOP button to enter the hide channel mode.
3. Page through the channels using the left and right arrow buttons.
4. Once the required hidden channels are selected
5. Press the STOP button to confirm the hidden channels. The numbers on the screen will blink quickly for confirmation.

**Note:** Channels can be unhidden using the same process. Just deselect the channels.


## PROGRAMMING TRANSMITTER

**CAUTION:** If more motors with receiver have to be installed, it is important to power up only one motor at time during the first programming session, in order to avoid any interferences with others.

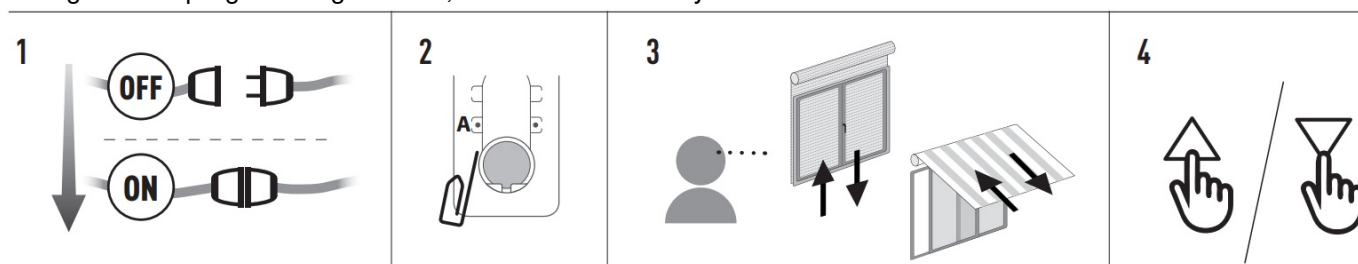

1. Power up the motor to be programmed.
  2. Press and hold the SYNC button until the motor starts moving.
  3. Check the rotation of the motor, then release SYNC (the motor stops).
  4. Within 5 seconds press the corresponding button (i.e. UP if the motor rotates upwards or DOWN if vice versa).
- The transmitter has been programmed and the rotation of the motor has been synchronized.<sup>3</sup>


## ADDING TRANSMITTER

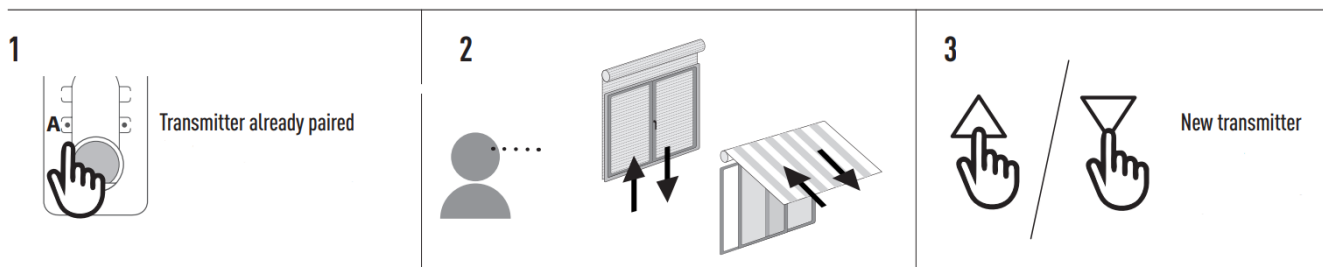

1. Press and Hold the SYNC button of a transmitter already paired until the motor starts moving.
2. Check the rotation of the motor, then release the SYNC button (the motor stops).
3. Within 5 seconds press the corresponding button (i.e. UP if the motor rotates upwards or DOWN if vice versa) on the new transmitter being added.

## CHECKING/CHANGING DIRECTION

**IMPORTANT:** change direction must be performed before starting limit setting otherwise limits must be reset. Press the UP or DOWN button the motor should go UP or DOWN, otherwise to change direction:

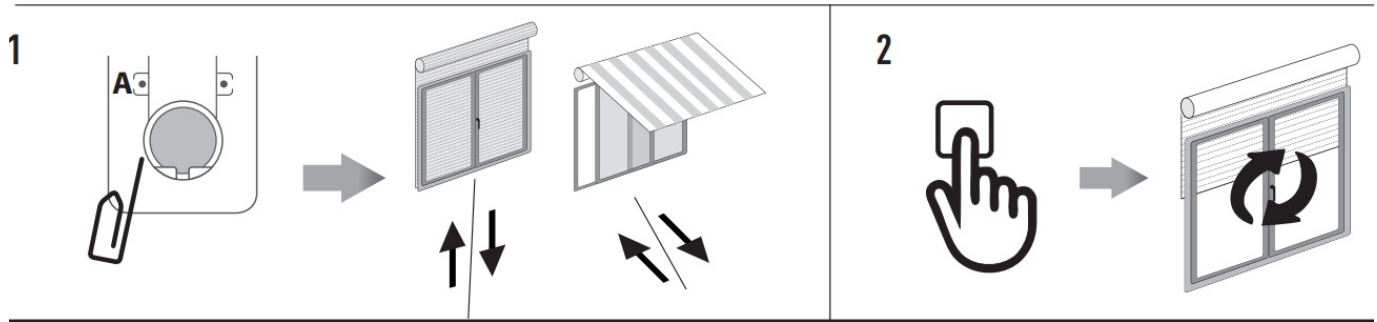


1. Press and hold SYNC button until the motor starts moving

2. Press the STOP button: The motor makes a brief jog.

Direction of the motor has been reversed.

## ERASING TRANSMITTERS


Push simultaneously SYNC and STOP of the transmitter until the motor makes a jog (brief movement in both directions). Only the transmitter used for this procedure has been deleted from motor memory.

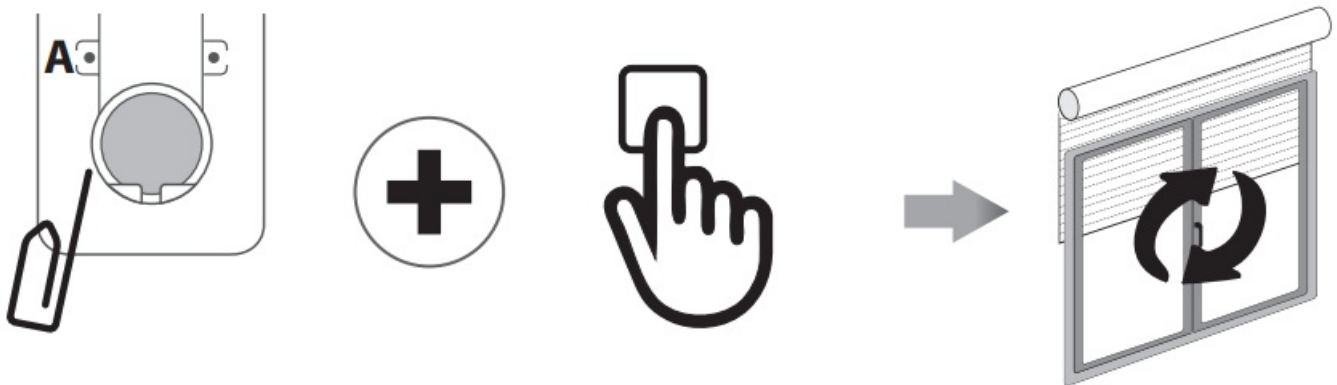

## RESET MEMORY

### RESET MOTOR MEMORY

Using an already programmed transmitter Press and hold both SYNC and STOP buttons until the motor makes first a brief jog and, after a while, a second long jog. Memory is now empty.

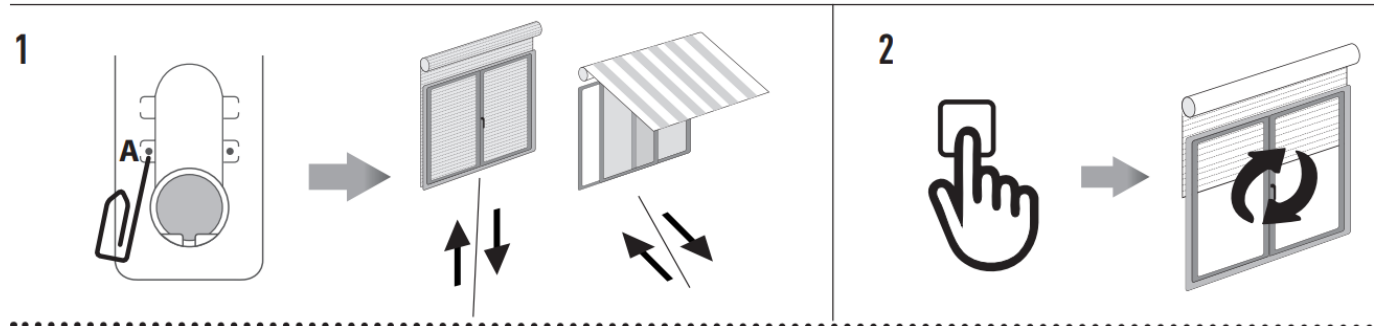


### Using an already programmed transmitter

1. Switch the motor power supply OFF. Then switch it ON.

2. Within 8 seconds, using any Gaposa transmitter, press and hold both SYNC and STOP buttons until the motor makes a long jog. Memory is now empty.

## LIMIT SWITCH SETUP

**ATTENTION:** ALWAYS SET THE UP LIMIT SWITCH FIRST. Press the UP or DOWN button the motor should go UP or DOWN, otherwise to change direction:

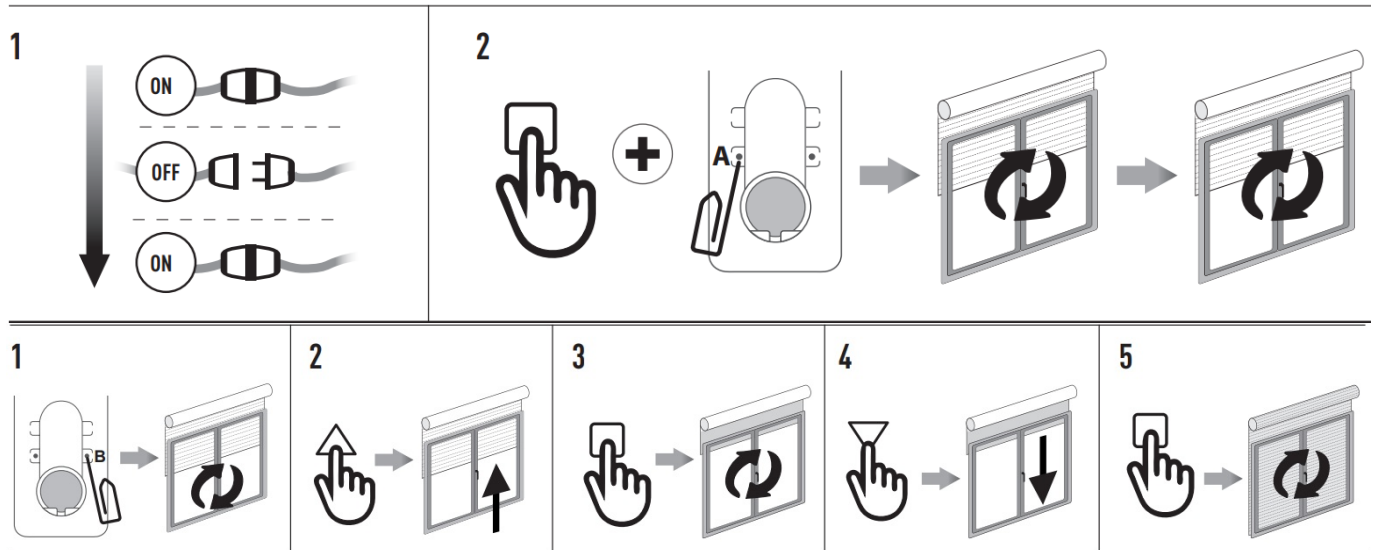

1. Push LIMIT until the motor makes a brief movement in both direction

**Note:** during “programming mode” the operations are in “deadman control”

2. Press and hold the UP button and run the motor to the desired UP limit position.

3. Press the STOP to set the UP limit position. The motor makes a brief jog.

4. Press and hold the DOWN button and run the motor to the desired DOWN limit position.

5. Press the STOP to set the DOWN limit position. The motor makes a brief jog.

**Note:** accurate limit setting can be performed when UPWARD or DOWNWARD by pressing the LIMIT button a second time: the motor then moves slowly in steps towards to the desired limit. Always press the STOP button to set the limit position.

## AUTOMATIC SETTING OF THE LIMITS


### • Just for motors with electronic limit switch

For limits set with torque sensor ( mechanical stop of shutters or cassette awnings/shades), press and hold UP button until the bottom bar hits the cassette or shutter box. A short jog will indicate that the UP position has been memorized. The same procedure can be followed for DOWN limit but only for roller shutters.

## INTERMEDIATE POSITION SETUP

### • Just for motors with electronic limit switch




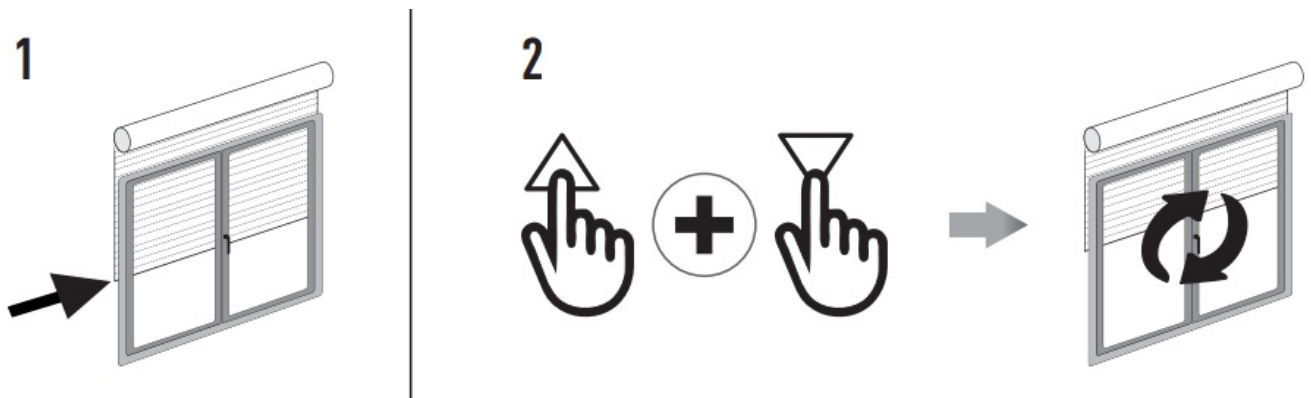

1. Stop the shutter/awning in the desired intermediate position
2. Press simultaneously the UP and DOWN buttons until the motor makes a jog (brief movement in both directions). The intermediate position has been setup.


### RECALLING THE INTERMEDIATE POSITION

Keep the STOP button pressed at least for at least 3 seconds: the shutter/awning will move until it reaches the intermediate position.

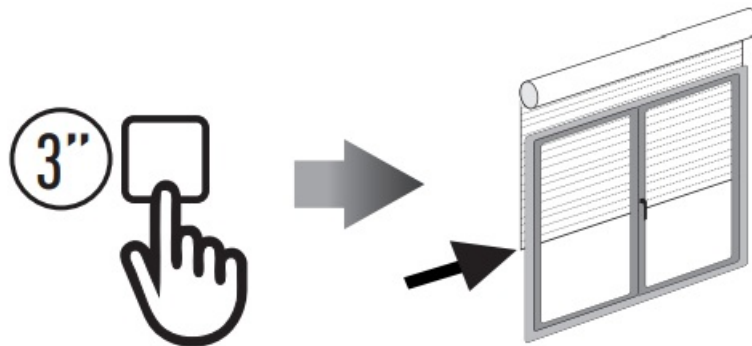

### ERASING THE INTERMEDIATE POSITION

Press simultaneously, both the UP and DOWN buttons until the motor makes a brief movement in both directions.

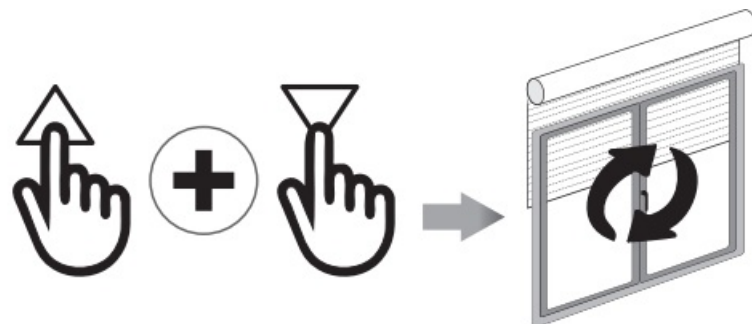

### TRANSMITTER FACTORY RESET

The factory reset will un-hide any hidden channels and delete all custom groups.

1. Remove the battery.
2. Press and hold the circle button while reinserting the battery. Once the screen comes back on and displays **RESET**, the circle button can be released.
3. After about 3 seconds the transmitter will start up and all channels will be unhidden, and any groups deleted.

### TIMER FUNCTIONS

#### CLOCK SET-UP (Note: The clock is in 24-hour format)

1. From the channels or groups screen, press **HIDE** and **DEL** hold the circle button until **or** appears on the screen. Press the circle button again and the timer/ clock screen will appear.
2. Press the STOP button to enter the menu.
3. Set the hour by using the UP / DOWN buttons and press the STOP button to confirm.
4. Set the minutes by using the UP / DOWN buttons and press the STOP button to confirm.
5. Select the day of the week using the arrow buttons (◀ / ▶) and press STOP button to confirm. Clock is now set.
6. **OFF** now appears on screen. By using the arrow buttons (◀ + ▶) you can scroll between **OFF** and **On** to choose between having the clock displayed or not in stand-by mode.

**Note:** During operation, the clock is shown only in Automatic Mode or Random Mode (see section: "Understanding and changing the operational mode")


## CREATING OR EDITING A SCHEDULE

1. After setting the clock, from either the channels or groups screen, press and hold the circle button until **HIDE** or **DEL** appears on the screen. Press the circle button again two times until the **Pr** screen is reached. Press the STOP to enter the menu.
2. The 6 schedules can now be chosen: **1 2 3 4 5 6**
3. Use the arrow buttons (◀ / ▶) to select the schedule to be created or edited. Once the schedule is selected, press the STOP button to confirm.
4. Use the arrow buttons (◀ / ▶) to select the day of the week: **Su Mo Tu We Th Fr Sa**
5. Press the UP / DOWN buttons to select or deselect one or multiple days of the week. Once the day or days of the week have been selected, press the STOP to confirm.  
**Note:** When the day of the week is blinking slow, the day is not selected, and when the day of the week is blinking fast, the day has been selected.
6. Use the UP / DOWN buttons to select the hour. Press the STOP to confirm.
7. Use the UP / DOWN buttons to select the minutes. Press the STOP to confirm.
8. Choose the command to be sent. Use the UP / DOWN buttons to select between the UP command, DOWN command, and Intermediate Position command. Press the STOP to confirm.
9. Choose the channels to add to the schedule. Use the arrow buttons (◀ / ▶) to move between channels, and the UP / DOWN buttons to select or deselect the channel. Press the STOP button to create the schedule.  
**Note:** When the channel is blinking slow, the channel is not selected, and when the channel is blinking fast, the channel has been selected. The schedule is now created.

## SCHEDULE DELETION

1. From the channels or groups screen, press and hold the circle button until **HIDE** or **DEL** appears on the screen. Press the circle button again three times until **DEL P** appears on screen.
2. Press the STOP button to enter the menu.
3. Select the schedule to be deleted and press the STOP button to confirm. The schedule is now deleted.

## UNDERSTANDING AND CHANGING THE OPERATIONAL MODE

The remote operational mode can be changed between Automatic Mode [ **AUT** ], Random Mode [  ] and Manual mode [ no icon ]. The operational mode can be changed by quickly pressing the arrow buttons ( ◀ / ▶ ) simultaneously. With each press of the button, the transmitter will change from manual to automatic, to random, to manual, etc. In automatic mode and random mode, the clock will appear on the screen instead of the channel or group lettering.

- **Manual Mode:** The transmitter works only by sending up stop and down commands to channels or groups by manually pressing the button on the transmitter.
- **Automatic Mode:** The transmitter will operate with manual control as well as executing schedules automatically.
- **Random Mode:** The transmitter will operate with manual control and all schedules will execute with a delay from 0-30 minutes. For example, if the schedule is set to go off at 8:00, when in random mode, the schedule will go off anywhere between 8:00 and 8:30.

#### **GAPOSA Inc.**


300 Schell Lane Suite 306 – Phoenixville, PA 19460 USA

**Tel.** 484.927.4385

[info@gaposa.com](mailto:info@gaposa.com)

[www.gaposa.com](http://www.gaposa.com)

#### **Documents / Resources**

	<p><a href="#">GAPOSA QCTZ16Y-SY 16 Channels Handheld Display Remote</a> [pdf] Instruction Manual QCTZ16Y-SY, QCTZ16Y-SY 16 Channels Handheld Display Remote, 16 Channels Handheld Display Remote, Handheld Display Remote, Display Remote, Remote</p>
---	--