

GE current IND676 LPL Gen D Series Lumination LED Luminaire Installation Guide

Home » GE current » GE current IND676 LPL Gen D Series Lumination LED Luminaire Installation Guide 🖺



Contents

- 1 GE current IND676 LPL Gen D Series Lumination LED Luminaire
- 2 Save These Instructions
- **3 Prepare Electrical Wiring**
- **4 Luminaire Installation**
- 5 Electrical Connections Basic version
- 6 Documents / Resources
 - **6.1 References**
- 7 Related Posts



GE current IND676 LPL Gen D Series Lumination LED Luminaire



BEFORE YOU BEGIN

Read these instructions completely and carefully.

WARNING

RISK OF ELECTRIC SHOCK

- Turn power off before inspection, installation or removal.
- Properly ground electrical enclosure.

RISK OF FIRE

- Follow all NEC and local codes.
- Use only UL approved wire for input/output connections.
 Minimum size 18 AWG (0.75mm2).
- Do not install insulation within 3 inches (76 mm) of luminaire top.

Save These Instructions

Use only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES 005(A)/NMB 005(A)

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Prepare Electrical Wiring

Electrical Requirements


- The LED luminaire must be connected to the mains supply according to its ratings on the product label.
- Class 1 wiring should be in accordance with NEC.

Grounding Instructions


 The grounding and bonding of the overall system shall be done in accordance to local electric code of the country where the luminire is installed.

Luminaire Installation


1. TURN OFF POWER at the source to the luminaire.

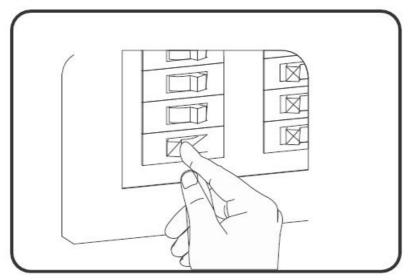


2. Default lumen level is M(medium), and default CCT is 4000K. For other lumen level or CCT, loosen screw and remove switch cover, then set switch to the desired lumen level or CCT by screwdriver. Re-attach cover and tighten screw.

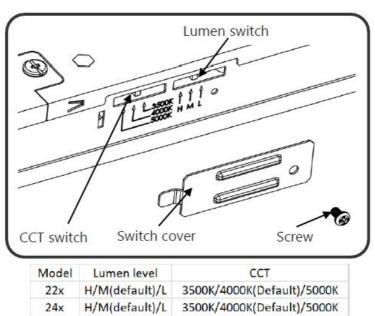


3. Insert luminaire into T-bar ceiling grid. Unit should notmove freely within the ceiling grid. To ensure a consistent appearance, align fixtures in the same orientation throughout the ceiling pattern.

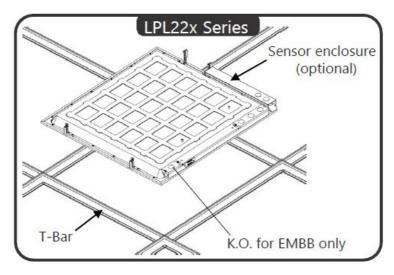


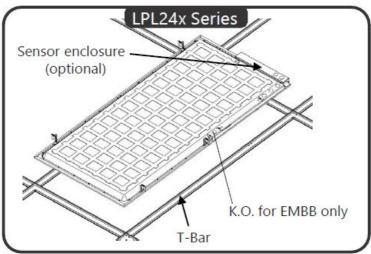


4. Bend the brackets on the housing to make sure they hook to T-Bar.
Secure safety cable to connection hole as needed to meet local seismic requirements. Safety cable and method of attachment to the building are provided by contractor according to local building codes.

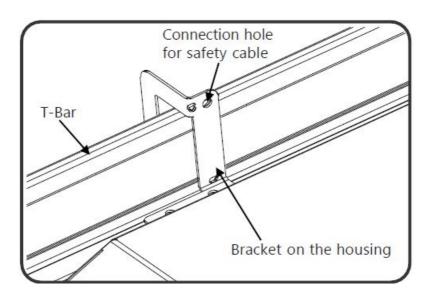

Electrical Connections – Basic version

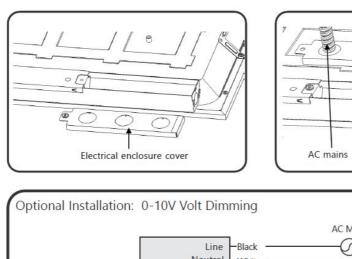

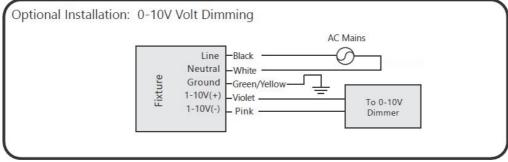


Dimming

- Remove the electrical enclosure cover with three Knock-Outs on the top. Carefully remove knockout for AC mains input wires. Install UL listed electrical fittings in the knockout holes for wire protection.
 Connect the AC mains to the black (line) and white (neutral) input wires of the fixture by using UL listed connectors or wire-nuts for 14-18 AWG.
 Connect the ground wire to the green-yellow ground wire of luminaire. When connecting dimming controller,
 - wires must run through a separate knockout hole equipped with an appropriate wire restraint or cable gland. Then, re-attach and fix electrical enclosure cover with screw by a screwdriver.
- 2. Option: Follow diagram for 0-10V. Run wires from controller through a different knockout than the AC input wire. At the output side of fixture, make appropriate connections by using UL listed connectors or wire-nuts. To combine with LFAMBA0VQFAEL,LCAMBA0NRFAEL, LCAMBA0TSFAEL, LCAMBA0TQFAEL, LCAMBA0TQFAEL, LCAMBA0TQFAB2,LCAMBA0NRFA, LCAMBA0TSFA or LCAMBA0TQFA, please follow the installinstructions provided with those products.

NOTE: Please cover dimming leads with wire nuts if leads not be connected.

Electrical Connections – Sensor version

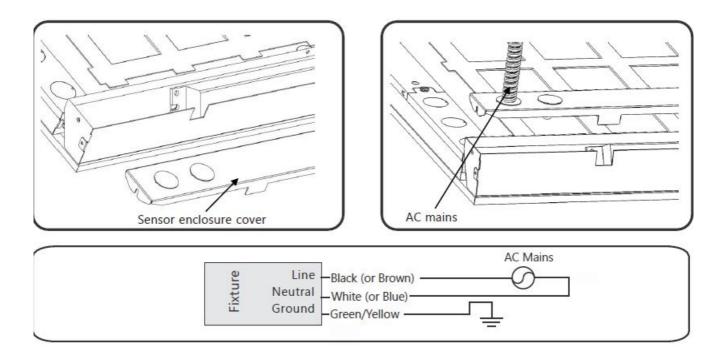

1. Remove sensor enclosure cover. Carefully remove knockout for ACmains input wires. Install UL listed electrical fittings in the knockout holes for wire protection.

LPL22x

Connect the AC mains to the black (line) and white (neutral) input wires of the LED driver by using UL listed connectors or wire-nuts for 18-14 AWG.

LPL24x

Connect the AC mains to the brown (line) and blue (neutral) input wires of the LED driver by using UL listed connectors or wire-nuts for 18-14 AWG.

Connect the ground wire to the green-yellow ground wire of luminaire. When connecting the dimming controller, wires must run through a separate knockout hole equipped with an appropriate wire restraint or cable gland. Then, re-attach and fix the enclosure cover with screw by screw driver.

www.gecurrent.com

© 2020 Current Lighting Solutions, LLC. All rights reserved. GE and the GE monogram are trademarks of the General Electric Company and are used under license. Information provided is subject to change without notice. All values are design or typical values when measured under laboratory conditions. IND676 REV-A

Documents / Resources



<u>GE current IND676 LPL Gen D Series Lumination LED Luminaire</u> [pdf] Installation Guide IND676 LPL Gen D Series Lumination LED Luminaire, IND676, LPL Gen D Series Lumination LED Luminaire, Luminaire, Luminaire

References

Commercial Lighting and Lighting Controls | Current - GLI Brands

Manuals+,