

genexis EX600 Pulse Significantly Enhances Wi-Fi Coverage Installation Guide

Home » genexis » genexis EX600 Pulse Significantly Enhances Wi-Fi Coverage Installation Guide 🖺

Contents

- 1 genexis EX600 Pulse Significantly Enhances Wi-Fi
- Coverage
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 Frequently Asked Questions**
- 5 Installation with the use of app
- 6 Setting up your Pulse devices
- 7 Switching the WiFi ON/OFF8 Connecting to the wireless network
- 9 LED & button overview
- 10 Port overview
- 11 Support
- **12 EU Declaration of Conformity**
- 13 Documents / Resources
 - 13.1 References



genexis EX600 Pulse Significantly Enhances Wi-Fi Coverage



Product Information

Specifications

• Model: Pulse EX600

Installation Guide: Wi-Fi EasyMesh supported
 Placement Options: Desktop and Wall-mounted

Product Usage Instructions

Installation Process

- 1. Scan the QR code provided with the device.
- 2. Download and install the Genexis EasyWiFi app on your mobile device.
- 3. Follow the in-app steps to set up the Pulse EX600.

Placement Options

- **Desktop:** Place the device horizontally on a flat surface.
- Wall-mount: Follow the drilling guide provided on the Genexis website to mount the device securely on a wall.

Setting up as a Router

- 1. Connect a network cable between the broadband outlet and the Pulse EX600 WAN port (red port).
- 2. Plug in the power adapter and turn on the device.
- 3. Wait for the Status LED to turn solid green to indicate successful setup as a router.

Setting up as an Extender

- 1. Place the additional Pulse EX600 halfway between the router and the problem area.
- 2. Connect the power adapter to set up as a wireless extender.

Wired Extender

- 1. Connect a network cable between the LAN port of the router and the WAN port of the extender.
- 2. Plug in the power adapter and turn on the device.
- 3. Wait for the Status LED to turn solid green, indicating successful setup as a wired extender.

Connecting to the Wireless Network

You can connect your personal device to the Pulse EX600 by scanning the QR code or using the Mode button (WPS function) of the device. Ensure the Status LED is solid green before initiating pairing.

Frequently Asked Questions

Q: Can I cover the Pulse EX600 with any material?

A: No, covering the device may interfere with ventilation. It is recommended not to cover the device.

Q: How can I check if the Pulse EX600 is set up correctly as a router?


A: Wait for the Status LED to stop blinking and turn solid green, indicating successful setup as a router.

Q: What should I do if the extender is not connecting to the router?

A: Ensure that the extender is placed within the WiFi range of the router for a successful connection.

Installation with the use of app

You're just a few steps away from installing your device via the Genexis EasyWiFi app

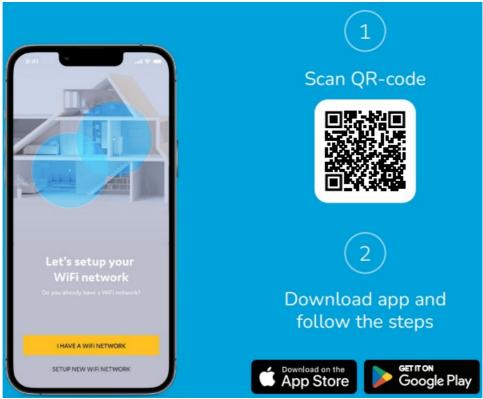

Installation guide

Box contents

- Genexis Pulse EX600
- Power adapter
- · Network cable
- Labels (self-adhesive)
- · Plugs & screws

Genexis EasyWiFi app

- Installation and management of the Pulse EX600 can be done with the help of the mobile application Genexis EasyWiFi for the applicable installation modes as described in this installation manual.
- Please follow the steps on the left page.
- Warning: Do not cover the device with anything because this will interfere with the ventilation of the Pulse EX600.
- Operation Temperature 0°C ~ 40°C

Placement

Pulse EX600 supports two placement options; desktop and wall-mounted. It is recommended to place the
device 'away' from obstacles and objects.

Desktop

1. 1. Place the device horizontally on a flat surface.

Wall-mount

- 1. Download and print the drilling guide from https://genexis.eu/product/pulse/downloads
- 2. Use the drilling guide to drill the holes, insert plugs and put screws into place.
- 3. Use the wall mount points on the back of the Pulse EX600 to mount the device to the screws.

Setting up your Pulse devices

• This installation guide is for installing the Pulse EX600 as a router, as explained on the right. In addition, an extra Pulse EX600 can be installed as a wireless or wired extender behind the Pulse EX600 router.

Router

If you do not have a router installed, start installing your Pulse EX600 here.


- 1. Connect a network cable between your broadband outlet and the Pulse EX600 WAN port (red port).
- 2. Connect the supplied power adapter to the Pulse EX600 and plug the adapter into a power socket.
- 3. Flip the ON/OFF switch at the back of the device to turn it on.
- 4. Wait until the Status LED stops blinking and turns solid green.

Your Pulse EX600 is now set up as a router. Your network is now ready to be extended with a wireless or wired

extender, as explained on the next pages.

Extender placement

- For optimal performance of the Pulse EX600 as an extender; place the Pulse EX600 halfway in between your router and the problem area (as shown below).
- Make sure placement is within the WiFi range of your router. If the extender is placed too far away, it cannot connect to the router.
- Problem area, improved by Pulse EX600
- Area that is good for placing Pulse EX600
- Area covered by your router

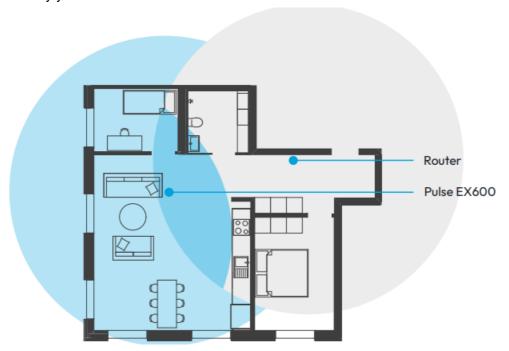

Wireless extender

- 1. Place the additional Pulse EX600 as described on the previous page.
- 2. Connect the supplied power adapter to the Pulse EX600 and plug the adapter into a power socket.
- 3. Flip the ON/OFF switch at the back of the device to turn it on.
- 4. Wait until the Status LED surrounding the Mode button starts blinking green.
- 5. On the Pulse EX600, press and release the Mode button once. The status LED will start blinking blue.
- 6. Press the same Mode button on the Pulse EX600 router within two minutes.
- 7. Automated pairing is now started.
- 8. The Status LED turns solid blue indicating that pairing of the Pulse EX600 extender with the router is successful (the Pulse EX600 will automatically reboot after the automated pairing; this may take up to several minutes).
- 9. Wait until the Status LED stops blinking and turns solid green.
 - Your Pulse EX600 is now set up as a wireless extender.

Wired extender

- 1. Connect a network cable between the LAN port (yellow connector) of the Pulse EX600 router and the WAN port (red connector) of the Pulse EX600 extender.
- 2. Connect the supplied power adapter to the Pulse EX600 and plug the adapter into a power socket.
- 3. Flip the ON/OFF switch at the back of the device to turn it on.
- 4. Wait until the Status LED stops blinking and turns solid green (the Pulse EX600 extender will automatically reboot during the setup; this may take up to several minutes).
 - Your Pulse EX600 is now set up as a wired extender.

Switching the WiFi ON/OFF

- The WiFi function of the Pulse EX600 can be switched ON or OFF through the Mode button.
- Switch OFF: On the Pulse EX600, press and hold the Mode button until the Status LED turns solid yellow.
- Switch ON: On the Pulse EX600, press and hold the Mode button until the Status LED starts blinking green or turns solid green.

Connecting to the wireless network

Automated pairing

- You can connect your device to the Pulse EX600 by scanning the QR code on the label of the Pulse EX600 or using the Mode button (WPS function) of the Pulse EX600.
- Please check on your device how this can be initiated. Before pairing, make sure the Status LED is solid green.

 If not, switch the WiFi ON as described in this installation guide.

Manual pairing

- You can also connect your device to the Pulse EX600 via manual pairing using the WiFi network name and WiFi key printed on the label of the Pulse EX600.
 - 1. Perform a search of available wireless networks on your device.
 - 2. Select the WiFi network name printed on the label.
 - 3. Enter the WiFi key printed on the label.
- Follow the instructions of the router in case the Pulse EX600 is in extender mode.

Using the web interface

- When connected to your network, you can access the Pulse EX600 web interface to change your device settings.
 - 1. Use a browser on your device and navigate to 'GUI' as printed on the label of the Pulse EX600.
 - 2. Login by inserting the 'Username' and 'Password'.
 - 3. If required, change your device configurations.


LED & button overview

Status

- Green system is operational and ready
- Green (blinking) no broadband connectivity Yellow system startup or WiFi OFF
- Yellow (blinking) the system is not ready yet
- Blue automated pairing (WPS) successful
- Blue (blinking) automated pairing (WPS) in progress Red system/booting failure
- Off power off

Mode button

- Pairing (WPS) press and release once
- WiFi ON press and hold until the Status LED turns green (blinking or solid)
- WiFi OFF press and hold until the Status LED turns solid yellow

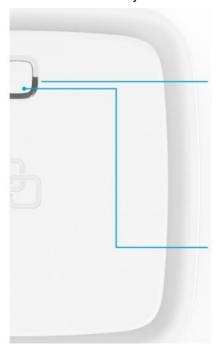

Port overview



Reset button (recessed)

• Reboot – press and release once Factory reset – press and hold until the Status LED starts fast blinking green

ON/OFF switch

• Switch ON - flip the switch to ON Switch OFF - flip the switch to OFF

Support

Is the Status LED solid red?

· Contact your service provider.

Is the Status LED solid yellow?

- The WiFi of the Pulse EX600 is turned OFF. Please turn the WiFi ON as described in this installation guide.
- Is the Status LED not solid blue after automated pairing (WPS)? Automated pairing (WPS) between the Pulse EX600 and Genexis router or personal device failed.
- Please follow the instructions again to set up the Pulse EX600 as a wireless extender or connect your device to the wireless network. It might be helpful to move the Pulse EX600 closer to your Genexis router.

Is the Status LED blinking green for 5 minutes?

- **Router:** Pulse EX600 does not have a connection with the broadband network. Please verify your wired connection with the broadband outlet or contact your service provider.
- Wireless/wired extender: The connection between the Genexis router and the Pulse EX600 is not stable.
- Please check the cable connection with the Genexis router or move the Pulse EX600 closer to the Genexis
 router.

Is the Status LED blinking yellow?

• The Pulse EX600 is being upgraded with new software. Please wait until the Status LED turns solid green again.

Return the Pulse EX600 to the factory default settings

- With the reset button, you can reset the Pulse EX600 to its factory default settings. You can press this button with a small pin or paper clip.
 - 1. Press and hold the reset button until the Status LED starts fast blinking green.
 - 2. Wait until the Status LED turns solid green again.
- Your Pulse EX600 is now set up as a router again with the settings as printed on the label.

EU Declaration of Conformity

- Hereby, Genexis Netherlands B.V. declares that the product Pulse EX600 complies with Directives 2014/53/EU, 2009/125/EC, 2011/65/EU and Delegated Directive 2015/863.
- The full text of the EU Declaration of Conformity is available at the following internet address: https://genexis.eu/product/pulse/red/pulse-ex600
- Company Name
 - Genexis Netherlands B.V.

Company Address

- Lodewijkstraat 1a
- 5652 AC Eindhoven
- The Netherlands

· Name and title of authorized person

Maarten Egmond, CTO

Signature of the authorized person



· Place of issue

- Eindhoven
- The Netherlands
- · Date of issue
 - 2021-10-06

Frequency bands and maximum radio frequency power transmitted

The Pulse EX600 operates in frequency bands of 2,4 Ghz and 5 GHz.

The maximum radio frequency power transmitted in these bands is:

- 20 dBm (100 mW) (EIRP) for the 2400 MHz 2483.5 MHz band
- 23 dBm (200 mW) (EIRP) for the 5150 MHz 5350 MHz band *
- 30 dBm (1000 mW) (EIRP) for the 5470 MHz 5725 MHz band
- In the EU, 5150 5350 MHz is restricted to indoors.

People deserve fiber

- Revision 2.0 October 2023 Copyright © 2023 Genexis Netherlands B.V. All rights reserved.
- Multiple languages of this document and additional product information are available at https://genexis.eu/product/pulse/downloads
- Genexis assumes no responsibility for any inaccuracies in this document. Genesis reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

Documents / Resources



genexis EX600 Pulse Significantly Enhances Wi-Fi Coverage [pdf] Installation Guide EX600 Pulse Significantly Enhances Wi-Fi Coverage, EX600, Pulse Significantly Enhances Wi-Fi Coverage, Enhances Wi-Fi Coverage

References

- Homepage Genexis
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.